 
 


# Hi! Let's get started.





MODEL: SG06

# **Important Safety Instructions**

- 1. Read these Instructions.
- Keep these Instructions.
- 3. Heed all Warnings.
- 4. Follow all instructions.
- 5. Do not use this apparatus near water.
- 6. Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9. Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- 12.

Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

- Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally or has been dropped.

**Special note**: When placing your unit on a lacquered or natural finish, protect your furniture with a cloth or other protective material.

#### **FCC Warnings**

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- · Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- · Consult the dealer or an experienced radio/TV technician for help.

#### **Additional Warnings**

The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus. L'appareil ne doit pas être exposé aux écoulements ou aux éclaboussures et aucun objet ne contenant de liquide, tel au'un vase. ne doit être placé sur l'objet.

Battery shall not be exposed to excessive heat such as sunshine, fire or the light.

Les piles ne doivent pas être exposées à de forte chaleur, tel qu'à la lumière du soleil, au feu ou autres choses de semblable

Caution marking is located at the rear or bottom of the apparatus. Attention marquage est situé sur le paneau arrière ou inférieur de l'unité.

The marking information is located at the rear or bottom of apparatus. Le marquage est situé sur le paneau arrière ou inférieur de l'unité.



This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.

# **Table of Contents**

| What's in the Box                | 3  |
|----------------------------------|----|
| Controls and Connections         | 4  |
| Ready for the step by step?      | 6  |
| Connecting the Subwoofer         | 9  |
| "PCM" Settings on TV             | 10 |
| Know Your Remote                 | 11 |
| Bluetooth Pairing                | 12 |
| Additional Bluetooth Information | 13 |
| Indicator Light Explanations     | 14 |
| Advanced Connections             | 15 |
| Installing the Wall Mount        | 16 |
| Troubleshooting                  | 17 |

### What's in the Box



Sound Bar and Subwoofer



Remote control Insert 2pc of AAA batteries before use



User's guide



Digital Optical cable



Stereo 3.5mm to 3.5mm audio cable



Power Adapter



Wall mount brackets




Mount screws



Wall mount template

## **Controls and Connections**

#### **Back of Sound Bar**

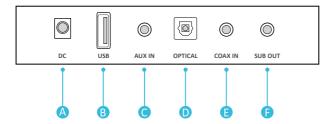

#### Top Side Panel of the Soundbar




- [DC] Power Port
- **B** [USB] USB In
- [AUX IN] Analog Audio In (Stereo 3.5mm)
- [OPTICAL] Digital Optical In
- [COAX IN] Digital Coaxial In
- [SUB OUT] Subwoofer Out
- G Turn the power on or press and hold to power off.
- Select the source input mode; Press and hold to reset treble and bass to factory settings.
- Press to adjust volume up and down, the LED indicator flashes until the volume to the MAX or MIN.

# Ready for the step by step?

Step 1. Choose one connection between your Sound bar and TV


#### **Back of Sound Bar**

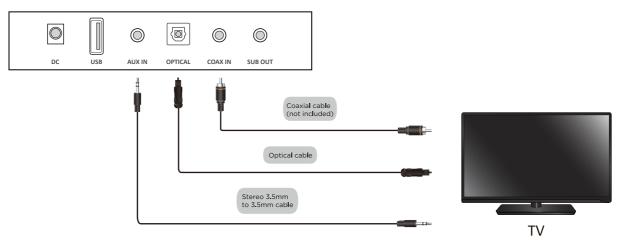

- Optical and Coaxial are recommended
- Setting your TV audio output to PCM if no sound

#### Step 2. Power on your Sound Bar

Power on your Sound Bar with the included power adapter as below:

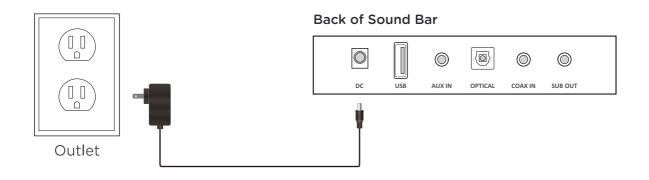

• Plug the power adapter into an electrical outlet.

#### Step 3. Position the Sound Bar

Position your Sound Bar on your TV cabinet or mount it on the wall as shown.



Leave 6.5 feet at least between your Sound Bar and sofa.




• Sitting on the sofa which is centered to your Sound Bar.

# **Connecting the Subwoofer**

Connect the subwoofer cable into Sound Bar SUB OUT port as shown:

#### **Back of Subwoofer**

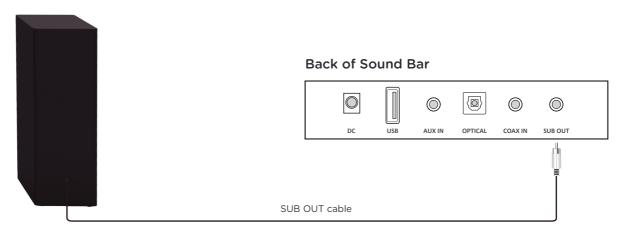

# **Setting "PCM" on Your TV**


When all cables are connected properly, and LED indicator lights properly(Optical or HDMI connection), if there is no sound from tv or Soundbar, please setting your tv as below:

- 1. Press "Menu" on the tv's remote control.
- 2. Press the arrow keys on the remote to scroll to "Audio Settings."
- 3. Press "OK" on the remote control.
- 4. Scroll to "Advanced Audio" and press "OK." Some televisions may not have an "Advanced Audio" menu and may list various audio settings instead.
- 5. Scroll to "Audio Output Mode" or "Digital Audio Output Mode" and press "OK."
- 6. Scroll until "PCM" is displayed as the current audio output.
- 7. Press "OK" to save the settings.

• Some brand TVs maybe different in Digital Audio Output Settings, please check your TV's manual.


#### **Know Your Remote**

Power the remote by inserting 2 pcs of AAA batteries

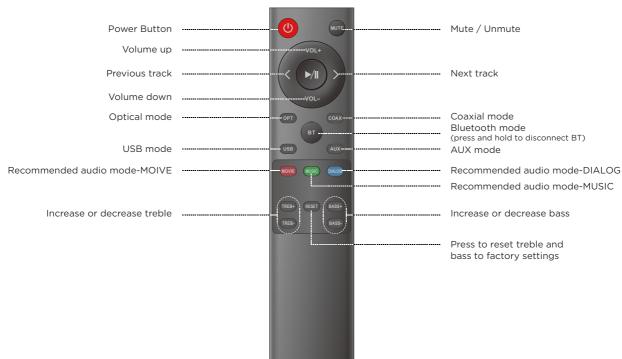

# **Bluetooth Pairing**


- 1. Press the Bluetooth button on the remote, when the Sound Bar is in Bluetooth Pairing mode, the LED indicator will flash blue quickly.
- 2. Now your can search for the Sound Bar(Bestisan SG06) in your Bluetooth device, connect it. Once your device is paired, the LED indicator will flash blue slowly.
- 3. Play audio in your Bluetooth device, volume and audio can be controlled by your device and the Sound Bar.
- 4. Once your source device has paired to Sound Bar, your device(Android) should auto-paired even if you reboot Sound Bar.

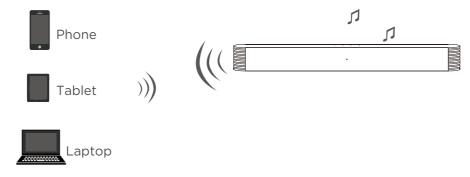

This Sound Bar is not equipped with hands-free function.

#### **Additional Bluetooth Information**

 
- 1. If you hear any break-up while streaming music from your device, move closer to your Sound Bar.
- 2. Bluetooth signal has a range of up to 30 feet if there are no solid obstructions between your Sound Bar and source device.
- 3. Other wireless devices may interfere with Bluetooth range, including wireless video monitors, cordless phones, wireless cameras, etc., moving or turning off these devices may improve Bluetooth range.




 Reduce the volume on your device or Sound Bar, high volume can damage your hearing.

# **Indicator Light Explanations**

The LED Indicators will behave differently with each button on the remote control.

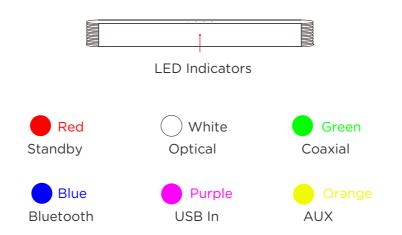

# **Advanced Connections!**

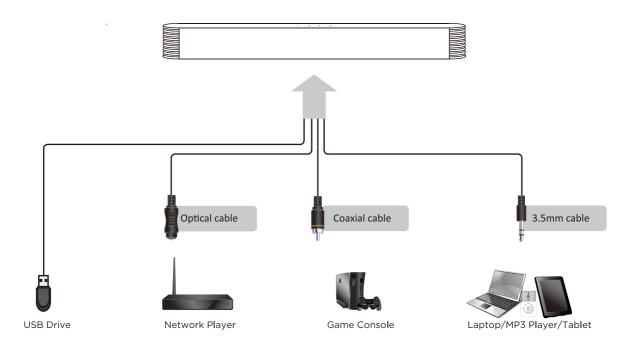


### **Installing the Wall Mount** (Mount kits sold separately)

1. Insert the two wall-mount screws into the wall-mount screw holes, and tighten them with a screwdriver.



Insert the two wall-mount screws into the wall-mount screw holes, and then tighten them with a screwdriver.

- 2. Place the wall mounting template against the wall under your TV, using a pencil to mark the bracket holes.
  - The template must be level.
  - Leave 3 inches at least between the template and TV.

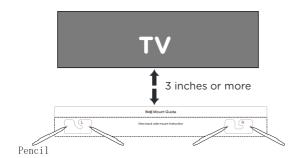

- 2. Remove the template, using an appropriately sized drill bit, drill a hole in the wall at each marking.
- Be sure the wall is vertical wall. (drywall)
- Push the green Hoder-Screws to the each hole on the wall, and screw each screw through each bracket firmly into a support Holder-Screws hole.



4. Install the Soundbar by hanging the bracket on the wall.



Consult a professional installer if you are unfamiliar with power tools or the layout of electrical wiring in the walls of your home.

# **Troubleshooting**

If you have a problem with your Sound Bar, there is quick simple solution, first make sure:

- The cables between Sound Bar and input devices are securely connected, the power adapter also connected to a working power source.
- The adapter LED indicator is lighting, and the LED indicator is lighting in the middle of Sound bar,

#### No sound or crackling noise

- Check if all cables connected properly.
- Press Mute on the remote to ensure the Sound Bar is not muted.
- Press Volume+ on the remote or the top of your Sound Bar.
- Make sure you have selected the right input source on your remote, and the LED is lighting accordingly.
- If using Bluetooth, check if the sound on your device is under minimum volume.
- If using Optical/Coaxial, check if your device (TV/Cable Box/Projector/etc.) audio output set to PCM or turn the Dolby/dts off.
- When using cable connection, make sure your device has audio output port (not input).

#### Remote isn't working

- Check if the battery is installed properly with power.
- Check if the signal of the receiver is covered by something.
- Contact your retailer for assistance.

#### I hear buzzing or humming

- Ensure all cables and wires are securely connected.
- Connect a different source device (TV, Blu-ray player, etc) to see if the buzzing persists. If it does not, the problem may be with the original device.
- Connect your device to a different input on the Sound Bar.

#### Bluetooth can't be connected

- Check if the Sound Bar is connected with the third Bluetooth device.
- Be sure that there are no solid obstructions between the Sound Bar and source device.(within 30 feet)
- Reboot the Bluetooth and connect again.

#### Hear echo when watching TV

- Setting your TV audio to External Speaker.
- Mute the TV speaker.

#### Get loud hum when use white/red RCA connection with tv

- Make sure your connections are inserted all the way.
- Make sure your device's audio port is output (not input).
- Make sure your device's audio output is turned on.
- Try the connection with phone or other devices, and see if there is the same loud hum, if no, you may need to have a higher end TV. (Some TVs do not have clear audio output)

#### Subwoofer no sound

- Make sure the SUB OUT cable are inserted properly.
- Press the "Bass +" button on remote.

#### Have more questions?

Please contact to your retailer for assistance.

#### **BESTISAN**

Best Artisan & Better Than Most

# Thanks for reading!

Best Artisan Corp.

14261 PROCTOR AVE, CITY OF INDUSTRY, CA 91746

service@bestisan.com

