

# **RCA**

## **Satellite Receiver User's Guide**

**Changing Entertainment. Again.**



# Important Information

## WARNING

To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.

## CAUTION

RISK OF ELECTRIC SHOCK. DO NOT OPEN.

Caution: To reduce the risk of electric shock, do not remove cover (or back). No user serviceable parts inside. Refer servicing to qualified service personnel.



This symbol indicates "dangerous voltage" inside the product that presents a risk of electric shock or personal injury.



This symbol indicates important instructions accompanying the product.

## Cautions

**Do not stack electronic components or other objects on top of the Digital Satellite Receiver.** The slots on top of the receiver must be left uncovered to allow proper airflow to the unit. Blocking the airflow to the unit could impair performance or damage your receiver and other components.

**Remove any sales or promotional materials attached to the product.**

Do not stack the digital satellite receiver on top of a "hot component" such as an audio power amplifier.

FCC Regulations state that unauthorized changes or modifications to this equipment may void the user's authority to operate it.

### Note to Cable TV Installer:

This reminder is provided to call your attention to article 820-40 of the National Electrical Code (Section 54 of the Canadian Electrical Code, Part 1) which provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building as close to the point of cable entry as practical.

### Note to Satellite Dish Installer:

This reminder is provided to call your attention to articles 810 and 820 of the 1999 National Electrical Code. Refer to article 810, in particular to 810-1 and 810-15, for required grounding of the metal structure of the Dish Antenna. Refer also to the 810-2 which, by reference to article 820, requires that the satellite dish coaxial cable shield be connected to the grounding system of the building as close to the point of cable entry as practical.

### IMPORTANT NOTICE:

This device incorporates an anticopy process technology that is protected by U.S. patents and other intellectual property rights. The anticopy process is licensed for non-commercial, home use only. Reverse engineering or disassembly is prohibited.

### Care and Cleaning:

Use a soft cloth or dusting attachment of your vacuum cleaner to dust your digital satellite receiver. Remove dust from the ventilation holes on the top and bottom.

Plastic surfaces are easily scratched and can be marred by alcohol and various solvents. Avoid excessive use of oil-based furniture polishes since the materials used in the cabinet will accumulate more dust. A non-abrasive, anti-static cleaner/polisher is recommended.

## Product Registration

Please fill out the product registration card (packed separately) and return it immediately. Returning the card allows us to contact you if needed.

## Product Information

Keep your sales receipt to obtain warranty parts and service and for proof of purchase. Attach it here and record the serial and model numbers in case you need them. These numbers are located on the product.

Model No. \_\_\_\_\_


Serial No. \_\_\_\_\_

Purchase Date: \_\_\_\_\_

Dealer/Address/Phone: \_\_\_\_\_

## Key Features Overview

Your digital satellite receiver is equipped with features that will add to your viewing experience. The following information summarizes a few of these features. Chapter 3 provides more information about the rest of the TV's features and how to use them.

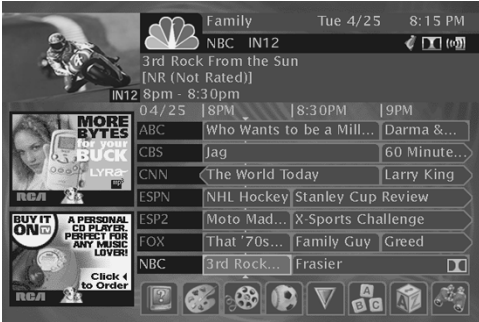

### On-screen Program Guides

**Description:** Available on-screen guides include a new Advanced Program Guide™ which stores up to seven days of programming information and a new Advanced Program Guide® which lists five different channels of programming at a glance.

 
**Requirements:** Complete the on-screen assisted setup. You'll find detailed instructions how to do this in Chapter 1, *Connections & Setup*.



### Interactive Channel Banner

**Description:** A transparent banner at the top of the picture allows direct access to the key features of the DIRECTV system including a way to display the Main Menu, viewing suggestions, program details, The Guardian™ channel locking system, on-screen message display, the Scout™ keyword/phrase and the AlphaSort™ alphabetical search features, and alternate audio offerings.

**Requirements:** Press the INFO button on the remote control. Highlight different icons using the remote control's arrow buttons. Select the highlighted icon using the remote control's OK button.



### Universal Remote Control

**Description:** Provides complete satellite system operation, and primary function control of most brands of remote-controllable TVs, VCRs, and cable boxes.

**Requirements:** A remote-controllable device such as a VCR, cable box, etc. The remote control may have to be programmed to operate your component if it is not RCA, GE, or Proscan.



## DIRECTV INTERACTIVE™ powered by WINK Communications®

**Description:** An interactive television service that lets you access up-to-the-minute news, sports, financial information, weather, program trivia, and respond to free offers and even shop— all while you watch TV.

**Requirements:** Establish a free, secure Interactive TV account, then press the OK/i button on the remote control whenever you see the Interactive logo (C) appear on-screen. For more information, see page 30 in the *Satellite System Features* chapter.



## Software Upgrades via Satellite

**Description:** The digital satellite receiver is able to modify some of its features and functions with downloaded RSA-secure upgrades or modifications. RSA-secure downloads ensure that only authorized upgrades are delivered to your RCA digital satellite receiver.

**Requirements:** Consult the *Upgrade Menu* to find a schedule of upgrades or modifications planned by DIRECTV. For more information, see page 58 in the *Using On-screen Menus* chapter.

# Table of Contents

---

<b>Connections &amp; Setup</b> .....	5
Things To Consider Before You Connect Components .....	6
Choose Your Connection .....	7
Excellent Connection .....	8
Very Good Connection .....	10
Good Connection .....	12
Jacks and Cables .....	14
Satellite Receiver Rear Panel .....	15
Place Batteries in the Remote Control .....	16
Plug in and Turn on the Receiver .....	16
Using Highlight and Select .....	17
Complete the Assisted Setup .....	18
Order Programming .....	18
<b>Using the Remote Control</b> .....	19
Remote Control Buttons .....	20
Top of the Digital Satellite Receiver .....	22
Programming the Remote Control .....	23
Testing the Remote Control .....	23
Using Automatic Code Search .....	23
Using Direct Entry .....	24
Operating Other Components .....	24
Remote Control Codes .....	25
<b>Using the Satellite Receiver's Features</b> .....	27
Anatomy of a Program Guide .....	28
Displaying the Program Guide .....	28
Using The Channel Banner .....	29
Buttons of the Channel Banner .....	29
The DIRECTV INTERACTIVE™ Feature .....	30
Displaying On-screen Guides .....	30
The Detail Guide .....	30
The Grid Guide .....	30
Getting Around In the Guides .....	31
Scrolling Channel By Channel .....	31
Scrolling Page By Page .....	31
Scrolling Forward and Reverse .....	31
Tuning to a Program .....	32
More Details .....	32
Additional Program Guides .....	33
The Channel Guide .....	33
The Logo Guide .....	33
The Suggestions Guide .....	33
Sorting the Guides .....	34
Viewing Suggestions .....	34
Active Profile's Preferences .....	35
Movies .....	35
Sports .....	35
Channel Sort .....	36
AlphaSort™ .....	36
Scout™ .....	37
Down Arrow .....	37

# Table of Contents

---

<b>Using the Menu System</b> .....	39
Using the Menu System .....	40
On-screen Buttons and Context Help .....	40
Main Menu Items .....	41
The Program Guide .....	42
Mailbox .....	43
Messages Waiting .....	43
Checking Your Mail .....	43
Using the Purchases Menu .....	44
Reviewing and Canceling Upcoming Purchases .....	44
Spending Limits .....	44
Pay Per View Programs .....	45
Previewing and Purchasing .....	45
Timers .....	46
User Profiles .....	46
Creating and Editing User Profiles .....	46
Locking the System .....	49
Program/Video Unlock .....	50
Choosing Your Profile .....	51
Personal Settings .....	51
Name .....	51
Default Guide .....	52
Guide Sorting .....	52
Color Scheme .....	52
Translucency .....	52
Animation .....	52
Edit Fetch .....	53
INFO Help .....	54
Reset .....	54
System Setup .....	54
Assisted Setup .....	54
System Index .....	55
System Options .....	55
Dish Pointing .....	57
System Test .....	58
System Info .....	58
Upgrades .....	58
New Access Card .....	59
Alternate Data .....	59
Interactive .....	59
<b>Other Information</b> .....	61
Troubleshooting .....	62
Finding the TV's Video Line Input .....	64
Running the System Test .....	65
Fine-Tuning the Signal .....	65
Limited Warranty .....	66
Accessory Order Form .....	69
Glossary .....	71
Index .....	74

# Connections & Setup

## Chapter Overview:

- Things to Consider Before You Connect
- Choose Your Connection
- Place Batteries in the Remote Control
- Assisted Setup
- Order Programming

**Changing Entertainment. Again.**



## Things To Consider Before You Connect Components

### Protect Your Components from Power Surges

- Connect all components before plugging any power cords into the wall outlet.
- Always turn off the digital satellite receiver, TV and other components before you connect or disconnect any cables.

### Position Cables Correctly to Avoid Audio Hum or Interference

- Insert all cable plugs firmly into their jacks.
- Place the Audio/Video (A/V) cables to the sides of the TV's back panel instead of straight down the middle after you connect your components.
- Try not to coil any twin-lead cables and keep them away from the A/V cables as much as possible.
- Make sure all antennas and cables are properly grounded. Refer to the Safety Tips sheet packed with your unit.



### Protect Your Components from Overheating

- Do not block ventilation holes in any of the components. Arrange the components so that air can circulate freely. ***Remove any sales or promotional materials attached to the product.***
- Do not stack components.
- Allow adequate ventilation when placing components in a stand.
- Place an amplifier or receiver on the top shelf of the stand so heated air rising from it will not flow around other components.




## Choose Your Connection

There are several ways to connect your digital satellite receiver depending on the components you want to connect and the quality of the signal you want to achieve. Please use the following chart to determine which connection is best for you. Proceed to the appropriate page and connect your satellite receiver. For more information about the relationship between cables, jacks, and the quality of the signal, go to pages 14-15.

Component	Signal Quality	Jacks on the satellite receiver	Cables needed*	Go to...
 TV	Excellent	S-VIDEO, AUDIO L and R	S-video, audio/video	page 8
	Very Good	VIDEO, AUDIO L and R	audio/video	page 10
	Good	OUT TO TV	RF coaxial	page 12
 VCR	Good	OUT TO TV	RF coaxial	page 12

\* Pictures of cables are on page 14.

# Connections & Setup

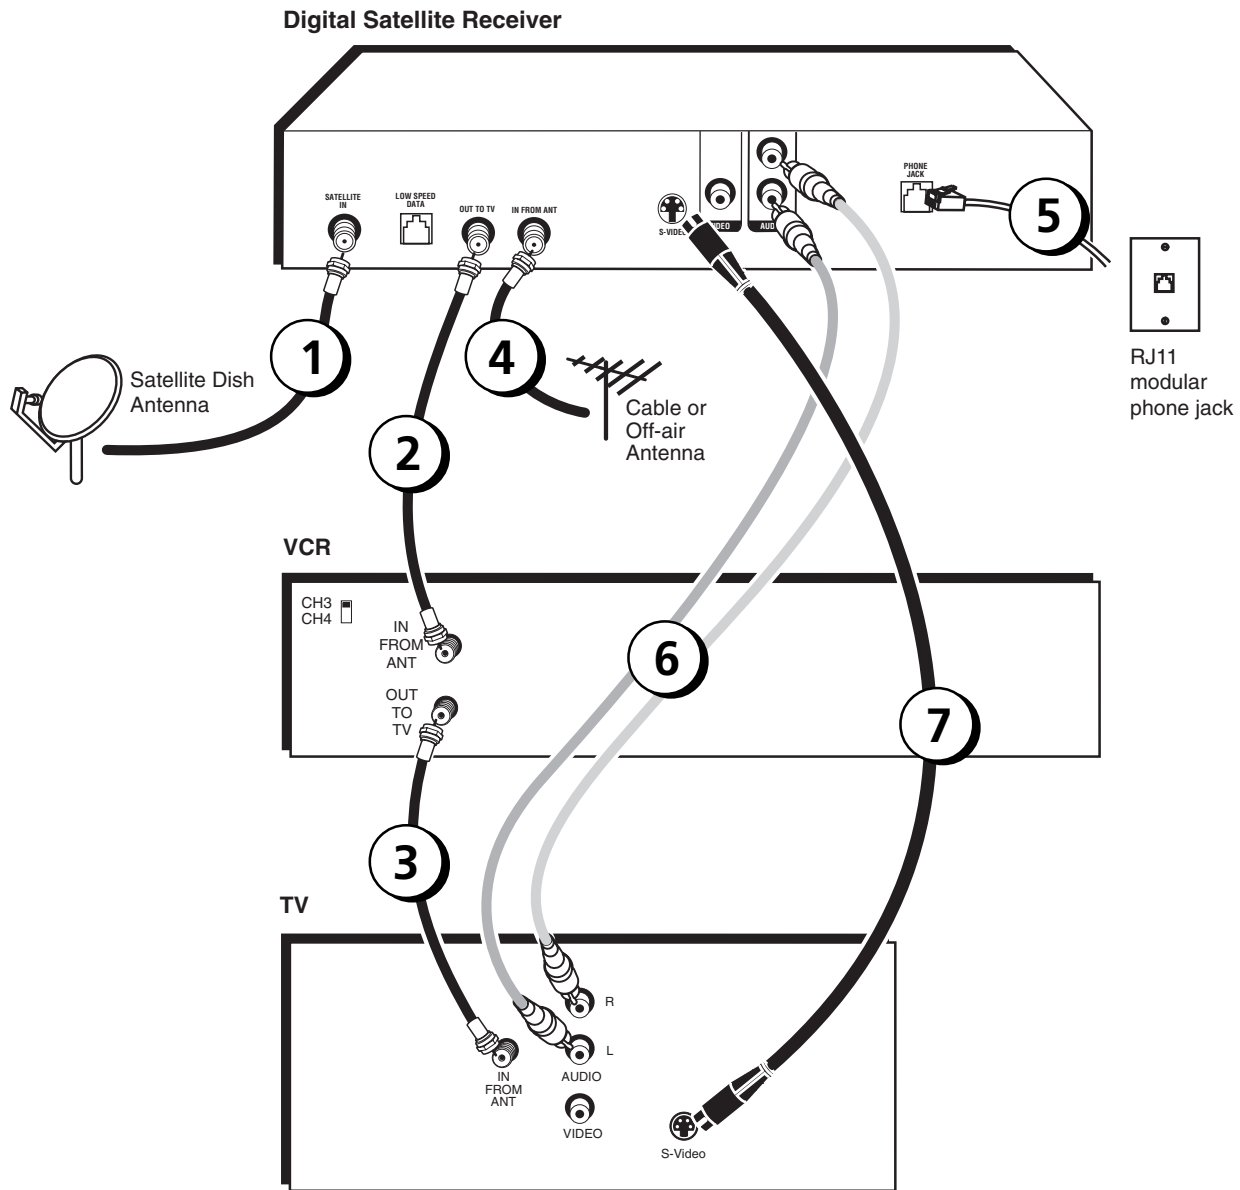

**Note:** Your VCR and TV back panels may not look exactly like the ones illustrated.

## Excellent Connection

Using S-Video and A/V jacks and cables to connect to the TV,  
RF coaxial cables to connect to the VCR

This connection provides this receiver's best picture quality, surpassing that of A/V cables. The S-Video connection, which carries video information only, requires that audio cables also be used.

## What you will need:

- Two (2) RF coaxial cables
- One (1) S-Video cable
- Two (2) Audio/Video cables
- One (1) telephone line cord
- Coaxial cable lines fed from a digital satellite antenna and a standard TV antenna (or cable feed)

## Making the Connection

1. Connect the satellite dish antenna feed (RG-6 coaxial cable) to the SATELLITE IN jack on the satellite receiver.
2. Connect one end of an RF coaxial cable to the OUT TO TV jack on the satellite receiver, and the other end to the antenna input jack on the VCR.
3. Connect one end of an RF coaxial cable to the antenna output jack on the VCR, and the other end to the TV's antenna input jack.
4. Connect the cable or off-air antenna feed (RF coaxial cable) to the IN FROM ANT jack on the satellite receiver.
5. Connect one end of the supplied telephone line cord to the PHONE JACK on the back of the satellite receiver, and the other end to an RJ11-type modular phone jack (the most common type of phone jack).
6. Connect two ends of the supplied A/V cables to the AUDIO R and L jacks on the satellite receiver, and the other ends to the corresponding audio input jacks on the TV.  
**Note:** Make sure you connect jacks by their labels. For example, AUDIO R on the digital satellite receiver should be connected to TV's right audio input jack, L Audio to L Audio, etc.  
If your TV only has one audio input jack, use the satellite receiver's AUDIO L jack to make the connection.
7. Connect one end of the supplied S-Video cable to the satellite receiver, and the other end to the S-Video input jack on the TV.

**Go to Page 16**

## Using Your Components

### To watch DIRECTV® programming:

Tune the TV to its S-Video line input (if you have difficulty finding your TV's S-Video line input, see your TV's *User's Manual*, or see page 64 in this manual). When the line input "channel" is found, then you can tune the satellite receiver to a desired channel.


### To record DIRECTV® programming:

Follow the directions in the previous step, then set your VCR to record on its proper input channel (channel 3 or 4).

### To view VCR recordings:

Tune the TV to channel 3 or 4 (whichever is set on the VCR as its output channel). Begin VCR playback as usual.

# Connections & Setup

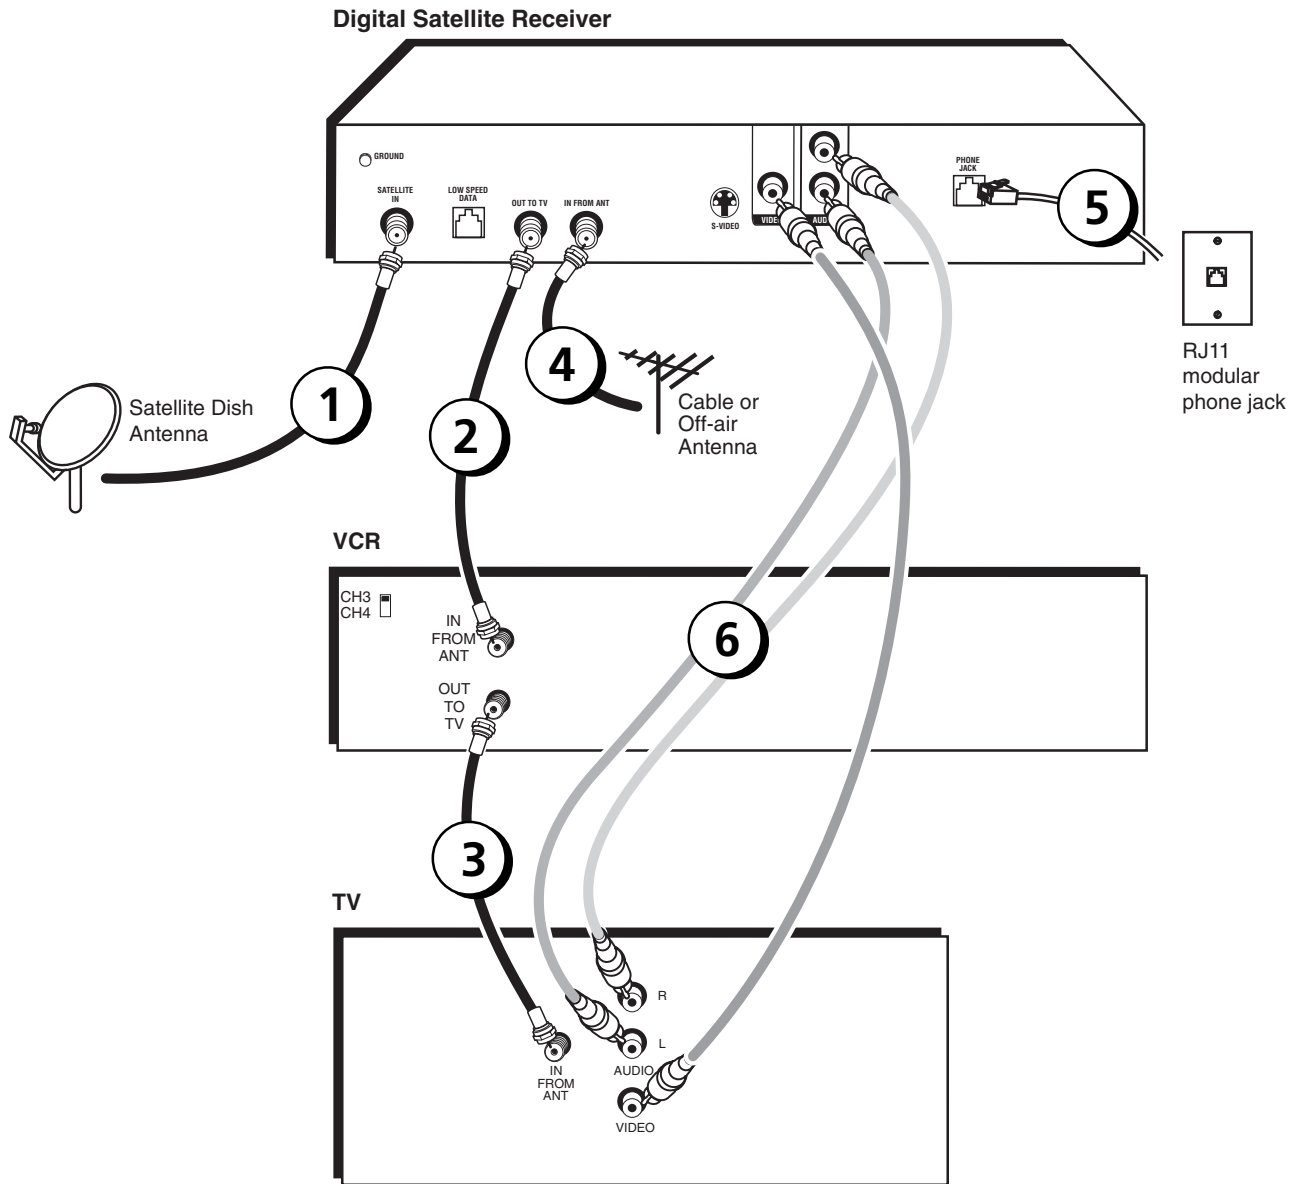

**Note:** Your VCR and TV back panels may not look exactly like the ones illustrated.

## Very Good Connection

Using A/V jacks and cables to connect to the TV,  
RF coaxial cables to connect to the VCR

This connection provides better picture quality than RF coaxial cables and is recommended for use with TVs that do not have S-Video input jacks.

## What you will need:

- Two (2) RF coaxial cables
- Three (3) Audio/Video cables
- One (1) telephone line cord
- Coaxial cable lines fed from a digital satellite antenna and a standard TV antenna (or cable feed)

## Making the Connection

1. Connect the satellite dish antenna feed (RG-6 coaxial cable) to the SATELLITE IN jack on the satellite receiver.
2. Connect one end of an RF coaxial cable to the OUT TO TV jack on the satellite receiver, and the other end to the antenna input jack on the VCR.
3. Connect one end of an RF coaxial cable to the antenna output jack on the VCR, and the other end to the TV's antenna input jack.
4. Connect the cable or off-air antenna feed (RF coaxial cable) to the IN FROM ANT jack on the satellite receiver.
5. Connect one end of the supplied telephone line cord to the PHONE JACK on the back of the satellite receiver, and the other end to an RJ11-type modular phone jack (the most common type of phone jack).
6. Connect the ends of the supplied A/V cables to the satellite receiver's AUDIO and VIDEO jacks, and the other ends to the corresponding AUDIO and VIDEO input jacks on the TV.

**Note:** Make sure you connect jacks and cables corresponding to their labels. For example, AUDIO R output on the digital satellite receiver should be connected to AUDIO R input on the TV, VIDEO OUT to VIDEO IN, etc.

If your TV only has one audio input jack, use the satellite receiver's AUDIO L jack to make the connection.

**Go to Page 16**

## Using Your Components

### To watch DIRECTV® programming:

Tune the TV to its video line input (if you have difficulty finding your TV's video line input, see your TV's *User's Manual* or refer to the instructions on page 64 in this manual). Then tune the satellite receiver to the desired channel.


### To record DIRECTV® programming:

Follow the steps in the previous step, then tune the satellite receiver to the desired channel. Set your VCR to record on its proper input channel (channel 3 or 4).

### To view VCR recordings:

Tune the TV to channel 3 or 4 (whichever is set on the VCR as its output channel). Begin VCR playback as usual.

# Connections & Setup

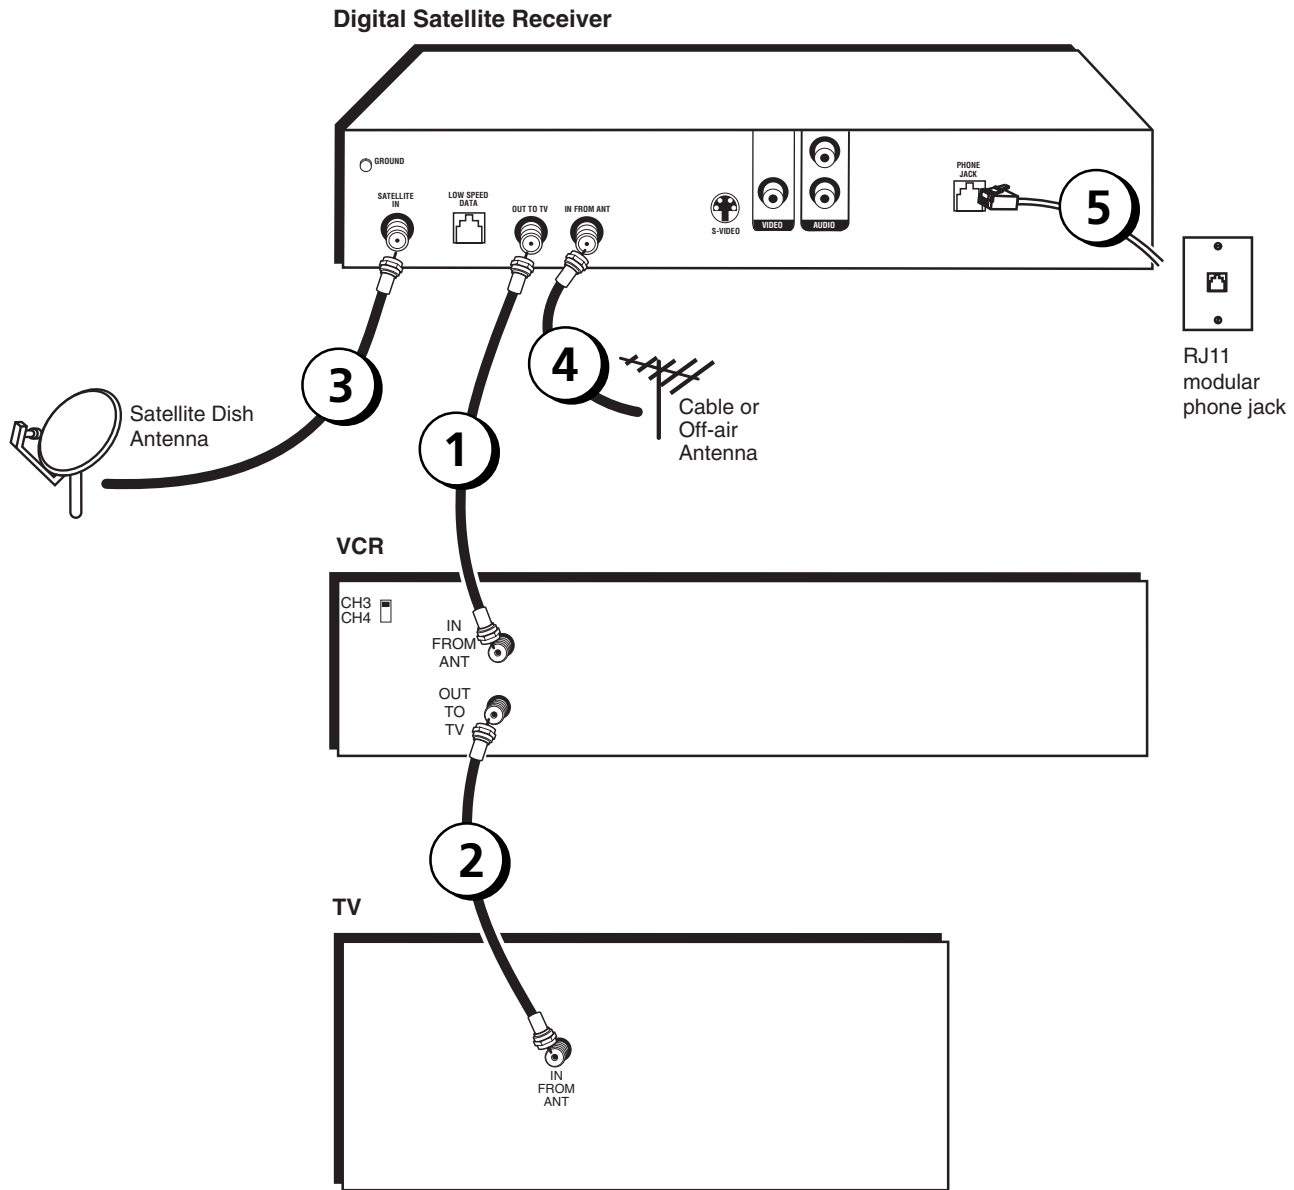

**Note:** Your VCR and TV back panels may not look exactly like the ones illustrated.

## Good Connection

### Using RF Coaxial cables for all connections

This connection provides standard picture quality. This is the only connection recommended for TVs that have no S-Video or A/V input jacks.

## What you will need:

- Two (2) RF coaxial cables
- One (1) telephone line cord
- Coaxial cable lines fed from a digital satellite antenna and a standard TV antenna (or cable feed)

## Making the Connection

1. Connect the satellite dish antenna feed (RG-6 coaxial cable) to the SATELLITE IN jack on the satellite receiver.
2. Connect one end of an RF coaxial cable to the OUT TO TV jack on the satellite receiver, and the other end to the antenna input jack on the VCR.

**Note:** If your VCR has A/V input jacks, you can connect the satellite receiver to the VCR using them instead of the RF coaxial cable.

3. Connect one end of an RF coaxial cable to the antenna output jack on the VCR, and the other end to the TV's antenna input jack.
4. Connect the cable or off-air antenna feed (RF coaxial cable) to the IN FROM ANT jack on the satellite receiver.
5. Connect one end of the supplied telephone line cord to the PHONE JACK on the back of the satellite receiver, and the other end to an RJ11-type modular phone jack (the most common type of phone jack).

**Go to Page 16**

## Using Your Components

### To watch DIRECTV® programming:

Tune the TV to the satellite receiver's output channel (either channel 3 or 4).

**Note:** You can change the satellite receiver's output channel by pressing the remote control's SAT button, then the MENU button, then select *System Setup*, then *System Options*, and finally select *Output Channel*. Use the remote control's arrow and OK buttons to highlight and select the desired output channel. Tune the TV to that channel to see the satellite receiver's picture.

### To record DIRECTV® programming:

Follow the directions in the previous step, then set your VCR to record on its proper input channel (channel 3 or 4 if using RF coaxial cable to make the connection, Video Line Input if using A/V cables to connect the VCR to the satellite receiver).

### To view VCR recordings:

 
Tune the TV to channel 3 or 4 (whichever is set on the VCR as its output channel). Begin VCR playback as usual.

# Connections & Setup

---


## Jacks and Cables

Below is a description of the jacks and cables you can use to make connections. Not all cables come with your digital satellite receiver.




### S-Video Jack and Cable

S-Video jacks/cables provide this receiver's best picture quality. Remember to connect the left and right audio cables to the TV because the S-Video cable carries only the picture signal, not the sound.

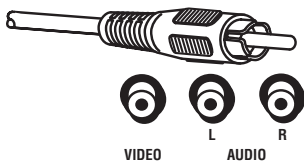

### Audio/Video (A/V) Jack and Cable (RCA-type)

Audio/Video (A/V) cables provide good picture quality and stereo sound, and should be used if your TV has no S-video jacks. The digital satellite receiver's A/V jacks are color coded (yellow for video, red for right audio, and white for left audio). If your TV has only one input for audio (mono), connect it to the left (white) audio jack on the satellite receiver.

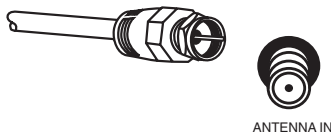

### RF Jack and Coaxial Cable (F-type)

RF jacks provide good picture and mono sound quality. They should be used if A/V connections are not available on your TV. RF jacks are used for off-air antenna and cable feed connections. The RF jacks on the receiver are labeled IN FROM ANT and OUT TO TV. The coaxial cable supplied with your system is used to connect the receiver to your TV/VCR's antenna input jack.




### Telephone Jack and Cord

The telephone line cord is required to connect your satellite receiver to a telephone line if you choose to subscribe to **\*\*DIRECTV®** programming. The phone line connection is used to periodically call out to DIRECTV. You will need an RJ11-type modulator jack (the most common type of phone jack) which might look like one of those pictured here. If you don't have a modular jack, call your local telephone company to find out how to get one installed.

*DIRECTV programming is subject to the terms and conditions of the DIRECTV Customer Agreement; a copy is provided at DIRECTV.com and with your first bill. DIRECTV, the Cyclone Design logo, and Advanced Program Guide are trademarks of DIRECTV, Inc., a unit of Hughes Electronics Corp., and are used with permission.*



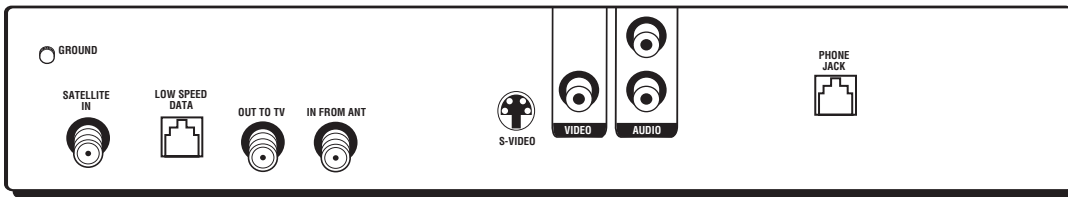

## Satellite Receiver Rear Panel

This diagram illustrates each of the back panel jacks found on your digital satellite receiver. When working with cables, be sure to connect corresponding OUTPUTS and INPUTS (Video OUT to Video IN, Right Audio OUT to Right Audio IN, etc.).

For more information on the function of the back panel jacks and many other features of your digital satellite receiver, press the MENU button and select *System Setup* from the Main menu, then select *System Index*.

### Back Panel Jacks (in alphabetical order)

**AUDIO (R and L)** Audio cables offer better sound quality than RF coaxial cables. Audio cables break sound apart into two separate channels (right and left) for stereo sound.

**Note:** If your TV has only one audio input jack, connect it to the satellite receiver's L AUDIO (white) jack.

**IN FROM ANT** Connect a standard TV antenna or cable feed to the satellite receiver using this jack. You can then switch between the satellite receiver's signal and the TV/cable feed using the remote control's ANTENNA button to toggle between the two.

**LOW SPEED DATA** This port allows you to connect your digital satellite receiver to future services and accessories as they become available. A shielded cable and additional hardware may be required.


**OUT TO TV** Connects the satellite receiver to your TV or VCR using RF coaxial cable. This jack provides the most basic connection, carrying average sound and video quality.

**PHONE JACK** Connects the satellite receiver to a telephone line. The digital satellite receiver requires a telephone line connection to periodically communicate with your program provider.

**SATELLITE IN** Use to connect the satellite receiver to the satellite dish antenna.

**S-VIDEO** Provides better picture quality than Video or RF coaxial cable jacks. If your TV has an S-Video jack, use it along with the audio jacks (S-Video only carries picture information, not sound) to connect to your TV.

**VIDEO** Provides better picture quality than the OUT TO TV jack. You must also connect the AUDIO cables when using the VIDEO connection.

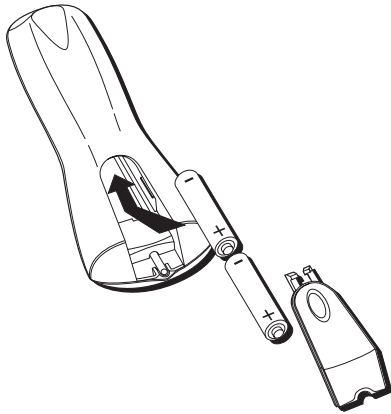

## Place Batteries in the Remote Control

Follow these steps whenever you need to install or change the batteries in your digital satellite receiver's remote control.

**Note:** When replacing old batteries, you may need to reprogram the remote control to operate other devices.

1. Remove the cover from the battery compartment.
2. Insert batteries in the battery compartment, matching the + and – end of each battery.
3. Replace the cover.

## Plug in and Turn on the Receiver

Plug the end of the power cord into the wall outlet. Be sure to insert the plug completely.

To turn on the satellite receiver, press the SAT button on the remote control or the ON•OFF button on the front panel. If your TV brand is RCA, GE, or Proscan, press the TV button on the remote control to turn on the TV. If your TV brand is not RCA, GE, or Proscan, see page 23 in the next section, *Using the Remote Control*, for details on programming the satellite receiver's remote control to operate your TV.

## Using Highlight and Select

All on-screen menus can be handled the same way, using highlight and select navigation.

### Highlight and select navigation has two steps:


1. Use the arrow buttons (up, down, left, and right) on the remote control to highlight different choices on the screen.
2. Press OK to select the highlighted item.

**Note:** When a highlighted on-screen menu choice has a number beside it, you can also press the corresponding number button on the remote control to select it.

Once you know how to navigate on-screen menus, you can complete the *Assisted Setup* (see the next step) and explore the menu system.

To display the on-screen menu system, press the remote control's SAT button, then press the MENU button.

**Note:** Don't worry about getting stuck inside a menu. Pressing the CLEAR button on the remote control takes you out of the menu system and back to the program you were watching.

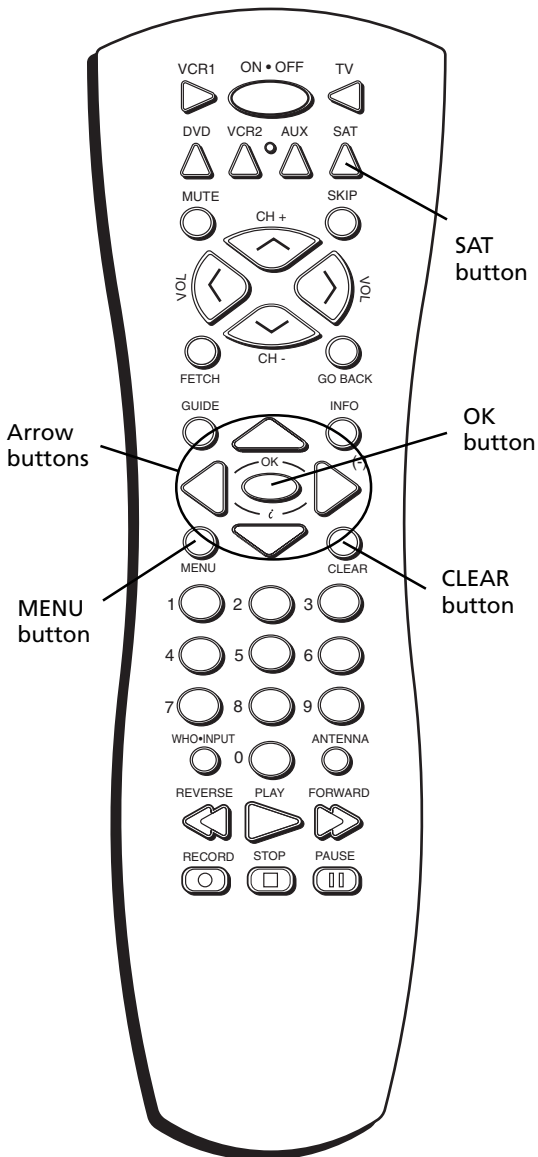

## Complete the Assisted Setup

If you installed your satellite dish antenna yourself, you may have already used the *Assisted Setup* to find dish-pointing coordinates, acquire and fine-tune the signal, and run a system test.

If you need to run the setup again, select *System Setup* from the Main menu, then select *Assisted Setup*.

To check your dish-pointing coordinates or run the signal strength meter, display the Main menu, then select *System Setup*, and finally *Dish Pointing*.

### Tip

*When you order programming, you need to know your access card number. To get the number, select System Setup from the Main menu, then System Test.*

*Wait for the system to run all of its tests. The access card number is displayed at the end of the system test.*

*Write the access card number in the space below for easy reference:*

---

## Order Programming

After you have installed your DIRECTV System, you should contact DIRECTV to order DIRECTV® programming.

With this receiver and the proper satellite dish antenna, you may be able to subscribe to local channels from DIRECTV in certain areas. Additional equipment may be required in some markets. Check with your retailer or visit [DIRECTV.com](http://DIRECTV.com) for information on availability of local channels from DIRECTV in your area.

Activation of programming may be subject to credit approval and requires valid service address, social security number and/or major credit card. Programming subject to change. You must be physically located in the U.S. to receive DIRECTV service. DIRECTV services not available outside the U.S. DIRECTV® programming is sold separately and independently of DIRECTV System hardware. A valid programming subscription is required to operate DIRECTV System hardware. Activate your DIRECTV® programming today at 1-800-DIRECTV (1-800-347-3288).

# Using the Remote Control

## Chapter Overview:


- Remote Control Buttons
- Buttons on Top of the Digital Satellite Receiver
- Programming the Remote Control
- Using the Remote Control to Operate Another Component
- Modes of Operation
- Controlling a Second Satellite Receiver
- Remote Control Codes

**Changing Entertainment. Again.**



## Remote Control Buttons

### in Alphabetical Order

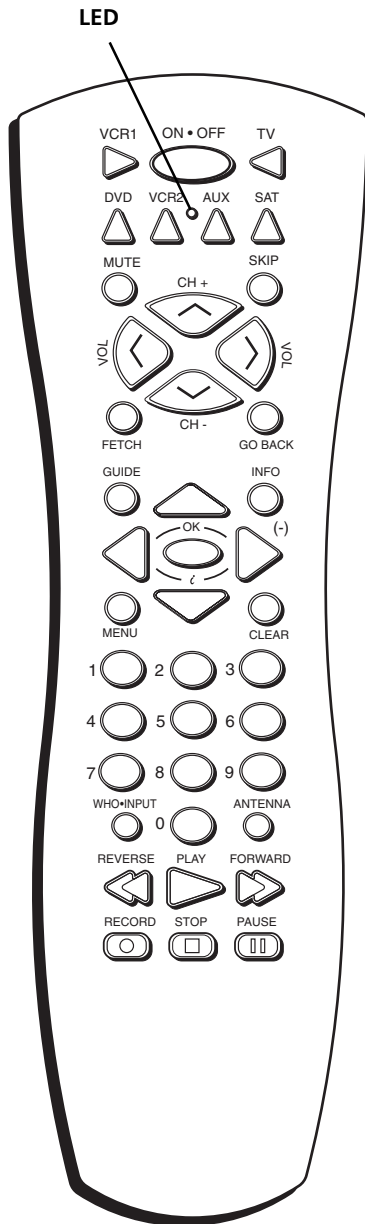

**ANTENNA** In TV mode, lets you toggle between the satellite and standard TV/cable signals when the satellite receiver is connected to the TV using the OUT TO TV jack. In VCR mode, ANTENNA functions as a TV/VCR input button.

**Arrows** Use the navigation arrows to move the on-screen highlight up, down, left, or right.

**AUX** Turns on a compatible RCA amplifier/receiver or audio/video receiver. This button can be programmed to control an RCA, GE, or Proscan auxiliary component.

**CH + (up) / - (down)** Use to scan up and down through the channels in the current channel list. If you are in the program guide or menu system, use the CH +/- buttons to page up and down a screen at a time.

**CLEAR** Removes the on-screen displays and returns you to normal viewing.

**Digit Buttons (0 - 9)** Used to tune directly to a specific channel. If you are in the menu system, use the digits to select menu items. In the menu system, use 0 to return to the previous menu screen.

**DVD** Tells the remote to operate the DVD player. Note that this button is only functional with RCA, GE, and Proscan DVD players.

**FETCH** Displays the Fetch menu with up to eight different actions, or executes a single task- depending on the preferences set.

**GO BACK** Moves you back and forth between the last two selected channels. In the menu system, returns you to the previous screen.

**GUIDE** Brings up the program guide. Subsequent presses of the GUIDE button switch between the Detail and Grid guide formats.

**INFO** Brings up the on-screen channel banner, password challenge, or purchase offer screen. In the program guides, press to get information about the highlighted program or channel. In the menu system, this button displays context-sensitive help for highlighted control elements.

**LED (Light-Emitting Diode)** This light is illuminated with each valid button press. When programming the remote control, it flashes or turns on or off to indicate programming status.


**MENU** Displays the Main menu. When you are using the remote control to operate an RCA, GE, or Proscan VCR (the remote is in VCR mode), the MENU button functions as a Program button.

**MUTE** When the remote is programmed to control a TV, this button reduces the TV's volume to its minimum level. Press again to restore the volume.

# Using the Remote Control

---

**OK/i (interactive)** Selects a highlighted choice if you are in the menu system.

Press the OK button when the DIRECTV INTERACTIVE™ icon () appears during interactive programs and commercials. Pressing OK will display more information and offer the chance to interact with what is displayed on screen.

**ON•OFF** Turns the component you are controlling on or off. When pressed twice within two seconds, all components that are on will be turned off (this feature only works with most RCA, GE, and Proscan products). You can also use the ON•OFF button on the top (front panel) of the digital satellite receiver to turn the receiver on or off.

**SAT** Tells the remote to control the digital satellite receiver.

**SKIP** Used to activate the commercial skip mode on RCA, GE, and Proscan products that offer Commercial Skip feature. Commercial Skip activates an on-screen timer. This feature allows you to change channels (during a commercial break, for example), then be returned to the original channel that was active when skip was first pressed when the timer reaches zero. Each press of the SKIP button increases the timer by 30 seconds.

**Transport Buttons (REVERSE, PLAY, FORWARD, RECORD, STOP, PAUSE)** When in on-screen guides, PLAY advance the display two hours, FORWARD advances the display 12 hours and REVERSE moves time backward 12 hours. When the remote control is programmed, these buttons are also used to control an auxiliary component, such as a VCR or laserdisc player. Note that if your VCR Controller is connected, the RECORD button can be used to schedule a timer recording when using the Program Guide or to begin recording while watching a program (in VCR mode).

**TV** When programmed, tells the remote to control the TV.

**VCR1** When programmed, tells the remote to control the VCR.

**VCR2** When programmed, tells the remote to control a second VCR.

**VOL down and up** When programmed, adjusts the audio volume of your TV.


**WHO•INPUT** Press the WHO button one or more times to scroll through the user profiles. When you are using the remote control to operate an RCA, GE, or PROSCAN TV (in TV mode), press the WHO•INPUT button one or more times to scroll through the available video input sources.

# Using the Remote Control

---

## Top of the Digital Satellite Receiver

This diagram illustrates the buttons on the top (also referred to as the front panel) of the digital satellite receiver. For more information on the function of the front panel buttons and many other features of your digital satellite receiver, press the MENU button and select *System Setup* from the Main menu, then select *System Index*.

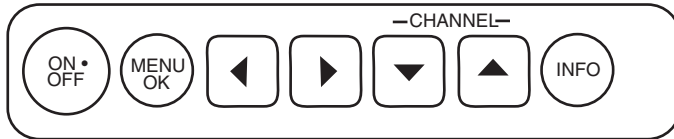

### Front Panel Buttons (Left to Right)

**ON • OFF** Use to turn your digital satellite receiver on for viewing or off when you are not viewing it. Your receiver will still be able to download software upgrades and receive messages from program providers when it is off.


**MENU • OK** Use this button to display the Main menu. If you are already in the menu system, pressing this button selects the highlighted item.

**Arrows** Use the navigation arrows to move the on-screen highlight up, down, left, or right.

**Channel Down and Up** When you're watching TV, use these buttons to change the channel.

**INFO** Use this button to display the channel banner, password challenge, or purchase offer screen. Press twice to display additional program information, when available. While in the menu system INFO also summons context sensitive help about a highlighted menu item.



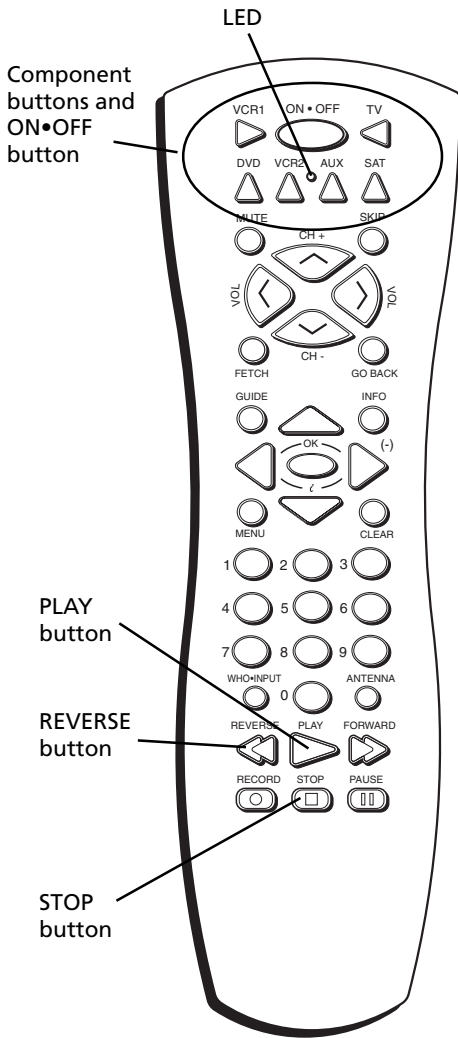

## Programming the Remote Control

The digital satellite receiver's remote can be programmed to control most brands of remote controllable components. The remote is already programmed to control most RCA, GE and Proscan components; it may need to be programmed to control other manufacturers' brands.

## Testing the Remote Control

To determine whether the universal remote control needs to be programmed, turn a component on, such as a VCR, point the remote at the VCR, and press the VCR button. Then press ON•OFF or CH + or CH - to see if the VCR responds to the remote commands. If not, the remote needs to be programmed.

There are two ways to program the remote control: Automatic Code Search or Direct Entry.

## Using Automatic Code Search

The following instructions can be used to program the remote to control many of the components connected to your TV. If you want to exit the automatic code search without programming any of your components, press the CLEAR button until the LED (red light) turns off.

1. Turn on the component you want to control (VCR, satellite receiver, etc.)
2. Press and hold the button you want to program. While holding the component button, press and hold ON•OFF until the LED on the remote control turns on, then release both buttons.  
**Note:** The AUX button can only be programmed using direct code entry. See "Using Direct Entry," later in this section, for details.
3. Point the remote at the component, press and release PLAY, then wait five seconds or until the LED stops flashing.

At this point the remote control is searching for the correct code to program. If, after five seconds, the component you want to control does not turn off, press and release PLAY again to tell the remote to search the next set of codes.

Continue pressing and releasing PLAY until the component turns off or you have searched through all of the codes. There are 20 total sets of codes. If the component does not turn off after pressing PLAY 20 times, then the remote cannot control that particular component.

If the component you want to control *does* turn off:

1. Press and release REVERSE, then wait two seconds. Repeat this step until the component turns back on.
2. To finish, press and hold STOP until the LED on the remote control turns off.

# Using the Remote Control

---

## Using Direct Entry

1. Turn on the component to be programmed.
2. Look up the brand and code number(s) for the component on the code list at the end of this section.
3. On your remote control, press and hold the component button you want to program.
4. While pressing the component button, enter a code from the code list.
5. Release the component button, and then press ON•OFF to see if the component responds to the remote control commands. If it doesn't, try pressing the component button and then ON•OFF again.
6. If you get no response, repeat these steps using the next code listed for your brand, until the component responds to the remote control commands.

## Operating Other Components

Once the remote has been programmed successfully, you are ready to use it to operate your components.

### To Operate the Component:

1. Press the component button (TV, VCR1, SAT, VCR2, or AUX) to set the remote to control the component.
2. Press ON•OFF to turn the component on or off.
3. Use the remote control buttons that apply to that component.

## Modes of Operation

Because this universal remote can control several different components (DVD player, VCR, cable box, etc.) it uses operational modes triggered by the component buttons. For example, if you want the remote control to operate the TV, press the TV button to put the remote into TV mode. If you want to play a videotape, press VCR1 then PLAY (pointing the remote at the VCR).

## Controlling a Second Satellite Receiver

The remote can control two satellite receivers. From the Main menu, select *System Setup*, then *System Options*, then *Remote Setup*. Then follow the on-screen instructions and enter the appropriate code from the Satellite Receiver list at the end of this section. By default, the SAT button is used to control the first satellite receiver and the AUX button is used to control the second satellite receiver.

If your second receiver is an RCA, GE, or Proscan and you want to control it using the AUX button, use code 5001. Code 5000 is used by the SAT button.

## Remote Control Codes

<b>TV</b>	
Abex .....	1172
Admiral .....	1001, 1173
Adventura .....	1174
Aiko .....	1016
Akai .....	1002
Alleron .....	1046
Amtron .....	1038
Anam National .....	1003, 1038
AOC .....	1004, 1005, 1006, 1007, 1175, 1176
Audiovox .....	1038
Belcor .....	1004
Bell & Howell .....	1001, 1083, 1162
Bradford .....	1038
Brokwood .....	1004
Candle .....	1004, 1006, 1008, 1174
Capehart .....	1175
Celebrity .....	1002
Centurion .....	1009
Citizen .....	1004, 1006, 1008, 1016, 1038, 1105, 1171, 1174, 1177
Clairtone .....	1176
Colortyme .....	1004, 1006
Concerto .....	1004, 1006
Contec/Cony .....	1012, 1013, 1014, 1038, 1176
Craig .....	1038
Crown .....	1038, 1171
Curtis Mathes .....	1000, 1004, 1006, 1015, 1105, 1162, 1171
CXC .....	1038
Daewoo .....	1004, 1005, 1006, 1016, 1017, 1018, 1127, 1171
Daytron .....	1004, 1006, 1171
Dimensia .....	1000
Dumont .....	1004, 1151
Dynatech .....	1178
Electroband .....	1002, 1176
Electrohome .....	1003, 1004, 1006, 1019, 1022
Emerson .....	1004, 1006, 1012, 1014, 1023, 1024, 1025, 1026, 1027, 1028, 1029, 1030, 1031, 1032, 1033, 1034, 1035, 1036, 1037, 1038, 1039, 1041, 1042, 1043, 1044, 1046, 1047, 1123, 1124, 1162, 1171, 1176, 1177, 1179, 1191
Envision .....	1004, 1006
Fisher .....	1048, 1049, 1050, 1051, 1162, 1180
Fujitso .....	1046
Funai .....	1038, 1046
Futuretec .....	1038
GE .....	1000, 1003, 1004, 1006, 1022, 1052, 1054, 1055, 1087, 1164, 1165, 1166, 1167, 1168, 1181
Gibraltar .....	1004, 1151
Goldstar .....	1004, 1005, 1006, 1012, 1019, 1056, 1057, 1058, 1155, 1156, 1171, 1172
Grundy .....	1038, 1046, 1171
Hallmark .....	1004, 1006
Harvard .....	1038
Hitachi .....	1004, 1006, 1012, 1013, 1059, 1060, 1061, 1135, 1136, 1137, 1138, 1139, 1140, 1141, 1142, 1143, 1144, 1145, 1146, 1148, 1150, 1179
IMA .....	1038
Infinity .....	1062
Janeil .....	1174
JBL .....	1062
JCB .....	1002
JC Penney .....	1000, 1004, 1005, 1006, 1008, 1022, 1052, 1054, 1058, 1063, 1064, 1072, 1087, 1105, 1128, 1171, 1172, 1181
Jensen .....	1004, 1006
JVC .....	1012, 1013, 1054, 1060, 1065, 1066, 1067, 1089, 1157, 1158, 1159, 1182
Kawasho .....	1002, 1004, 1006
Kaypani .....	1175
Kenwood .....	1004, 1006, 1019
Kloss Novabeam .....	1068, 1069, 1174, 1183
KTV .....	1038, 1070, 1171, 1176, 1177
Loewe .....	1062
Logik .....	1083
Luxman .....	1004, 1006
LXI .....	1000, 1006, 1049, 1062, 1071, 1072, 1073, 1162, 1181
Magnavox .....	1004, 1006, 1008, 1019, 1062, 1068, 1069, 1074, 1075, 1076, 1077, 1088, 1089, 1131, 1130, 1132, 1133, 1134, 1183, 1184
Majestic .....	1083
Marantz .....	1062
Marantz .....	1004, 1006, 1062, 1078
Megatron .....	1006, 1059
MEI .....	1176
Memorex .....	1001, 1006, 1082, 1083, 1162
MGA .....	1004, 1005, 1006, 1019, 1022, 1051, 1079, 1080, 1082
Midland .....	1054, 1151, 1171, 1172, 1181
Minutz .....	1052
Mitsubishi .....	1004, 1005, 1006, 1019, 1022, 1051, 1079, 1080, 1081, 1082, 1083, 1125
Montgomery Ward .....	1083
Motorola .....	1003, 1173
MTC .....	1004, 1005, 1006, 1105, 1176, 1178
Multitech .....	1038, 1178
Multivision .....	1084
NAD .....	1006, 1071, 1072, 1185
NEC .....	1003, 1004, 1005, 1006, 1089
Nikko .....	1006, 1016
NTC .....	1016
Onwa .....	1038
Optimus .....	1185
Optonica .....	1095, 1173
Orion .....	1035, 1191
Panasonic .....	1003, 1054, 1062, 1170
Philco .....	1003, 1004, 1005, 1006, 1008, 1012, 1019, 1062, 1068, 1069, 1074, 1075, 1077, 1183, 1184
Philips .....	1003, 1004, 1008, 1012, 1019, 1062, 1068, 1069, 1074, 1075, 1076, 1086, 1087, 1088, 1089
Pilot .....	1004, 1171
Pioneer .....	1004, 1006, 1090, 1091, 1092, 1179, 1185
Portland .....	1004, 1005, 1006, 1016, 1171
Price Club .....	1105
Prism .....	1054
PROSCAN .....	1000, 1181
Proton .....	1004, 1006, 1012, 1093, 1175
Pulsar .....	1151
Pulser .....	1004
Quasar .....	1003, 1054, 1070, 1094
Radio Shack/Realistic .....	1000, 1004, 1006, 1012, 1038, 1049, 1095, 1162, 1171, 1172
RCA .....	1000, 1003, 1004, 1005, 1006, 1007, 1019, 1096, 1098, 1099, 1100, 1101, 1102, 1103, 1129, 1179, 1181, 1187, 1188, 1190, 1198, 1199
Rhapsody .....	1176
Runco .....	1151
Sampo .....	1004, 1006, 1171, 1172, 1175
Samsung .....	1004, 1005, 1006, 1012, 1015, 1019, 1104, 1105, 1106, 1171, 1172
Samsux .....	1171
Sansui .....	1191
Sanyo .....	1004, 1048, 1049, 1050, 1080, 1107, 1108, 1162, 1180, 1189
Scotch .....	1006
Scott .....	1004, 1006, 1012, 1024, 1035, 1038, 1046
Sears .....	1000, 1004, 1006, 1013, 1019, 1046, 1048, 1049, 1050, 1051, 1066, 1071, 1072, 1109, 1110, 1162, 1180, 1181, 1189
Sharp .....	1004, 1006, 1012, 1029, 1095, 1111, 1112, 1113, 1122, 1171, 1173
Shogun .....	1004
Signature .....	1001, 1083, 1115
Simpson .....	1008
Sonic .....	1176
Sony .....	1002
Soundesign .....	1004, 1006, 1008, 1038, 1046
Squareview .....	1189
SSS .....	1004, 1038
Starlite .....	1038
Supremacy .....	1174
Supreme .....	1002
Sylvania .....	1004, 1006, 1008, 1019, 1062, 1068, 1069, 1074, 1075, 1076, 1077, 1088, 1116, 1161, 1183, 1184
Symphonic .....	1033, 1038, 1189
Tandy .....	1173
Tatung .....	1003, 1178
Technics .....	1054
Techwood .....	1004, 1006, 1054
Teknika .....	1004, 1005, 1006, 1008, 1012, 1013, 1016, 1038, 1046, 1076, 1082, 1083, 1105, 1170, 1171
Telecaption .....	1117
TMK .....	1004, 1006
Toshiba .....	1049, 1071, 1072, 1089, 1105, 1109, 1117, 1118, 1160, 1162
Totevision .....	1171
Universal .....	1052, 1087
Victor .....	1066, 1182
Vidtech .....	1004, 1005, 1006
Viking .....	1174
Wards .....	1000, 1001, 1004, 1005, 1006, 1019, 1024, 1033, 1046, 1052, 1062, 1068, 1069, 1074, 1075, 1076, 1083, 1087, 1088, 1095, 1119, 1120, 1184
Yamaha .....	1004, 1005, 1006, 1019
Zenith .....	1004, 1083, 1151, 1152, 1153, 1154

# Code List

## VCR

Admiral	2131
Zaiko	2027
Aiwa	2002, 2026
Akai	2003, 2004, 2005, 2007, 2008, 2111, 2112, 2113
American High	2021
Asha	2013
Audio Dynamics	2009, 2010
Audiovox	2014
Bell & Howell	2011
Beaumont	2013
Broksonic	2012, 2025
Calix	2014
Candle	2013, 2014, 2015, 2016, 2017, 2018, 2019
Canon	2021, 2022, 2114
Capchart	2020, 2110
Carver	2062
CCE	2027, 2061
Citizen	2013, 2014, 2015, 2016, 2017, 2018, 2019, 2027
Colortyme	2009
Colt	2061
Craig	2013, 2014, 2023, 2061
Curtis-Mathes	2000, 2002, 2009, 2013, 2016, 2018, 2021, 2022, 2024, 2115
Cybernex	2013
Daewoo	2015, 2017, 2019, 2025, 2026, 2027, 2028, 2110
Daytron	2110
DBX	2009, 2010
Dimensia	2000
Dynatech	2002, 2026
Electrohome	2014, 2029
Electrohome	2014
Emerson	2002, 2012, 2014, 2015, 2021, 2024, 2025, 2026, 2029, 2030, 2032, 2033, 2034, 2035, 2036, 2037, 2038, 2039, 2040, 2041, 2042, 2044, 2045, 2047, 2065, 2105, 2113, 2116, 2117, 2130
Fisher	2011, 2023, 2048, 2049, 2050, 2051, 2052, 2118
Fuji	2021, 2119
Funai	2002, 2026
Garrard	2026
GE	2000, 2001, 2013, 2021, 2022, 2053, 2115, 2120
Goldstar	2009, 2014, 2018, 2054, 2121
Gradiente	2026
Harley Davidson	2026
Harman Kardon	2009
Harwood	2061
Headquarter	2011
Hitachi	2002, 2055, 2056, 2057, 2107, 2111, 2120, 2122
HI-Q	2023
Instant Replay	2021
JCL	2021
JC Penney	2009, 2010, 2011, 2013, 2014, 2021, 2022, 2055, 2056, 2058, 2059, 2060, 2107, 2118
Jensen	2055, 2056, 2111
JVC	2009, 2010, 2011, 2018, 2058, 2111, 2123
Kenwood	2009, 2010, 2011, 2016, 2018, 2058, 2111, 2123
KLH	2061
Kodak	2014, 2021
Lloyd	2002, 2026
Logik	2061
LXI	2014
Magnavox	2021, 2022, 2062, 2063, 2104, 2108, 2124
Magnin	2013
Marantz	2009, 2010, 2011, 2016, 2018, 2021, 2058, 2062, 2064
Marta	2014
Masushita	2021
MEI	2021
Memorex	2002, 2011, 2013, 2014, 2021, 2023, 2026, 2104, 2131
MGA	2029, 2065, 2113
MGN Technology	2013
Midland	2053
Minolta	2055, 2056, 2107
Mitsubishi	2029, 2055, 2056, 2065, 2066, 2067, 2069, 2070, 2071, 2072, 2073, 2074, 2106, 2113, 2123
Montgomery Ward	2075, 2131

Motorola	2021, 2131
MTC	2002, 2013, 2026
Multitech	2002, 2013, 2016, 2026, 2053, 2061
NEC	2009, 2010, 2011, 2016, 2018, 2058, 2064, 2076, 2078, 2079, 2111, 2123
Nikko	2014
Noblex	2013
Olympus	2021
Optimus	2014, 2131
Optonica	2096
Orion	2035
Panasonic	2021, 2022, 2109, 2125, 2126, 2127
Pentax	2016, 2055, 2056, 2107, 2120
Pentax Research	2018
Philco	2021, 2022, 2062, 2063
Philips	2021, 2062, 2096, 2124
Pilot	2014
Pioneer	2010, 2055, 2080, 2081, 2123
Portland	2016, 2017, 2019, 2110
ProScan	2000, 2001
Protec	2061
Pulsar	2104
Quarter	2011
Quartz	2011
Quasar	2021, 2022, 2125
RCA	2000, 2001, 2003, 2013, 2021, 2055, 2056, 2082, 2083, 2084, 2085, 2086, 2087, 2088, 2089, 2090, 2091, 2107, 2115, 2120, 2125
Radioshack/Realistic	2002, 2011, 2013, 2014, 2021, 2022, 2023, 2026, 2029, 2049, 2050, 2096, 2131
Radix	2014
Randex	2014
Ricoh	2128
Runco	2104
Samsung	2005, 2013, 2015, 2033, 2053, 2112
Sanki	2131, 2104
Sansui	2010, 2092, 2111, 2123
Sanyo	2011, 2013, 2023
Scott	2012, 2015, 2025, 2032, 2035, 2038, 2065, 2093, 2116
Sears	2011, 2014, 2021, 2023, 2048, 2049, 2050, 2051, 2055, 2056, 2107, 2118
Sharp	2002, 2017, 2029, 2094, 2095, 2096, 2131
Shintom	2004, 2056, 2061, 2098
Shogun	2013
Signature	2002, 2131
Singer	2021, 2061, 2128
Sony	2002, 2004, 2098, 2099, 2119, 2128
STS	2021, 2107
Sylvania	2002, 2021, 2022, 2026, 2062, 2063, 2065, 2124
Symphonic	2002, 2026
Tandy	2002, 2011
Tashiko	2014
Tatung	2058, 2111
TEAC	2002, 2026, 2058, 2085, 2111
Technics	2021, 2109
Teknika	2002, 2014, 2021, 2026, 2100, 2129
TMK	2013, 2024, 2047
Toshiba	2015, 2049, 2051, 2055, 2065, 2093, 2116
ToteVision	2013, 2014
Unitech	2013
Vector Research	2009, 2010, 2015, 2016
Victor	2010
Video Concepts	2009, 2010, 2015, 2016, 2113
Videosonic	2013
Wards	2002, 2013, 2014, 2015, 2021, 2023, 2026, 2029, 2055, 2056, 2061, 2096, 2101, 2102, 2103, 2107, 2116, 2131
XR-1000	2021, 2026, 2061
Yamaha	2009, 2010, 2011, 2018, 2058, 2111
Zenith	2004, 2098, 2104, 2119, 2128

Cabletenna	5008
Cableview	5008
Century	5011
Citizen	5011
Colour Voice	5012, 5013
Comtronics	5014, 5015
Contec	5016
Eastern	5017
Garrard	5011
GC Electronics	5009
Gemini	5018, 5019, 5049
General Instrument	5003
Hamlin	5020, 5021, 5022, 5035, 5045
Hitachi	5003
Hytex	5002
Jasco	5011
Jerrold	5003, 5005, 5007, 5018, 5023, 5024, 5046, 5053
Magnavox	5025
Memorex	5026
Movie Time	5002, 5027, 5028
NSC	5002, 5027, 5028
Oak	5002, 5016, 5029
Panasonic	5048, 5052
Paragon	5026
Philips	5011, 5012, 5013, 5019, 5025, 5030, 5031, 5032
Pioneer	5033, 5034
Pulsar	5026
RCA	5047, 5049, 5052
Realistic	5009, 5049
Regal	5022, 5035
Regency	5017
Rembrandt	5003
Runco	5026
Samsung	5014, 5034
Scientific Atlanta	5006, 5036, 5037, 5038
Signal	5014, 5018
Signature	5003
SL Marx	5014
Sprucer	5052
Starcom	5007, 5018, 5053
Stargate	5014, 5018
Starquest	5018
Tandy	5040
Televue	5014
Tocom	5004, 5023, 5041
Toshiba	5026
Tusa	5018
TV86	5027
Unika	5008, 5009, 5011
United Artists	5002
United Cable	5053
Universal	5008, 5009, 5010, 5011
Videoway	5044
Viewstar	5015, 5025, 5027, 5040
Zenith	5026, 5050, 5051

## Satellite Receivers

Chapparral	5056, 5057
Drake	5058, 5059
GE	5000
General Instruments	5060, 5061, 5062
Panasonic	5075
Primestar	5076
ProScan	5000
RCA	5000
Realistic	5063
Sony	5072
STS1	5064
STS2	5065
STS3	5066
STS4	5067
Toshiba	5068, 5073
Uniden	5069

## Cable Boxes

ABC	5002, 5003, 5004, 5005, 5006, 5007, 5053
Antronix	5008, 5009
Archer	5008, 5009, 5010, 5011

# Using the Satellite Receiver's Features


## Chapter Overview:

- What is a Program Guide?
- The DIRECTV INTERACTIVE™ feature
- The Channel Banner and other on-screen displays
- How to use the on-screen programming schedule

**Changing Entertainment. Again.**



# Satellite Receiver Features

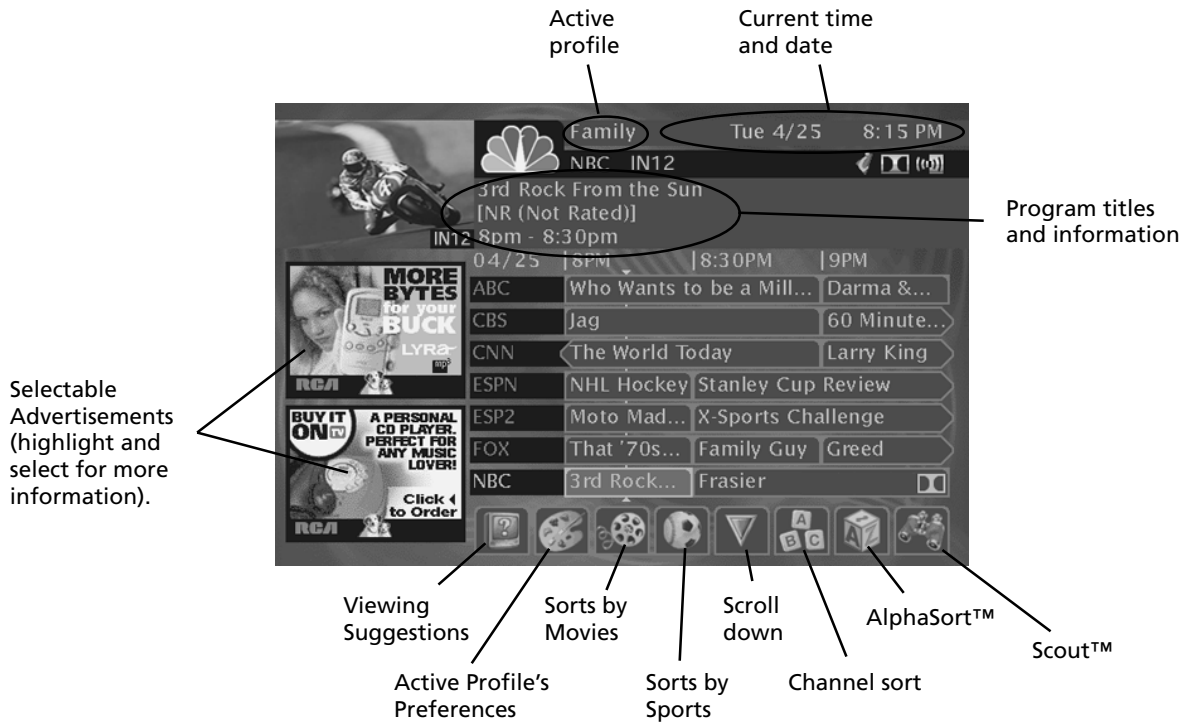

## Anatomy of a Program Guide

The following diagram shows you the kind of information you will see in the program guides.




## Displaying the Program Guide

To access the program guides, press MENU on the remote control and select *Program Guides*, then the guide of your choice (*Default*, *Channel*, or *Logo*). You can quickly access the receiver's Default Guide by pressing the GUIDE button on the remote.

To change the current user, press the remote control's WHO•INPUT button while viewing programming, then use the remote control's arrow and OK buttons to select the desired profile. You can also press the remote control's MENU button, then select *Program Guides*, and then *Select User* to display the list of profiles from which to choose.

# Satellite Receiver Features

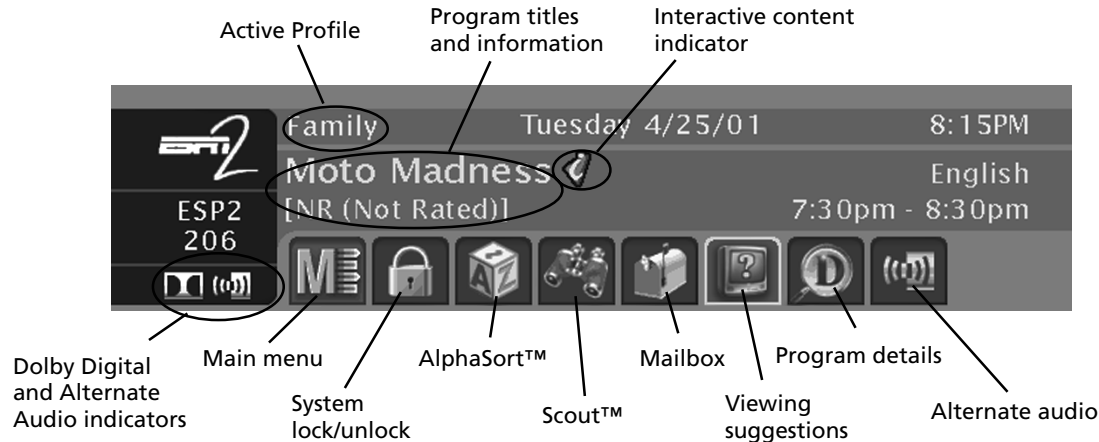

## Using The Channel Banner

The channel banner appears whenever you do one of the following:

- Tune to a channel.
- Press the remote control's INFO, SAT, or GO BACK buttons while watching programming.
- Press UP, DOWN, or INFO on the satellite receiver's front panel.
- Exit the on-screen menu system.

On-screen icons represent frequently-used menu items. Some icons also change appearance to show the item's status. Use the arrow buttons and OK to choose an icon. Some of the items you select in the channel banner can also be selected in the program guides.

## Buttons of the Channel Banner

**Main Menu icon** Takes you to the Main menu.

**Locked icon** The system is locked. Spending, viewing and other limits cannot be accessed or changed. Selecting this icon displays a password menu. Enter the correct system password to override settings.

**Unlock icon** The system is unlocked. Spending, viewing and other limits can be accessed or changed. Selecting this icon in the channel banner displays the Lock System control panel.

**Video Unlock icon** A password has been entered to temporarily override the limits. The system will remain unlocked until the satellite receiver is turned off or re-locked.

**Program Unlock icon** A password has been entered to override limits for a single program. After the program ends, or when the channel is changed, limits are restored.

**AlphaSort™ icon** Enables you to sort titles alphabetically.

**Scout™ icon** Allows you to search for programs using key words.

**Mailbox icon** Displays the Mail screen. The icon will be white if you have an unread mail.

**Viewing Suggestions icon** Displays the *Viewing Suggestions* menu.

**Program Details icon** Displays a description of the current program (if available).


**Alternate Audio icon** Cycles through the alternate audio choices.

# Satellite Receiver Features



## The DIRECTV INTERACTIVE™ Feature

Your digital satellite receiver includes DIRECTV INTERACTIVE™, powered by Wink Communications®, a free service that gives you the opportunity to interact with TV programming and advertising. You can use your remote control to get program-related information, respond to free offers during commercials and even make purchases while you watch TV.

Whenever you see the DIRECTV INTERACTIVE™ icon () appear, press the OK/i button on the remote control to open the interactive window.

### To learn more about the DIRECTV INTERACTIVE™ service:

1. Press MENU on the remote control (the Main menu appears).
2. Use the arrow buttons on the remote control to highlight *Interactive*.
3. Press OK/i to tune directly to the DIRECTV INTERACTIVE™ Center (channel 499) to get more information about the following: Getting Started, Interactive Channels, Shopping Sign Up, Order History, Messages, Help & Settings, and About DIRECTV.

## Displaying On-screen Guides

Each time you press the remote control's GUIDE button, a different type of program guide appears:




## The Detail Guide

The Detail Guide shows five channels in a time-and-channel format, with program information for the highlighted program. A small window showing the program you were watching before entering the program guides is displayed in the upper left hand corner (you can preview other channels in the Detail Guide by highlighting channel numbers instead of the program titles).

**Notes:** By default, the Detail Guide appears when you press GUIDE on the remote control. You can change the default guide from the Detail Guide to the Grid Guide.

Select *Personal Settings* from the Main menu, then select the profile to be changed, then select *Default Guide*. Use the remote control's arrow buttons to highlight Grid Guide, then press the OK button to activate your choice.

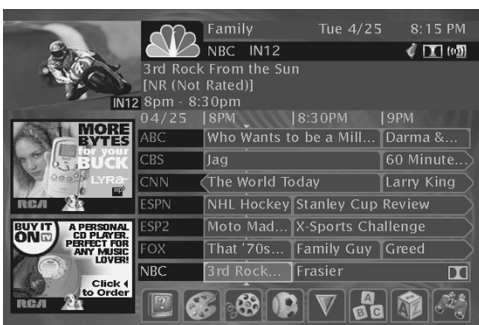

## The Grid Guide

The Grid Guide shows seven channels in a time-and-channel format. A small window showing the program you were watching before entering the program guides is displayed in the upper left hand corner (you can preview other channels in the Detail Guide by highlighting channel numbers instead of the program titles).



## Getting Around In the Guides

This section describes how to change channels and move around a program guide.

### Digit Buttons (0–9)

You can point quickly to any channel in the program guide by entering the channel number with the digit buttons (0–9). For example, to point to channel 228, press the digits 2-2-8, on the remote control.

### Scrolling Channel By Channel

The programs that you see on the TV screen make up one section—or page—of the total program guide. You can scroll one line at a time using the arrows: point to other times with the left and right arrows; point to other channels with the up and down arrows.


### Scrolling Page By Page

If you want to scroll up or down through the program guide faster, press the CH +/- buttons on the remote control. The highlight scrolls a page at a time.

### Scrolling Forward and Reverse

To scroll forward in two-hour increments, press the remote control's PLAY button while in SAT mode. To go forward or reverse by a 12-hour block of time, use the FORWARD and REVERSE buttons on the remote control.

**Note:** Your digital satellite receiver can store up to three days of programming information. Getting all this information can take up to 6 hours to download.

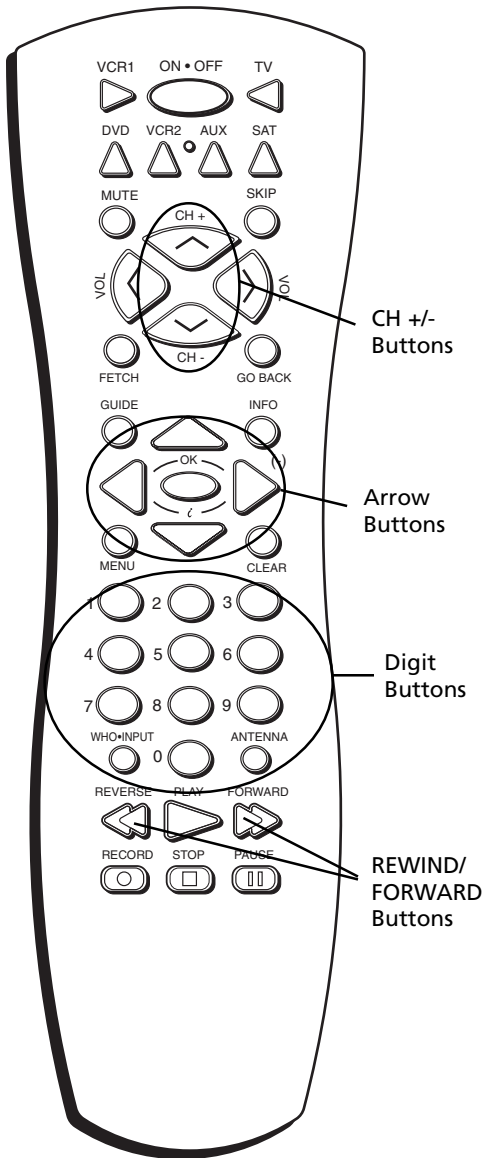

# Satellite Receiver Features



## Tip

For information on tuning to a PPV program, see page 45.



## Tip

Your digital satellite receiver can store up to three days of information, so retrieving data can take a little time.

It can take up to 6 hours to download all three days of information when turning the system on after the Guide information has been lost.

## Tuning to a Program

To tune directly to a current program listed in the guide, point to the program and press OK.

To see information about a program in the guide, point to the program and press INFO.

Then, you can select:

- *View Channel* to tune to that channel
- *Remind Me* to set up a Watch Timer. This will display a prompt allowing you to quickly change the channel when the program is about to begin.
- *Other Times* to see what other times the program is available.
- *More Details* opens another display with detailed information (if available).

The options available to you may vary according to the type of program you select.

## More Details

There's a variety of program information sent along with standard broadcast signals, and your digital satellite receiver can display much of it (if available).

The *More Details* menu can offer information (if available) about Actors and Roles, the Director, the Writer, Original Materials, the Production Studio, Awards, Keywords associated with the program, and the original release Date and Run Length. Just use the remote control's arrow and OK buttons to highlight and select the desired button, and to display more information.

You can even use the displayed information in the *More Details* menu to look for matching information in the stored guide programs, or to create search criteria for use with the Scout™ search feature of your digital satellite receiver.

### To Access More Details:

1. Highlight a desired program in the on-screen guide and press the remote control's INFO button.

2. Highlight and select *More Details*.

**Note:** The *More Details* button is displayed in the *Program Details* menu only if more information is available.

3. Highlight and select the desired on-screen information button to display the details on the opposite side of the screen.

### To search for other programs with similar information:

4. Highlight the desired information on the right side of the menu and press the remote control's OK button. This will display any other program stored in the on-screen guides that shares the highlighted information.

### To save your search as Scout Criteria:

5. After completing step 4, use the remote control's arrow and OK buttons to select the Save as Scout button. You will be given on-screen instructions to complete this task.

## Additional Program Guides

Besides the Detail and Grid Guides, there are a few more to choose from: the Channel Guide, the Logo Guide, and the Viewing Suggestions Guide.

You can access these guides from the Main menu by selecting *Program Guides*.




## The Channel Guide

Displays the programming schedule for the selected channel.



## The Logo Guide

Displays channel logos for the current user's channel list.

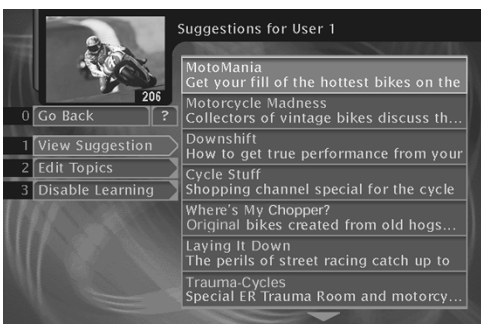

## The Suggestions Guide

Displays a list of programs based on programming that has been previously watched under that user profile.

# Satellite Receiver Features



## Sorting the Guides

Sorting the guide is a way of organizing the information to show only the types of programs that interest you. There are several on-screen icons that sort the guide in different ways. You can list programs by sports or movie themes, for example. You can customize the themes to meet your tastes, and each profile can have its own default program sorting.

To get to the sorting icons, use the down arrow button to move the highlight to the icons at the bottom of the screen. Then, use the left and right arrow buttons to highlight the desired icon.



## Viewing Suggestions

When you select the *Viewing Suggestions* icon, a control panel with a list of recommended program events is displayed. The recommendations are based on your previous viewing habits in terms of the amount of time spent watching programs that match a topic and theme category. The suggestions are ordered by best match.

Viewing suggestions are created for each active user profile. The suggestions being shown are always for the current user profile.

You can view and change your suggestions, or turn the learning feature off altogether from the Viewing Suggestions control panel.

### To Access the Viewing Suggestions Menu:

1. Press the remote control's MENU button to display the Main menu.
2. Press 1 to select *Program Guides*.
3. Press the 4 button to choose Suggestions.
4. Access desired viewing suggestions using the remote control's arrow and OK buttons to select.

**Note:** You can also access this menu by selecting the Viewing Suggestions icon in the Channel Banner or at the bottom of the on-screen guides.

### TIP: Accessing Viewing Suggestions

You can select *Viewing Suggestions* by selecting *Suggestions* in the Main menu, or by pressing the icon displayed in the channel banner or on-screen guides.



## Customizing Viewing Suggestions

You can edit the themes that will appear in the Viewing Suggestions menu by applying different “weights” to the topics. Increasing a topic’s weight increases the chance that programs with such themes will appear in the Viewing Suggestions menu. Decreasing a theme’s weight will lessen the chance that such themes will appear.

### To Change the Weight of Themes and/or Topics:

1. Follow steps 1-3 above to display the Viewing Suggestions menu.
2. Press the 2 button to select *Edit Topics*.
3. Select the numbered Topic to edit, then use the remote control's arrow and OK buttons to select and adjust weight percentages.



## Active Profile's Preferences

Each individual can edit preferences so customized themes and topics appear when a sorting icon is pressed. The Active profile's preferences can be quickly accessed by selecting this icon at the bottom of all on-screen guides.

### To Change the Active Profile's Preferences:

1. Press the GUIDE button on the remote control to display the default guide.
2. Use the remote control's arrow and OK buttons to select the *Active Profile Preferences* icon at the bottom of the guide.
3. Press the 2 button to select *Edit Preferences*. This will display a menu where you can customize the themes to appear when the *Active Profile Preferences* icon is selected.
4. In the customizing menu, use the remote control's arrow and OK buttons to highlight and select/deselect theme choices.

**Note:** The themes and topics can be customized for any profile.

Once finished customizing the themes, only topics that match your choices should appear when you select the *Active Profile Preferences* icon in the on-screen guides.



## Movies

Select the *Movies* icon to sort and list only movies. After selecting *Movies*, the *Movies Themes* menu is displayed. Here you can sort movies by various themes. By default, *All Movies* is highlighted first.

Select the *Movies Themes* icon to sort the guide to list specific types of movies, such as comedies or musicals. This icon may change from *Movies* to a different topic in the future, but it will continue to function in the same way.



## Sports

Select the *Sports* icon to list sporting events only. After selecting *Sports*, the *Sports* icon changes to a *Sports Themes* icon.

Select the *Sports Themes* icon to sort the guide to list specific types of sports, such as basketball or soccer. This icon may change from *Sports* to a different topic in the future, but it will continue to function in the same way.

# Satellite Receiver Features

---



## Channel Sort

Sort the on-screen guides to display channels in either numeric or alphabetical order. When the guide is sorted alphabetically, the 1-2-3 icon is displayed (select the icon to change the display to numeric). When the guide is sorted numerically, an A-B-C icon is displayed (select it to display the guide alphabetically).



## AlphaSort™

The *AlphaSort* feature lists all the program titles stored in the current guide in alphabetical order. Select the *AlphaSort* icon to search for specific program titles that are in the stored program guide information in alphabetical order. Use the arrow buttons on the remote control to highlight a character, then press OK.

For example, to search for the program *Auto Racing*, point to and select “A.” (Words like “The,” “A,” and “An” appear at the end of a title.) All titles that begin with “A” appear in the *AlphaSort* list. Next, enter the letter “U.” All titles beginning with “AU” appear in the list.

Continue to enter the specific title until it appears in the *AlphaSort* list. If you enter the wrong character, select either *Backspace* or *Clear All*.

Use the arrow buttons on the remote control to highlight the title you are looking for. Press the OK button to select it (if the program is airing), or the INFO button to see more information (if the program is not airing, OK will act like the INFO button). The AlphaSort feature looks for titles from all stored programming.

**Note:** When the digital satellite receiver is first plugged in or turned on after an extended power outage, there will only be a few hours of Guide information for search features to work with. It can take several hours for all three days worth of Guide data to be completely downloaded to your receiver.



## Scout™

The *Scout* system icon lets you assign “Scouts” to search the guide for specific program information, such as actors’ names or program descriptions.

Select the *Scout* icon from a program guide to view the available Scout menu items. Then, select *New Scout* from the Scout menu (this button only appears if there is an empty Scout menu available).

Select *Enter Text* to set up the information the *Scout* feature will look for in the program guide. Use the on-screen keyboard to enter the desired search parameters. You can also use the *Select Fields* menu button to specify the type of information you are looking for.

For example, if you are interested in how to prepare food, enter a common term you think would occur in program information, like “cooking.” When you have finished entering your topic select *Run Scout*.

If “cooking” appears within a program title or program description, the program will be included in the Scout Results program list.

Once you have set up a Scout menu item, you can check its status by highlighting it. A highlighted binoculars icon means that a Scout menu item has found results.

Scout continually searches for requested information whether the box is on or off. You can also select *Run Scout* to do an immediate search after setting up a scout.

Check a Scout menu item’s results by selecting that Scout menu item. When you highlight and select that Scout, the results are displayed on the right side.

### Tip

*On-screen icons represent the status of the Scout feature:*



*This icon (displayed in the Scout menu) indicates that the information you specified has been found.*

*The Scout icon in the Channel Banner and the on-screen guides will have a white outline when a Scout search returns information.*



## Down Arrow

The down arrow icon allows you to scroll down through other channels in the guide. Point to the down arrow icon and then press OK to scroll down through the program guide.

*This page left blank intentionally*



# Using the Menu System

## Chapter Overview:

- Using the Menu System
- The Program Guide
- Mailbox
- Using the Purchases Menu
- Timers Feature
- Profiles
- Personal Settings
- Options
- System Setup
- Interactive

**Changing Entertainment. Again.**



# Using On-Screen Menus

---



## Using the Menu System

To display the Main menu, press MENU on the remote control.

To use the menu system, you need to use the remote control's arrow buttons to highlight your on-screen choice, then use the OK button to select it. In menus that use numbered choices, you can use the remote control's number buttons to select an item quickly.

### **Tip: No Menus?**

*If the Main menu doesn't appear when you press MENU, the remote control might not be in SAT mode. Try pressing the SAT button on the remote, and then MENU.*

---

### **Tip: Using On-screen Help**

*Press the remote control's INFO button at any time for more information.*

---

## On-screen Buttons and Context Help

The on-screen menu system offers you more than one way to get more information or to navigate within the system using the on-screen *Go Back* and *Help* buttons at the top of most menus.

### Exiting a Screen

There are three ways to exit a menu:

- Select the on-screen *Go Back* button and press the OK button on the remote control.
- Press the CLEAR button on the remote control. The on-screen display clears from the screen and you return to TV viewing.
- Press the GO BACK button on the remote control. This returns the TV to its preceding display.

### Getting Help

For an overview of a displayed menu, use the remote control's arrow and OK buttons to select the on-screen Help button (?).

For details about a highlighted menu item (in what context an on-screen button is used, for example), press the remote control's INFO button and a popup window will tell you more.



## **Tip: Don't Be Afraid to Explore**

*Once you've learned the basics, feel free to poke around the menu system—exploring this system is a great way to learn!*

*Remember to use your remote control's arrow and OK buttons to maneuver through menus.*

*And, so you don't worry about getting lost in the menus, you can press CLEAR at any time to leave the menu system and return to regular system viewing.*

## **Main Menu Items**

This section briefly describes each of the options available from the Main menu. More information about each menu and its features is included later in this chapter, and you can always get more information when an item is highlighted by pressing the remote control's INFO button.

### **Program Guides**

Selecting this button will display a menu with a variety of different ways to view program guide information.

### **Mailbox**

This button is used to access mail messages from DIRECTV.

### **Purchases**

Use this button to review or cancel upcoming purchases, review past purchases, and set spending limits for saved profiles.

### **Timers**

Schedule the digital satellite receiver to tune to a specific channel at a specific time.

### **Profiles**

This button displays a menu where you can set system and user passwords, ratings limits, spending limits, viewing hours, as well as create favorite channel lists.

### **Personal Settings**

Do you want to set up an individual profile's personal settings or alter the look and feel of an existing profile? This button will take you to a menu where you can alter or set personal preferences of your digital satellite receiver.


### **System Setup**

Allows you to adjust to the way your system works, to get more information about system features, get dish pointing coordinates, etc.

### **Interactive**

Television broadcasts typically carry a wealth of information and now you can access and interact with it starting with this button. Selecting Interactive from the Main menu displays the DIRECTV INTERACTIVE™ system for setting up interactive TV service.

# Using On-Screen Menus

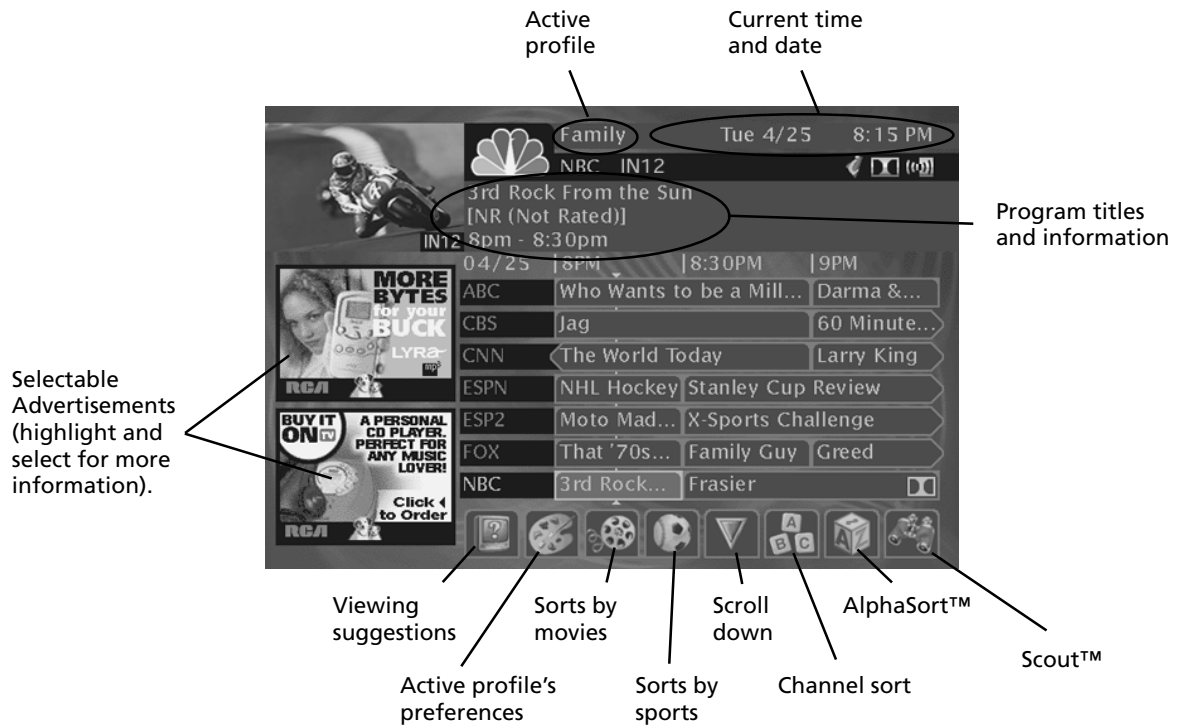

## 1 Program Guides

### The Program Guide

**Note:** The program guide is described in detail in the previous chapter, *Using the Satellite System's Features*, starting on page 27.

Selecting *Program Guides* from the Main menu displays a menu with a variety of display options available. You can select a specific User Profile, the system default guide (Detail Guide or the Grid Guide- according to your preferences), or the Logo or Channel Guide, Viewing Suggestions, or change the active profile.

### Anatomy of a Program Guide

The diagram above shows you the kind of information you will see in the Detail Guide and Grid Guide (Grid Guide shown here).

### Displaying Program Guides

In addition to selecting *Program Guides* in the Main menu, you can press the GUIDE button on the remote control. This bypasses the Program Guides menu and directly displays the default guide.

## 2 Mailbox

## Mailbox

The Mailbox menu lets you access messages sent from DIRECTV. For example, you may receive a message calling your attention to a new service.

## Messages Waiting

To tell if you have messages waiting for you in your mailbox, press the INFO button while watching regular programming. This displays the channel banner. The mail icon in the channel banner is highlighted if you have unread mail.



## Checking Your Mail

Press the MENU button on the remote control to display the Main menu. Then, select *Mailbox* from the Main menu (you can also select the mailbox icon on the channel banner to view your mail).

1. Point to a message and press OK. The message is opened for you to read.
2. Press OK again to close the message.

If you want to erase a message, point to *Erase Message* and press OK. When you exit *Mailbox*, messages that aren't erased are saved in memory.

**Note:** The quickest way to check for messages is to press the INFO button on the remote control. This will display the channel banner. With the channel banner displayed, use the remote control's arrow buttons to highlight the mail icon, then press the remote control's OK button to access the Mail menu.


## 3 Purchases

## Using the Purchases Menu

The Purchases menu allows you to review upcoming and past purchases and set spending limits.


The list of purchases may be longer than one screen; use the up and down arrow buttons to see more items. The display also shows the title, channel, date, time, and cost of each program.

**Note:** The *Past Purchases* list is updated as soon as a purchased program is viewed.

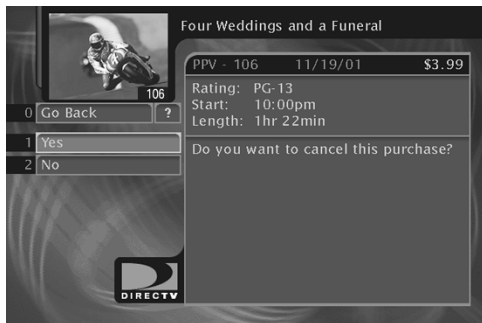

## Reviewing and Canceling Upcoming Purchases

Highlight and select an upcoming purchase from the *Future Purchases* screen. You can review the program description, as well as cancel an upcoming purchase.

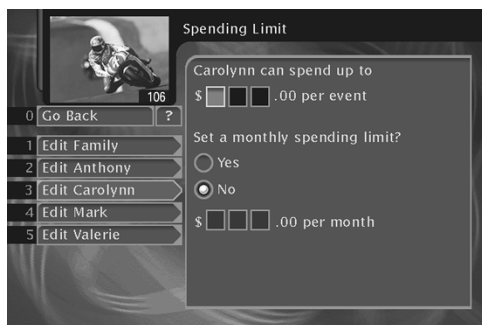

## Spending Limits

Use the *Spending Limit* option to indicate a per-event, and/or a monthly spending limit for Pay Per View programs.

1. Select *Spending Limit*.
2. Select the user profile you'd like to set a spending limit for, then use the digits or the arrow buttons on the remote control to enter program spending-limit information.

After a spending limit is set *and* the system is locked, you must enter a password to purchase a Pay Per View program that costs more than your spending limit allows.

**Note:** Spending limits are in effect only when the system is locked. See "Locking the System" on page 49 for details.



## Pay Per View Programs

Pay Per View (PPV) programs are DIRECTV® programs that you can purchase—like a movie ticket—if you subscribe to DIRECTV® programming and have your digital satellite receiver connected to a telephone line (see the instructions starting on page 5 for connection details).

## Previewing and Purchasing

You can preview and purchase DIRECTV® Pay Per View movies and events if you subscribe to DIRECTV® programming and have your digital satellite receiver connected to a telephone line.

**To purchase a movie or event, you can take one of two actions:**

- Tune to a PPV channel using the remote control's CH +/- buttons. When you find one, press the INFO button to find more information and details about how to purchase the program.
- Highlight a PPV program in a program guide and press INFO. The Program Details screen will appear and give you more information about the program. From this screen you can also purchase the program.

You can select:

- *View Channel* to view that channel
- *Buy Program* to purchase the program
- *Remind Me* to be prompted just before the show is scheduled to start.
- *Other Times* to see when the program will air again.
- *More Details* to go to a menu that will display additional information about the program (if available).

**Note:** The options available to you may vary according to the type of program you select.

### **Tip: Ordering PPV**

*If you want to order PPV programs using the on-screen menus, you need to connect your digital satellite receiver to a telephone line.*

### **Tip: PPV Passwords**

*You may need to enter your four-digit password to order a PPV program if it costs more than the spending limit you set up in the Profiles or Purchases menu.*

## 4 Timers

### Key

On-screen icons are a quick way to understand the timers:



Indicates that the timer is set.



Indicates that the timer is set for a PPV program.



Indicates a timer conflict.



Indicates Interactive content.

## 5 Profiles



## Timers

The Timers feature allows you to preset your digital satellite receiver to automatically tune to a particular channel at a predetermined time.

To use the Timers feature, select *Timers* from the Main menu. Select a Timer (1–16) and then use the arrow buttons to complete the on-screen details. When the information is complete, select *Continue*.

## Editing or Canceling a Timer

From the Timers screen, select the Timer you want to edit or cancel, and then do the following:

- Use the arrows buttons to edit the Timer, then select *Continue*.
- Select *Clear Timer* to cancel the timer.
- To watch the program daily or weekly, edit that program's Timer.

## User Profiles

Profiles allows you to set up different channel lists and limits for the different members of your family. A main profile (the *Family Profile*) and up to four separate profiles can be created. Individual settings that can be changed in the Profile Menu include the profile name, viewable channel lists, ratings limits for TV and movies, viewing hours, spending limits, and profile locking.

## Creating and Editing User Profiles

When you select *Profiles* from the Main menu, the first screen you see presents a menu listing all user profiles (the Family Profile and up to four individual profiles). You can create a new profile (if a blank profile exists), or edit an existing one.

To personalize an individual User Profile:

1. Press the remote control's MENU button to display the Main menu.
2. Press the 5 button to select *Profiles*.
3. Highlight the desired User Profile.

**Note:** The highlighted User Profile's settings are displayed in the panel on the right side of the screen.

4. Press the remote control's OK button to select that profile and enter profile editing mode.





## Setting the Name

The first step when creating a new profile is to set a name. This will be the name that appears when repeatedly pressing the WHO•INPUT button.

To set the profile name:

1. In the Profiles menu, press the 1 button to select *Name*.
2. Use the remote controls arrow and OK buttons to highlight and select the different letters of the profile name.

## Copying Profile Settings

To make creating or editing a profile easier, your digital satellite receiver gives you the ability to use the settings of a previously set profile.

To copy the settings of an existing profile:

1. In the Profiles menu, press the 2 button to select *Copy Settings*.
2. Use the remote control's arrow buttons to select the proper profile to copy settings from.
3. Press the remote control's OK button to select the desired profile.
4. Use the remote control's arrow and OK buttons to highlight and select the COPY button at the bottom of the screen.

## Creating a Profile Channel List

1. Select *Edit Channels*.
2. Use the arrow buttons to highlight a channel, and press OK to remove (or replace) the check mark. Checkmarked items appear in the channel list.



## Add or Delete All Channels

You might be able to save time when creating a channel list by using the *Add All Channels* option or the *Delete All Channels* option before removing or adding individual channels.


Also, program providers may make additional channels available. To prevent new channels from appearing in a profile channel list, choose *Delete All Channels* and checkmark only the channels you want to appear in the list.

## Subscriptions

Selecting the Subscriptions button will allow you to uncheck and remove from the channel list all channels that the active user profile does not subscribe to. Use the remote control's arrow and OK buttons to select the desired on-screen menu buttons.

**Note:** This step may take several minutes to complete.

# Using On-Screen Menus

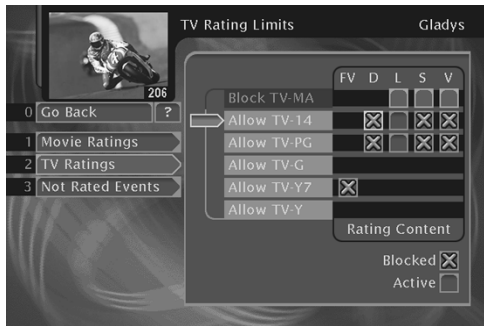

## Important

You need to lock the system in order for rating limits, channel limits, viewing hours, and spending limits to go into effect.

After you lock the system, you need to enter the system password to edit the limits. See “Locking the System,” later in this section, for details.

## Setting the Rating Limit

The Rating Limit menu enables you to set a maximum rating viewing limit for rated movies (based on the MPAA rating system) and TV programs. Unrated movies and TV programs can also be restricted from individual profiles.

1. In the Profiles menu, select *Rating Limits*.
2. Highlight the desired rating feature to set (Movie Ratings, TV ratings, or Not Rated Events).
3. Press the remote control's OK button.
4. Use the up and down arrow buttons to move the rating selector to the highest rating you want the active profile to view.

**Notes:** In the TV Ratings menu, you can customize aspects of certain ratings. For example, the TV-14 rating has four check boxes beside it. Each of these boxes can be checked or unchecked for greater customizing.

The boxes beside certain TV ratings boxes stand for Fantasy Violence (FV), Dialogue/Adult Situations (D), Language (L), Sex (S), and Violence (V).

After the Rating Limit is set *and* the system is locked, you must enter the system password to watch programs with a rating higher than your limit.



## Viewing Hours

Use the *Viewing Hours* option to limit the total amount of time, as well as the time of day, that a user can watch programming.

1. In the Profiles menu, select *Viewing Hours*.
2. Use the digits on the remote control or point to the + or – buttons and press OK to complete the on-screen sentence. Choose the days to view, how many hours can be viewed each day (0–24 hours) and when programming can be viewed. Be sure to lock the system for these limits to take effect.




## Setting Up Spending Limits

Select the *Spending Limit* option to indicate a per-event and/or a monthly spending limit for Pay Per View programs.

1. Point to *Spending Limit*, and press OK.
2. Use the number buttons on the remote control to enter a single-program spending limit and a monthly spending limit (if desired).
3. When all fields are set up correctly, the satellite receiver returns to the previous display.

**Note:** After Spending Limits are set and the system is locked, the system password will be required to purchase a Pay Per View program that costs more than the set Spending Limits allow.

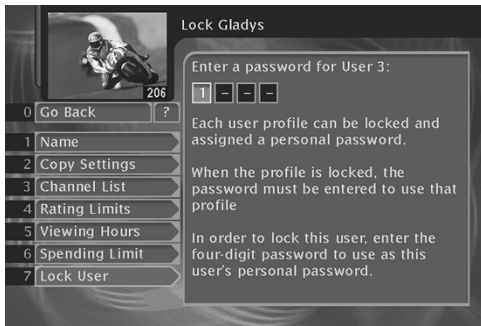

## Locking a User's Profile

Users can be assigned a personal password to lock their profile. When a password is assigned, users must enter the password before they can view programs using that profile. Profile passwords do not allow access to, or editing of, the profile limits (you must enter the system password to edit profile limits).

**Note:** Each profile that can be easily accessed using the WHO•INPUT button on the remote control.


To lock an individual profile:

1. In the specific profile edit mode, select *Lock User*.
2. Use the arrow or digit buttons to select each digit of the password.

## Locking the System

Locking the system puts the ratings, spending, viewing, and channel limits you have set up for each profile into effect. When you lock the system, no one can modify any of these settings without first entering the four-digit system password.

1. In the Profiles menu, select *Lock System*.
2. Use the arrows or the digit buttons to enter a four-digit system password.

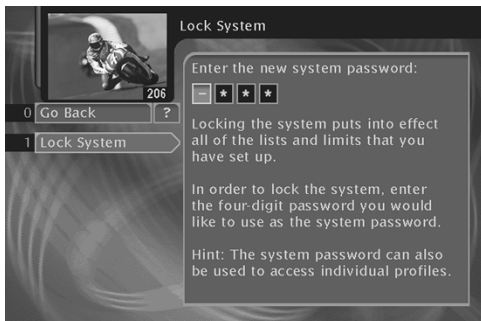

3. Enter the password a second time to confirm it. The lock icon should be displayed in the channel banner.

**Notes:** After the system has been locked, you must enter the correct password in order to access the *Edit Profiles* control panel.

If you forget a USER password, you need to unlock the system and then assign a new user password. If you forget the SYSTEM password, contact the DIRECTV authorization center.



- *Lock icon:* All limits are in effect. No limits can be accessed or changed without first entering password system. A password is required to override limits or access the system.

# Using On-Screen Menus

## Unlocking the System

When the system is unlocked, the channel, spending, viewing, and ratings limits that you set are no longer in effect. To unlock:

1. Highlight and select *Unlock System* in the *Profiles* menu.
2. Highlight and select *Yes* to confirm that you want to unlock the system. The unlock icon should be displayed in the channel banner.

When you attempt to access a channel that is blocked by one or more limits (and the system is locked), you will be asked to override limits by entering the four-digit system password.

If you enter the password to override a limit, all limits are unlocked until you turn off the digital satellite receiver (a “T” appears on the lock icon). When you turn on the receiver again, the system will be locked, and the Family profile channel list will be selected. If you want to re-lock the system without turning off the receiver, you can select the lock icon in the channel banner.




## Program/Video Unlock

If the system is locked and you want to access a blocked program without unlocking all settings, press the remote control's INFO button and highlight the Lock icon in the channel banner. Make sure to check the box beside *Unlock this program only*, and enter the system password. This program is no longer blocked, but all other settings remain in effect. The unlock icon with a P should be displayed in the channel banner.

- Use the Lock and Unlock icons in the Channel Banner to lock or unlock the system. To access the Lock/Unlock Menu, press the INFO button on the remote control and use the arrow buttons to select the Lock icon. Use the remote control's number buttons to enter the proper password and follow on-screen instructions.



- *Unlock* icon: The system is unlocked. No limits are in effect. Spending, viewing and other limits can be accessed and changed.
- *Program Unlock* icon: The system is locked, but no limits are in effect for the duration of the current program because a password has been entered to override the current program's limits. No limits can be accessed or changed. After the program ends, the system will return to Lock status.
- *Video Unlock* icon: The system is temporarily unlocked with no limits in effect until the receiver is placed in standby mode. A password has been entered to override the system limits. No limits can be accessed or changed without entering the system password. When the system is turned off, it will return to Lock status.

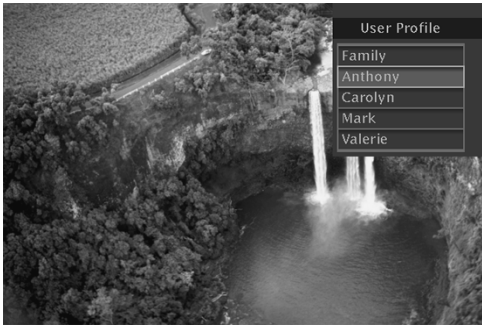

## Choosing Your Profile

Each time you turn on the digital satellite receiver, the Family profile is selected by default, so this should be the profile with the most restrictive limits you want enforced across all profiles.

### To select another profile:

1. Press the WHO•INPUT button to display a list of profiles.
2. Use the remote control's arrow and OK buttons to select the desired profile. Then enter the four-digit password to activate the profile.

**Note:** If the profile is not password protected, you can just press OK to activate it.

The channels, spending, rating and viewing limits associated with the chosen profile will be active only when the system is locked.

The active profile also affects what you see in the program guides. Selecting the User Preferences icon sorts the guide to show only programs meeting the current user profile criteria and which personal settings are used.

To change the current profile, press the WHO•INPUT button.

## 6 Personal Settings

## Personal Settings

The Personal Settings menu, accessed by pressing the 6 button in the Main menu, lets you customize the look and feel of the active profile. Each of the satellite system's profiles can have individualized personal settings.

**Note:** If a personal profile is password protected, then that password must be entered before changing any of the profile's settings.

Once you have accessed the personal settings menu, select the desired profile. You will use the remote control's arrow and OK buttons to make your selections.

The following sections explain your options when changing your personal preferences. Follow the on-screen instructions to make changes to the system.

### Name

Used to change the profile display name. This name will be displayed in the Profiles menus as well as when the remote control's WHO•INPUT button is pressed.

**Note:** A profile's name can be changed either by selecting the *Personal Settings* in the Main menu, and then selecting *Name*, or in the *Profiles* edit menu.

# Using On-Screen Menus

---

## Default Guide

Lets you choose which guide appears first when you press the GUIDE button on the remote control. The choices are Grid Guide or Detail Guide.

## Guide Sorting

Lets you choose whether the default guide is sorted numerically by channel numbers or alphabetically by channel names.

## Color Scheme

Lets you pick which colors appear in the guide and menu systems.

## Translucency

Lets you choose how see-through the channel banner, the Fetch menu, and the Main menu are when displayed. Use the remote control's arrow buttons to access and slide the indicator bar to make the screens more or less opaque.

## Animation

Lets you select which graphics are displayed when you tune to an audio-only channel and also lets you select the animation time-out.



## Edit Fetch

Lets you choose a single function for the FETCH button on the remote control, or to bring up a custom menu of up to 8 different features to choose from.

### To create a custom Fetch menu:

1. Press MENU to bring up the Main menu.
2. Select *Personal Settings*,
3. Select the desired profile (each profile can have a different Fetch Menu).
4. Select *Edit Fetch*.
5. Select *Fetch Control*.
4. Select *Show Fetch Menu*.
6. Select *Fetch List* from the Edit Fetch menu.
7. Choose up to eight menu items to include in your customized menu by checkmarking them with the OK button.
8. Press the left arrow button to confirm your selections and return to the menu.


When you would like to access your customized menu, press the FETCH button on the remote control.

### To assign one function to the FETCH button:

1. Press MENU to bring up the Main menu.
2. Select *Personal Settings*,
3. Select the desired profile (each profile can have a different Fetch Menu).
4. Select *Edit Fetch*.
5. Select *Fetch Control*.
4. Select *Assign One Function*.
5. Select *Fetch List* from the Edit Fetch menu.
6. Choose which menu item you would like to assign to the FETCH button by pointing and selecting.
7. Press the left arrow button to confirm your selection and return to the menu.

You may press the FETCH button on the remote control and execute the assigned function at any time while viewing DIRECTV® programming.

# Using On-Screen Menus

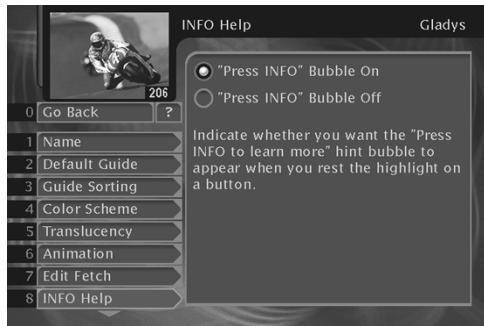

## INFO Help

A text block saying Press INFO to learn more pops up by default whenever there is a brief period of inactivity in a menu. This INFO Help menu allows you to turn this feature on or off.

## Reset

This button allows you to reset all personal settings back to the factory defaults.


### **TIP: Getting Help**

*If you ever have a question about the menu you are in, select the on-screen help button (?). If you have a questions about a highlighted menu item, press the remote control's INFO button.*

## 7 System Setup

## System Setup

The System Setup menu allows you to get details about your system and is used to configure system options that are not profile specific. Setup items that are global to the digital satellite receiver include system options and dish pointing.

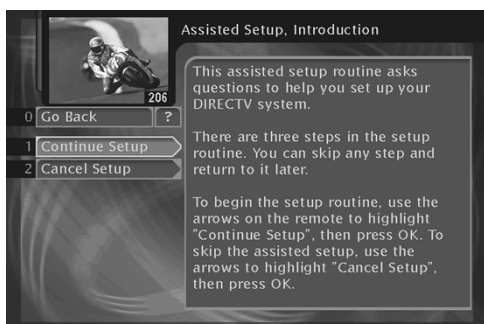

## Assisted Setup

This feature walks you through a series of questions and is designed to quickly get the system detecting a signal.

Follow the on-screen instructions to set the system language, get instructions on menu navigation, select the type of satellite dish antenna used, find your dish-pointing coordinates, and run a system test that initiates diagnostic procedures on the satellite receiver system. You have the option to skip any of the steps.



## System Index

The System Index feature allows you to get detailed information about your digital satellite receiver.

Details that can be viewed from within the System Index menu include program guide information, details about the menu system, explanations of the remote control, front panel, and back panel of the receiver, and even a glossary of words common when discussing digital satellite receivers.

## System Options

The System Options feature allows you to set a default on-screen display language, choose a receiver output channel (the channel that the TV views satellite broadcasting), set up the remote control, select a default picture size, and set the time zone.


Use the remote control's arrow and OK buttons to navigate through these menus, or you can use the digit buttons on the remote control to select a numbered on-screen item.



### Languages

This menu allows you to select menu and audio languages. You can choose between English and Spanish for the menu language.

You can choose from a variety of audio languages to be heard if a program is simulcast in that language. If that language is not available for that broadcast, the programming will be heard in its default language.

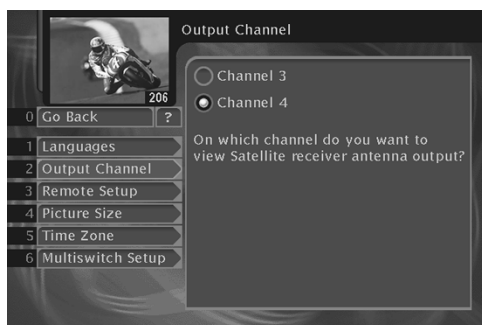

### Output Channel

This feature allows you to change the TV channel to which the satellite receiver broadcasts its signal. The default setting is channel 3, which means the TV must be tuned to channel 3 to see the satellite receiver's picture.

**Note:** If you used A/V cables to connect your digital satellite receiver to your TV, then you must use the TV's video line input to see the satellite broadcast.

### Remote Setup

This allows you to choose which remote control button will control the digital satellite receiver. You can choose between SAT and AUX buttons. The default is SAT.

Use the remote control's arrow and OK buttons to make your choice and follow the on-screen instructions.

# Using On-Screen Menus



## Picture Size

Selecting Picture Size allows you to select the type of TV connected to the receiver. You can choose between Normal (4X3) or Cinema (16X9). The default is Normal.



## Time Zone

Using this feature allows you to set the local time zone and to enact a Daylight-Saving time option. Accurate time and time zone is necessary for Watch and Remind features. Setting the time zone is normally automatic, and generally does not require you to do anything.


Setting the time zone should only be done in rare circumstances, such as if the program times are wrong after the system card has been activated.

**Note:** You must select an entry in the Choose your time zone field before all menu items are displayed.

## Multi-Switch Setup


This feature allows the satellite system to know if you have a multi-switch connected to the system and to determine what type of multi-switch is used.

This feature should only be used in rare circumstances, such as when instructed to do so by DIRECTV.

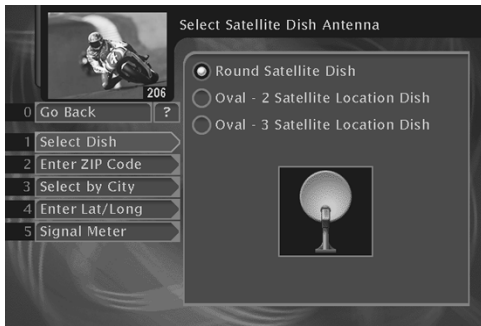

## Tip

*It is important to select the correct dish type. If you do not, you will not receive the proper dish pointing coordinates and you will not be able to take full advantage of your DIRECTV System.*

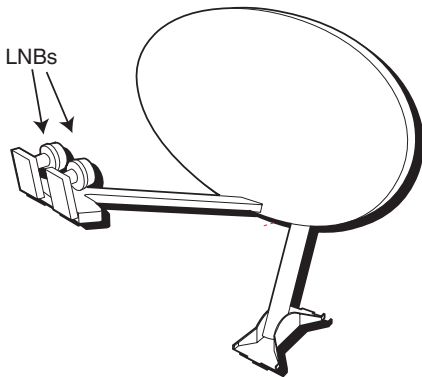

**An oval satellite dish with two LNBs (not provided with all systems).**

## Tip

*Azimuth is the side- to-side direction that the satellite dish antenna is pointed.*

*Elevation is the up/down angle that the satellite dish antenna is pointed. Tilt is the circular rotation of the dish itself, like the motion of a steering wheel.*

## Dish Pointing

The Dish Pointing menu helps you set up your digital satellite receiver and optimize your reception of the satellite signal.

## Selecting Dish Antenna

It is important to complete each of the following steps required for your satellite dish antenna. If you do not, you will not receive proper dish pointing coordinates and will not be able to take full advantage of your digital satellite receiver.

Specify the type of dish you are using:

1. Press MENU on the remote control to bring up the Main menu.
2. Select *System Setup*, then *Dish Pointing*, then press OK to access the dish pointing screen.
3. *Select Dish* is highlighted by default. Press the OK or right arrow button to access the information on the right-side panel.
4. Specify the type of dish you are using: a round satellite dish or an oval satellite dish with two or three LNBs (Low Noise Block-converter). When the proper dish is highlighted, press OK.

**Note:** Changing the dish type will delete all stored Guide information while the digital satellite receiver gets the updated Guide data. While updating Guide information, advanced search features such as the Scout™ and AlphaSort™ will only have a few hours of data from which to work.

## Enter Zip Code

This feature allows you to find dish-pointing coordinates from your local zip code.

1. In the *Dish Pointing* menu, use the remote control's arrow buttons to select *Enter Zip Code*.
2. Use the numeric buttons on the remote control to enter in the proper zip code.
3. After entering the final digit, the receiver displays the dish-pointing coordinates. For convenience, record the numbers in the spaces below.

**Note:** If you have a round satellite antenna, you will not see numbers for Tilt. Tilt applies only for satellite antennas with more than one LNB.

## Dish-pointing Coordinates

Elevation \_\_\_\_\_ Azimuth \_\_\_\_\_

Tilt (oval satellite dish only) \_\_\_\_\_

# Using On-Screen Menus

---

## Select by City

Allows you to choose major cities from selected states to find dish-pointing coordinates.

## Enter Lat/Long

Allows you to find dish-pointing coordinates from latitude and longitude entries. Latitudes between 20 and 55 can be entered, and longitudes between 65 and 125 can be entered.

## Signal Meter

This feature allows you to determine the strength of all available signals, one at a time. There is a separate test for each satellite from which your antenna receives information.

## Time Zone

Using this feature allows you to set the local time zone and to enact a Daylight-Saving time option. This is necessary for Timer Recordings and Watch and Remind features.

**Note:** You must select an entry in the Choose your time zone field before all menu items are displayed.

### Tip

*If your system fails a test, run the system test several times before concluding that there is a problem. Occasional fluctuations in the phone line or satellite signal can give temporary false readings.*

---

## System Test

This function allows you to perform a system-level diagnostic test on the satellite receiver. There are four sub-tests within this system test. Each one will display results after the testing for that area is complete. The receiver's access card number is also displayed in this menu.

**Note:** While the system is testing the signal, the video will temporarily blank out. When the tests are complete, a summary display appears.

## System Info

This function displays the model and serial numbers of the receiver. It will also display the brand name and display a features list.

## Upgrades

Your digital satellite receiver is able to receive upgrades or modifications to some of its features and functions. These modifications will occur automatically, usually at times when your receiver would likely be turned off. If your receiver is on when an upgrade or modification is sent, you may experience a disruption in reception for a minute or two. Your reception should return to normal after the modification is complete.

**Note:** Your receiver must be plugged in to receive any updates. Do not unplug your receiver while an update is in progress. Please consult the Upgrades Menu to find a schedule of upgrades or modifications planned by DIRECTV.



**The "RSA Secure" logo ensures that only authorized upgrades or modifications are delivered to your digital satellite receiver.**

*\*RSATM Secure and the RSATM Secure logo are trademarks of RSA Data Security, Inc.*

## New Access Card

Selecting the New Access Card function allows you to update the digital satellite receiver with a new access card. This is necessary on occasion when DIRECTV sends out a new card.

## Alternate Data

Selects from among the available data channels.

## 8 Interactive

## Interactive

This function allows you to learn more about DIRECTV INTERACTIVE™. It also allows you to setup an account for the free service, review transactions and messages, and to change settings.

*This page left blank intentionally*

# Other Information

## Chapter Overview:

- Troubleshooting
- Finding the TV's Video Line Input
- Running the System Test
- Limited Warranty
- Accessory Order Form
- Index

**Changing Entertainment. Again.**



## Troubleshooting

Many problems can be corrected by performing a simple reset of the digital satellite receiver. If you experience the following:

- **Image freezes**
- **Blank screen**
- **Audio freezes**
- **Won't respond to front panel or remote**

try this: press and hold the INFO and right arrow buttons for at least three seconds. If the problems persist, try unplugging the digital satellite receiver for 15 seconds to 2 minutes and then plug it in again.

Running the System Test (later in this section) can also help you diagnose and solve many common problems.

## Digital Satellite Receiver Problems

---

### Wrong picture

The digital satellite receiver and most VCRs let you toggle between signals. If you don't see the signal you think you should be seeing, try using these buttons to toggle between the signals:

- Press the TV/VCR button on the VCR remote or on the VCR's front panel.
- Press the ANTENNA button on the remote control.

Taking either of the above actions lets you switch the source of the video signal from satellite signals to the off-air antenna or cable signal, and vice versa.

- You may not have installed your satellite dish antenna properly.

Refer to the dish pointing instructions in the Menu section of this book and the installation guide that came with your satellite dish antenna.

### Receiver will not turn on

- Check to make sure it is plugged in.
- Check the wall receptacle (or extension cord) to make sure it is "live" by plugging in something else.
- Maybe batteries in remote control are "dead."
- Maybe remote control is not aimed at remote sensor.
- Unplug the receiver. Wait five minutes. Plug it in again.

### Turns off while playing

- Electronic protection circuit may have been activated because of a power surge. Wait 30 seconds and then turn on again. If this happens frequently, the voltage in your house may be abnormally high or low.

### Satellite receiver turns on or changes channels unexpectedly

- Scheduled Watch from the Timers menu may have been activated.

### Blank screen

- Maybe the component connected to the input jacks is not turned on.
- Try another channel.



## Remote Control Problems

---

### Problems with the remote control

- Maybe something is between the remote control and the remote sensor.
- Maybe the remote control is not in SAT mode. Press the SAT (or, if your remote is older, SAT1 or DIRECTV) button so the remote will control the digital satellite receiver.
- Remember to press the OK button after entering a channel number that is less than four digits long.
- Maybe batteries in the remote control are weak, dead or installed incorrectly. Try replacing batteries. (Note that when you replace the batteries you may have to reprogram your remote to control other devices.)
- Remove batteries; press and hold the 1 button for at least 60 seconds to drain the microprocessor inside the remote control. Release number 1, replace the batteries, and (if necessary) reprogram the remote.
- If you are trying to operate a device other than the digital satellite receiver that you have programmed the remote to control, make sure you press the corresponding device button (DVD, VCR2, etc.) first.

## TV or VCR Problems

---

### Blank screen

- Maybe the component connected to the input jacks is not turned on.
- Try another channel.

### TV turns on or changes channels unexpectedly

- Scheduled Watch from the Timers menu may have been activated.

## Finding the TV's Video Line Input

**Note:** If your TV is connected with just coaxial cables, you only need to tune to channel 3 or 4.


If you used audio/video cables to connect your TV to the digital satellite receiver, you must tune your TV to the video input channel to view DIRECTV® programming and menus. There are just as many ways to access a TV's video input channel as there are brands and models of TVs. Below are some things you can try.

- If your TV brand is RCA, GE, or PROSCAN, press TV on the remote control that came with your digital satellite receiver. Then press the WHO•INPUT button on the remote.
- If your TV brand is not RCA, GE, or PROSCAN, consult your TV Owner's Manual.

If you cannot find your TV Owner's Manual, you will have to investigate. You might access the TV's video input channel by:

- pressing a button on the remote control
- finding it through the TV's menu system
- tuning directly to it by pressing a specific channel number
- going through all channels in the list by pressing the channel up or down buttons on the TV.

The box below lists of some of the different ways manufacturers label the video input channel.

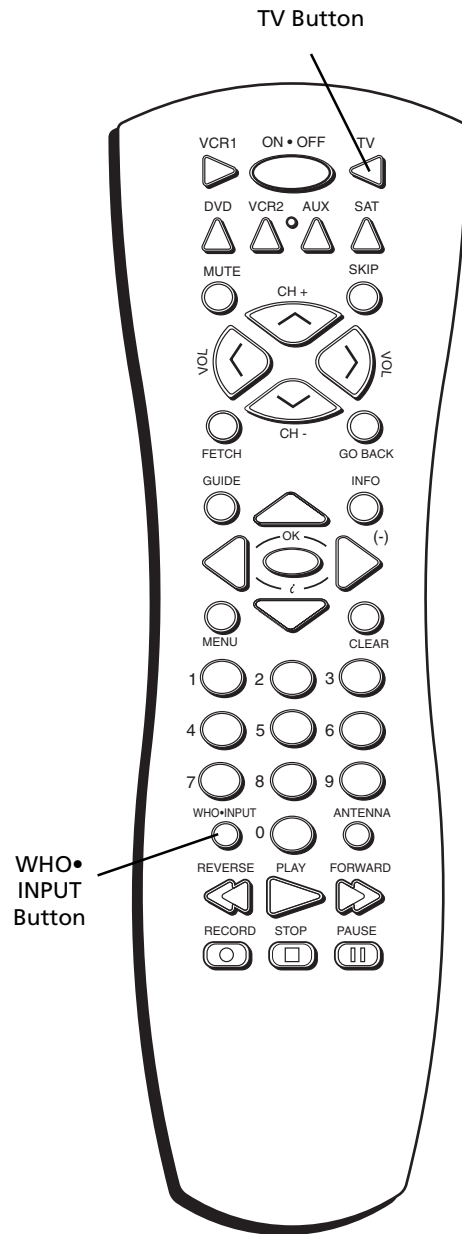

Video Line Input Variations		
Button/switch on the TV	Button on the TV Remote	Channel #
VIDEO	VID 1	00
SIGNAL	LINE	90
VID 1	VID	91
VID 2	VIDEO	92
S-VID	S-VID	VID 1
S-VIDEO	INPUT	VID 2
	SOURCE	
	AUX	

### Running the System Test

The System Test allows you to run a basic diagnostics check on your digital satellite receiver. If you are experiencing any trouble with your receiver, run the system test. It will also allow you to get your access card number or to initiate diagnostic procedures on your digital satellite receiver.

First make sure that:

- all connections—jacks, cables, etc.—are correctly in place. See Chapter One, Setup and Connections, for more information.
- There are batteries in the remote control, and they are working correctly.
- The access card is installed in the digital satellite receiver.

Follow these steps to run the diagnostics system test on your digital satellite receiver.

1. Turn on your TV and the digital satellite receiver.
2. Press the SAT button to put the remote control in satellite receiver-controlling mode, then press MENU to bring up the Main menu.
3. Select *System Setup*.
5. Select *System Test*.
6. If your system does not pass the system test, check any of these potential trouble areas: cabling, pointing the satellite dish, phone connection, and access card.
7. If you continue to have problems, call RCA Customer Service at 1-800-679-4776.

You should run a system test several times before concluding that there is a problem. Occasional fluctuations in the phone line or satellite signal can give temporary false readings.

### Fine-Tuning the Signal

If you self-installed your satellite dish antenna, you may have already used the Assisted Setup to find the dish-pointing coordinates, acquire and fine-tune the signal, and run a system test.

If you need to run the Assisted Setup again, select *System Setup* from the Main menu, then select *Assisted Setup*.

If you just want to check your dish-pointing coordinates or run the signal strength meter, select *System Setup* from the Main menu, then select *Dish Pointing*.

# Other Information

---

## Limited Warranty

### What your warranty covers:

- Defects in materials or workmanship.

### For how long after your purchase:

- 90 days from date of purchase - Unit exchange, which includes parts and labor.
- 91 days to 1 year from date of purchase - Unit exchange, which includes parts only; you pay the labor.
- The warranty for rental units begins with the first rental or 45 days from date of shipment to the rental firm, whichever comes first.

### What we will do:

- **During the initial 90 days:**  
Exchange the defective receiver with a new or, at our option, refurbished unit.
- **After the 90 days and within one year:**  
Exchange the defective receiver with a new or, at our option, refurbished unit. We will charge you a flat exchange cost to replace a defective receiver. This charge covers the labor cost for its repair.

### How you get service:

- Call 1-800-679-4776 and have your unit's date of purchase and model/serial number ready. The model/serial number information is on the back of your receiver.
- A representative will troubleshoot your problem over the phone.
- If the representative determines that you should receive a replacement receiver you will be provided with a Service Request (SR) number and the location of a nearby exchange point if one exists. No returns will be accepted without the SR number.
- Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the product is within the warranty period must be presented to obtain warranty service. For rental firms, proof of first rental is also required.

### Option I:

1. Provide your Discover, MasterCard or Visa account number and expiration date to your phone representative. This is for security purposes only and your account will not be charged at this time.
2. We will send you a replacement unit.
3. If you return the unit to us within 14 days from the date you were provided a SR number, only items not covered by warranty will be charged to your account. If your unit is not received within 14 days, the suggested retail value of the receiver will be charged to your credit card. This amount will be credited, less a \$10 handling fee, if the unit is subsequently received.
4. Ship your defective unit back to us using the replacement unit's carton. Shipping instructions will be included on the carton along with your SR number which will allow you to easily ship the unit back to us. Make sure you insure your shipment in case of damage or loss. Include with the shipment:
  - Evidence of purchase date such as a bill of sale.
  - A brief note describing your receiver problem.
  - Your name, address and phone number.

### Option II:

1. For a fee of \$10.00, we will send a replacement unit to our exchange point.
2. The exchange location will notify you of its arrival.
3. Take your unit and evidence of purchase date, such as a bill of sale, to the exchange location and you will be provided the new or refurbished unit. Please retain all accessories such as the remote control hand unit and access card.
4. If the repairs are covered by your warranty, you will not be billed.

***Thomson assumes no responsibility for warranty shipments from the customer to the factory if not shipped in the manner prescribed by Thomson.***

## To receive a replacement receiver after we have received your unit:

- Write the SR number on the outside of the carton used to return the unit. Make sure you insure your shipment in case of damage or loss.
- Carefully pack the unit using the original box and packing material if possible. Please retain all accessories that were included with your unit such as the remote control hand unit and access card.
- Include with the shipment:
  1. Evidence of purchase date such as a bill of sale.
  2. A brief note describing your receiver problem.
  3. Your name, address and phone number.
- The representative will advise the address to mail a cashier's check or money order for payment if there are any out of warranty labor or parts charges, and you elect not to use your credit card.
- After we receive your product, a new or refurbished unit will be shipped to you.

## What your warranty *does not* cover:

- Customer instruction. (Your Owner's Manual describes how to install, adjust, and operate your unit. Any additional information should be obtained from your dealer.)
- Acts of nature, such as but not limited to lightning damage.
- Adjustment of customer controls.
- Damage from misuse or neglect.
- A unit that has been modified or incorporated into other products or is used for institutional or other commercial purposes.
- Batteries.
- Units purchased, serviced or operated outside the continental U.S.A. and Alaska.
- Loss of programming.
- Installation.
- Shipping damage if the unit was not packed and shipped in the manner prescribed by Thomson.
- Storage fees may be charged by the exchange point if you fail to pick up the replacement unit in a timely manner.

## Product Registration:

- Please complete and mail the Product Registration Card packed with your unit. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.

## Limitation of Warranty:

- **THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY THOMSON MULTIMEDIA INC., ITS AGENTS OR EMPLOYEES SHALL CREATE A WARRANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.**
- **REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. THOMSON MULTIMEDIA INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF INDIANA. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.**

## How state law relates to warranty:

- Some states do not allow the exclusion nor limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.
- This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

## If you purchased your product outside the United States:

- This warranty does not apply. See your dealer for warranty information.

## FCC Registration Information

Your digital satellite receiver is registered with the Federal Communications Commission and is in compliance with parts 15B and 68, FCC Rules and Regulations.

### 1. Notification to the Local Telephone Company.

On the back of this equipment is a label indicating among other information, the FCC Registration number and Ringer Equivalence Number (REN) for the equipment. You must, upon request, provide this information to your telephone company.

The REN is useful to determine the number of devices you may connect to your telephone line and still have all these devices ring when your telephone number is called. In most (but not all) areas, the sum of the RENs of all devices connected to one line should not exceed 5. To be certain of the number of devices you may connect to your line as determined by the REN, you should contact your local telephone company.

Note: This equipment may not be used on coin service provided by the telephone company. Party lines are subject to state tariffs, and therefore you may not be able to use your own telephone equipment if you are on a party line. Check with your local telephone company. Notice must be given to the telephone company upon permanent disconnection of your equipment from your line.

### 2. Rights of the Telephone Company.

Should your equipment cause trouble on your line which may harm the telephone network, the telephone company shall, where practicable, notify you that temporary discontinuance of service may be required. Where prior notice is not practicable and the circumstances warrant such action, the telephone company may temporarily discontinue service immediately. In case of such temporary discontinuance, the telephone company must: (1) promptly notify you of such temporary discontinuance (2) afford you the opportunity to correct the situation and (3) inform you of your right to bring a complaint to the Commission pursuant to procedures set forth in Subpart E of Part 68, FCC Rules and Regulations.

The telephone company may make changes in its communications facilities, equipment, operations of procedures where such action is required in the operation of its business and not inconsistent with FCC Rules and Regulations. If these changes are expected to affect the use or performance of your telephone equipment, the telephone company must give you adequate notice, in writing, to allow you to maintain uninterrupted service.

## FCC Declaration of Conformity

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Trade Name: RCA

Model(s): DRD430RG/DRD431RG/DRD430RGA/DRD431RGA

Equipment Classification: TV Interface Device

Responsible Party: Thomson multimedia, Inc.  
10330 N. Meridian Street  
Indianapolis, IN 46290  
Telephone 1-(317) 415-4151

 
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect this equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


# Other Information




RG-6 Coaxial Burial Cable with weatherproof "F" connectors comes in a variety of lengths.




S-Video Cable comes in 12 foot lengths.

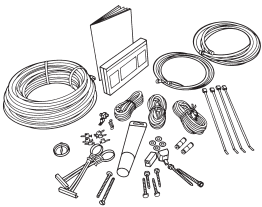

 Self-Installer's Kit contains all the cable and hardware needed to install the dish and connect the system.



 Remote Control replaces a lost remote. Or, order a second remote for convenience.



Eight outlet surge protection for cable TV, satellite systems and other electronics. Comes with a \$50,000 equipment guarantee.



Detach Here

## Accessory Order Form

Description	Part No.	Price	Qty	Total
RG-6 Coaxial Cable				
12 feet	DT12C	\$14.95		
25 feet	DT25C	\$24.95		
50 feet	DT50C	\$39.95		
S-Video Cable 12 feet	DT12S	\$19.95		
Weatherproof "F" Connector (2)	D905	\$5.95		
TVRO Bullet Amplifier	D903	\$22.95		
Self-Installer's Kit	DKIT96	\$69.95		
Remote Control CRK76SG3	247047	\$33.10		
Surge Protector	SCTV1650	\$49.95		
Wireless Modem Jack	RC930	\$99.95		

Total Merchandise .....	\$ _____
Sales Tax .....	\$ _____
We are required by law to collect the appropriate sales tax for each individual state, country, and locality to which the merchandise is being sent.	
Shipping, Handling, and Insurance .....	\$ 5.00
Total Amount Enclosed .....	\$ _____
Use VISA, MasterCard, or Discover preferably. Money order or check must be in U.S. currency only. No COD or CASH.	

All accessories are subject to availability.  
Prices are subject to change without notice.

Please complete other side also

# Other Information

Charge your order on your VISA, MasterCard, or Discover Card by filling in below

## USE YOUR CREDIT CARD

IMPORTANT: Copy complete account number from your VISA card



My card expires:

IMPORTANT: Copy complete account number from your MasterCard



Copy Number above your name on MasterCard     My card expires:

IMPORTANT: Copy complete account number from your Discover Card



My card expires:

## AUTHORIZED SIGNATURE

(Credit card order will not be processed without signature)  
Prices are subject to change without notice.

Print or type your name and address clearly.



A complete and correct order will save you days of waiting.

Name: \_\_\_\_\_  
 Street: \_\_\_\_\_  
 \_\_\_\_\_ Apt: \_\_\_\_\_  
 City: \_\_\_\_\_  
 State: \_\_\_\_\_ Zip: \_\_\_\_\_  
 Daytime Phone Number: \_\_\_\_\_

Please make sure that both sides of this form have been filled out completely.

- Allow 4 weeks for delivery.
- All accessories are subject to availability.
- Prices are subject to change.

## Placing an Order

To place your order by phone, have your Visa, MasterCard or Discover Card ready and call the toll-free number listed below. Use this number only to place on order for accessory items listed on this order form.

**1-800-338-0376**

To place your order by mail, detach and mail the completed order form with credit card information, money order or check in US currency (made payable to Thomson multimedia, Inc.) to the following address:

**Video Accessories  
PO Box 8419  
Ronks, PA 17573**



## Assisted Setup

The *Assisted Setup* menus walk you through a series of setup steps. This feature is designed to help you get the system up and running.

The Assisted Setup appears the first time the digital satellite system is turned on, but if you need to run the setup again, press the remote control's MENU button to display the Main menu, then select *System Setup*, and finally select *Assisted Setup*.

## Audio/Video (A/V) Jacks/Cables (RCA-type)

A/V cables provide good picture quality and stereo sound, and should be used if your TV has no S-video jacks. The digital satellite receiver's A/V jacks are color coded (yellow for video, red for right audio, and white for left audio). If your TV has only one input for audio (mono), connect it to the left (white) audio jack on the satellite receiver.

## Automatic Code Search

A method to program the remote control by using a series of preset codes. Programming the remote control is necessary to operate other components.


## Channel Banner

A transparent banner at the top of the picture allows direct access to the key features of your digital satellite system including viewing suggestions, The Guardian™ channel locking system, on-screen message display, and the Scout™ keyword/phrase and the AlphaSort™ alphabetical search features. Press the INFO button on the remote control while watching normal programming to display the Channel Banner. Highlight and select the desired icon using the remote control's arrow and OK buttons.

## Direct Entry

A method to program the remote control by using codes from a list provided in the instruction manual. Programming the remote control is necessary to operate other components.

## DIRECTV Interactive™ powered by WINK Communications®

An interactive television service that lets you access up-to-the-minute news, sports, financial information, weather, program trivia, and respond to free offers and even shop— all while you watch TV. Press the OK/i button on the remote control whenever you see the Interactive logo () appear on-screen to activate for interactive content.

## Highlight and Select

The way that all on-screen menus are handled; using highlight and select navigation. To highlight, use the remote control's arrow buttons (up, down, left, and right) to highlight different choices on the screen. Press the OK button to select the highlighted choice.

Note that when a highlighted on-screen menu choice has a number beside it, you can also press the corresponding number button on the remote control to select it.

To display the on-screen menu system, press the remote control's DIRECTV button, then press the MENU button.

## IN FROM ANT jack

A standard TV antenna or cable feed connects to the satellite receiver using this jack. You can then switch between the satellite receiver's signal and the TV/cable feed using the remote control's ANTENNA button to toggle between the two.

## Interactive TV

A service that lets you use the satellite receiver's remote control to access up-to-the-minute news, sports, financial information, weather, program trivia, free offers, and shopping— all while you watch TV.

## LOW SPEED DATA port

This port allows you to connect your digital satellite receiver to future services and accessories as they become available. A shielded cable and additional hardware may be required. Do not use this port unless specifically instructed to by DIRECTV®.

## OUT TO TV jack

Connects the satellite receiver to your TV or VCR using RF coaxial cable. This jack provides the most basic connection, carrying mono sound and standard video quality.

## PHONE JACK

Connects the satellite receiver to a telephone line. The digital satellite receiver requires a telephone line connection to periodically communicate with your program provider.

## Program Guides

A list of available programming shown on-screen when you press the remote control's GUIDE button. Program guides display information that is contained in broadcaster signals. Your digital satellite receiver can display several types of program guides including an Advanced Program Guide™ which stores up to three days of programming information and an information guide which lists five different channels of programming at a glance.

## RF Jack and Coaxial Cable (F-type)

RF jacks provide good video imaging and mono-quality sound. RF jacks and cables should be used if A/V connections are not available on your TV. RF input jacks are also used for off-air antenna, and cable feeds. The RF jacks on the receiver are labeled IN FROM ANT, and OUT TO TV. The coaxial cable supplied with your system is used to connect the receiver to your TV/VCR's antenna input jack.

## RSA Software Upgrades via Satellite

The digital satellite receiver is able to modify some of its features and functions with downloaded RSA-secure upgrades or modifications. RSA-secure downloads ensure that only authorized upgrades are delivered to your RCA digital satellite receiver.

## S-VIDEO jack

Provides better picture quality than A/V or RF coaxial cable jacks. Use the S-video connection along with audio cables because S-Video only carries picture information, not sound.

## SATELLITE IN

This jack allows a connection between the satellite receiver and the satellite system's dish antenna.

## Telephone Jack and Cord

The telephone line cord is required to connect your satellite receiver to a telephone line if you choose to subscribe to DIRECTV® programming. The phone line connection is used to periodically call out to DIRECTV. You will need an RJ11-type modulator jack (the most common type of phone jack). If you don't have a modular jack, call your local telephone company to find out how to get one installed.

## Universal Remote Control

**Description:** A remote control that provides complete satellite system operation, and primary function control of most brands of remote-controllable TVs, VCRs, and cable boxes.

## A

A/V jacks and cables 8  
Access Card 59  
Access card  
    number 17  
Accessories 69  
Accessory Order Form 69  
Active Profile's Preferences 35  
AlphaSort™ 29, 36  
AlphaSort™ icon 29  
Alternate Audio icon 29  
Alternate Data 59  
Animation 52  
Arrows on remote 20  
Assisted Setup 18  
Assisted setup 65  
Attractions Guide 33  
Audio Hum 6  
Audio/Video jacks/cables 7, 10, 14  
AUX button 20

## B

Back Panel Jacks 15  
Batteries 16  
Buttons 20

## C

Cable Box  
    code list 26  
Cancelling purchases 44  
Cautions i 2  
Channel Banner 1  
    buttons 29  
Channel Guide 33  
Channel List 47  
    add channels 47  
    adding/deleting channels 47  
    delete channels 47  
    subscriptions 47  
Channel Sort 35  
CLEAR button 20  
Code list  
    cable box 26  
    remote control 25  
    satellite receiver 26  
    VCR 26

Color Scheme 52  
Connections 7, 22  
    jacks and cables 14  
Context Help 40

## D

Deleting purchases 44  
Detail Guide 30  
DIRECTV button 20  
DIRECTV INTERACTIVE™ 2, 30  
Dish Pointing 57  
    coordinates 57  
    entering ZIP Code 57  
Dish-pointing Coordinates 57  
    enter lat/long 57  
    select by city 57  
    signal meter 57  
    time zone 57  
Down Arrow 37  
DVD button 20

## E

Edit Fetch 53  
Enter Lat/Long 58  
Enter Zip Code 57  
Exiting  
    menus 40

## F

Fetch 53  
    button 20

## G

GO BACK button 20  
Grid Guide 30  
GUIDE button 20  
Guide Sorting 52

## H

Highlight and Select 17

## I

I icon. *See* DIRECTV INTERACTIVE  
Icons 28, 35, 46  
INFO button 20  
INFO Help 54  
Interactive 41  
Interactive TV 59  
Interference 6

## K

Key Features 1

## L

Languages 55  
LED light 20  
Locked icon 29  
Locking  
    a profile 49  
    the system 48  
Locking the System 49  
Logo Guide 33  
Look and feel 51

## M

Mail  
    checking 43  
    deleting 43  
    icon 29  
Mailbox 41  
    checking your mail 43  
Main Menu 41  
Main Menu icon 29  
Main Menu Items 41  
    interactive 41  
    mailbox 41  
    personal settings 41  
    profiles 41  
    program guides 41  
    purchases 41  
    system setup 41  
    timers 41  
MENU button 21  
Menu System 40  
    exiting a screen 40  
    getting help 40  
    icons 46  
Menus  
    Profiles 46  
    Program Guide 42  
    Timers 46

Messages 43  
More Details menu 32  
Movies icon 35  
Multi-Switch Setup 56  
MUTE button 21

## O

On-screen Buttons 40  
OUT TO TV jack 7  
Output Channel 55  
Overheating 6

## P

Pay Per View Programs 45  
Personal Settings 41, 51  
    animation 52  
    color scheme 52  
    default guide 51  
    edit Fetch 53  
    guide sorting 52  
    INFO Help 54  
    name 51  
    Reset 54  
    translucency 52  
Picture Size 56  
Power Surges 6  
Problems, solving 62  
Product Registration i 2  
Profiles 41  
    channel lists 47  
    menu 41, 46  
    rating limit 48  
    spending limits 48  
    viewing hours 48  
Program Details 29  
Program Guide 1, 41  
    anatomy 28, 42  
    Attractions Guide 33  
    Channel Guide 33  
    Detail Guide 30  
    diagram 28, 42  
    displaying 28, 30, 42  
    Grid Guide 30  
    Logo Guide 33  
    scrolling 31, 37  
    sorting 34  
    tuning to a program 32  
    using 31  
Program Unlock icon 29  
Program/Video Unlock 50  
Programming  
    ordering 18  
    tuning to 32

Purchases 41  
 cancelling 44  
 menu 41, 44  
 Pay Per View programs 45  
 previewing 45  
 reviewing 44  
 Purchases Menu 44  
 canceling purchases 44  
 reviewing purchases 44  
 spending limits 44

## R

Rating limit 48  
 Recording 9, 11, 13  
 Remote Control 1  
 buttons 20  
 codes 25  
 modes 24  
 programming 25  
 universal 1  
 Reset 54  
 Reviewing purchases 44  
 RF coaxial cable connections 12  
 RF coaxial jacks/cables 7  
 RF jacks/cables 14  
 RSA-secure downloads 2

## S

S-Video 7, 14  
 S-Video Connection 8  
 S-video jack 7  
 Satellite Receiver  
 code list 26  
 Scout™ 37  
 Scout™ icon 29  
 Scout™ searching 37  
 Scrolling 31, 37  
 Select by City 58  
 Signal Meter 58  
 SKIP button 21  
 Software Upgrades 2, 73  
 Sorting by  
 AlphaSort icon 36  
 Movies icon 35  
 Scout icon 37  
 Sports icon 35  
 Spending Limits 44, 48  
 Sports icon 35  
 Subscriptions 47  
 Suggestions Guide 33

System  
 lock 49  
 options 54  
 test 54, 65  
 unlock 50  
 System Info 58  
 System Options  
 languages 55  
 multi-switch setup 56  
 output channel 55  
 picture size 56  
 remote setup 55  
 set VCR type 55  
 time Zone 56  
 System Setup 41, 54  
 assisted setup 54  
 system index 55  
 system options 55  
 System Test 58

## T

Telephone icon 29  
 Temporary Unlock icon 29  
 Time Zone 56, 58  
 Timer Recordings 46  
 editing/canceling 46  
 recording with 46  
 setting up 46  
 Timers 41, 46  
 Translucency 52  
 Troubleshooting 62  
 Tuning to a program 32  
 TV button 21

## U

Universal Remote Control  
 1, 73  
 Unlock icon 29  
 Unlocking  
 the system 50  
 Unlocking the System 50  
 Upgrades 58  
 User Preferences 34  
 User Profiles 46  
 channel list 47  
 choosing 51  
 creating/editing 46  
 locking 49  
 rating limits 47  
 spending limits 48  
 viewing hours 48

## V

VCR  
 code list 26  
 recording 21, 24  
 remote button 21  
 Video input channel 9, 11  
 Viewing Hours 48  
 Viewing Suggestions 34  
 customizing 34  
 Viewing Suggestions icon  
 29

## W

WHO•INPUT button 21  
 Wink. *See* DIRECTV INTER-  
 ACTIVE  
 WINK Communications  
 2, 71

## Z

Zip Code 57

*This page left intentionally blank*

*This page left intentionally blank*

If your digital satellite receiver needs service, please contact your dealer or the nearest Service Center from the Yellow Pages. Please do not send any products to the Indianapolis address listed in this manual or on the carton. This will only add delays in service for your product.

The software used to display images in this product is based in part on the work of the Independent JPEG Group.

**Thomson multimedia Inc.**  
**10330 North Meridian Street**  
**Indianapolis, IN 46290**

©2002 Thomson multimedia Inc.  
Trademark(s)® Registered  
Marca(s) Registrada(s)

DIRECTV and the Cyclone Design logo are trademarks of DIRECTV, Inc., a unit of Hughes Electronics Corp., and is used with permission.

Printed in the USA

**TOCOM 1566089B**

