

Godox



## C100 使用手册

Instruction Manual V1.0

固件 Firmware V1.00



## Important Safety Instructions

---

Read this manual thoroughly before use and strictly observe the following safety precautions.

 
### DANGER

- This device contains a built-in lithium battery. Do not disassemble, strike, crush, or expose it to fire. If the battery becomes severely swollen, stop using the device immediately.
- Stop using immediately if the housing is cracked or deformed, if liquid enters the device, or if it emits a strange odor or becomes abnormally hot.
- Do not force the device to power off or disconnect it while inserting, removing, or transferring data to/from the TF card, as this may cause data corruption or memory card failure.
- Place the device in a well-ventilated area during use. Do not cover the device or place it on beds, blankets, or inside bags where heat dissipation may be blocked. Keep out of reach of infants and children. Children should use this device under adult supervision.

### WARNING

- This device is NOT waterproof. Do not use in rain, high humidity, or dusty environments.
- If liquid enters the device or it becomes damp, disconnect the power immediately and remove all cables.
- Do not use near flammable or explosive gases or liquids.
- Do not block or obstruct the air vents to prevent overheating.
- Do not disassemble or modify the device without authorization. Unauthorized disassembly may result in circuit malfunction or permanent damage. Contact an authorized Godox service center for repairs.

What's Inside



Main Unit x 1

 


USB-C Cable x 1

**Note:** • Check the package contents after unboxing. If any items are missing or damaged, contact the dealer immediately.  
• Product images are for reference only. Actual product may vary.


Names of Parts

Body

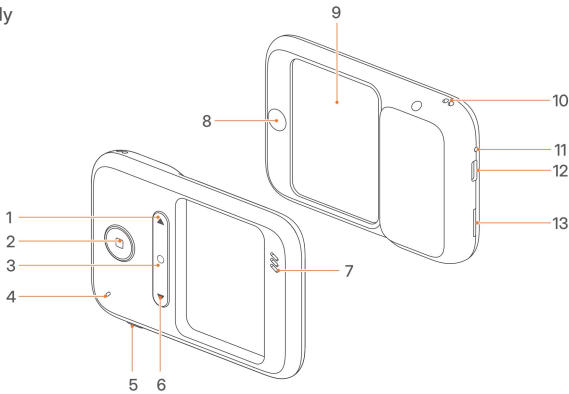

- |                      |                           |                  |
|----------------------|---------------------------|------------------|
| 1. <◀> Adjust Button | 6. <▶> Adjust Button      | 10. Lanyard Hole |
| 2. Shutter Button    | 7. Speaker                | 11. Reset Hole   |
| 3. <○> Select Button | 8. Camera Lens            | 12. USB-C Port   |
| 4. Indicator         | 9. Transparent Viewfinder | 13. TF Card Slot |
| 5. Mode Switch       |                           |                  |

### Transparent Viewfinder

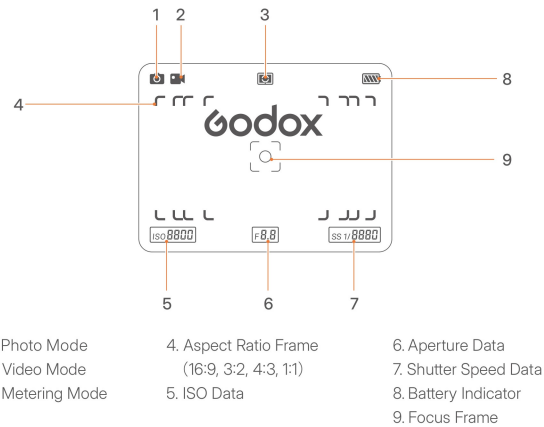 

## Installation & Preparation

### Preparing for First Use

#### Check Battery Level

 
The device is not fully charged from the factory. Fully charge before first use.

1. Connect the included power cable to the USB-C port and a power adapter (sold separately). Then plug the power adapter into a power source.
2. During charging, the indicator glows solid red; when charging is complete, the indicator turns off.

#### Install the TF Card

1. This device has a built-in TF card slot and supports up to 128 GB TF cards.

2. Insert the TF card in the direction indicated in the illustration. A click indicates the card is properly seated.

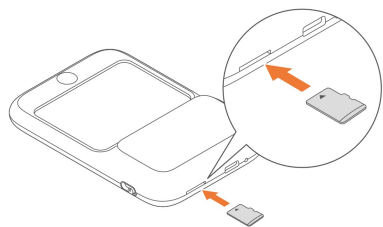

**Mode Switching**

Slide the mode switch to the corresponding position to switch between four modes:

 
| Mode                                                                                               | Description                                                                                                                                                                                                                                                                                                                                              |
|----------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  Power On / Off | <ul style="list-style-type: none"><li>• The device automatically powers off after 5 minutes of inactivity in any mode.</li><li>• After shutdown, slide the switch to the Power On / Off &lt;  &gt; position, then slide it to the desired mode to power on.</li></ul> |
|  Photo Mode     | The camera icon at the upper left indicates that Photo Mode is active.                                                                                                                                                                                                                                                                                   |
|  Video Mode     | The video icon at the upper left indicates that Video Mode is active.                                                                                                                                                                                                                                                                                    |
|  Metering Mode  | The metering icon at the top center, with ISO, aperture, and shutter speed at the bottom, indicates that Metering Mode is active.                                                                                                                                                                                                                        |

**Note:** • Switching modes during video recording will stop the recording and save the file automatically.  
• The maximum duration for a single video recording is 20 minutes. Recording will automatically stop and the file will be saved when the time limit is reached or the TF card is full.


## Operation Guide

### Photo Mode

1. Slide the switch to the Photo Mode <  > position.

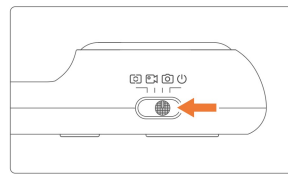

 
2. Press the <  > or <  > button to switch the aspect ratio.

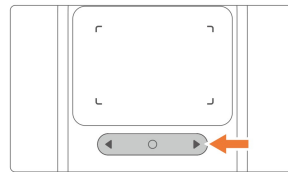


3. Press the shutter button to take a photo.

### Video Mode

 1. Slide the switch to the Video Mode <  > position.

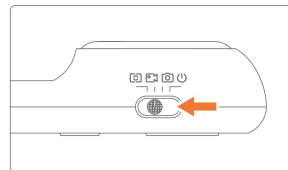

 2. Press the <  > or <  > button to switch the aspect ratio.

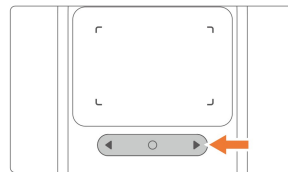

3. Press the shutter button to start or stop recording.


Aspect Ratios

In Photo Mode < [ ] > / Video Mode < [ ] >, press the < ◀ > or < ▶ > button to switch between four composition frames:

|      |                                                       |
|------|-------------------------------------------------------|
| 16:9 | Cinematic Widescreen: Ideal for landscapes and video. |
| 3:2  | Standard Film: Classic 35mm format.                   |
| 4:3  | Native Camera: Traditional digital sensor ratio.      |
| 1:1  | Square: Perfect for social media.                     |

Metering Mode

 1. Slide the switch to the Metering Mode < [ ] > position.

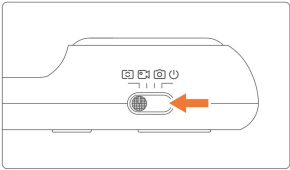

2. Aim at the subject. The device meters approximately 25% of the center area of the transparent viewfinder screen for exposure data.

3. Press the < ○ > button to select the parameter for adjustment; the icon flashes to indicate the adjustable state. If no parameter was previously adjusted, ISO is selected by default.

4. Press the < ◀ > or < ▶ > button to adjust the current parameter value. Press the shutter button to lock and save the metering parameters.

5. Metering Parameter Ranges:

| Parameter     | Range        |
|---------------|--------------|
| ISO           | 100 - 800    |
| Aperture      | f/1.0 - f/64 |
| Shutter Speed | 1/8000 - 1s  |

- Note:**
- ISO can only be adjusted manually.
  - Aperture and shutter speed are linked. When either parameter is adjusted manually, the device automatically calculates and matches the other in real time to maintain the current exposure value (EV).
  - The device automatically exits adjustment mode after 5 seconds of inactivity.

### Viewing Data

Connect the device to a phone or computer via the USB-C cable to view photos and videos. If the indicator keeps flashing, check that the TF card is properly inserted and recognized, and ensure the card is formatted to FAT32/exFAT (back up your data before formatting).

### Troubleshooting

| Problem                                   | Possible Cause                     | Solution                                                   |
|-------------------------------------------|------------------------------------|------------------------------------------------------------|
| Device does not power on                  | • Battery depleted                 | • Charge using the USB-C cable and try again               |
|                                           | • System Not Responding            | • Gently press the Reset Hole with a pin to restart        |
| No response when shooting / recording     | TF card full                       | Delete unwanted files or replace the TF card               |
| Abnormal screen display                   | Firmware exception                 | Contact official support                                   |
| Indicator does not light up when charging | USB-C cable not properly connected | Check that both ends of the USB-C cable are fully inserted |

## Technical Data

|                                      |                                              |
|--------------------------------------|----------------------------------------------|
| Product Name                         | Godox Transparent Viewfinder Camera          |
| Model                                | C100                                         |
| Transparent Viewfinder Transmittance | > 50%                                        |
| Storage                              | Built-in TF card slot; supports up to 128 GB |
| Charging / Data Transfer             | USB-C                                        |
| Charging Input                       | 5V $\equiv$ 1A                               |
| Battery Life                         | > 1.5 h (continuous shooting)                |
| Operating Temperature                | 5 - 40°C                                     |
| Screen Dimensions                    | 60.8 × 47.8mm                                |
| Product Dimensions                   | 104.1 × 71.7 × 19.1mm                        |
| Net Weight (excluding TF card)       | ≈ 65g                                        |

Specifications and data may be subject to change without notice.

## Maintenance

- Power off and disconnect the power supply before cleaning. Use a dry, soft cloth only. Strictly do not use alcohol, benzene, or other volatile solvents.
- To maintain battery health, perform a maintenance charge every 3 months during long-term storage. It is recommended to keep the battery level at 40% - 60%.

产品保修

尊敬的用户, 本保修卡是申请保修服务的重要凭证, 请您配合销售商填写并妥善保管, 谢谢!

|       |      |      |
|-------|------|------|
| 产品信息  | 型号   | 产品条码 |
| 用户信息  | 姓名   | 联系电话 |
|       | 通信地址 |      |
| 经销商信息 | 名称   |      |
|       | 联系电话 |      |
|       | 通信地址 |      |
|       | 销售日期 |      |
| 备注    |      |      |

注: 此表应由销售商盖章确认。

产品信息

本文件适用于相关《产品保修信息》( 见后面说明 ) 所列产品, 其他非属此范围的产品或部件 ( 如促销品、赠品及其他出厂后附加的部件等 ) 不在此保修承诺内。

保修期

产品及部件的相应保修期按相关的《产品保修信息》执行。保修期自产品首次购买日起算, 购买日以购买产品时保修卡登记日期为准。

如何获得保修服务

您可直接与产品销售商或授权服务机构联系, 也可拨打神牛产品售后服务电话, 与我们联系, 由我们的服务人员为您安排服务。申请保修时, 您应提供有效的保修卡作为保修凭证, 方可获得保修。如您不能提供有效的保修卡, 则在我们确认产品或部件属于保修范围的情况下, 也可以为您提供保修, 但这不作为我们的义务。

不适用保修的情况

如产品存在下列情况, 本文件项下的保证和服务将不适用: ①产品或部件超过相应保修期; ②错误或不适当使用、维护或保管导致的故障或损坏, 如: 不当搬运; 非按产品合理预期用途使用; 不当插拔外接设备; 跌落或外力挤压; 接触或暴露于不适当温度、溶剂、酸碱、水浸或潮湿环境; ③由非神牛授权机构或人员安装、修理、更改、添加或拆卸造成的故障或损坏; ④产品或部件原有识别信息被修改变更或删除; ⑤无有效保修卡; ⑥使用非合法授权、非标准或非公开发行的软件造成的故障或损坏; ⑦因不可抗力或意外事件造成的故障或损坏; ⑧其他非因产品本身质量问题导致的故障或损坏。遇上述情况, 您应向相关责任方寻求解决, 神牛对此不承担任何责任。因非在保修期或保修范围内的部件、附件或软件导致产品不能正常使用的, 不是保修范围内的故障。产品使用过程中正常的脱色, 磨损和消耗, 不是保修范围内的故障。

产品保修和服务支持信息

产品的保修期和服务类型按以下《产品保修信息》执行:

| 部件               | 保修期 ( 月 ) | 保修服务类型 |
|------------------|-----------|--------|
| 内部电路板            | 12        | 客户送修   |
| 其他 (例如各类线材或其他包装) | 无         | 客户送修   |

神牛产品售后服务电话 0755-29609320-8062

## Warning

---

Operating frequency: 2402MHz – 2480MHz  
Maximum EIRP Power: 5dBm

## Declaration of Conformity

---

GODOX Photo Equipment Co., Ltd. hereby declares that this equipment is in compliance with the essential requirements and other relevant provisions of Directive 2014/35/EU, 2014/30/EU. They are allowed to be used in all EU member states.  
For more information of DoC, Please click this web link:  
<https://www.godox.com/eu-declaration-of-conformity/>

## FCC Caution

---

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## IC Warning

---

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference, and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Warranty

Dear customers, as this warranty card is an important certificate to apply for our maintenance service, please fill in the following form in coordination with the seller and safe-keep it. Thank you!

|                      |                |                     |
|----------------------|----------------|---------------------|
| Product Information  | Model          | Product Code Number |
| Customer Information | Name           | Contact Number      |
|                      | Address        |                     |
| Seller Information   | Name           |                     |
|                      | Contact Number |                     |
|                      | Address        |                     |
|                      | Date of Sale   |                     |
| Note                 |                |                     |

Note: This form shall be sealed by the seller.

Applicable Products

The document applies to the products listed on the Product Maintenance Information (see below for further information). Other products or accessories (e.g. promotional items, giveaways and additional accessories attached, etc.) are not included in this warranty scope.

Warranty Period

The warranty period of products and accessories is implemented according to the relevant Product Maintenance Information. The warranty period is calculated from the day (purchase date) when the product is bought for the first time, and the purchase date is considered as the date registered on the warranty card when buying the product.

How to Get the Maintenance Service

If maintenance service is needed, you can directly contact the product distributor or authorized service institutions. You can also contact the Godox after-sale service call and we will offer you service. When applying for maintenance service, you should provide valid warranty card. If you cannot provide valid warranty card, we may offer you maintenance service once confirmed that the product or accessory is involved in the maintenance scope, but that shall not be considered as our obligation.

#### Inapplicable Cases

The guarantee and service offered by this document are not applicable in the following cases:

① The product or accessory has expired its warranty period; ② Breakage or damage caused by inappropriate usage, maintenance or preservation, such as improper packing, improper usage, improper plugging in/out external equipment, falling off or squeezing by external force, contacting or exposing to the improper temperature, solvent, acid, base, flooding and damp environments, etc; ③ Breakage or damage caused by non-authorized institution or staff in the process of installation, maintenance, alteration, addition and detachment; ④ The original identifying information of product or accessory is modified, alternated, or removed; ⑤ No valid warranty card; ⑥ Breakage or damage caused by using illegally authorized, nonstandard or non-public released software; ⑦ Breakage or damage caused by force majeure or accident; ⑧ Breakage or damage that could not be attributed to the product itself. Once met these situations above, you should seek solutions from the related responsible parties and Godox assumes no responsibility. The damage caused by parts, accessories and software that beyond the warranty period or scope is not included in our maintenance scope. The normal discoloration, abrasion and consumption are not the breakage within the maintenance scope.

#### Maintenance and Service Support Information

---

The warranty period and service types of products are implemented according to the following Product Maintenance Information:

| Parts                               | Maintenance Period (month) | Warranty Service Type                         |
|-------------------------------------|----------------------------|-----------------------------------------------|
| Internal circuit board              | 12                         | Customer sends the product to designated site |
| Other items ( cables, package, etc) | NO                         | Without warranty                              |

Godox After-sale Service Call 0755-29609320-8062



Wechat  
Official Account  
神牛微信公众号

制造商: 深圳市神牛摄影器材有限公司  
地址: 深圳市宝安区福海街道塘尾社区耀川工业区厂房 2 栋  
电话: +86-755-29609320 (8062) 传真: +86-755-25723423  
邮箱: godox@godox.com 网址: godox.com  
MANUFACTURER: GODOX Photo Equipment Co., Ltd.  
Add.: Building 2, Yaochuan Industrial Zone, Tangwei Community, Fuhai Street,  
Bao'an District, Shenzhen 518103, China Tel: +86-755-29609320 (8062)  
Fax: +86-755-25723423 E-mail: godox@godox.com Website: godox.com



Copyright © 2026 Godox All Rights Reserved.  
中国制造 Made in China