

**Default Unlock Code:** "1 2, 3 4, 5 6, 7 8, 9 0, \*"

\*\*\*Unlock Code must always be followed with a "\*" doorbell button to complete action.



Pat. Pend.

**Default Lock Code:** "5 6, 5 6, 5 6, ." (Lock code cannot be modified)

The HDC008-HW keypad can accept a lock or unlock trigger from a T25, RS1, RS2, HD007 and HD008-B

### Adding Key Fobs or other wireless devices

1. Within 5 seconds of turning power ON, press button "1 2" and "9 0" at the same time. The system will enter code learning mode and an Unlock signal will output to confirm.
2. Then within 5 seconds press any button on the key fob or wireless device. For additional remote's continue pressing any button on each device one after the other.
3. Do not allow more than 5 seconds in between each device or the system will exit code learning mode. As confirmation the keypad will output an Unlock signal for every device learned.

### Changing the Unlock code/ Setting Master code

Master code is used to Unlock/ Disarm. Press "\*" , "\*" , "\*" 3 times, enter current unlock code, "\*" once, enter new code (must be 4-8 digits) and then "\*" once. If the new code is accepted the "\*" green LED will flash for 2 seconds.

### Setting Secondary Code

Enter Master code, press buttons "1 2" and "9 0" at the same time, within 30 seconds enter 4-8 digit code and press "\*" . If the new code is accepted the green LED will flash for 2 seconds.

### Erasing Secondary Code

Use the Master code to Unlock the keypad, then press buttons "1 2" and "5 6" at the same time until the LED's flash for 3 seconds.

### Additional Keypad Information

-If the wrong code is entered 3 times the red LED will flash red "\*" for 5 seconds and the keypad will not accept any codes for 2 minutes.

-Button intervals cannot exceed 3 seconds.