

stowaway
IN-WALL IRONING BOARD

18100 series (White)

18200 series (Unfinished Oak)




View the **INSTALLATION VIDEO** at www.householdessentials.com or on our YouTube channel.

Please read this entire instruction booklet before installing your StowAway® Ironing Board.


For questions during installation or after, please contact us at Household Essentials at 1.800.922.5524/314.428.5657. Hardware is wrapped up in the cover inside the cabinet, but if you are missing anything, please call and we will expedite replacement parts.

PARTS LIST

Part A (1) Ironing Board Cabinet

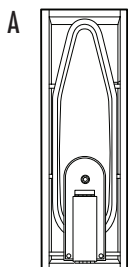

Part B (1) Cabinet Door

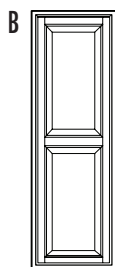


Part C (1) Ironing Board Cover and Pad



The following hardware is wrapped up inside the cover (Part C) to protect the cabinet.

Part D (2) Door Hinges


Can be attached so the door opens left or right.

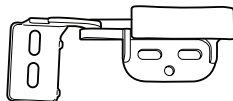

Part E (4) Phillips Drywall Screws – 1 5/8"



Part F (1) Garment Hook

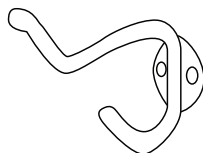

Part G (10) Phillips Panhead Screws – 5/8"



OTHER TOOLS NEEDED

Tape measure

Phillips screwdriver

Stud finder

Drywall saw

3/32" drill bit

Drill

Level

OPTIONAL ACCESSORIES (sold separately)

180 Light Kit - Kit includes an adjustable spotlight LED bulb, 3-prong electric outlet, and timer with automatic shut-off (15 & 30 minute settings). Installs into the upper right corner of the cabinet.

(A CERTIFIED ELECTRICIAN should run the wiring for the light kit.)

Replacement Cover with Pad - Cotton covers with attached fiber pads are designed specifically for the StowAway® ironing board's 11 x 41 inch surface. Covers have elastic edging (better fit and easier to put on) and stain and scorch resistance.

Available at www.householdessential.com and other online retailers.

SPACE REQUIREMENTS


A. 16" on center studs (wood or metal*).

**Included hardware is for wood studs: please visit your local hardware store for the right hardware to use in metal studs.*

B. Sufficient wall and floor space for operation (see clearance diagram below).

C. Cutout area (14.25" x 46.25") free from all electrical or mechanical services.

D. A nearby outlet or 180 Light Kit with an electrical line run to the unit by a CERTIFIED ELECTRICIAN.

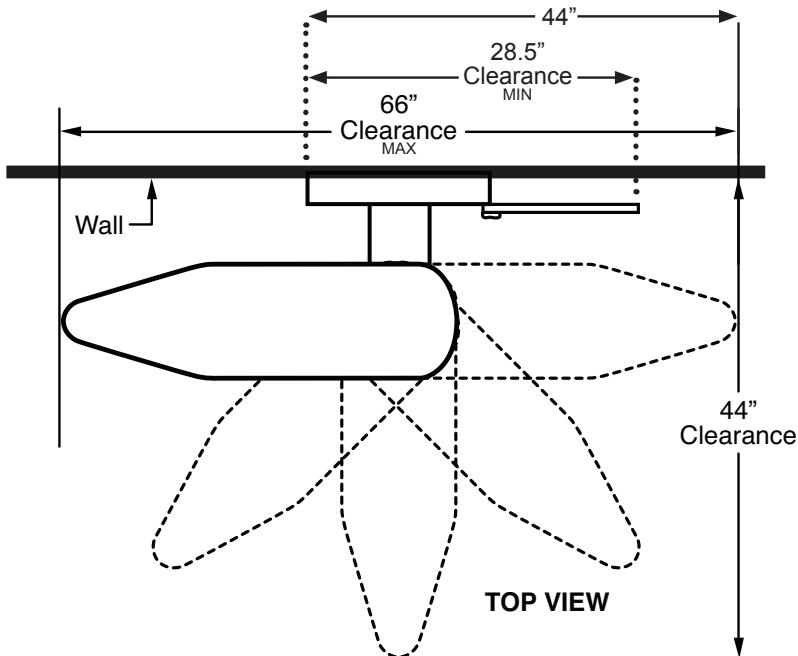


1. CUTOUT THE DRYWALL

On a wall with 16" on center studs, in an area clear of all electrical and mechanical services:

- A. Find wall studs with a stud finder and mark their location.
- B. Using a level, sketch the cutout dimensions onto the wall between the studs, drawing a LEVEL rectangle 14.25" x 46.25" with its bottom 25" off the floor.
The ironing board will open 36" high and raise to 38" high.
Adjust the cutout's height to change the ironing board's height on opening.
- C. Using a drywall saw, carefully cut out the sketched rectangle.

*If your cutout is level,
your cabinet and ironing
board will be too!*

- D. IF USING A 180 LIGHT KIT:
have a CERTIFIED ELECTRICIAN drop
an electrical line to the unit and install
the light kit in the StowAway® cabinet.
See instructions in light kit's box.

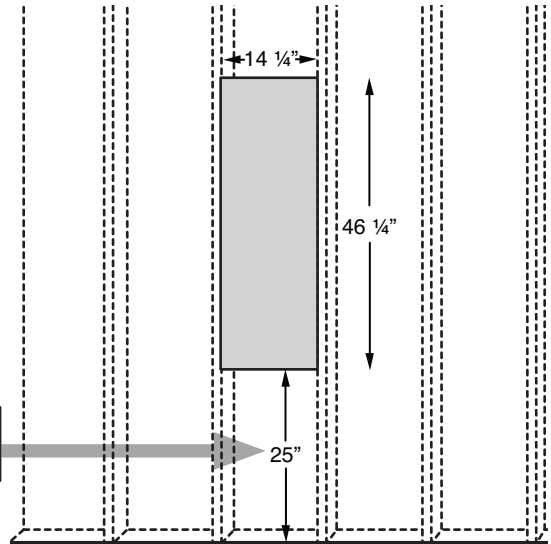

*Adjust THIS height to set
the ironing board's height:
ex. 25" cutout = 36-38" ironing board*

2. MOUNT THE DOOR HINGES

- A. Find the marked holes and grooves on back side of the door (fig. 1).
- B. Unfold a hinge (Part D) and slide its lower section into the groove, laying the plastic part of the hinge flush against the back side of the door.
- C. Attach the hinge to the door with 2-Phillips panhead screws (Part G).
- D. Repeat with remaining hinge.

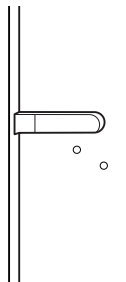


Figure 1

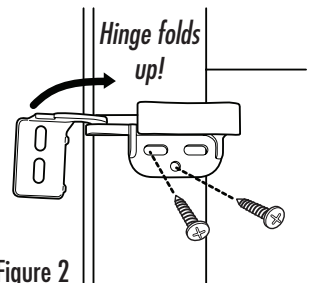



Figure 2

3. PREP THE CABINET FOR THE DOOR

The door can open to the **LEFT (LEFT HINGE)** or to the **RIGHT (RIGHT HINGE)**:

- A. Lay the cabinet (Part A) on its side: left side down for left hinge / right side down for right hinge.
- B. Lay the cabinet door (Part B) beside the ironing board cabinet (Part A) with both hinges open and laying inside the cabinet.
- C. Align the stop guides on the hinges with the edge of the cabinet (see circle below) and **MARK THE LOCATION** of the hinge's mounting holes on the cabinet frame with a pencil.
- D. Using a 3/32" bit, drill pilot holes 1/2" deep into the cabinet frame for mounting hole mark.

DO NOT ATTACH DOOR THE DOOR. The door will be attached after the cabinet is secured to the studs in the wall.


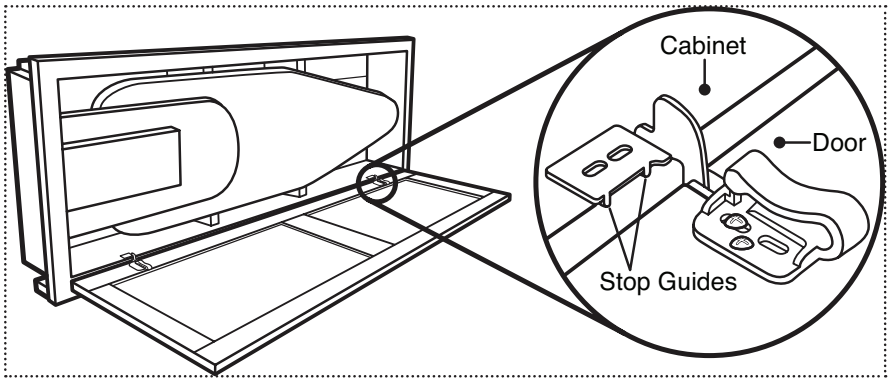


Right hinge: Door will open to the right.

4. ATTACH THE GARMENT HOOK

Attach the garment hook to the back of the door as directed for your selected hinge side.

- A. **Left Hinged** (see fig. 1): 6" from the top and 1/2" from the side of the top left corner of the door.
This leaves room to install the optional light kit.
- B. **Right Hinged** (see fig. 2): 2" from the top and 1/2" from side of the top right corner of the door.

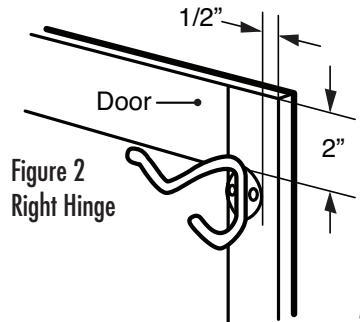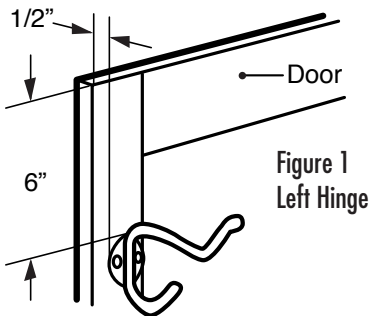

5. MOUNTING THE CABINET TO THE WALL

- A. Lift the cabinet and set its base into the cutout, then tilt the cabinet into place (see figure 1).
- B. Attach the cabinet to the wall studs with Phillips drywall screws (Part E). Screw from inside the cabinet into the wall studs, placing screws approx. 1" below the top and bottom shelves on both sides of the cabinet (see figure 2).
- C. Attach the door: Align door hinges with drilled pilot holes and attach with 4-Phillips panhead screws (Part G).


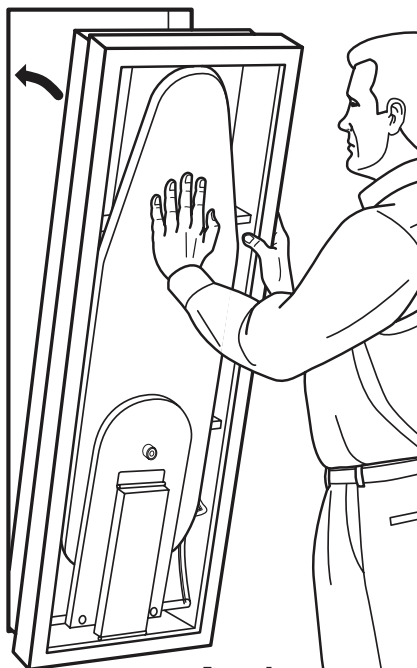


Figure 1

Figure 2

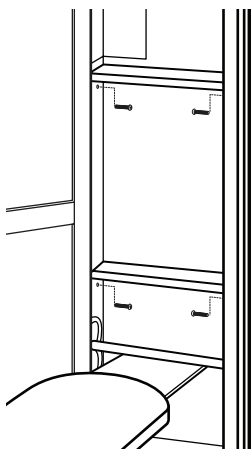

6. PUT ON THE COVER


- A. Lower the ironing board.
- B. Fit the nose pocket over the nose of the board.
- C. Stretch cover around sides and back over the end of the board.

NOTE: The board may swivel more stiffly after the cover is on. As the board is used, the cover will mold to the board, making the board easier to move from side to side.

USE & CARE OF YOUR STOWAWAY®

HEIGHT ADJUST: Lift the board near the back end, guide it through the curved cutouts in the cabinet, and glide it into place. Reverse to lower.

The board must be in the lower position to close.

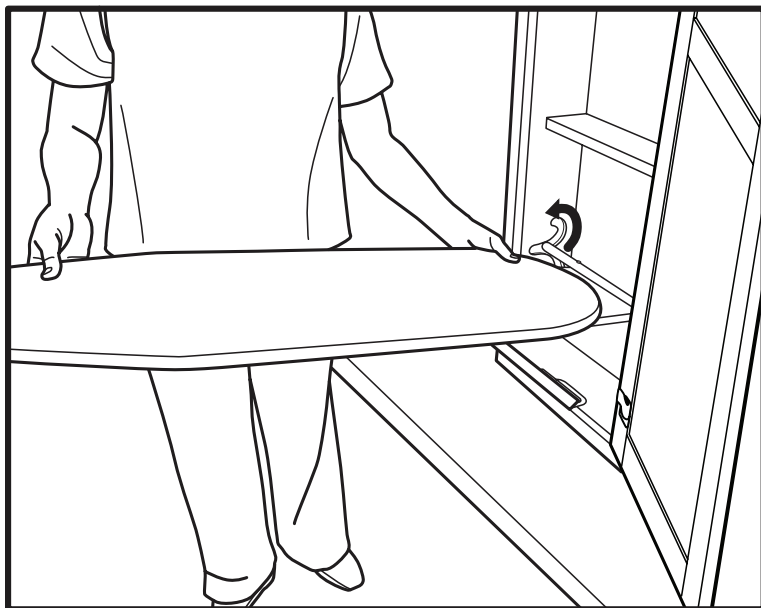

CLEANING: Wipe cabinet with a damp cloth or mild cleanser as needed. Spot clean cover and air dry on the ironing board.

STORING AN IRON: Unplug iron before stowing in the cabinet. Always store the iron with the sole facing the cabinet's heat-resistant plates. **NEVER LEAVE A HOT IRON UNATTENDED.**

TROUBLE SHOOTING

Board does not slide up and down smoothly.

Lubricate the slide slots behind the metal tubing with wax or a bar of soap.

Wobbly ironing board.

Adjust the knob on the underside of the ironing board.

Stiff swivel.

If new, give the cover a little time to compress under the board; if older, check the knob on the underside of the board and adjust as needed.

Visit our website for other FAQs or call our Customer Service (contact on reverse).

Thank you for your order!

We appreciate your business. Additional information on your product may be available on our website.



Happy?

Wonderful! We are very glad.
Please share your experience with
us and others. It helps us know
what you like best!



Not happy?

Please give our St. Louis
customer service a call at
1-800-922-5524.
We are here to help.

- Review this product at www.householdessential.com.

Search the item # from the home
page to find the product. Leave your
review under the review tab on the
product's page!

- Follow us on Facebook and
Instagram!

- Missing parts?
- Having trouble with assembly?

Customer Service

1-800-922-5524 | 1-314-428-5657
info@householdessential.com

Open Mon-Fri at 8:30 am CT.
Closed all national holidays.



©2017 HOUSEHOLD ESSENTIALS, LLC
Hazelwood, MO 63042
www.householdessential.com

6/2017