



Plasma Television Service Manual

Chassis: MT5371

**Product Type: PLX-4202B
PLX-5002B**

Ver 1.0

June 2007

Contents

Contents	- 2 -
Service Manual	- 3 -
1. Precautions and notices.....	- 3 -
1.1 Warning.....	- 4 -
1.2 Notes.....	- 7 -
2. Product Function Specifications	- 11 -
2.1 Product Function.....	- 11 -
2.2 Specifications.....	- 13 -
3. PDP panel module	- 14 -
3.1 General Specifications	- 14 -
3.2 BLOCK DIAGRAM.....	- 15 -
4. Chassis Layout and Overall Wiring Diagrams	- 17 -
4.1 Boards and Chassis Layout.....	- 17 -
4.2 Connectors	- 19 -
4.3 Wires and Cables Overall Wiring Diagram(s).....	- 20 -
5. Factory/Service OSD Menu and Adjustment.....	- 22 -
5.1 To enter the Factory OSD Menu	- 22 -
5.2 Factory OSD Menu.....	- 22 -
5.3 Designer Menu.....	- 23 -
6. Software Upgrading.....	- 26 -
6.1 Get ready for upgrading.....	- 26 -
6.2 Upgrading with the MtkTool	- 28 -
7. Troubleshooting.....	- 32 -
7.1 Troubleshooting for Remote Control	- 32 -
7.2 Troubleshooting for Function Key.....	- 33 -
7.3 TV won't Power On.....	- 34 -
7.4 Troubleshooting for Audio.....	- 35 -
7.5 Troubleshooting for TV/VGA/HDMI/YPbPr input	- 36 -
7.6 Troubleshooting for Video/S-Video input.....	- 37 -
8. Explode View and BOM.....	- 38 -
9. Schematic circuit diagram	- 39 -

Service Manual

1. Precautions and notices

BEFORE SERVICING THE PDP TV, READ THE SAFETY PRECAUTIONS IN THIS MANUAL.

WHEN REPLACEMENT PARTS ARE REQUIRED, BE SURE TO USE REPLACEMENT PARTS SPECIFIED BY THE MANUFACTURER.

Proper service and repair is important to the safe, reliable operation of all Element Equipment. The service procedures recommended by Element and described in this Service Guide are effective methods of performing service operations. Some of these service operations require the use of tools specially designed for the purpose. The special tools should be used when and as recommended.

It is important to note that this manual contains various CAUTIONS and NOTICES which should be carefully read in order to minimize the risk of personal injury to service personnel. The possibility exists that improper service methods may damage the equipment. It is also important to understand that these CAUTIONS and NOTICES ARE NOT EXHAUSTIVE. Element could not possibly know, evaluate and advise the service trade of all conceivable ways in which service might be done or of the possible hazardous consequences of each way. Consequently, Element has not undertaken any such broad evaluation. Accordingly, a serviceman that uses a service procedure or tools,

which are not recommended by Element, must first satisfy himself thoroughly that neither his safety nor the safe of the equipment will be jeopardized by the service method selected.

1.1 Warning

1.1.1

Critical components having special safety characteristics are identified with a ▲ by the Ref. No. in the parts list. Use of substitute replacement parts, which do not have the same specified safety characteristics, may create shock, fire, or other hazards.

Under no circumstances should the original design be modified or altered without written permission from Element. Element assumes no liability, express or implied, arising out of any unauthorized modification of design. Serviceman assumes all liability.

DANGERCAUTION CAUTION

TO ENSURE THE CONTINUED RELIABILITY OF THIS PRODUCT, USE ONLY ORIGINAL MANUFACTURER'S REPLACEMENT PARTS, WHICH ARE LISTED WITH THEIR PART NUMBERS IN THE PARTS LIST SECTION OF THIS SERVICE GUIDE.

1.1.2.

All ICs and many other semiconductors are susceptible to electrostatic discharges (ESD).

Careless handling during repair can reduce life drastically. When repairing, make sure that you are connected with the same potential as the mass of the set by a wristband with resistance. Keep components and tools also at this same potential.

1. Never replace modules or other components while the unit is switched on.

2. When making settings, use plastic rather than metal tools. This will prevent any short circuits and the danger of a circuit becoming unstable.

1.1.3

To prevent electrical shock, do not use this polarized ac plug with an extension cord, receptacle, or the outlet unless the blades can be fully inserted to prevent blade exposure.

To prevent electrical shock, match wide blade or plug to wide slot, fully insert.

1.1.4

When replacement parts are required, be sure to use replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.

1.1.5

Safety regulations require that after a repair the set must be returned in its original condition. In particular attention should be paid to the following points.

- Note: The wire trees should be routed correctly and fixed with the mounted cable clamps.

- The insulation of the mains lead should be checked for external damage.

1.1.6

- (1) Do not touch Signal and Power Connector while this product operates. Do not touch EMI ground part and Heat Sink of Film Filter.
- (2) Do not supply a voltage higher than that specified to this product. This may damage the product and may cause a fire.
- (3) Do not use this product in locations where the humidity is extremely high, where it may be splashed with water, or where flammable materials surround it. Do not install or use the product in a location that does not satisfy the specified environmental conditions. This may damage the product and may cause a fire.
- (4) If a foreign substance (such as water, metal, or liquid) gets inside the panel module, immediately turn off the power. Continuing to use the product may cause fire or electric shock.
- (5) If the product emits smoke, and abnormal smell, or makes an abnormal sound, immediately turn off the power. Continuing to use the product, it may cause fire or electric shock.
- (6) Do not disconnect or connect the connector while power to the product is on. It takes some time for the voltage to drop to a sufficiently low level after the power has been turned off. Confirm that the voltage has dropped to a safe level before disconnecting or connecting the connector.
- (7) Do not pull out or insert the power cable from/to an outlet with wet hands. It may cause electric shock.
- (8) Do not damage or modify the power cable. It may cause fire or electric shock.

(9) If the power cable is damaged, or if the connector is loose, do not use the product: otherwise, this can lead to fire or electric shock.

(10) If the power connector or the connector of the power cable becomes dirty or dusty, wipe it with a dry cloth. Otherwise, this can lead to fire.

(11) PDP Module uses a high voltage (Max.450V dc). Keep the cautions concerning electric shock and do not touch the Device circuitry when handling the PDP Unit. And because the capacitor of the Device circuitry may remain charged at the moment of Power OFF, standing by for 1 minute is required in order to touch the Device circuitry.

(12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

1.2 Notes

Notes on Safe Handling of the Plasma Display and during service

The work procedures shown with the Note indication are important for ensuring the safety of the product and the servicing work. Be sure to follow these instructions.

- Before starting the work, secure a sufficient working space.
- At all times other than when adjusting and checking the product, be sure to turn OFF the POWER Button and disconnect the power cable from the power source of the TV during servicing.

- To prevent electric shock and breakage of PC board, start the servicing work at least 30 seconds after the main power has been turned off. Especially when installing and removing the power supply board and the SUS board in which high voltages are applied, start servicing at least 2 minutes after the main power has been turned off.
- While the main power is on, do not touch any parts or circuits other than the ones specified. The high voltage power supply block within the PDP module has a floating ground. If any connection other than the one specified is made between the measuring equipment and the high voltage power supply block, it can result in electric shock or activation of the leakage-detection circuit breaker.
- When installing the PDP module in, and removing it from the packing carton, be sure to have at least two persons perform the work while being careful to ensure that the flexible printed-circuit cable of the PDP module does not get caught by the packing carton.
- When the surface of the panel comes into contact with the cushioning materials, be sure to confirm that there is no foreign matter on top of the cushioning materials before the surface of the panel comes into contact with the cushioning materials. Failure to observe this precaution may result in, the surface of the panel being scratched by foreign matter.
- When handling the circuit board, be sure to remove static electricity from your body before handling the circuit board.
- Be sure to handle the circuit board by holding the large parts as the heat sink or

transformer. Failure to observe this precaution may result in the occurrence of an abnormality in the soldered areas.

- Do not stack the circuit boards. Failure to observe this precaution may result in problems resulting from scratches on the parts, the deformation of parts, and short-circuits due to residual electric charge.
- Routing of the wires and fixing them in position must be done in accordance with the original routing and fixing configuration when servicing is completed. All the wires are routed far away from the areas that become hot (such as the heat sink). These wires are fixed in position with the wire clamps so that the wires do not move, thereby ensuring that they are not damaged and their materials do not deteriorate over long periods of time. Therefore, route the cables and fix the cables to the original position and states using the wire clamps.
- Perform a safety check when servicing is completed. Verify that the peripherals of the serviced points have not undergone any deterioration during servicing. Also verify that the screws, parts and cables removed for servicing purposes have all been returned to their proper locations in accordance with the original setup.
- A glass plate is positioned before the plasma display. This glass plate can be cleaned with a slightly humid cloth. If due to circumstances there is some dirt between the glass plate and the plasma display panel it is recommended to do some maintenance by a qualified service employee only.




The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock.





The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the set.

2. Product Function Specifications

2.1 Product Function

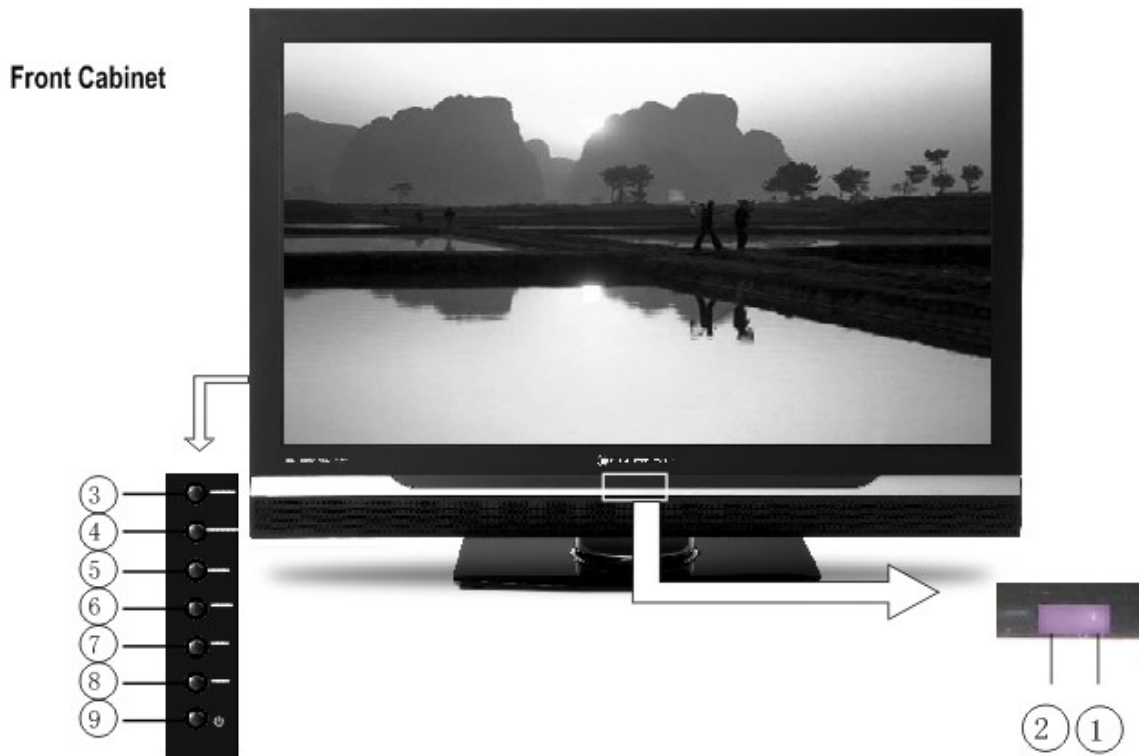

- | | |
|-----------------------|------------------|
| ① Power indicator | ⑦ Channel up |
| ② Remote sensor | ⑧ Channel down |
| ③ Menu button | ⑨ Power(standby) |
| ④ Input source button | |
| ⑤ Volume up | |
| ⑥ Volume down | |

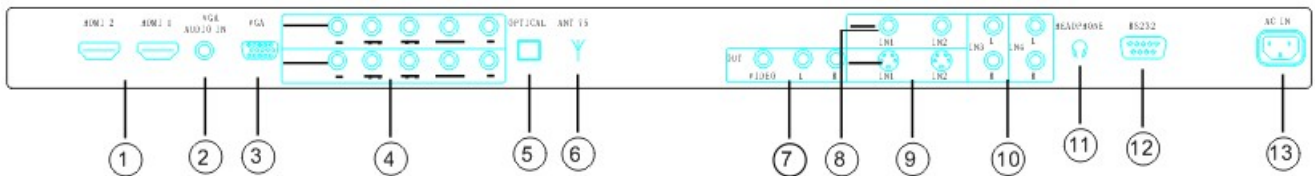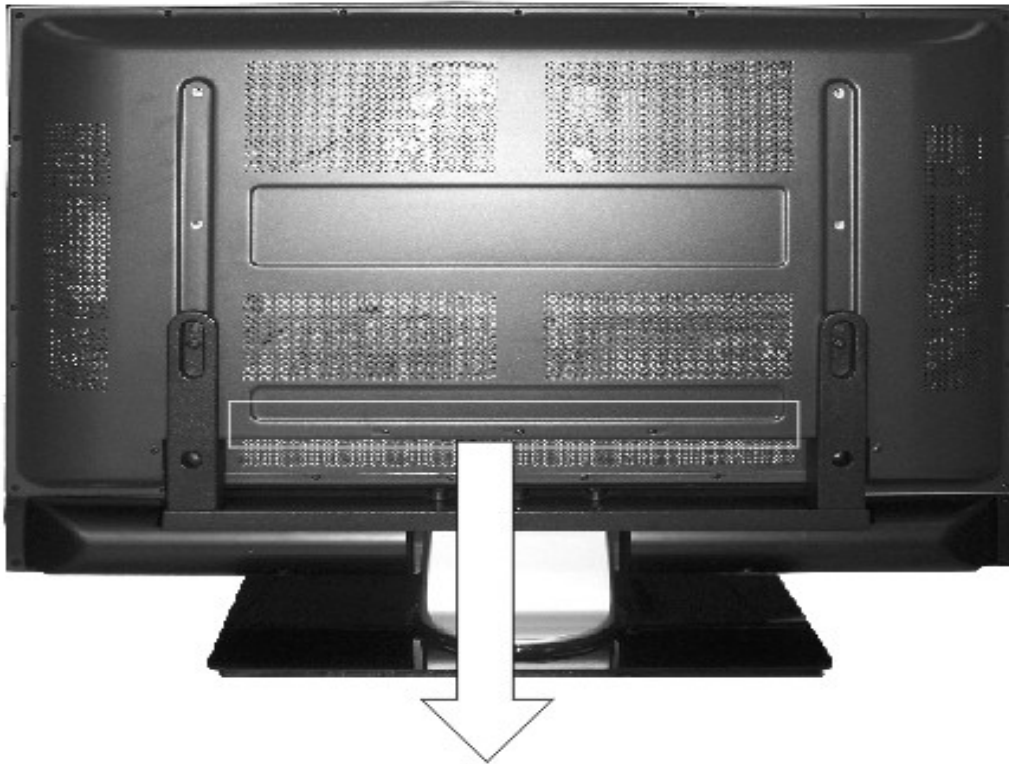

- | | |
|------------------------|-----------------------------|
| ① HDMI INPUT | ⑩ VIDEO/S-VIDEO AUDIO INPUT |
| ② PC AUDIO INPUT | ⑪ HEADPHONE OUTPUT |
| ③ VGA INPUT | ⑫ RS232 INPUT |
| ④ COMPONENT INPUT | ⑬ AC INPUT |
| ⑤ DIGITAL AUDIO OUTPUT | |
| ⑥ ANTENNA INPUT | |
| ⑦ VIDEO/AUDIO OUTPUT | |
| ⑧ VIDEO INPUT | |
| ⑨ S-VIDEO INPUT | |

2.2 Specifications

Model	PLX-4202B	PLX-5002B
Diagonal display size	42 inches	50 inches
Television system	American TV standard ATSC/NTSC system	
Audiomultiplex	BTSC system	
Channel coverage	VHF: 2~13 UHF: 14~69 CATV:1~125 Digital Terrestrial Broadcast (8VSB): 2~69 Digital cable (64/256 QAM): 1~135	
PC mode	640×480/60Hz, 800×600/60Hz, 1024×768/60Hz	
YPbPr/YCbCr mode	480i/60Hz, 480P/60Hz, 720P/60Hz, 1080i/60Hz	
Resolution	1024×768	1366×768
Power source	AC 120 V , 60 Hz	
Power consumption	350W	500W
Audio power	10W+10W	
Conection Interface	RF input: Cable/ Antenna ×1 VIDEO input: VIDEO ×2 S-VIDEO ×2 COMPONENT ×2 HDMI ×2 VIDEO output: VIDEO×1 GRAPHIC input: Analog RGB 15pin× 1 AUDIOinput: AV Audio× 2 Component Audio×2 PC Audio Input ×1 AUDIO output: AV Audio× 1 Digital audio output ×1	
Dimensions	Length: 41.4 inches Width: 14.2 inches Height: 30.2inches	Length: 49 inches Width: 14.2 inches Height: 36.3inches
Weight	80.3 lbs	109.5 lbs
Supplied accessories	Remote control, AC cord, Batteries, User Manual, Warranty Card Stand Assemble Guide, QSG, Remote Control Guide	

NOTE: Specifications and design are subject to possible modifications without notice due to improvements.

3. PDP panel module


3.1 General Specifications

Model Name	PDP42X4#### (42X4 Model)	PDP50X4#### (50X4 Model)	Comments
Number of Pixels	1024(H) × 768(V)	1366(H) × 768(V)	1 pixel=3 RGB cells
Pixel Pitch	900 μ m (H) × 676 μ m (V)	810 μ m (H) × 810 μ m (V)	
Cell Pitch	300 μ m (H) × 676 μ m (V)	270 μ m (H) × 810 μ m (V)	Green Cell basis
Display Area	921.5(H) × 519.0(V) ± 0.5mm	1106.5(H) × 622.1(V) ± 0.5mm	
Outline Dimension	1005(H) × 597(V) × 60.7(D) ± 1mm	1190(H) × 700(V) × 58(D) ± 1mm	
Pixel Type	RGB Closed type	RGB Closed(Well) type	
Number of Gradations	(R)1024 × (G)1024 × (B)1024	(R)1,024 × (G)1,024 × (B)1,024 colors	
Aspect Ratio	16:9	16:9	
Peak Brightness	Typical 1,500cd/m ²	Typical 1500cd/m ²	1/100 White Window pattern at center)
Contrast Ratio	Typical 180:1	Average 130:1	(In a bright room with 100Lux at center)
	Typical 10,000:1	Maximum 10,000:1	In a dark room 1/100 White Window pattern at center)
Weight	14.2 Kg ± 0.5 Kg	20.4 ± 0.5 Kg	Net 1EA
Power Consumption	Max. 330W	Max. 400 W	Full White
Expected Life-time	60,000 Hours	60,000 Hours	

Income inspections please refer to panel specification of LGE 42X4 and 50X4.


3.2 BLOCK DIAGRAM

3.2.1 PLX-4202B

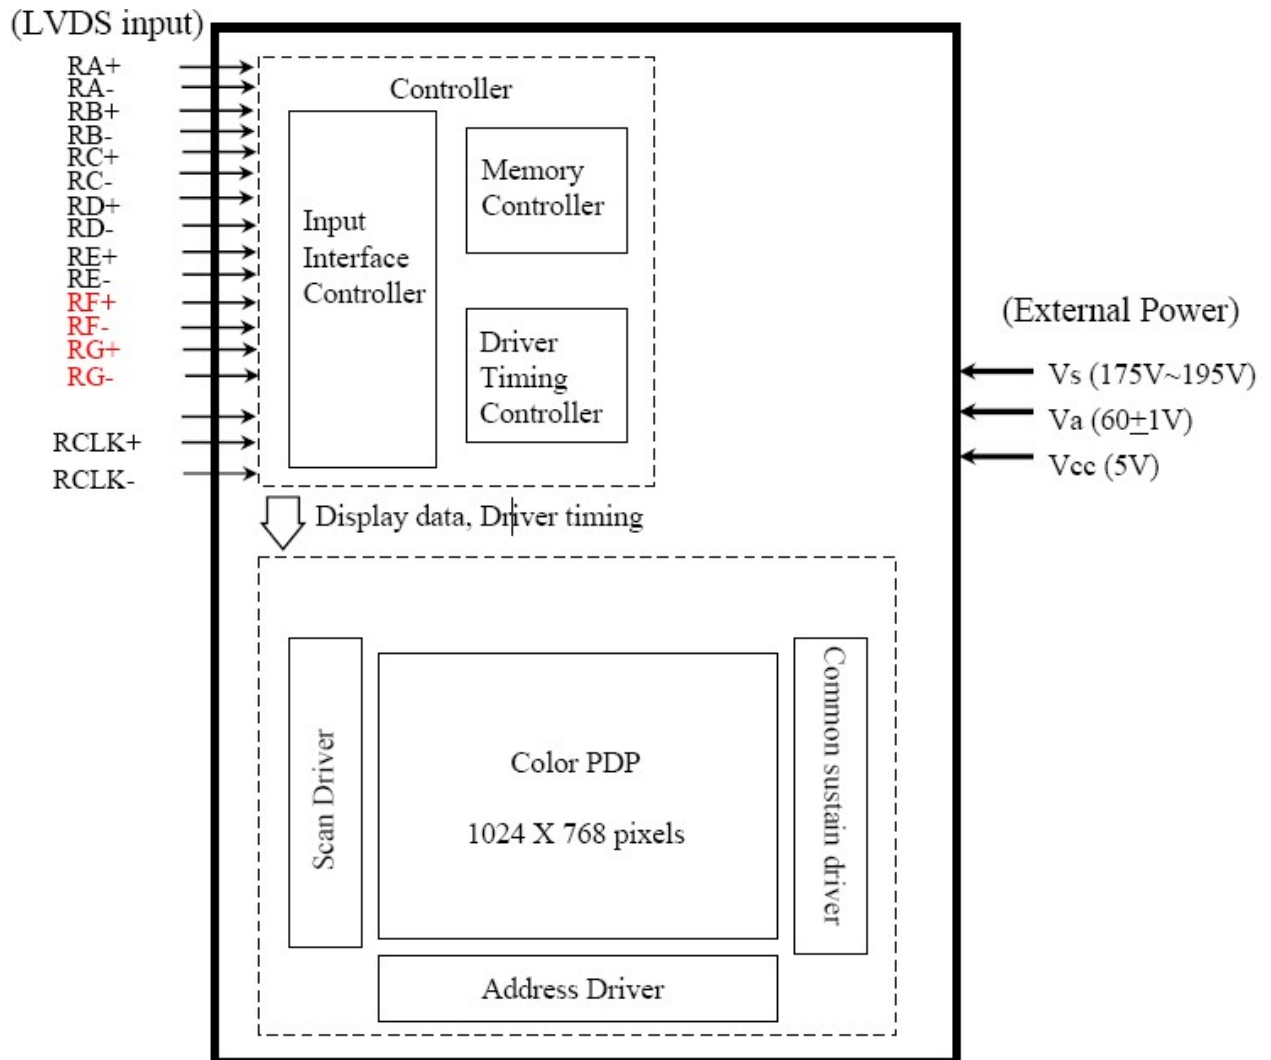

Note: Applied Voltage level is specified at the time when Full-White pattern is displayed on the panel.

3.2.2 PLX-5002B

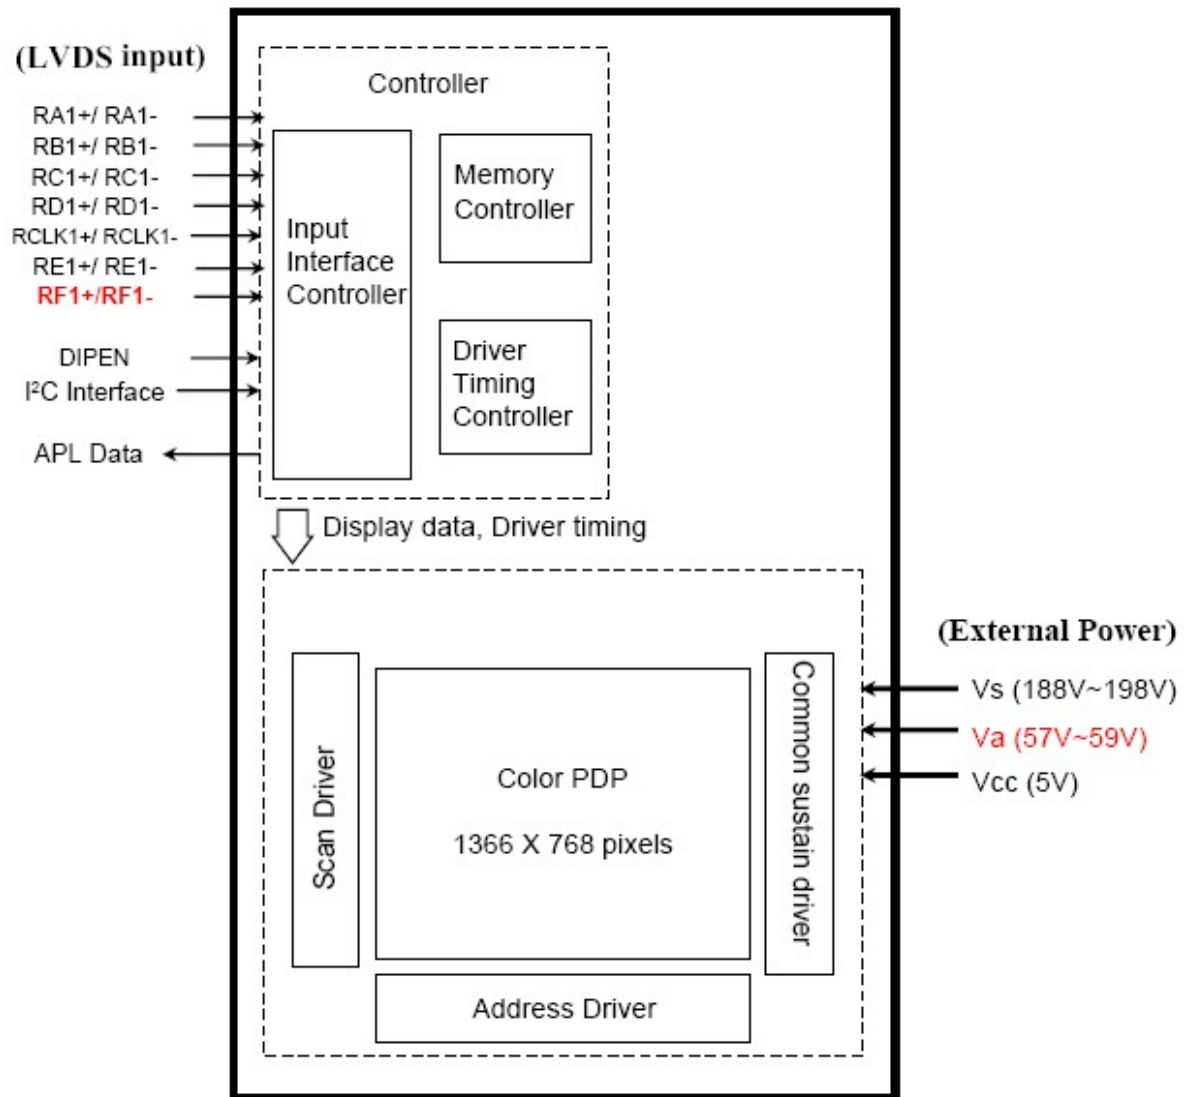


Note: Applied Voltage level is specified at the time when Full-White pattern is displayed on the panel.


4. Chassis Layout and Overall Wiring Diagrams

4.1 Boards and Chassis Layout

PLX-4202B

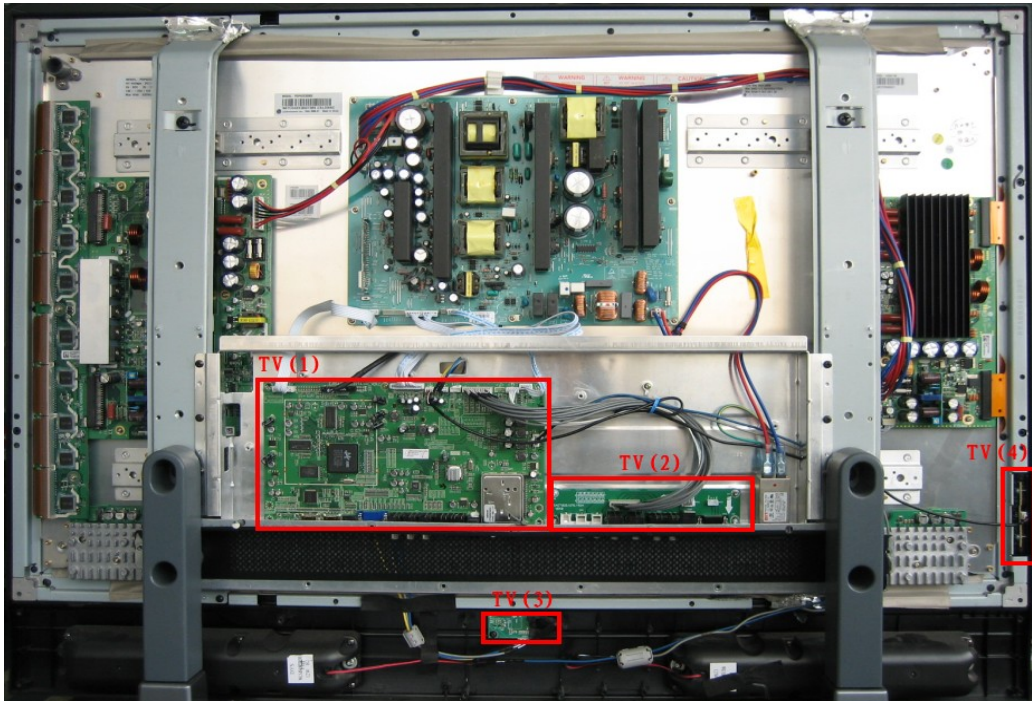


PLX-4202B System

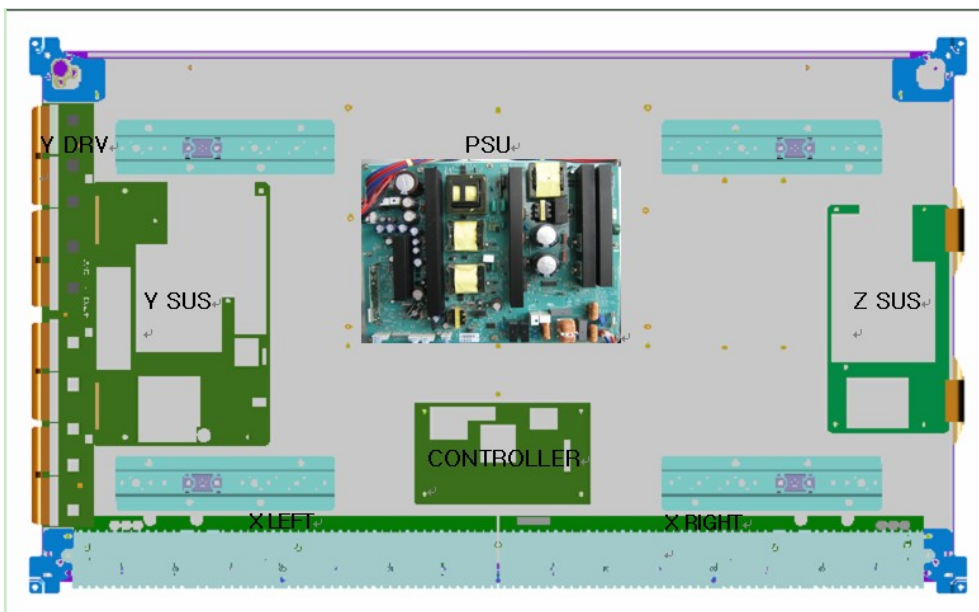


PLX-4202B Panel

Plasma TV Service Manual

PLX-5002B

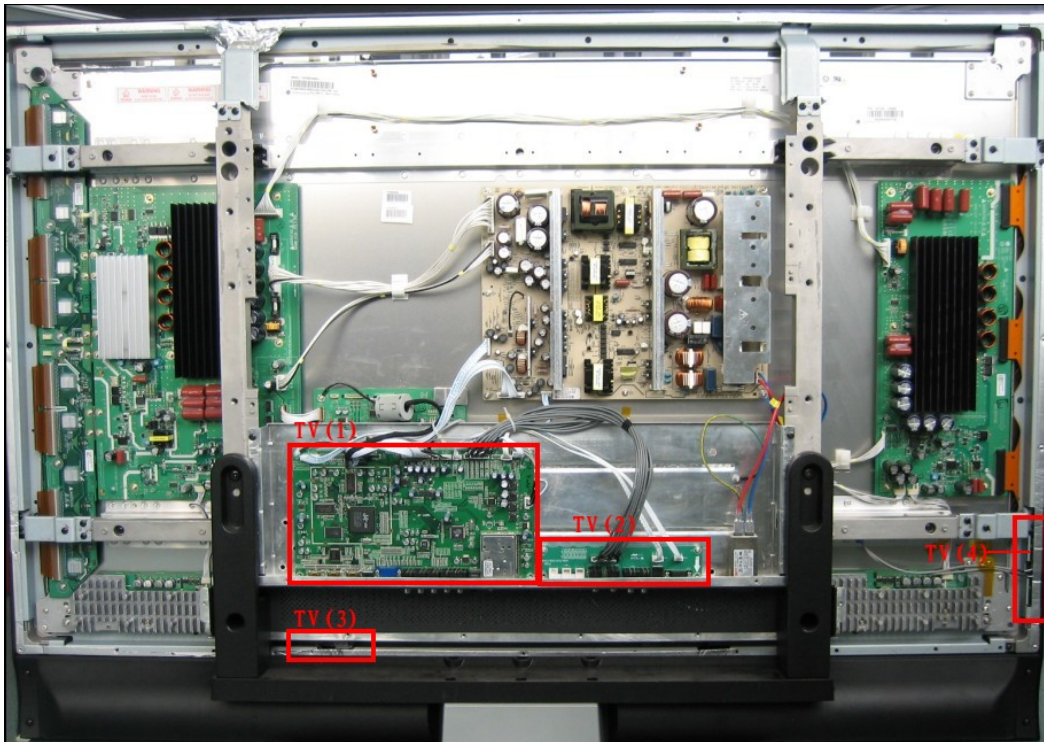

PLX-5002B System

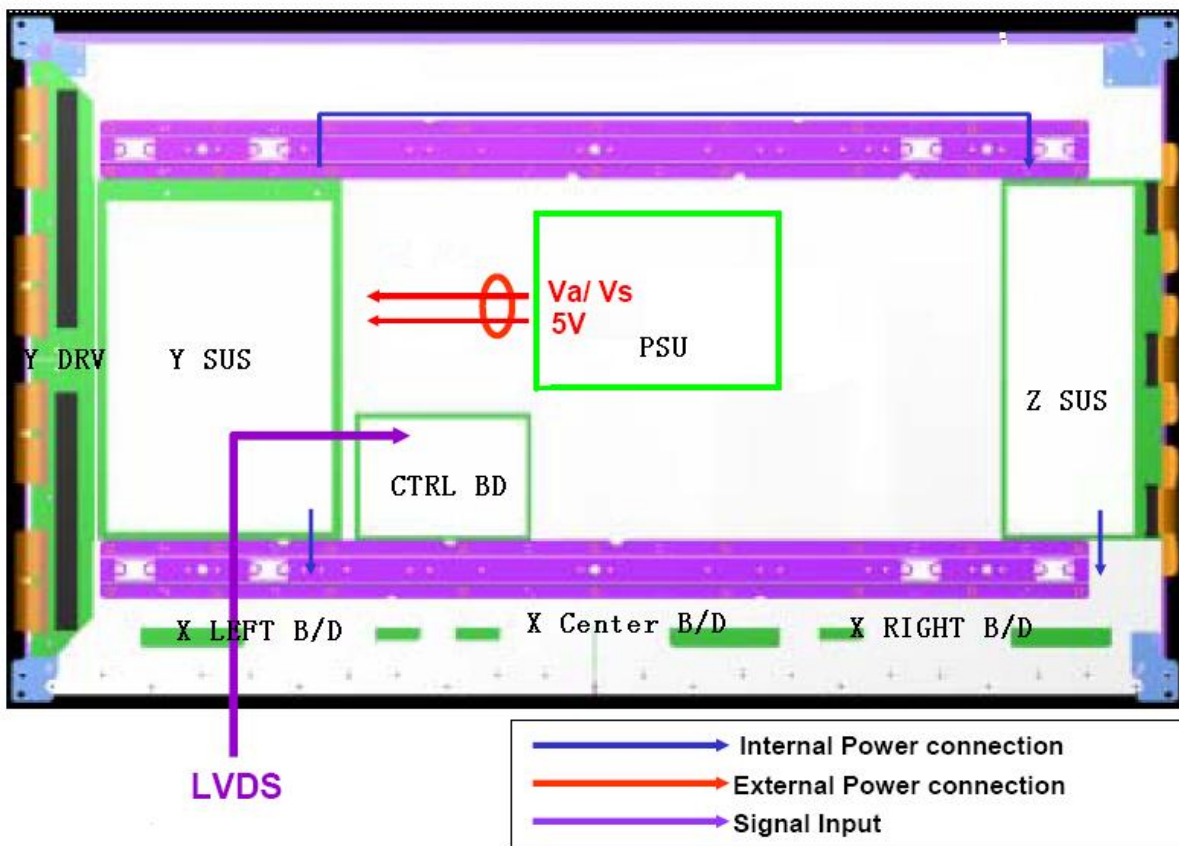

PLX-5002B Panel


Element Confidential

Plasma TV Service Manual

No	Description	Part No	Type/Model
TV(1)	Main BD	113043	RSAG2.908.1072\ROH
TV(2)	In/Out connector board	113178	RSAG2.908.1080\ROH
TV(3)	LED / IR Board	113179	RSAG2.908.1081\924\ROH
TV(4)	Key Board		

4.2 Connectors

Main Board

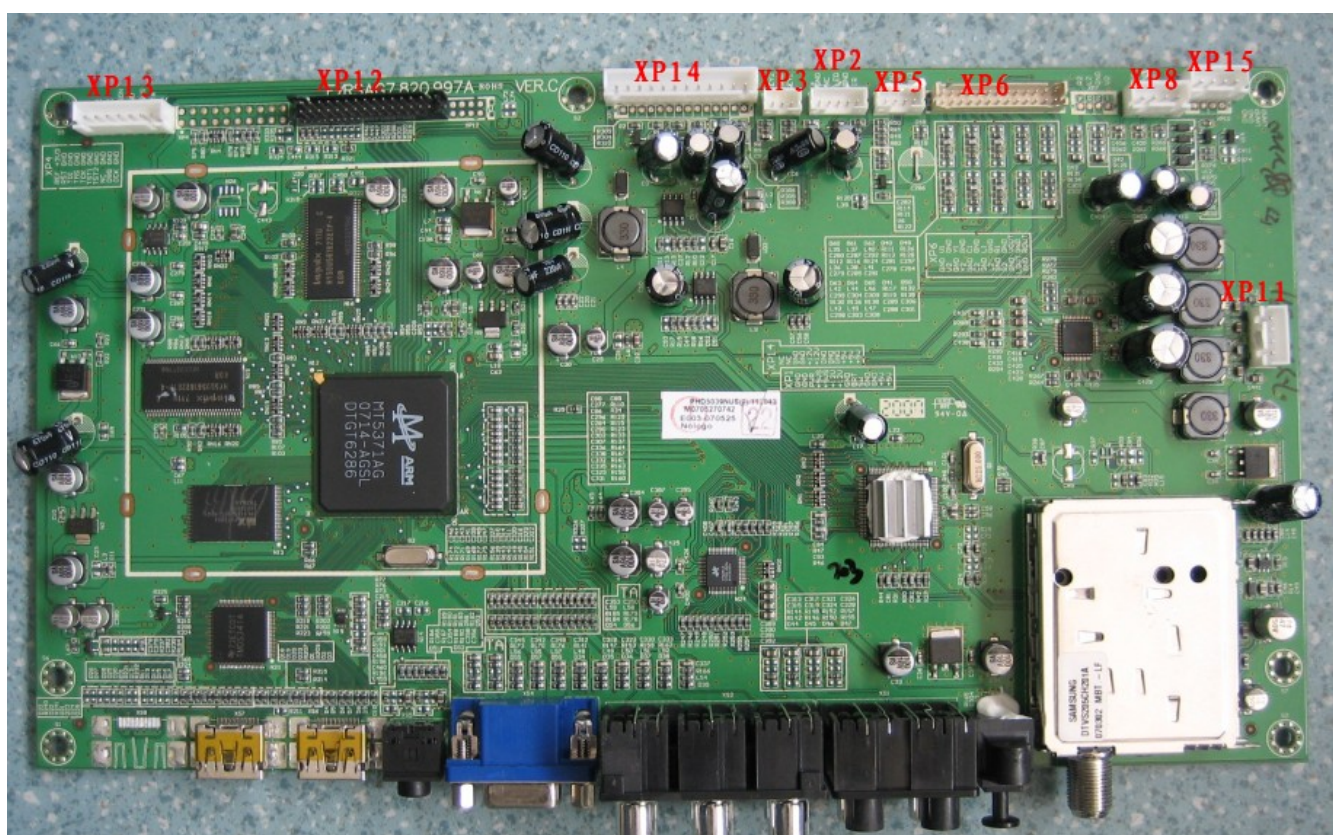

Location No.	Specification	Description
XP13	TJC3-7A\ROH	Power from PSU BD P801
XP12	FF-HX19-10\ROH	LVDS signal between MB and panel
XP14	TJC3-12A\ROH	Power from PSU BD P803
XP3	TJC10-3A\ROH	Buttons (connect key BD and main BD)
XP2	TJC10-5A\ROH	IR, LED
XP5	TJC10-4A\ROH	Serial Port connector
XP6	A2006WSO-2×13P\ROH	Video/Audio signal
XP8	TJC3-4A\ROH	Headphone Audio Signal


Element Confidential

Plasma TV Service Manual

XP15	TJC3-4A\ROH	Power for AMP, from PSU BD P802
XP11	TJC3-4A\ROH	Audio signal to speakers

4.3 Wires and Cables Overall Wiring Diagram(s)

PLX-4202B

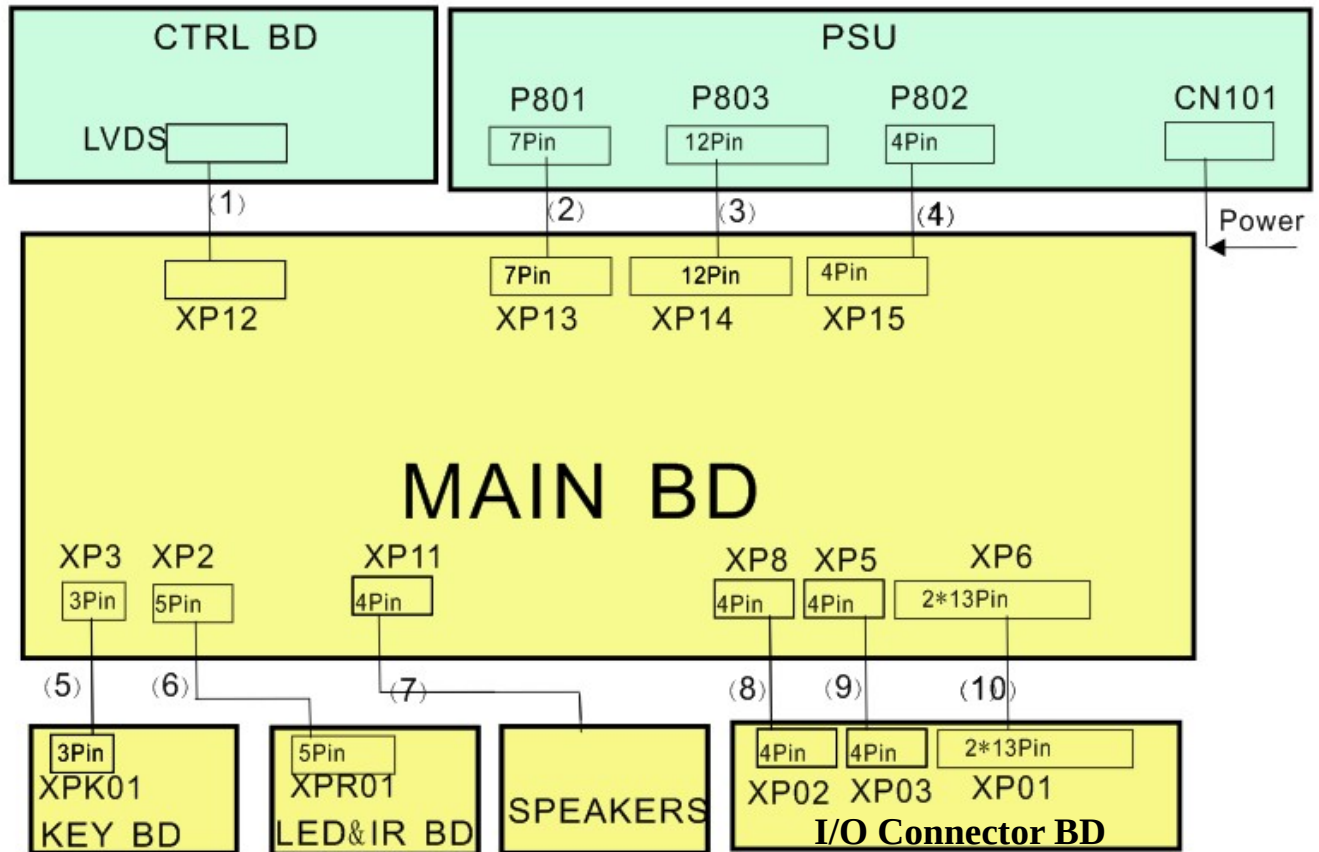


No	DESCRIPTION	SPECIFICATION	NOTE
1	LVDS signal	FF-HX19-11	Main BD XP12<-->CTRL BD
2	5V standby, communication between Main BD and panel	TJC3-7Y-EI-300-ROH	Main BD XP13<-->PSU P801
3	+5V, +12V supply to Main BD	TJC3-12Y-EI-200\ROH	Main BD XP14<-->PSU P803
4	Power supply for amplifier	TJC3-4Y-EI-200\ROH	Main BD XP15<-->PSU P802
5	Buttons	TJC10T-3Y-850-P	Main BD XP3 <--> Key BD XPK01
6	LED & IR	TJC10T-5Y-950-P	Main BD XP2<-->IR &LED BD XPR01
7	Audio out put (R/L)	TJC3H-4Y-800-850-P\ROH	Main BD XP11<-->Speakers
8	Headphone Audio	TJC3T-4Y-300\ROH	Main BD XP8<-->I/O CON BD XP02
9	Serial data	TJC10T-4Y-300\ROH	Main BD XP5<-->I/O CON BD XP03
10	Video/Audio signal	HX-2026C250	Main BD XP6<-->I/O CON BD XP01

Element Confidential

Plasma TV Service Manual

PLX-5002B

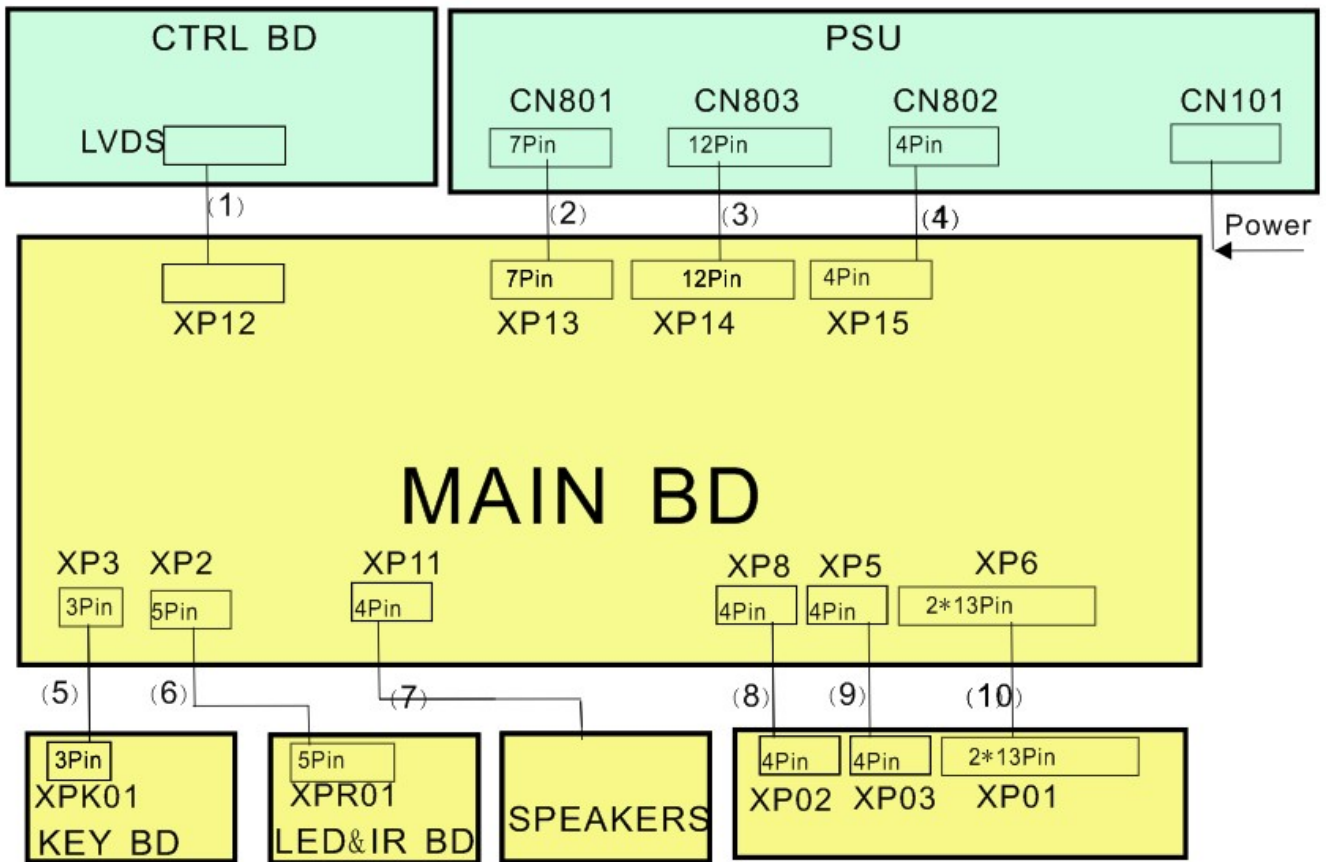

No	DESCRIPTION	SPECIFICATION	NOTE
1	LVDS signal	FF-HX19-11	Main BD XP12<-->CTRL BD
2	5V standby, communication between Main BD and panel	TJC3-7Y-EI-200\ROH	Main BD XP13<-->PSU CN801
3	+5V, +12V supply to Main BD	TJC3-12Y-EI-200\ROH	Main BD XP14<-->PSU CN803
4	Power supply for amplifier	TJC3-4Y-EI-200\ROH	Main BD XP15<-->PSU CN802
5	Buttons	TJC10T-3Y-700-P\ROH	Main BD XP3 <--> Key BD XPK01
6	LED & IR	TJC10T-5Y-950-P	Main BD XP2<-->IR &LED BD XPR01
7	Audio out put (R/L)	TJC3H-4Y-800-850-P\ROH	Main BD XP11<-->Speakers
8	Headphone Audio	TJC3T-4Y-300\ROH	Main BD XP8<-->I/O CON BD XP02
9	Serial data	TJC10T-4Y-300\ROH	Main BD XP5<-->I/O CON BD XP03
10	Video/Audio signal	HX-2026C250	Main BD XP6<-->I/O CON BD XP01

Element Confidential

5. Factory/Service OSD Menu and Adjustment

5.1 To enter the Factory OSD Menu

- a. With factory RC (remote control)
 1. Press “M” button and enter factory mode.
 2. Press “Menu” button and enter factory OSD menu.
 3. Press “CH+”/“CH-” button select the function menu, press “VOL+”/“VOL-” enter the selected function menu. Press “VOL+”/“VOL-” button adjust values in the menu.
- b. With user’s RC
 1. Power TV On
 2. Press Menu button and call up User OSD Menu
 3. Select Audio-> Balance
 4. Enter 0->5->3 ->2 in sequence.
Note: If necessary, re-do number keys.
 5. Factory OSD appears.
 6. Press Menu again and leave the factory OSD.

5.2 Factory OSD Menu

5.2.1 White Balance

Note: Different source has different WB values. Before adjusting, please change to desired source.

Auto Color

	Item	Default	Options	Notes
1	ADC VGA			For VGA source
2	ADC HDTV			For Component Video

5.2.2 Factory Option

	Item	Default	Options	Notes
1	MODE	M	M, U	M-Can enter factory mode with factory RC or user RC. U-Can enter factory mode only with user’ s RC.

Note: MODE “M” is only used for factory production.

Plasma TV Service Manual

5.2.3 Version Info

	Item	Default	Options	Note
1	Version			Software version
2	Date	—		The date of current version

Note: Software version info of the TV, readable only.

5.2.4 Clear the EEPROM

Item	Meaning	Note
1	Clear partly	WB data、Auto Color data
2	Clear completely	

Note: The factory menu date varies according to different sources. In case changing the factory data by error, you can choose to “clear the EEPROM”, by which you can resume the default value.

To clear the EEPROM:

- Select the button “Clear All” .
- Press VOL+ button to clear the EEPROM data.
- Wait for 5 seconds, close the OSD menu.
- Restart the TV.

5.3 Designer Menu

5.3.1 Video Mode

Standard:

	TV	AV	S-Video	Component	VGA	HDMI
R Gain	0	0	0	1	0	0
G Gain	0	0	0	2	-1	2
B Gain	-7	-7	-7	-4	-7	-8

Note: For PHD5039NUS, HDMI date of Standard mode is: 0 0 -8

Offset:

	TV	AV	S-Video	Component	VGA	HDMI
R Gain	-2	-2	-2	-1	-2	-1
G Gain	-2	-2	-2	1	-1	-3
B Gain	6	6	6	7	7	9

Note: For PHD5039NUS, HDMI Offset date is : -1 -1 9

Plasma TV Service Manual

Cool:

	TV	AV	S-Video	Component	VGA	HDMI
R Gain	-3	-3	-3	-4	-2	-3
G Gain	0	0	0	0	-2	0
B Gain	0	0	0	0	-1	-1

Warm:

	TV	AV	S-Video	Component	VGA	HDMI
R Gain	14	14	14	11	9	14
G Gain	12	12	12	7	6	9
B Gain	-12	-12	-12	-17	-19	-17

5.3.2 Video Curve:

	TV	AV	S-Video	Component	VGA	HDMI
Bright Max	620	620	620	700	660	670
Bright Min	0	0	0	0	0	0
Bright Mid	480	480	480	540	530	540
Contrast Max	600	600	600	570	570	570
Contrast Min	0	0	0	0	0	0
Contrast Mid	500	500	500	470	470	470
Saturation Max	600	600	600	600	600	600
Saturation Min	0	0	0	0	0	0
Saturation Mid	500	500	500	500	500	500
Hue Max	1000	1000	1000	1000	1000	1000
Hue Min	0	0	0	0	0	0
Hue Mid	474	474	474	474	474	474

5.3.3 Picture Mode

	TV	AV	S-Video	Component	VGA	HDMI
Vivid Bright	65	65	65	65	60	65
Vivid Contrast	65	65	65	65	60	65
Vivid Saturation	65	65	65	65	60	65
Std Bright	50	50	50	50	50	50
Std Contrast	50	50	50	50	50	50
Std Saturation	50	50	50	50	50	50

Element Confidential

Plasma TV Service Manual

Movie Bright	40	40	40	40	40	40
Movie Contrast	40	40	40	40	40	40
Movie Saturation	40	40	40	40	40	40

5.3.4 Volume Curve:

	Min	20	Mid	80	Max
Data	0	18	24	34	46

Note: Set Downmix to “Lt/Rt”.


6. Software Upgrading

The software is upgraded by a burning tool-MtkTool, which can burn the program file *.bin to the main board of the unit.

6.1 Get ready for upgrading

6.1.1 Install the driver

Double click the icon  , install the driver.

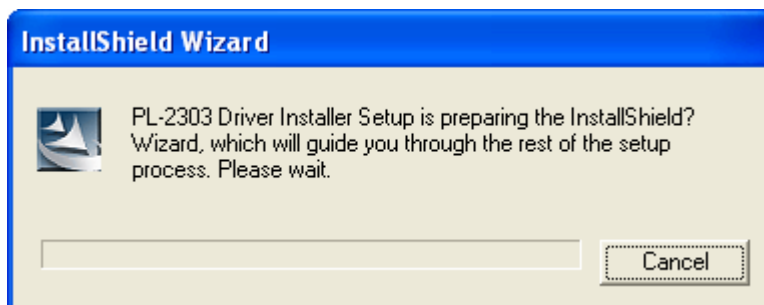

Select the default value, the driver will be installed step by step.

6.1.2 Hardware connecting

Connect the unit to your pc with a USB-to-serial port cable. USB port connects to your pc, and serial port to the TV's RS232 port.





USB connector: to PC.

Serial connector: to TV's RS232 port.

Plasma TV Service Manual

For the first connecting, the pc will recognize and automatically install the USB device. The process is just like the installation of a mini disk, see the following picture.

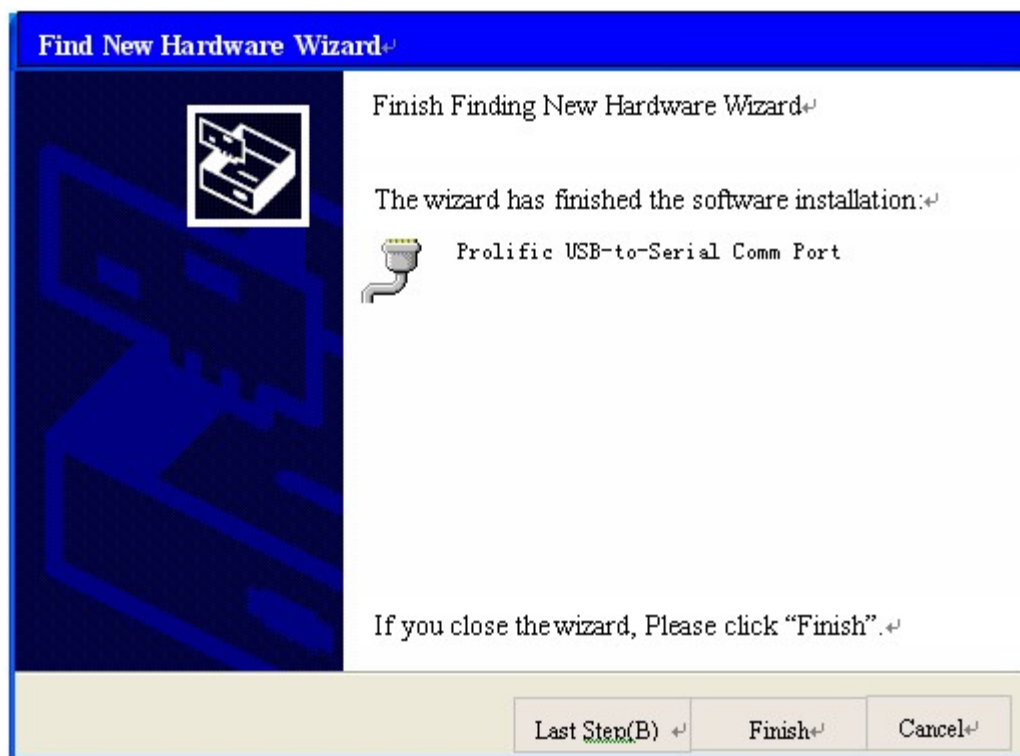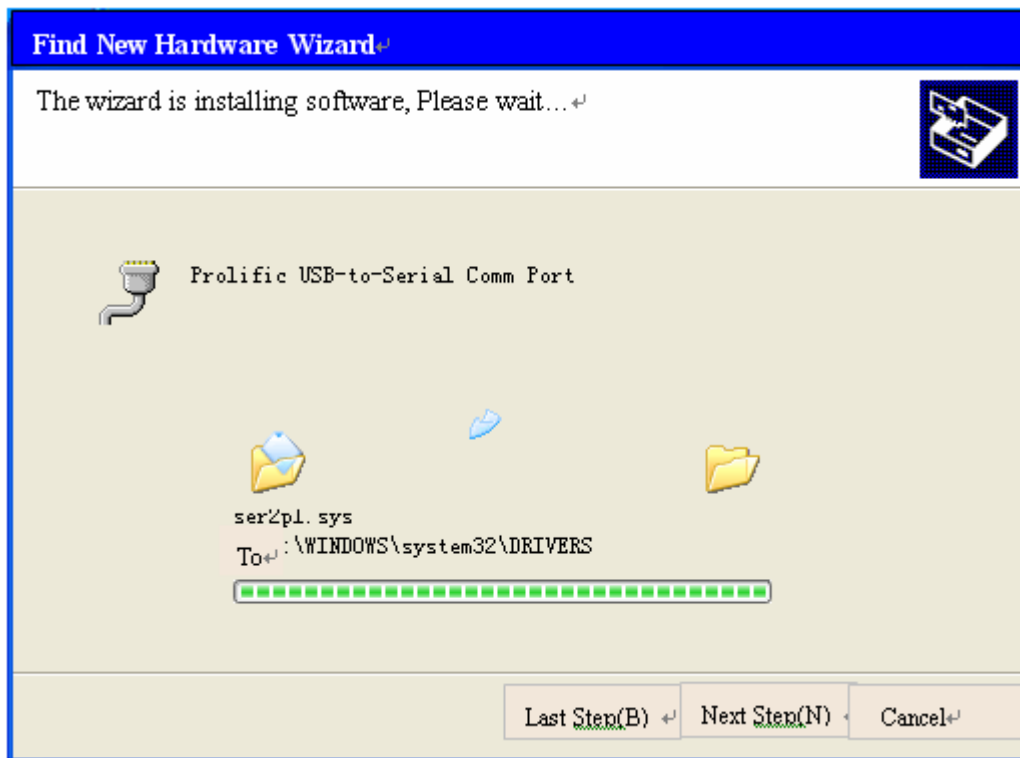

6.2 Upgrading with the MtkTool

MTKtool is a green program needing no installation. It is saved in the folder



MTKTOOL_20061027

. There are five folders/files in this folder altogether.



MtkLog



flashinf.ini
配置设置
17 KB



MtkTool.exe



MtkTool.ini
配置设置
1 KB



Shortcut to
MtkTool.exe
快捷方式


The MtkTool using log is restored in the MtkLog folder. It records the running time and date whenever the tool is used. The log will be a txt file named by the date and time.



MtkTool.exe


After connecting the TV with your PC, double click icon, open the MtkTool.

If following error appears, it means the related port is not set properly.

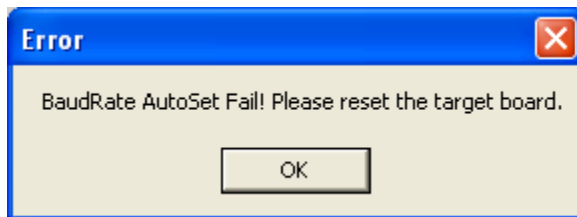

Ignore these errors, click “Confirm” and enter the MtkTool main interface, see the following picture.

Plasma TV Service Manual


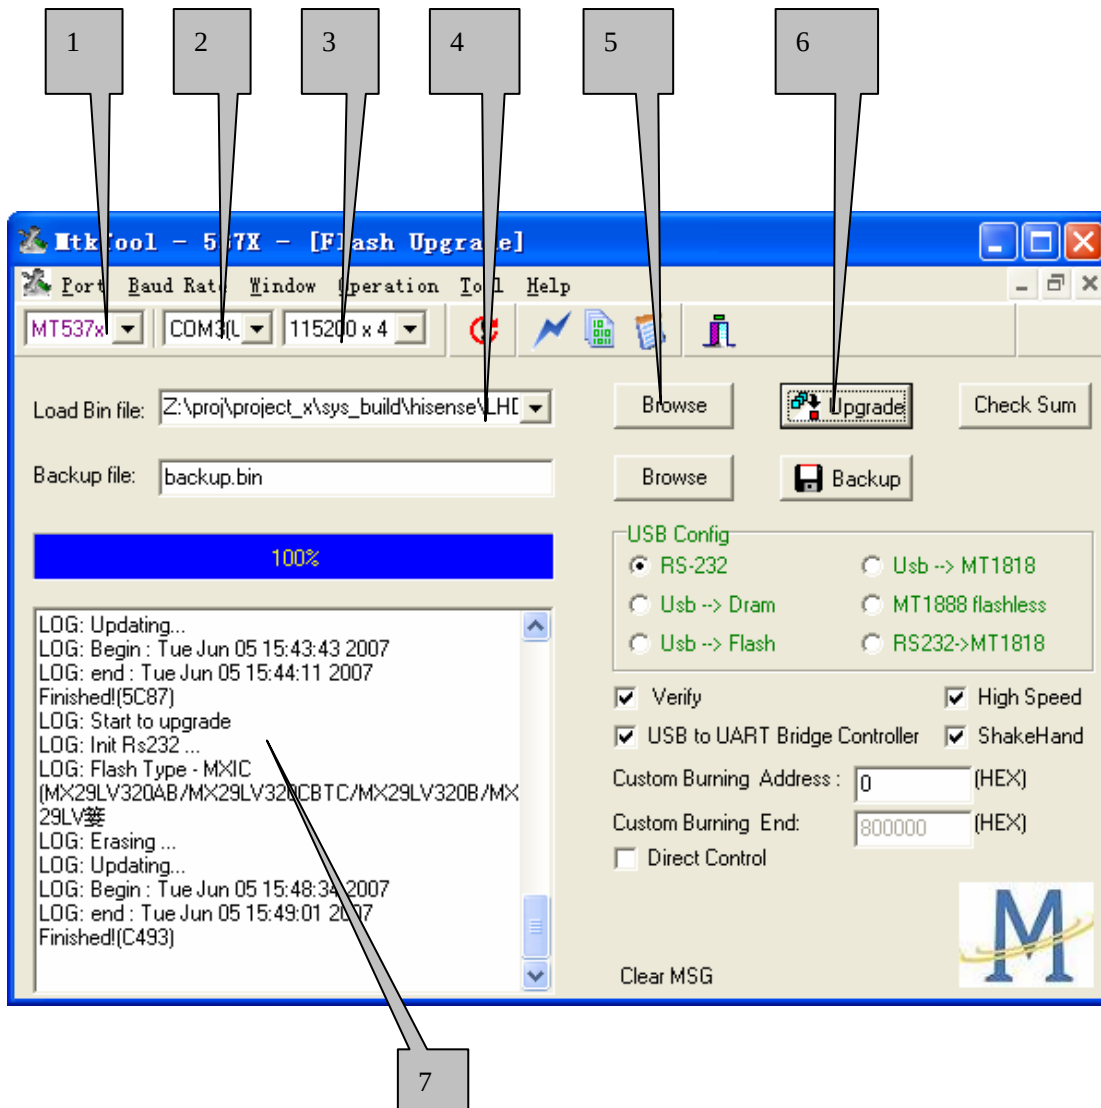


- 1—Flash chip model (for PLX-4202B and PLX-5002B, it will be MT537X).
- 2—The port through which the PC communicate with the chip.
- 3—The communicating baud rate
- 4—The new program file (*.bin) for upgrading.
- 5—Click this button can select the *.bin file to be used for upgrading.
- 6—Click to start upgrading.
- 7—Information displaying window.

Setting the communication port:

Open “Device Manager” and find which port is connected with the TV. In above picture, COM2 is connected to the TV; so, select “COM2” in the MtkTool main interface. Select the right baud rate according to chip model. For this unit (chip model is MT5371), select 115200×2.

Plasma TV Service Manual

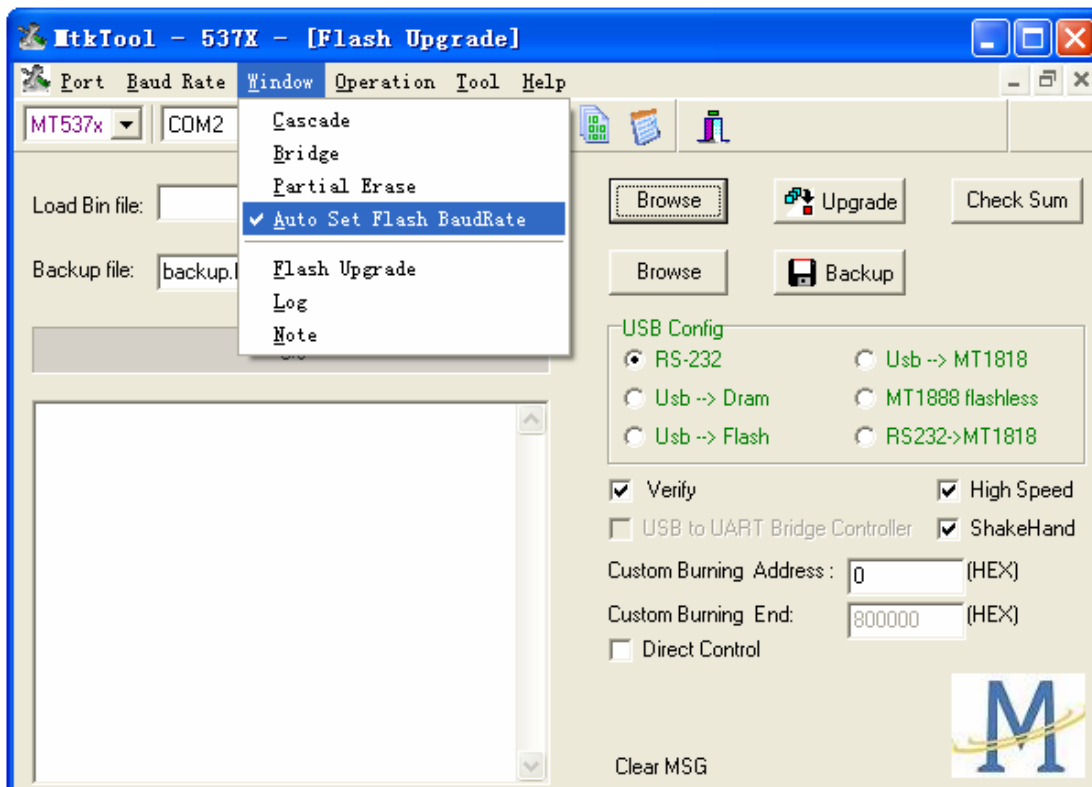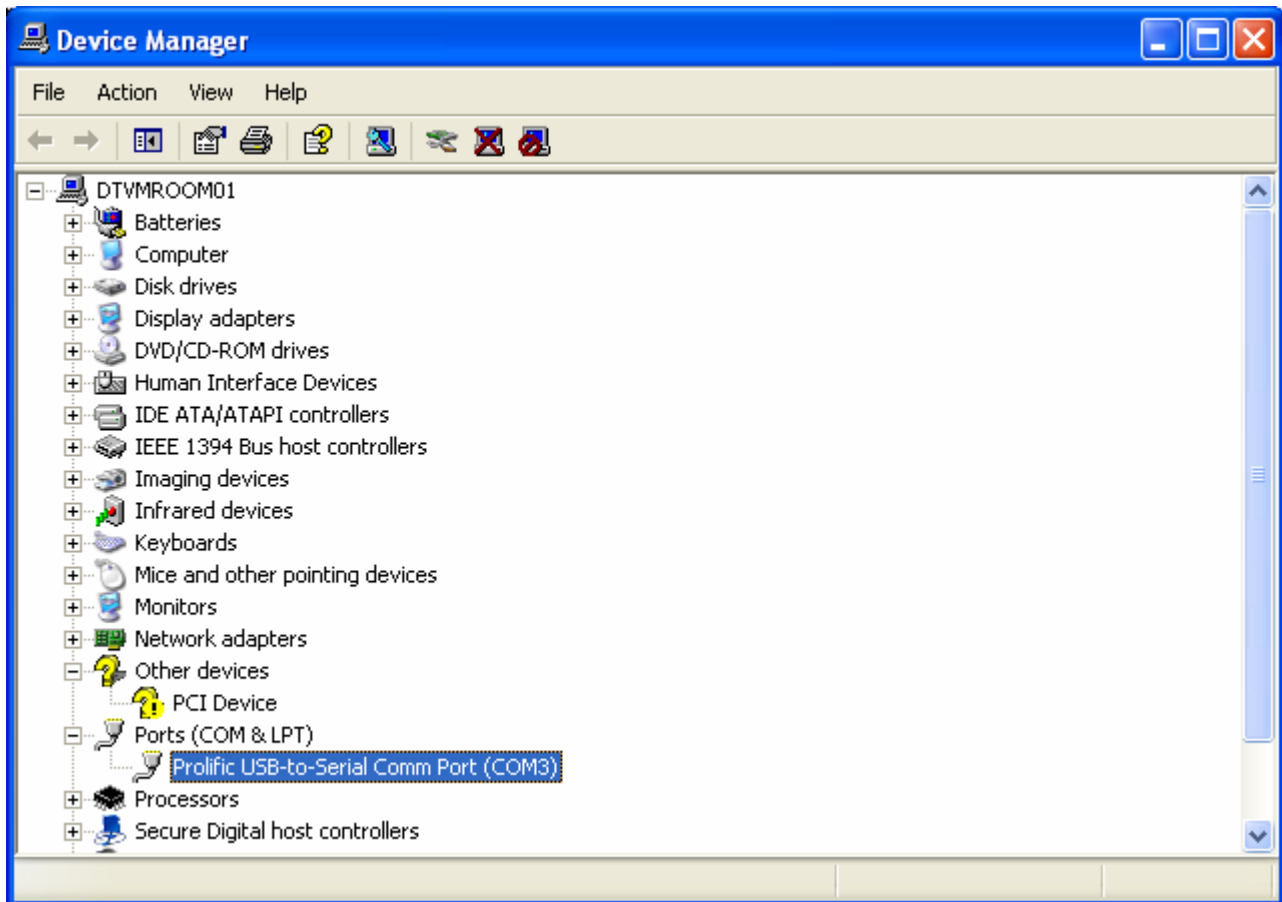


Note: Where or not click the “Auto Set Flash Baud Rate” in the “window” menu depends on the

Element Confidential

chip type. If the flash chip does not support high speed transport, do not select this option; otherwise, reserve the selected mood. For these two units here, click off “Auto Set Flash Baud Rate”.


Click “Browse” button (5), find the upgrading program file, and select it. Press “Upgrade” button and start upgrading.

The following interface appears on the screen- the word “Finished” shows in the information displaying window, indicating upgrading successfully.

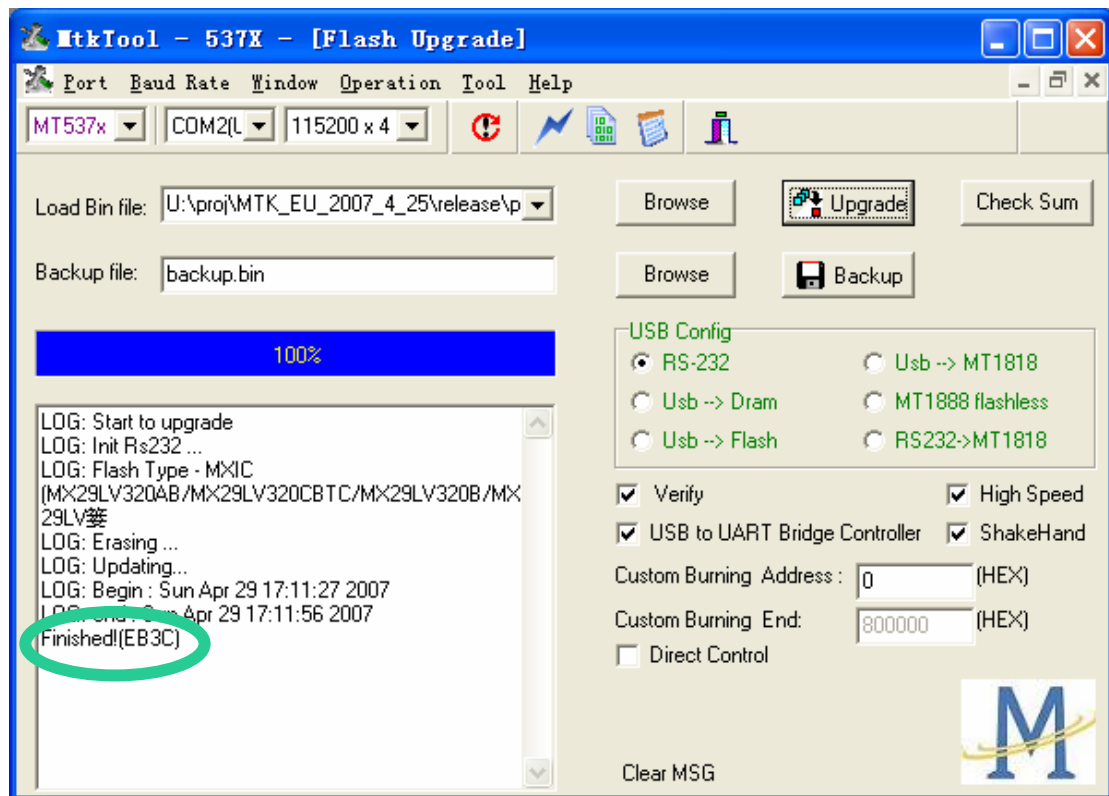


7. Troubleshooting


7.1 Troubleshooting for Remote Control

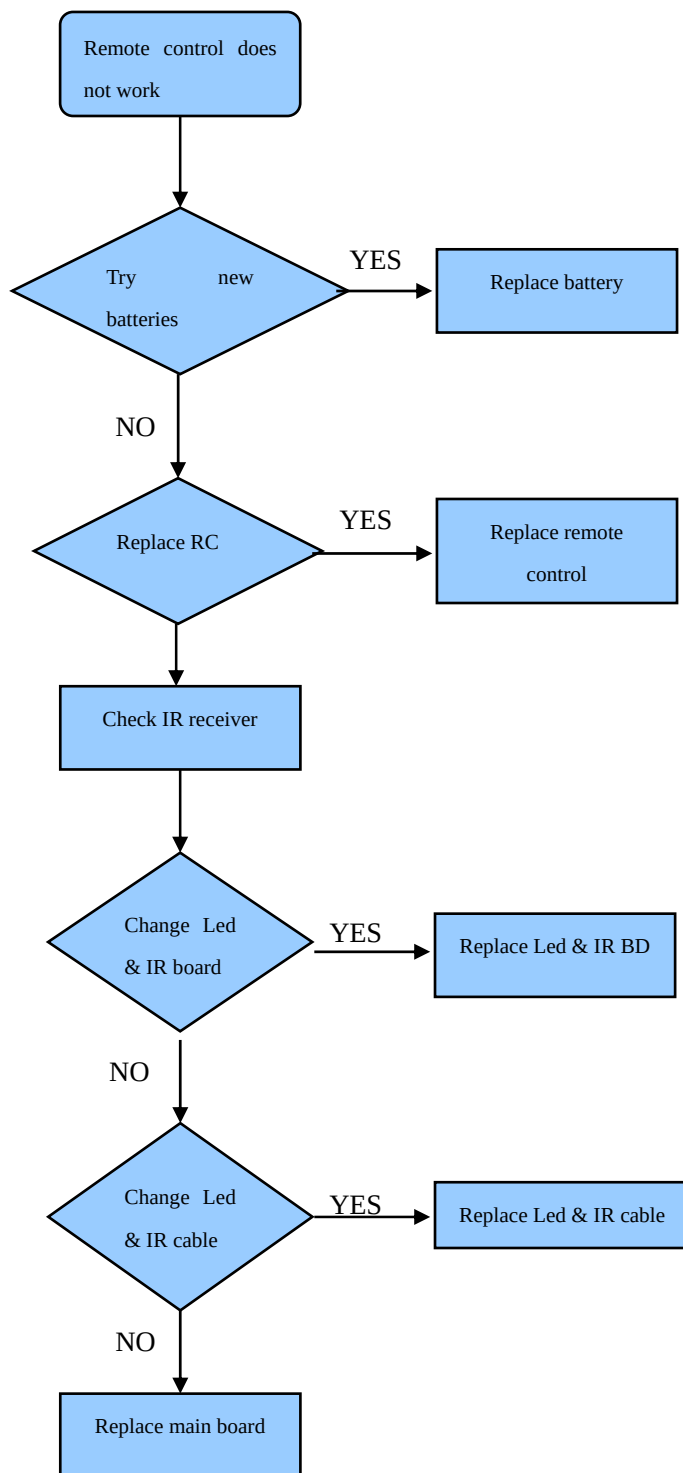


7.2 Troubleshooting for Function Key

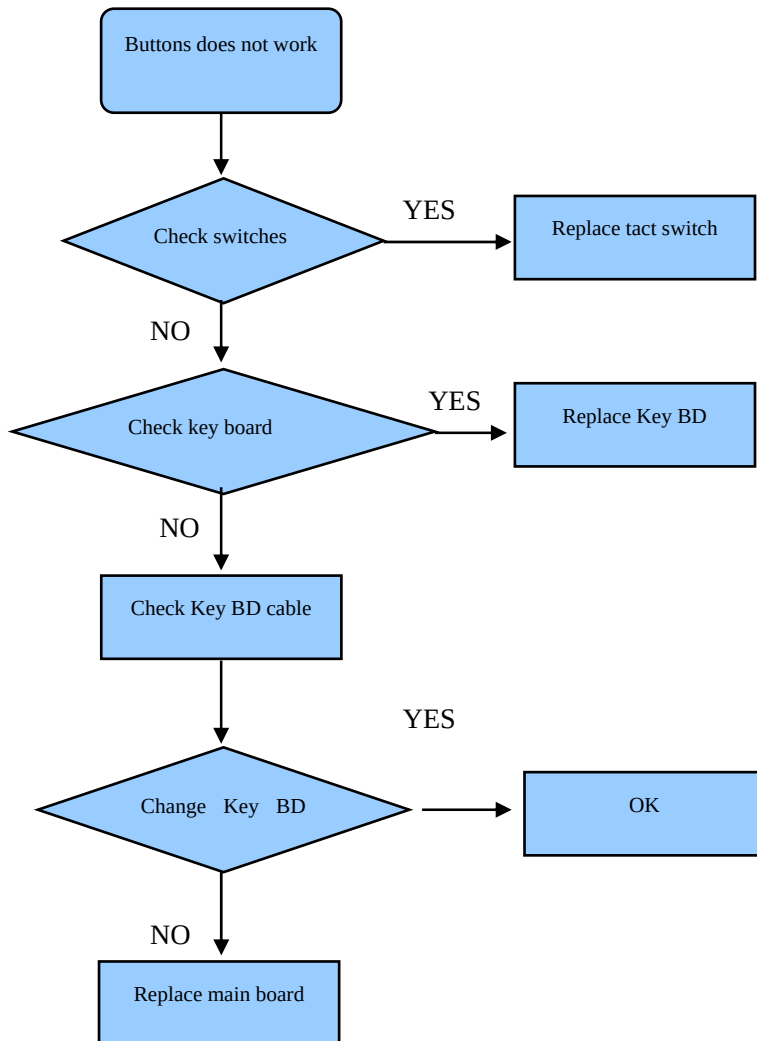


7.3 TV won't Power On

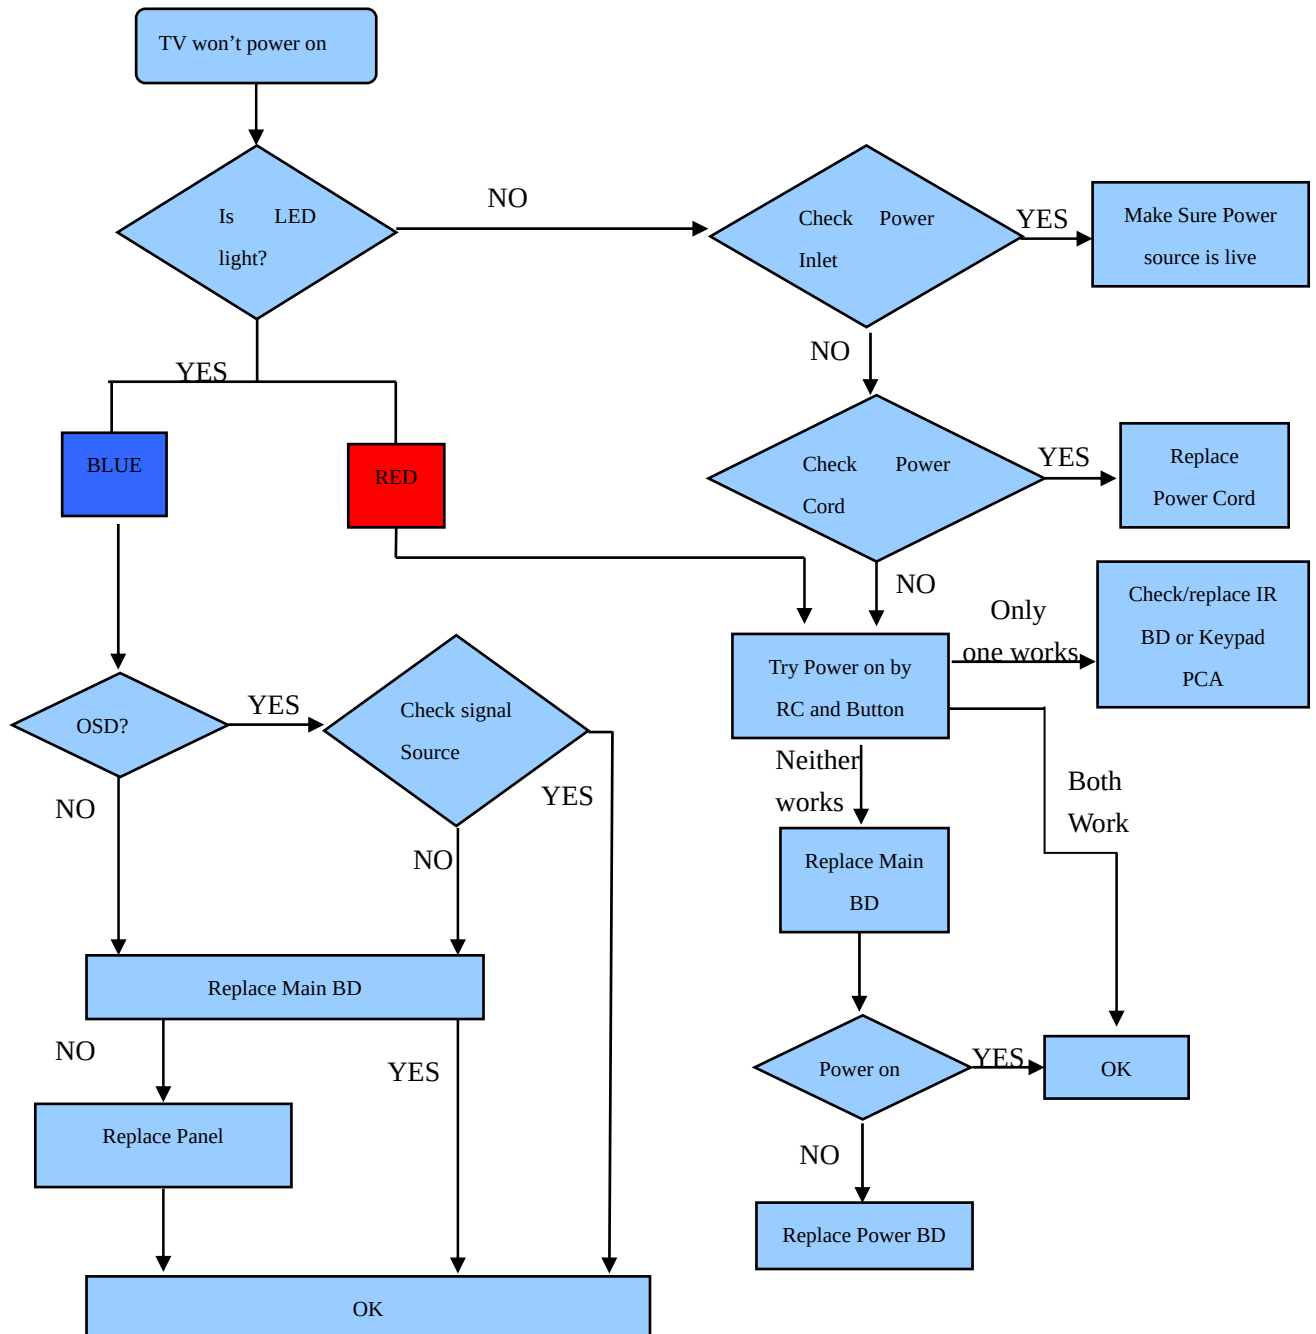

7.4 Troubleshooting for Audio

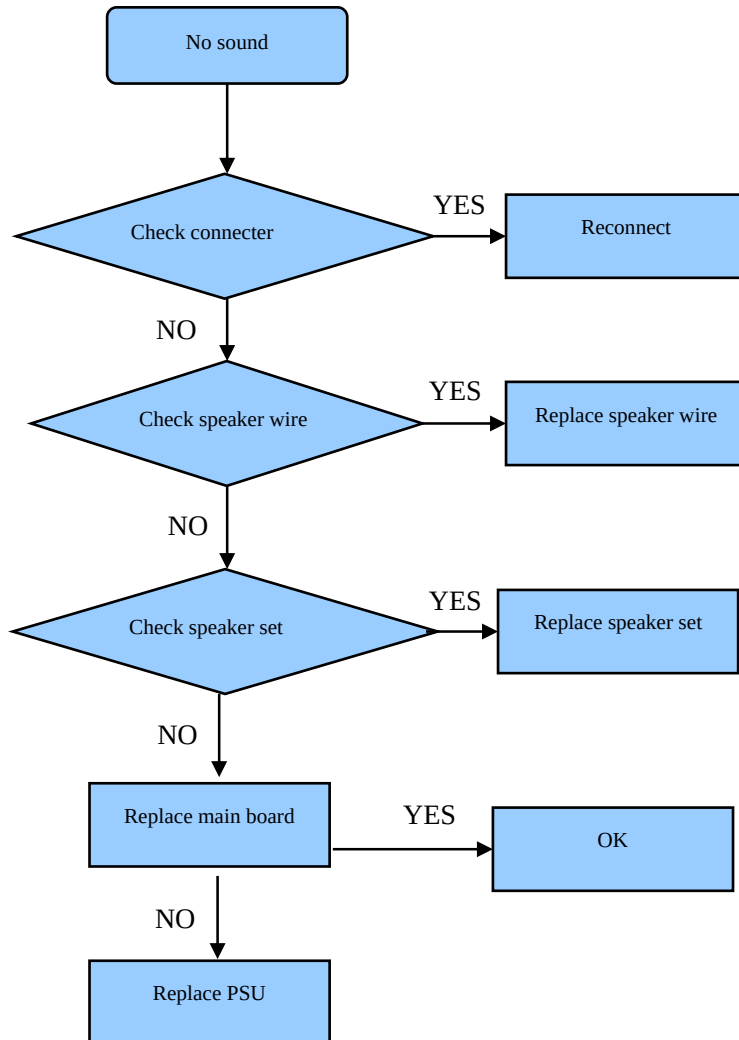


7.5 Troubleshooting for TV/VGA/HDMI/YPbPr input

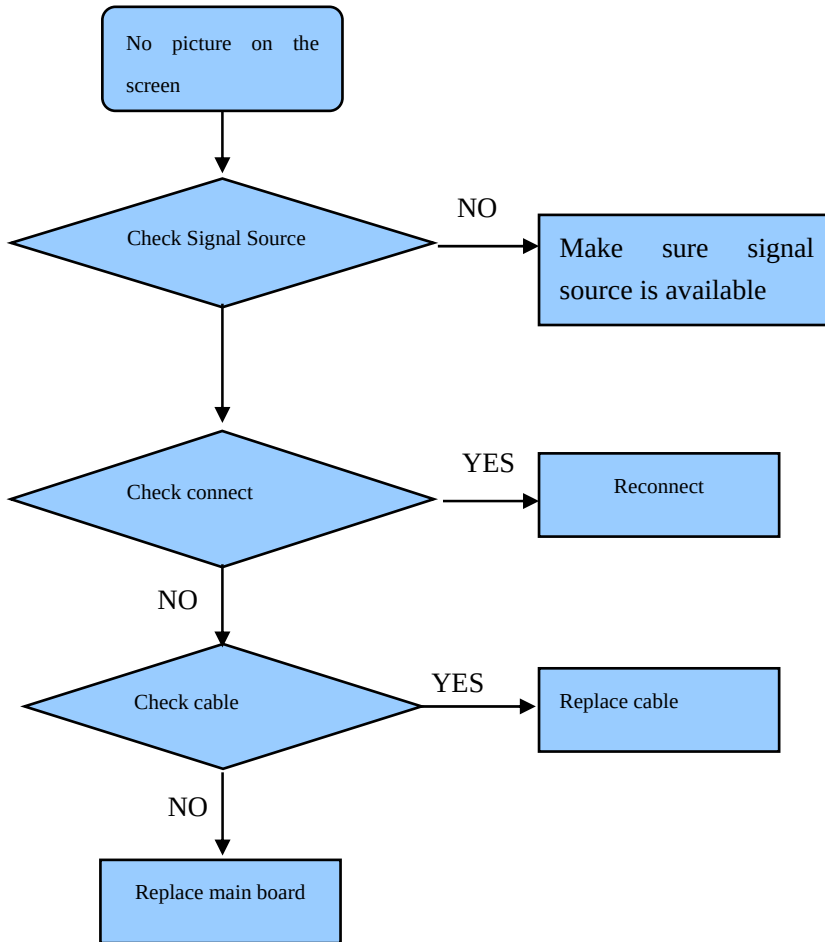


Note: If present signal source is VGA (1024×768) and the main power is turn off (such as by accident), there is a possibility that the TV will not turn on. In this case, please disconnect the VGA source from the TV unit, then power on again. Connect the VGA source after the TV works normally,

7.6 Troubleshooting for Video/S-Video input

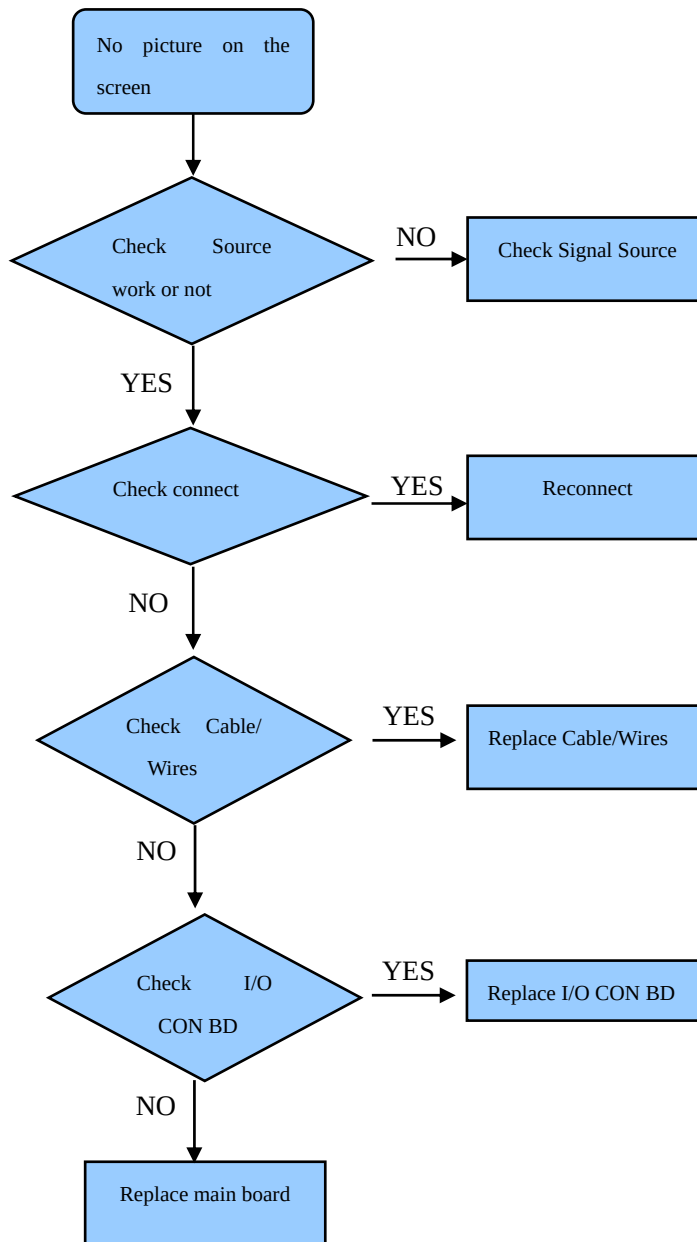

8. Explode View and BOM

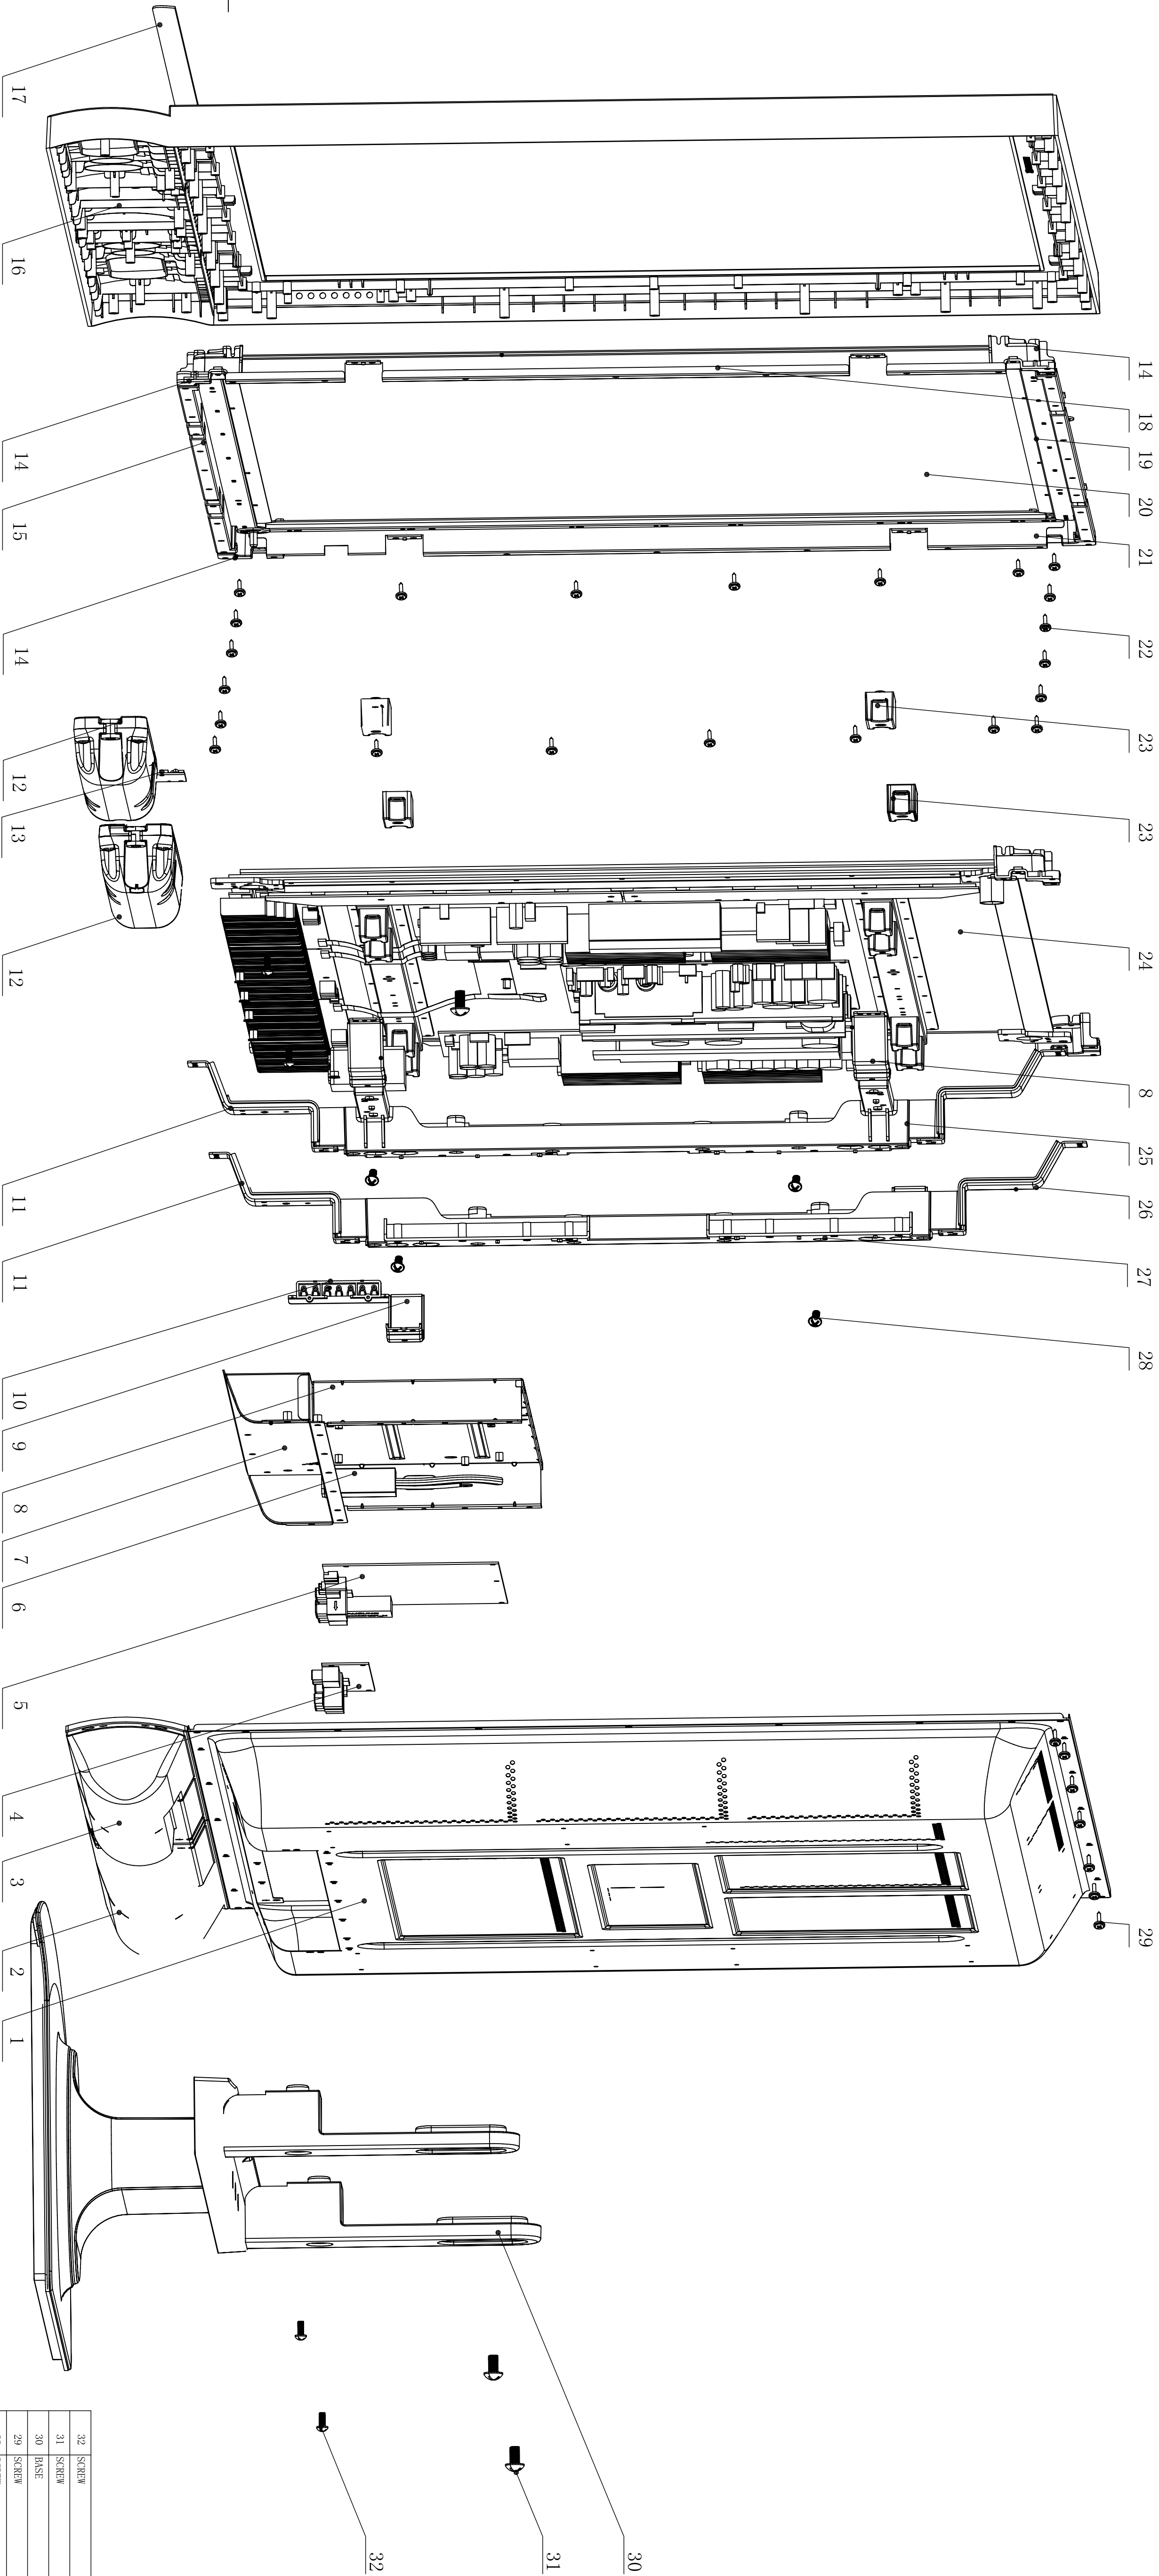

32	SCREW	GB/T318-2000 M8x15	2	
31	SCREW	GB/T318-2000 M8x12	2	
30	BASE	P2206	1	
29	SCREW	S12924-87 ST4X12P	36	
28	SCREW	GB818-T-2000 M3X12	8	
27	BRACKET	RSAG2.028.683	1	
26	BRACKET_U	RSAG2.028.879	2	
25	BRACKET	RSAG2.028.831	1	
24	PANEL	P9P50X4	1	
23	BRACKET	RSAG2.028.408	4	
22	SCREW	S12925-87 ST3X10C	38	
21	FRONT CABINET FRAME_R	RSAG2.048.070	1	
20	FILTER GLASS	P9510M4-05	1	
19	FRONT CABINET FRAME_U	RSAG2.048.067	1	
18	FRONT CABINET FRAME_L	RSAG2.048.069	1	
17	DECOMITE BRACKET	RSAG2.647.213	1	
16	FRONT CABINET	RSAG2.074.343	1	
15	FRONT CABINET FRAME_D	RSAG2.028.088	1	
14	BRACKET(CORNER BRACKET)	RSAG2.028.799	4	
13	BELOW and KEY CONTROL ROOF/PANEL	W12.908.1209+2	1	
12	SOUND BOX ASB	W62.834.002	2	
11	BRACKET (DOWN)	RSAG2.150.174	2	
10	BRACKET	RSAG2.078.407	1	
9	BRACKET (LEFT and RIGHT)	RSAG2.028.691	4	
8	SIGNAL BRACKET	RSAG2.150.186	1	
7	AV BRACKET	RSAG2.150.187	1	
6	AC FILTER	LG PANNEL	1	
5	MAIN BOARD	RSAG2.908.1072	1	
4	PORT BOARD CABLE/PANEL	RSAG2.908.1080	1	
3	SPEAKER REAR CABINET (RIGHT)	RSAG2.013.091	1	
2	SPEAKER REAR CABINET (LEFT)	RSAG2.013.090	1	
1	REAR CABINET	RSAG2.074.373	1	
PC NO	PART NAME	PART NUMBER	QTY	DESCRIPTIONS

RSAG2.025.690			
总装图			
PLX-5002B			
更改审核表	更改序号	备注	日期
设计			
工艺			
标准化			
批准			

制图：

审核：

第 1 页 共 1 页

青岛海信电器股份有限公司

图式(2)

零件号	
图例说明	
装配符号	
装配符号	
日期	
姓名	

9. Schematic circuit diagram

01. INDEX
02. POWER
03. TUNER
04. MT5112 ASIC
05. MT5372 ASIC
06. MT5372 BYPASS CAP.
07. MT5372 PERIPHERAL
08. DDR1 MEMORY
09. AV/SV & YPbPr Input
10. VGA INPUT
11. HDMI INPUT
12. AUDIO CODEC & Amplifier
13. LVDS&CRT OUTPUT&BACKLIGHT

NAME	TYPE	DEVICE
+12V	POWER +12V	POWER SUPPLY
+5V	POWER +5V	POWER SUPPLY
+5VSB	POWER +5V	POWER SUPPLY
DV33SB	POWER +3.3V	STANDBY POWER
+5V_TUENR	POWER +5V	TUNER POWER
DV33_DM	POWER +3.3V	MT5112 POWER AND ITS PERIPHERAL
DV18_DM	POWER +1.6V	MT5112 POWER
DV33	POWER +3.3V	MT5372 POWER AND ITS PERIPHERAL
AV33	POWER +3.3V	MT5372 ANALOG POWER
DV26_DDR	POWER +2.6V	MT5372 DDR POWER
AV15	POWER +1.5V	MT5372 VIDEO FRONT-END POWER
DV12	POWER +1.28V	MT5372 POWER
AV12	POWER +1.28V	MT5372 ANALOG POWER

OPWSET	
OPTCTRL0	
OPTCTRL1	
OPTCTRL2	
OPTCTRL4	
OPTCTRL5	
OPTCTRL7	
OUTVAL0	AVCC, BSWP1
OPWMI	
ORB	
ORCLK	TRN
OUTX	
SMCFP	
OCXK	
MCCLK	
OSDVAL0	
OSCL0	
OSDA1	
OSCL1	
OPR0	
OPR1	
OPR2	
OPR3	
OPR4	
OPR5	
OPR6	
OPR7	
OPR8	
OPR9	
OPR10	
OPR11	
OPR12	
OPR13	
OPR14	
OPR15	
OPR16	
OPR17	
OPR18	
OPR19	
OPR20	
OPR21	
OPR22	
OPR23	
OPR24	
OPR25	
OPR26	
OPR27	
OPR28	
OPR29	
OPR30	
OPR31	
OPR32	
OPR33	
OPR34	
OPR35	
OPR36	
OPR37	
OPR38	
OPR39	
OPR40	
OPR41	
OPR42	
OPR43	
OPR44	
OPR45	
OPR46	
OPR47	
OPR48	
OPR49	
OPR50	
OPR51	
OPR52	
OPR53	
OPR54	
OPR55	
OPR56	
OPR57	
OPR58	
OPR59	
OPR60	
OPR61	
OPR62	
OPR63	
OPR64	
OPR65	
OPR66	
OPR67	
OPR68	
OPR69	
OPR70	
OPR71	
OPR72	
OPR73	
OPR74	
OPR75	
OPR76	
OPR77	
OPR78	
OPR79	
OPR80	
OPR81	
OPR82	
OPR83	
OPR84	
OPR85	
OPR86	
OPR87	
OPR88	
OPR89	
OPR90	
OPR91	
OPR92	
OPR93	
OPR94	
OPR95	
OPR96	
OPR97	
OPR98	
OPR99	
OPR100	
OPR101	
OPR102	
OPR103	
OPR104	
OPR105	
OPR106	
OPR107	
OPR108	
OPR109	
OPR110	
OPR111	
OPR112	
OPR113	
OPR114	
OPR115	
OPR116	
OPR117	
OPR118	
OPR119	
OPR120	
OPR121	
OPR122	
OPR123	
OPR124	
OPR125	
OPR126	
OPR127	
OPR128	
OPR129	
OPR130	
OPR131	
OPR132	
OPR133	
OPR134	
OPR135	
OPR136	
OPR137	
OPR138	
OPR139	
OPR140	
OPR141	
OPR142	
OPR143	
OPR144	
OPR145	
OPR146	
OPR147	
OPR148	
OPR149	
OPR150	
OPR151	
OPR152	
OPR153	
OPR154	
OPR155	
OPR156	
OPR157	
OPR158	
OPR159	
OPR160	
OPR161	
OPR162	
OPR163	
OPR164	
OPR165	
OPR166	
OPR167	
OPR168	
OPR169	
OPR170	
OPR171	
OPR172	
OPR173	
OPR174	
OPR175	
OPR176	
OPR177	
OPR178	
OPR179	
OPR180	
OPR181	
OPR182	
OPR183	
OPR184	
OPR185	
OPR186	
OPR187	
OPR188	
OPR189	
OPR190	
OPR191	
OPR192	
OPR193	
OPR194	
OPR195	
OPR196	
OPR197	
OPR198	
OPR199	
OPR200	
OPR201	
OPR202	
OPR203	
OPR204	
OPR205	
OPR206	
OPR207	
OPR208	
OPR209	
OPR210	
OPR211	
OPR212	
OPR213	
OPR214	
OPR215	
OP	

```

CVRBSI
CVRBSI
SVD
SCL
AVL_IN1
AVR_IN1
AVL_IN2
AVR_IN2
SOVO
YIP
YIP
YON
PRBP
PRBN
PRBP
PRBN
YBPBPRR_IN
YBPBPRR_IN
SCRT1
YIP
YIN
PRBP
PRBN
PRBP
PRBN
YBPBPRR_IN
YBPBPRR_IN
HPROR_OUT
SHUTDOWN
HPROR_OUT
AVR_CE
CVRBSOUT
AVL_CE
ASPDIE
+5V
SVT
SC1

```

	+5V
	GP
	GN
	BP
	RN
	RP
	SSYNC
	VSXNC
	VGAR_IN
	VGAR_IN
	U_LHD216US_ZB_C_11_HDMI INPUT
	LHD216US_ZB_C_11_HDMI INPUT Send
	+5V
	VSX1
	OSDA1
	OSGL1
	RXC
	RXCIB
	RX0
	RX0IB
	RX1
	RX1IB
	RXC
	RXCIB
	PWR6V
	OCPTRLD
	GPIO_9
	GPIO_16
	GPIO_15
	GPIO_17



	AN3
	OSDA1
	OSCL1
	RXC
	RXCB
	RX0
	RX0B
	RX1
	RX1B
	RX2
	RX2B
	PWR5V
	OPCTRLD
	GPIO_9
	GPIO_16
	GPIO_15
	GPIO_17

	AVL_IN1
	AVL_IN2
	AVR_IN2
	YPPR0R_IN
	YPPR0L_IN
	YPPR1R_IN
	YPPR1L_IN
	VGAL_IN
	VGAR_IN
	AQSDSTAT4
	AQSDSTAT3
	IS2N_DATA
	ADIBCK
	SF_S0A
	+12V
	ADVMCLK
	+5V
	AOHLCK
	OPTCTL7
	AVR_CE
	SF_SCL
	OPTCTL3
	OPTCTL1
	AVL_CE
	HPOR_OUT
	SHUTDOWN
	HPOL_OUT
	+5V




Pinout diagram of the OPTCBL6 connector. The connector has 26 pins, numbered 1 to 26. The labels for the pins are as follows:

- 1: OPTCBL6
- 2: DP60M1
- 3: A7V1
- 4: +VSB
- 5: -V
- 6: A6P
- 7: A1N
- 8: A1P
- 9: A1N
- 10: A2P
- 11: CK2N
- 12: A2N
- 13: CK1P
- 14: CK1N
- 15: A3P
- 16: A3N
- 17: A4P
- 18: A4N
- 19: A5P
- 20: A5N
- 21: A6P
- 22: A6N
- 23: CK2P
- 24: A7P
- 25: A7N
- 26: OPTCBL6 SW

Below the connector is a grey rectangular area containing the text "Cannot open file" and "I Media".






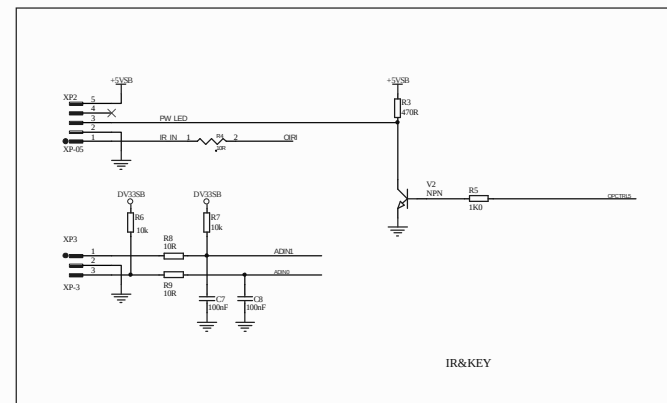
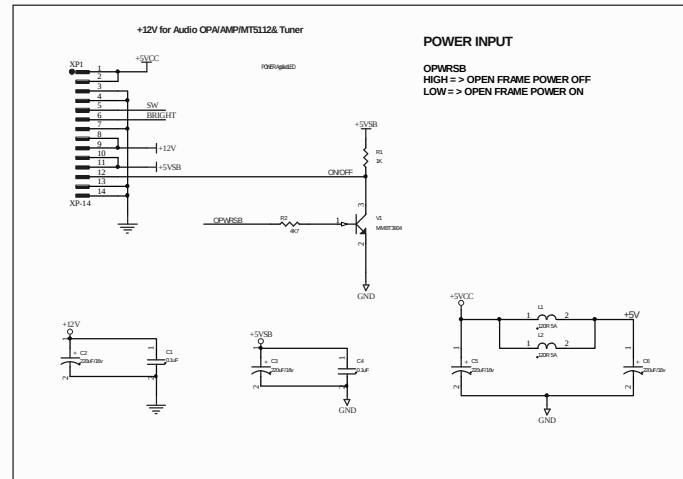



IR&KEY




 
 
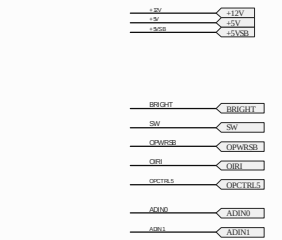





MediaTek Confidential


Cannot open file E:\demo\input\input or V1.5 FOR SINGLE HDMIT2_PRJPCB\image .hmp	MediaTek Inc.		No.52, Innovation Rd.1, SGP, HsinChu City 300 www.mtk.com.tw	
	Title			
	INDEX			
	Size	Document Number	Created	Rev
	6	MT5372_S2DEMO_V1_5	2/27/2006	1.1
Editor	Drawn	Check	Appr	

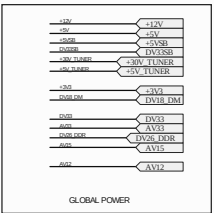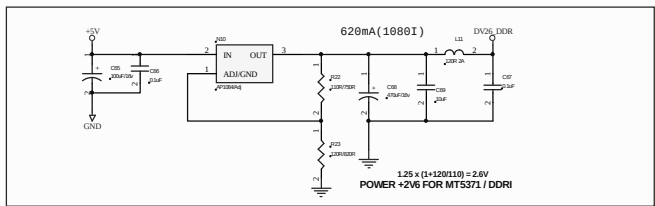
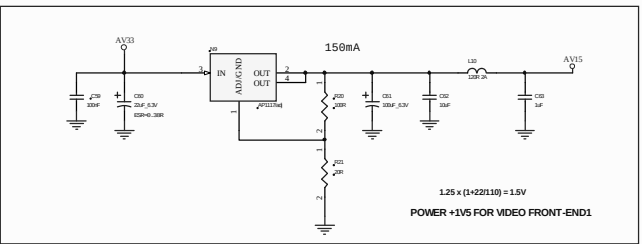
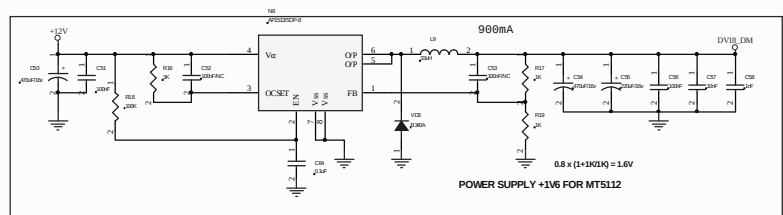
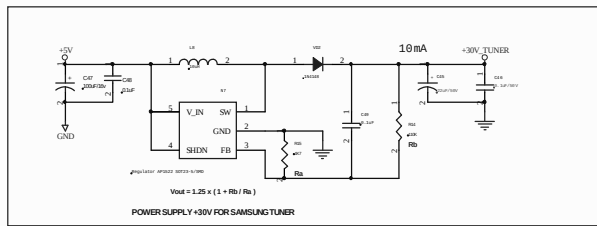
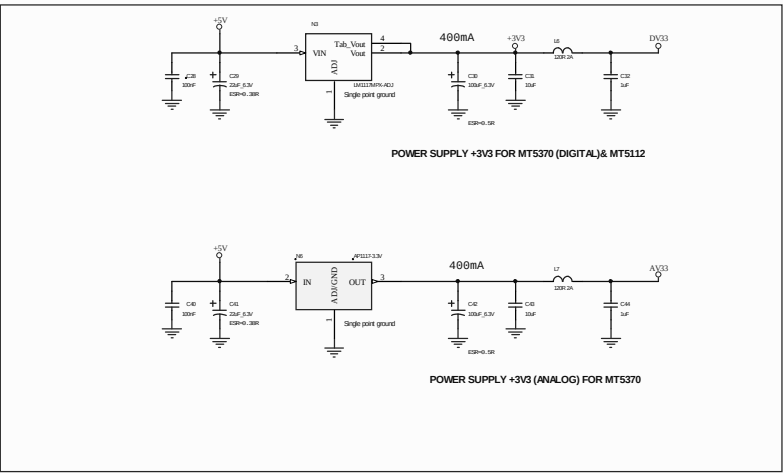
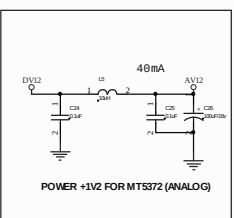


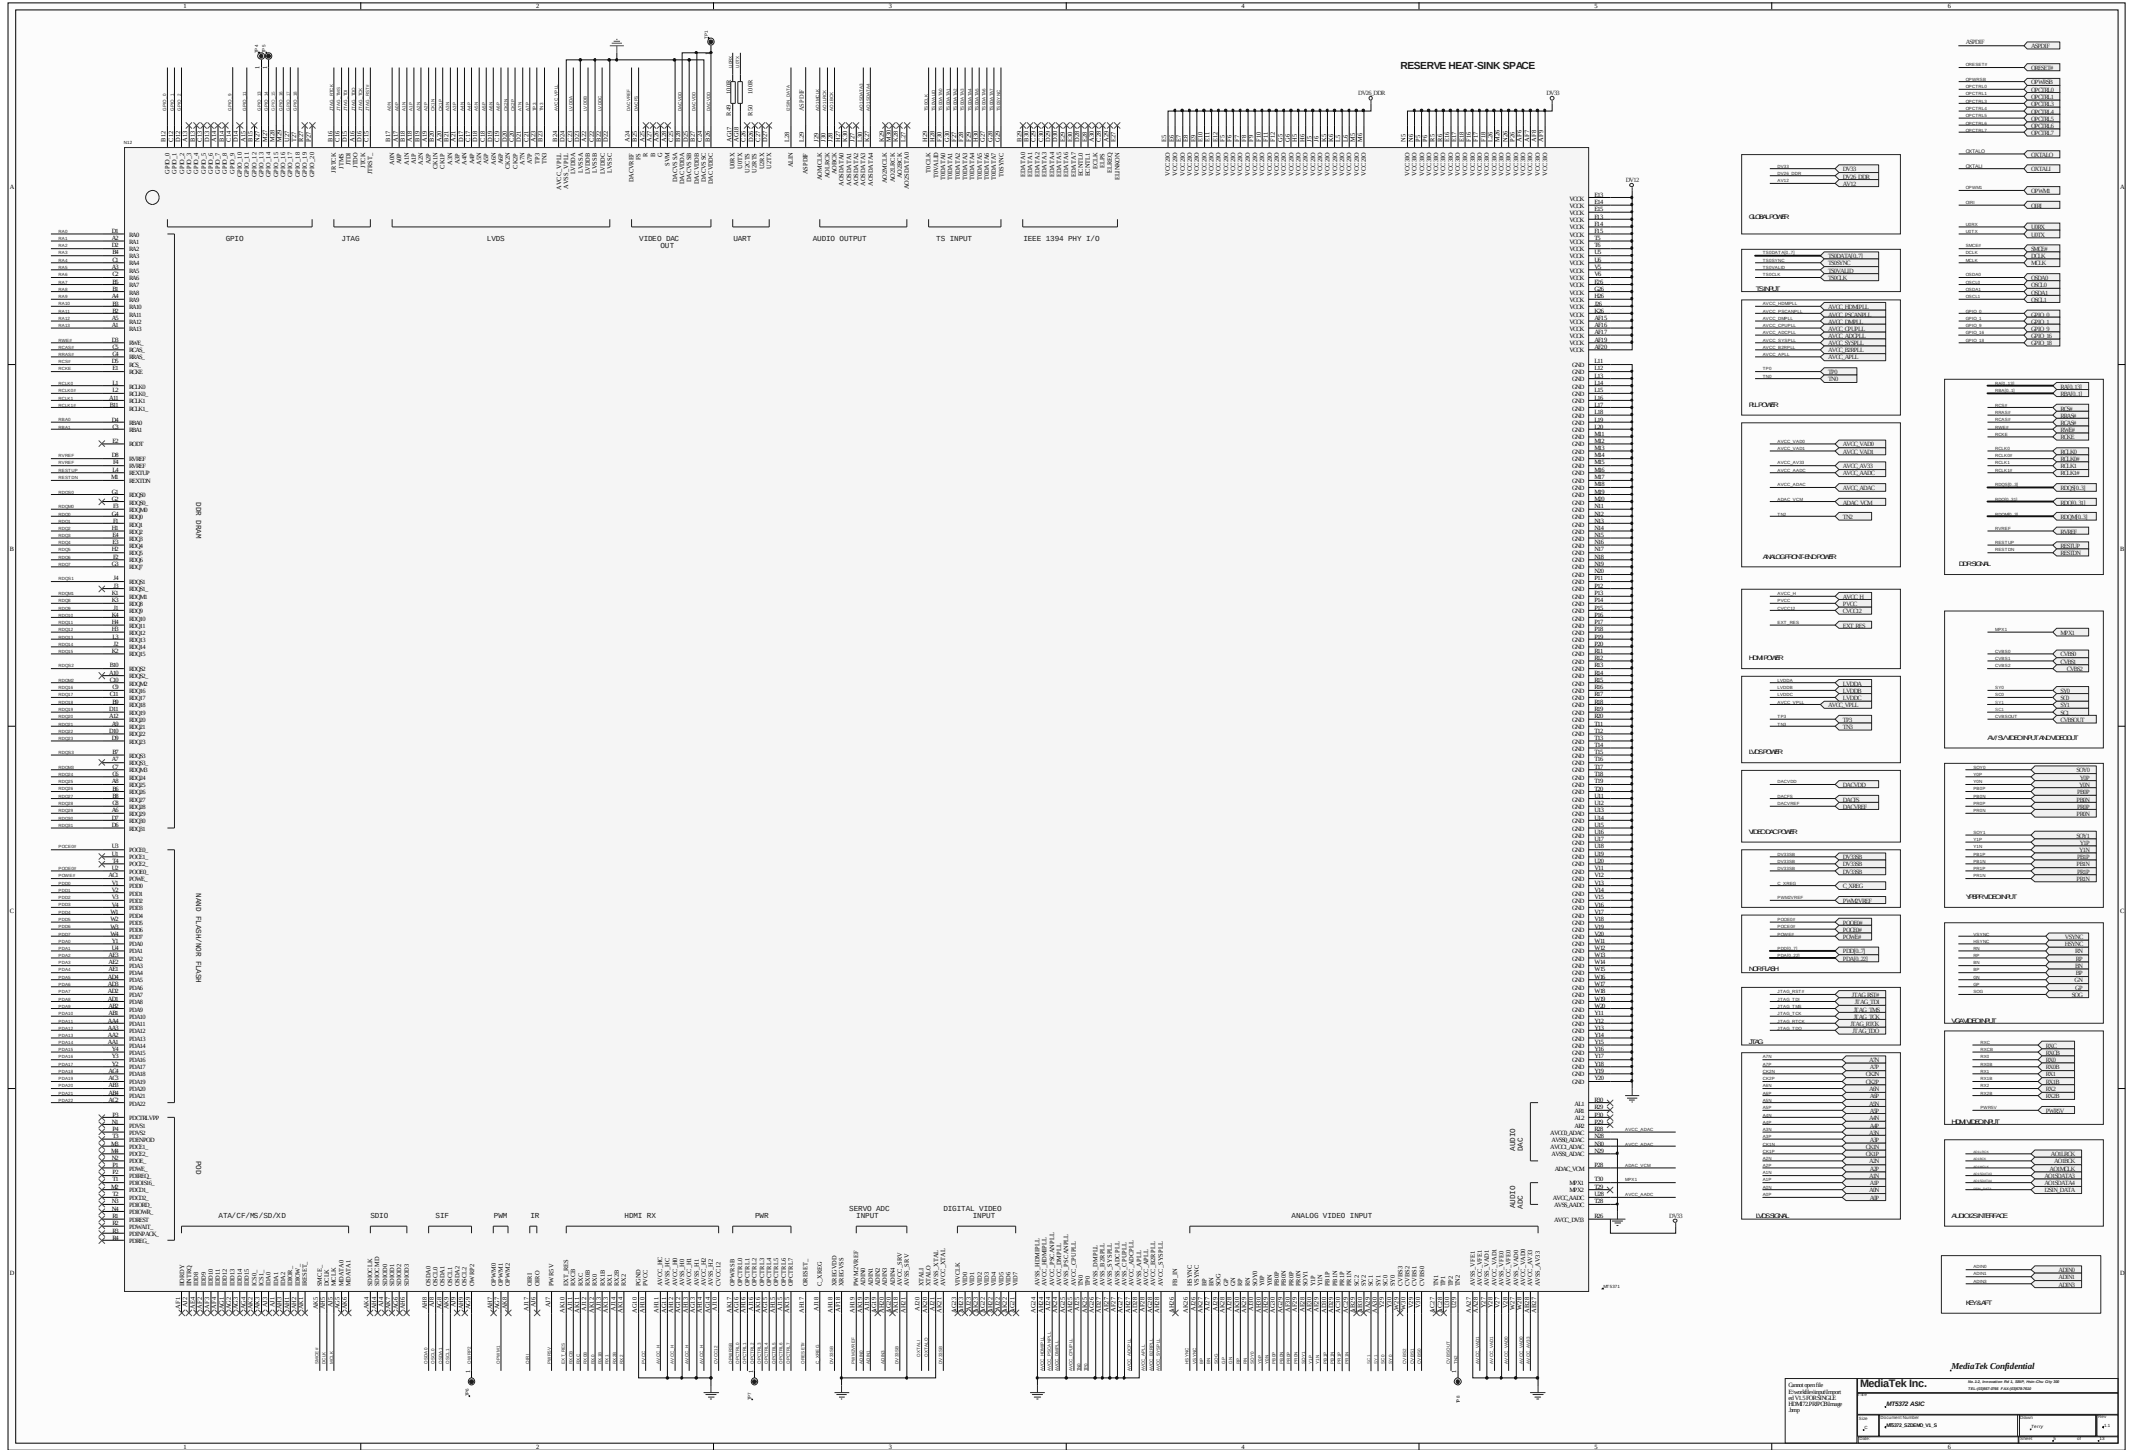

 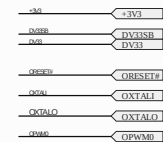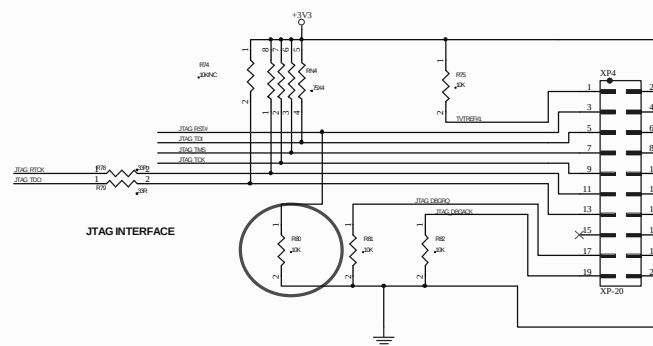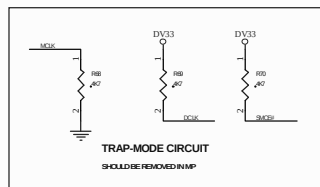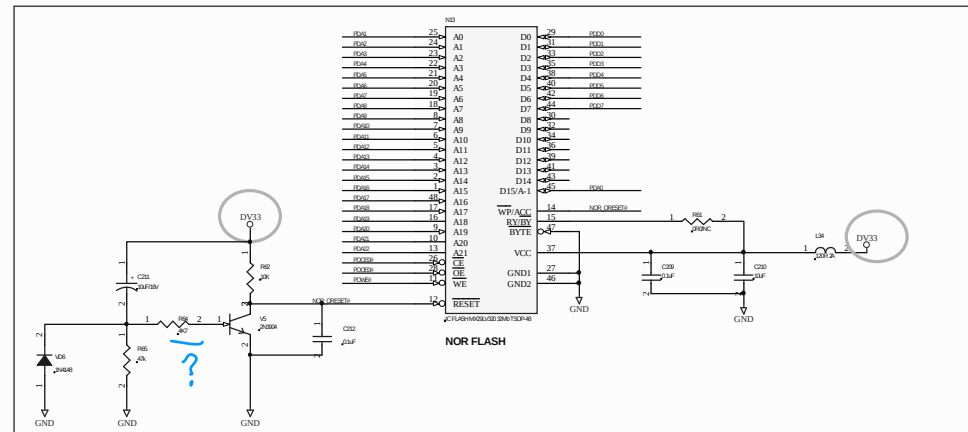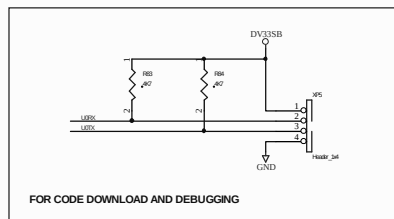

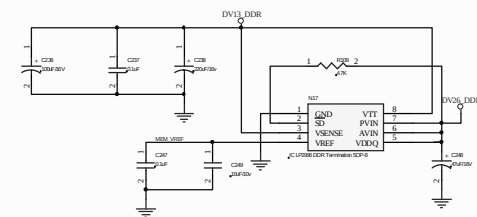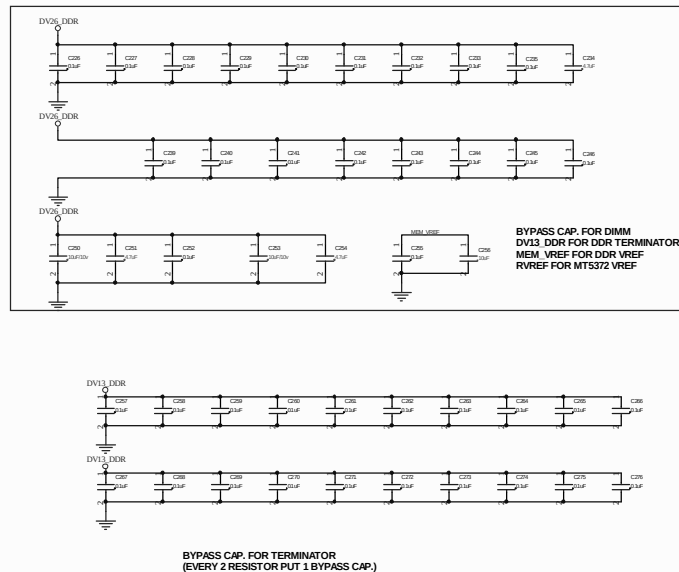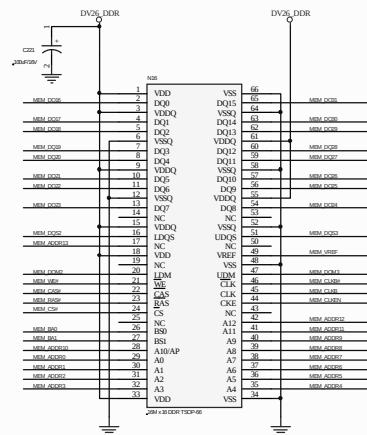

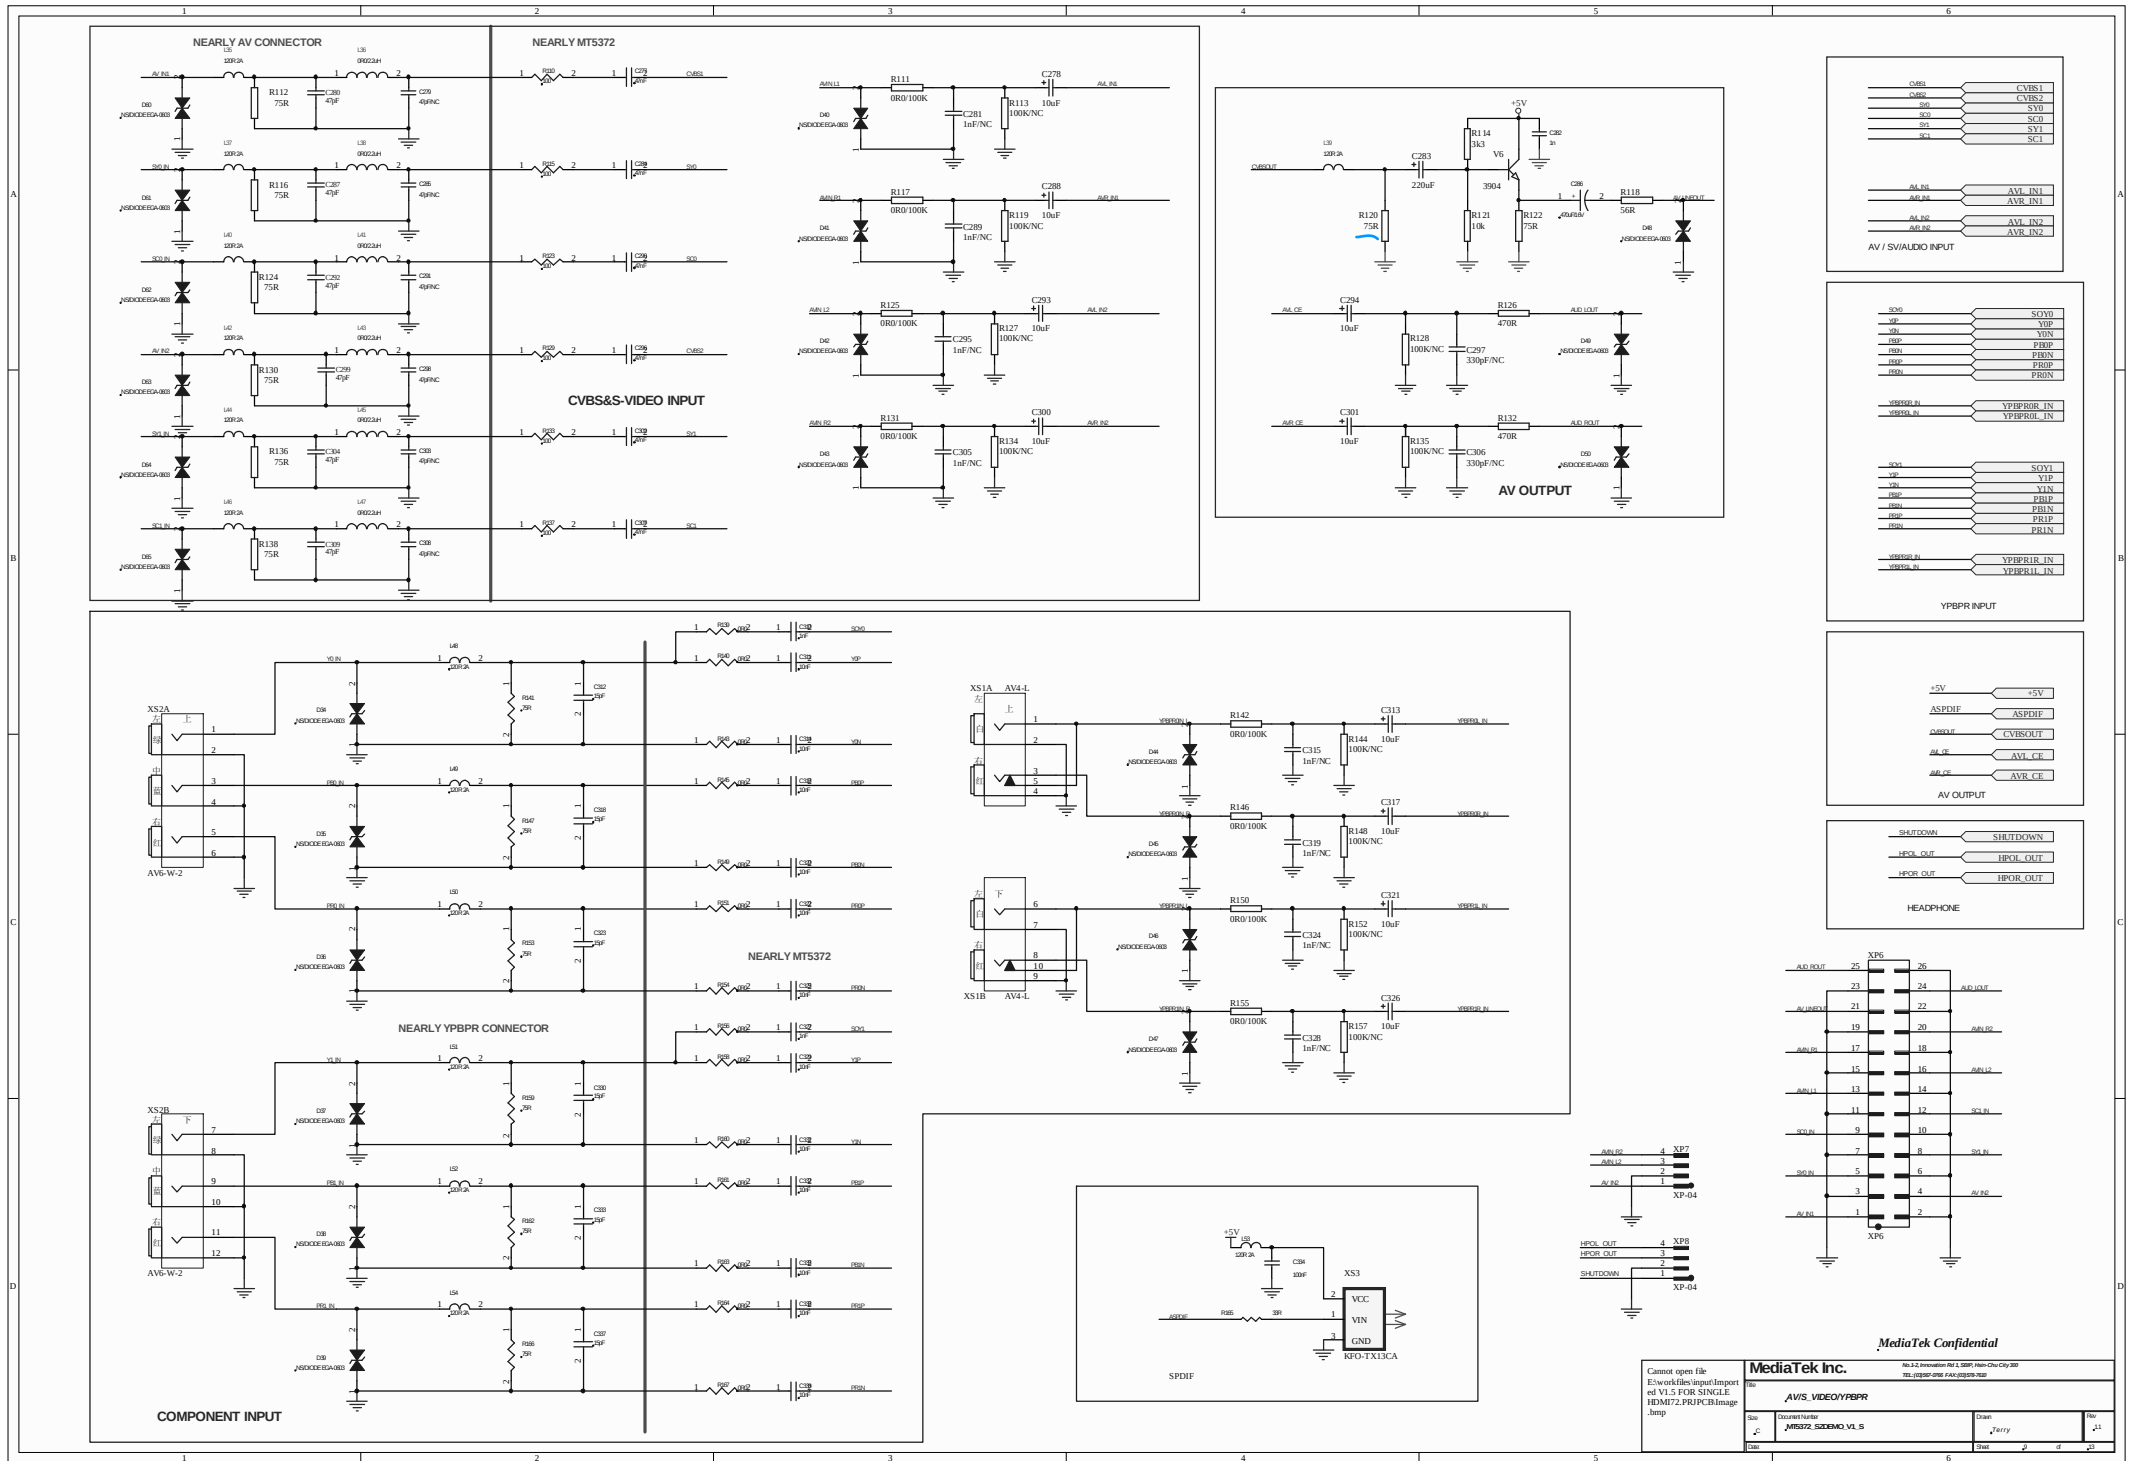 

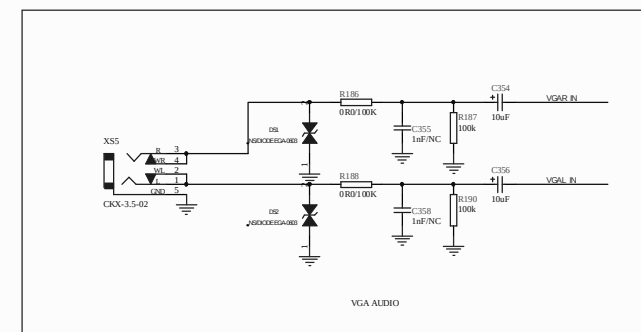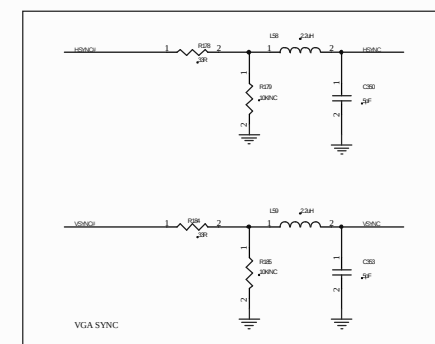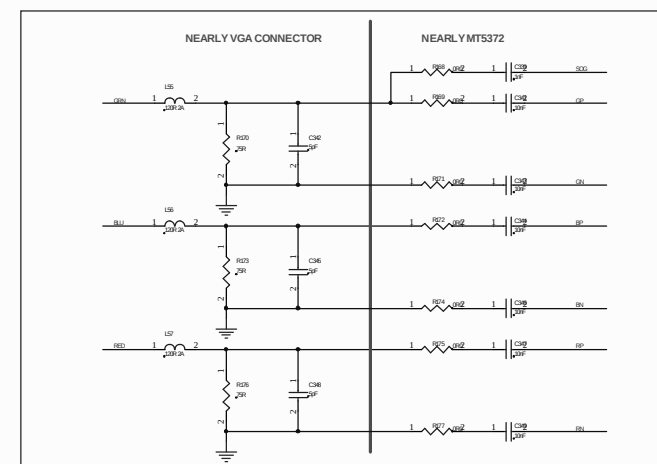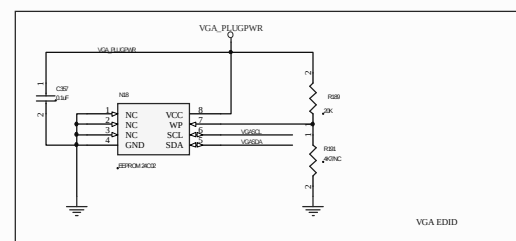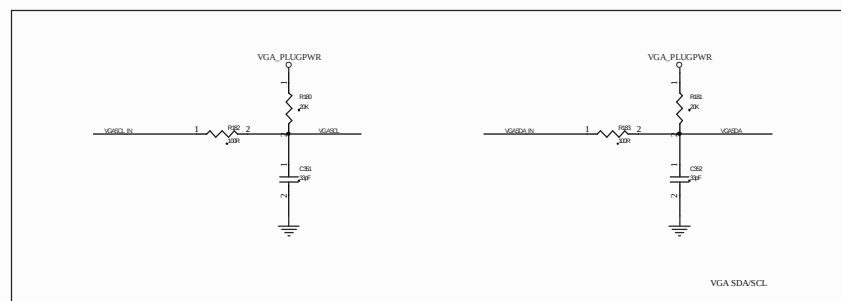

Cannot open file E:\workfiles\input\Import ed V1.5 FOR SINGLE HDMI72.PJ\PCB Image .bmp	MediaTek Inc. No.3-2, Innovation Rd. 1, HSP, Hsin-Chu City 300 TEL : (03)557-0765 FAX : (03)557-7628		
	File _YGA_INPUT		
Size 1.5K	Component Number M78372, S20K60 V1.5	Drawn Yerry	Rev 1
Date 10/1/2003	Drawn Yerry	Date 10/1/2003	Rev 1

