


Heavy Duty Type Digital Pressure Sensors GP-M Series Setting Guide

For precautions and operation details, refer to the instruction manual included with the product.




Changing the Setting Value of Output 1


Change the setting value of output 1. To change the setting value of output 2, refer to step "3". and "4". of "Basic Settings".

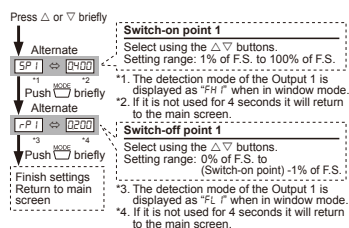

Basic Settings

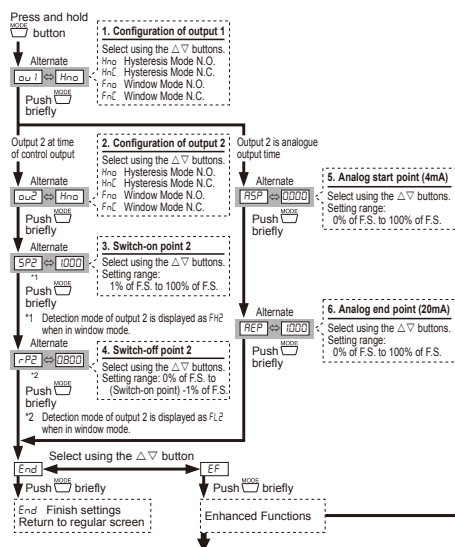

Extended Functions

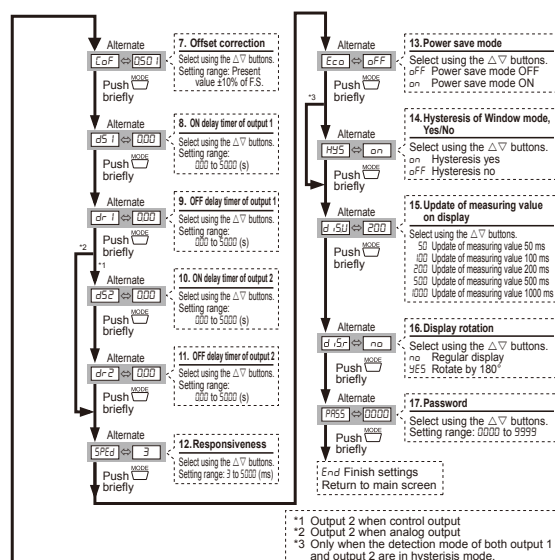

- While setting any items you can return to the main screen by pressing and holding the $\square$ button.
- Pressing $\square$ and r at the same time will return the previous screen.


Setting/Canceling Keylock

Keylock: Press and hold MODE + Δ (or ∇) $\rightarrow$ "Loc" blinks.

Canceling Keylock: Press and hold MODE + Δ (or ∇) $\rightarrow$ "uNL" blinks.

Initial Reset (Initialization)


Briefly press the ∇ button 5 times while continuously pressing $\square$

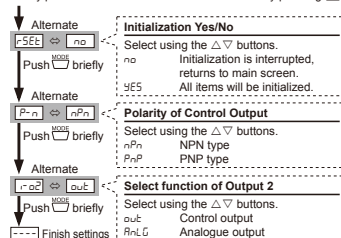

Pressing $\square$ and Δ at the same time will return to the previous screen.

Atmospheric Pressure Correction

 Function for correcting the measurement value to 0 due to problems such as long term use.



- Always correct the atmospheric pressure by making the applied pressure the same as regular room pressure.
- The air pressure correction is effective within a range of ± 10 of F.S. If it is executed outside of that range, "----" is displayed and no correction will occur.
- The atmospheric pressure correction is applied to the analog output as well.