



Service Bulletin

No. : MZ04-075 **Date:** January 11, 2007

Model: SR4500

Subject: Correction in the User Guide page18.

Symptom: The connection method for the surround back speaker using 1 channel was omitted from the User Guide.

Solution: A list of ERRATA (SR4500 ADDENDUM SHEET) addition of the User Guide.

Parts:

Ref#	Description	Part Number
SR4500	ADDENDUM SHEET	00M07BW851020

Serial Number Range:

This problem applies to the following week code.

SR4500/U1B applies to MZxx0442xxxxx.


This improvement has been done in the production week code MZxx0443xxxxx and after.

The following model has improved from the top of mass production. The User Guide was corrected. SR4500/U1S.

CONFIDENTIALITY NOTICE:

The information contained in this document is intended for the exclusive use by MARANTZ Authorized Service Centers and their employees. This document may contain information that is privileged, confidential and may be protected from disclosure under applicable laws and terms of the MARANTZ Service Agreement. Any distribution, disclosure, dissemination or copying of this document and the information it contains is prohibited. No responsibility will be accepted by MARANTZ for any damage, injury or loss resulting from the misuse of the information contained in this document.

SR4500 ADDENDUM SHEET

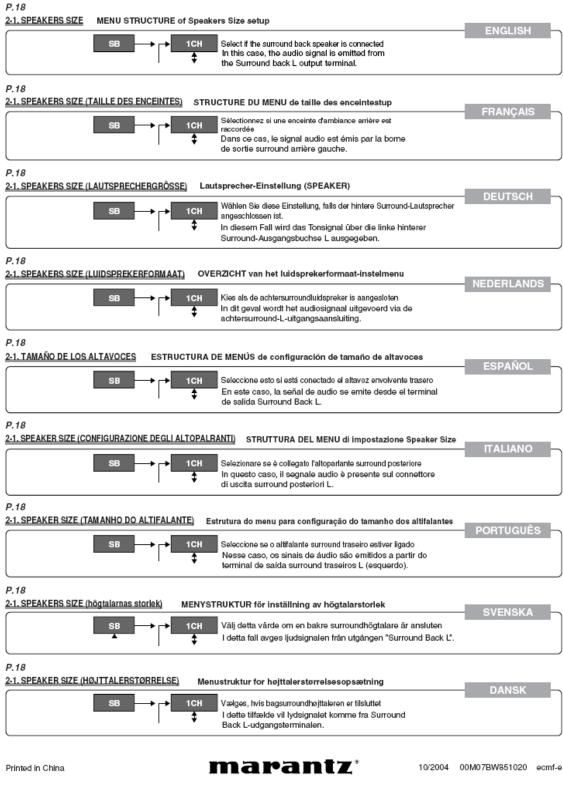

CONFIDENTIALITY NOTICE:

The information contained in this document is intended for the exclusive use by MARANTZ Authorized Service Centers and their employees. This document may contain information that is privileged, confidential and may be protected from disclosure under applicable laws and terms of the MARANTZ Service Agreement. Any distribution, disclosure, dissemination or copying of this document and the information it contains is prohibited. No responsibility will be accepted by MARANTZ for any damage, injury or loss resulting from the misuse of the information contained in this document.

ENGLISH

If you finish these setup, press the ▲ or ▼ cursor button to select "TO MAIN MENU" then press the ENTER button to return the SETUP MENU. 5.

Or press the < or < cursor button to select "EXIT' then press the ENTER button to exit the SETUP MENU.

Notes

when a DTS-LD or DTS-CD is playing, this setup is not available. This is to avoid noise being generated from the analog input.
If "DX-AUTO" is selected and a DVD, compact disc or LD is fast forwarded during playback, decoded signals may produce a skipping sound. In such cases, change the setting to DIGITAL.
Same digital input function cannot be set. In this case, the previous setting is set to ANALOG same digital input number cannot be set in Digital AUTO mode and Digital Fixed mode. For example, DIAUTO and DGI. Jar en tot set at same time.
The TUNER is fixed to the analog input, and can not be selected for any digital input.

2. SPEAKER SETUP

 
After you have installed the SR4500, connected all the components, and determined the speaker layout, it is now time to perform the settings in the Speaker Setup menu for the optimum sound acoustics for your environment and speaker layout. Before you perform the following settings, it is important that you first determine the following characteristics:

2-1. SPEAKERS SIZE

- When setting the speaker size in the SPEAKER SIZE sub-menu, use the guidelines given below. Large: The complete frequency range for the channel you are setting will be output from the speaker. Small:
- Small: Frequencies of the channel you are setting lower than approx. 100Hz will be output from the subwoofer. If the Subwoofer is set to 'NONE' and the 'front speakers are set to 'Large' than the sound may be output from both the left and right speakers.

18






- Select "2.SPEAKER" in SETUP MENU with ▲ or ▼ cursor button,
 Press the ENTER button to enter the menu. The first sub-menu item is "2-1.Speakers Size"
- setup.
- З. Press ▲ or ▼ cursor button to select the each 4.
 - speaker. Press \blacktriangleleft or \blacktriangleright cursor button to select the setting
- of size to each speaker. If you finish these setup, press the ▲ or ▼ cursor button to select "NEXT". 5. 6.

 - Cursor button to select "NEXI". Press the ENTER button to enter the next "2-2. Speakers Distance" setup. Or press the ◀ or ► cursor button to select "EXIT" then press the ENTER button to exit the SETUP MENU. Or press the < or > cursor button to select *TO
 - MAIN MENU' then press the ENTER button to return the SETUP MENU.



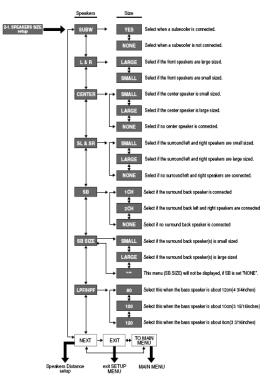

CONFIDENTIALITY NOTICE:

The information contained in this document is intended for the exclusive use by MARANTZ Authorized Service Centers and their employees. This document may contain information that is privileged, confidential and may be protected from disclosure under applicable laws and terms of the MARANTZ Service Agreement. Any distribution, disclosure, dissemination or copying of this document and the information it contains is prohibited. No responsibility will be accepted by MARANTZ for any damage, injury or loss resulting from the misuse of the information contained in this document.