

Replacement Blade Assembly Instructions

WARNING: Read and follow these instructions carefully. Always disconnect fan from power source before attempting repairs.

PARTS LIST (Number of components varies by model)

Fan Spider with Hub
Fan Blades
Pan Head Screws #10-32x1/2
Self Locking Nuts #10-32

NOTE: Examine existing blades and spider hub assembly on fan unit to note the blade and hub orientation for reference before proceeding.


REPLACEMENT BLADE ASSEMBLY

1. Insert 10-32x1/2 screws through fan blade and spider with fan blade flanges facing upward. (See illustrations on right)
2. Install 10-32 self locking nuts and tighten securely.


INSTALLING NEW FAN BLADE

1. Place fan upright on a hard level surface.
2. Remove front grille screws.
3. Remove front grille and set aside.
4. Loosen set screw located on hub in center of fan blade assembly and note the length of the shaft protruding from the hub.
5. Carefully slide fan blade assembly off shaft and discard.
6. Slide replacement fan blade assembly onto shaft with hub facing in same orientation as original. Align set screw with flat spot on shaft and position as determined in step 4.
7. Tighten set screw securely.
8. Replace front grille with existing screws.

HUB ORIENTATION

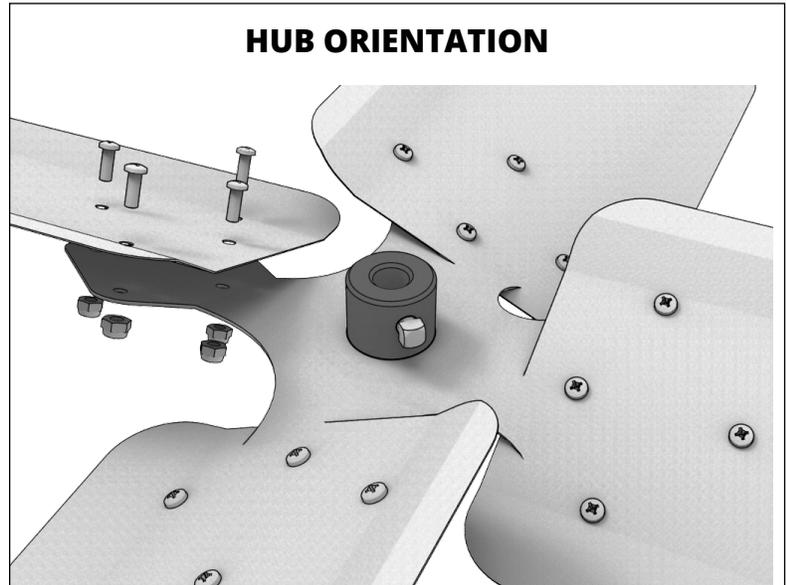

Example of 4-blade unit with hub facing front grille

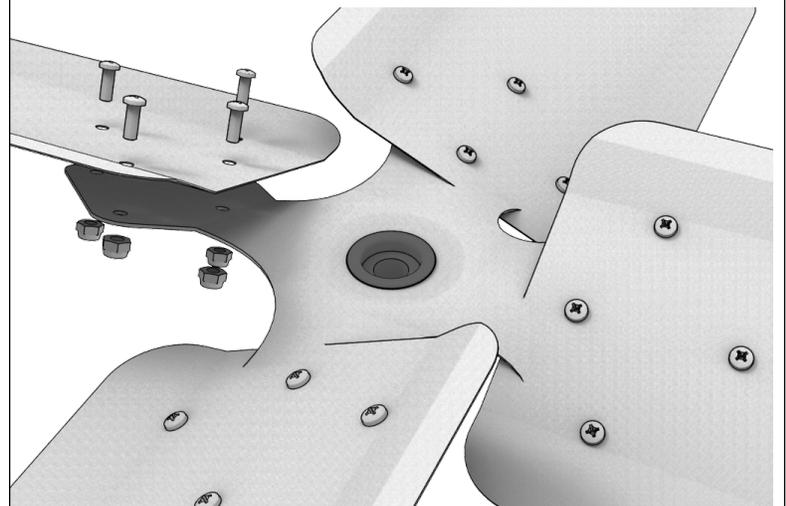

Example of 4-blade unit with hub facing toward motor

CAUTION! DO NOT OPERATE FAN WITH GRILLE REMOVED