



McIntosh Laboratory, Inc. 2 Chambers Street Binghamton, New York 13903-2699 Phone: 607-723-3512 www.mcintoshlabs.com

HR070 Series
Remote Control
Programming Guide






Introduction

The McIntosh HR070 Series Remote Controls (HR070, HR071, HR072 and HR073) supplied with McIntosh Preamplifiers, Integrated Amplifiers, A/V Control Centers, and Source Components not only control a McIntosh Component System, but also have the ability of controlling non McIntosh Components in your system. Refer to figures 1 through 4

The HR70 Series Remote Controls have stored in permanent memory the necessary information to send the correct commands to the component to be controlled. By entering a five digit numeric code the commands for controlling the component is activated.

Battery Information

Use only fresh batteries of the required size and recommended type. When the battery voltage is low, the  Push-button will blink 5 times after another Push-button on the Remote Control is pressed. Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.

If the Remote Control will not be used for an extended period, remove the batteries. They can leak chemicals and destroy the Remote Control.



When discarding the Remote Control, comply with local rules or regulations. Batteries should never be thrown away or incinerated but disposed of in accordance with the local regulations concerning battery disposal.



For additional information please visit the McIntosh Web Site at www.mcintoshlabs.com.

Installing Batteries

1. Open the battery compartment cover (located on the back of the remote).
2. Place the AA batteries in the compartment and match the + and - polarity symbols inside.
3. Replace the cover.

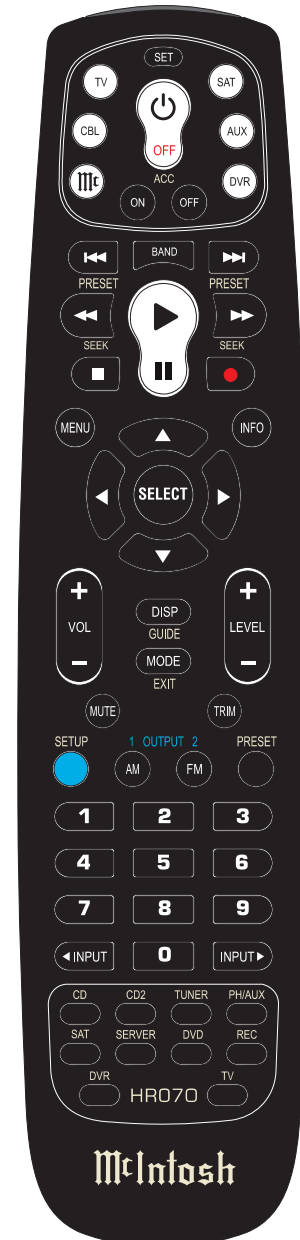 
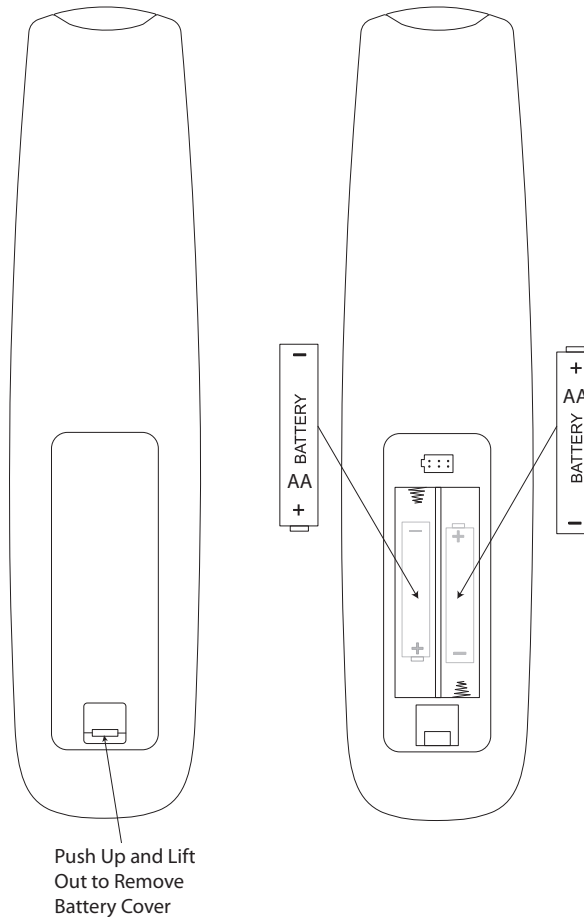 


Figure 1

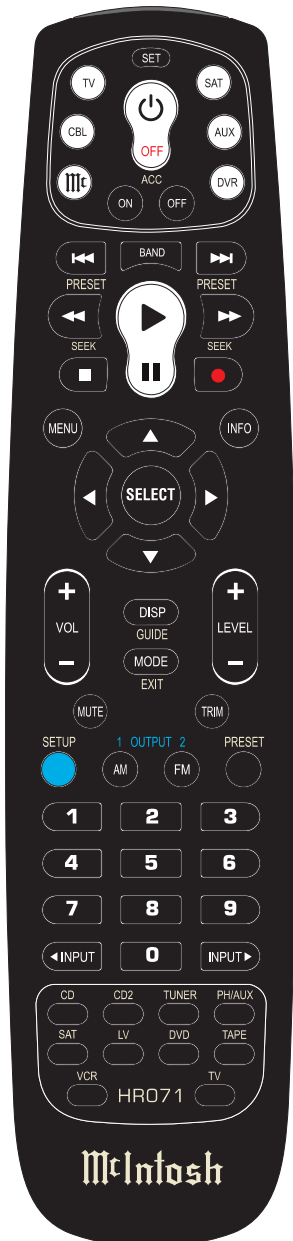 


Figure 2

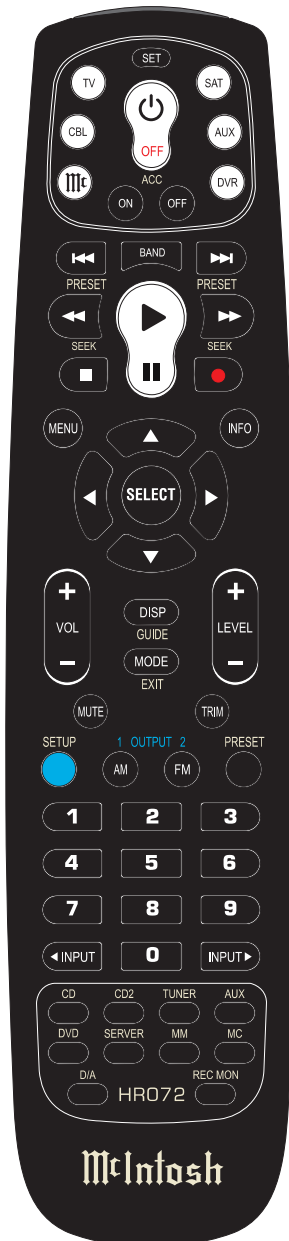 


Figure 3

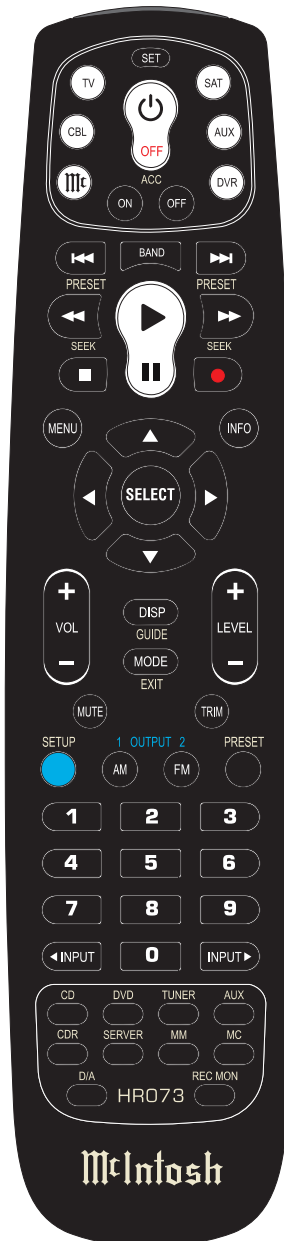 


Figure 4



Table of Contents

Introduction.....	2
Battery Information	2
Installing Batteries.....	2
HR070 Remote Control, figure 1.....	2
HR071 Remote Control, figure 2.....	3
HR072 Remote Control, figure 3.....	3
HR073 Remote Control, figure 4.....	3
Table of Contents	3
Programming a Component.....	4
Searching for Code	4
Verify Programmed Codes	5
Diagnostic Assistance.....	5
Component Control Codes.....	6-22



Programming a Component

Program this Remote Control by first find the codes for the components you want to program (starting on page 7) and then follow the steps below:

1. Turn on the component (in this example, the TV).
2. Press TV Push-button on the Remote Control to be programmed. Refer to figure 5.
3. Press and hold SET Push-button until the  Push-button illumination blinks twice, then release.
4. Enter the first five-digit code (using the numeric push-buttons) for the component (TV) and brand that you wish to program. The  Push-button blinks once as each digit is entered. If the code is valid, the Push-button blinks twice.

Note: If the Push-button does not blink twice, repeat steps 2 to 4 and try entering the code again.

5. Aim the McIntosh Remote Control at the component and press Power Off. The TV should turn Off. If it does not, repeat steps 3–5, trying each code for your brand until you find one that works. If you cannot find a working TV code refer to “Searching Codes” on this page.

Note: There might be more than one Program Code Number capable of switching power Off to the TV. Choose the Code Number with the greatest number of desired active commands for the TV to be controlled.

6. Repeat steps 1 to 5 for the other components you want to control. For future reference, write down each working component code below:

HR Series Remote Control Programming		
Assigned Push-button	Component	Program Code
TV		
CBL		
SAT		
AUX		
DVR		

 

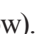


Figure 5


Searching for Code

If your component (TV in the Programming a Component example) does not respond to the Remote Control after trying all codes listed for your (TV) brand, or if your TV brand is not listed, try searching for your code:

1. Switch On the TV you wish to control.
2. Press the TV Push-button on the Remote Control once.
3. Press and hold SET Push-button until the  Push-button illumination blinks twice, then release.
4. Enter 9 9 1, then the component group number (see below). The  Push-button blinks twice.

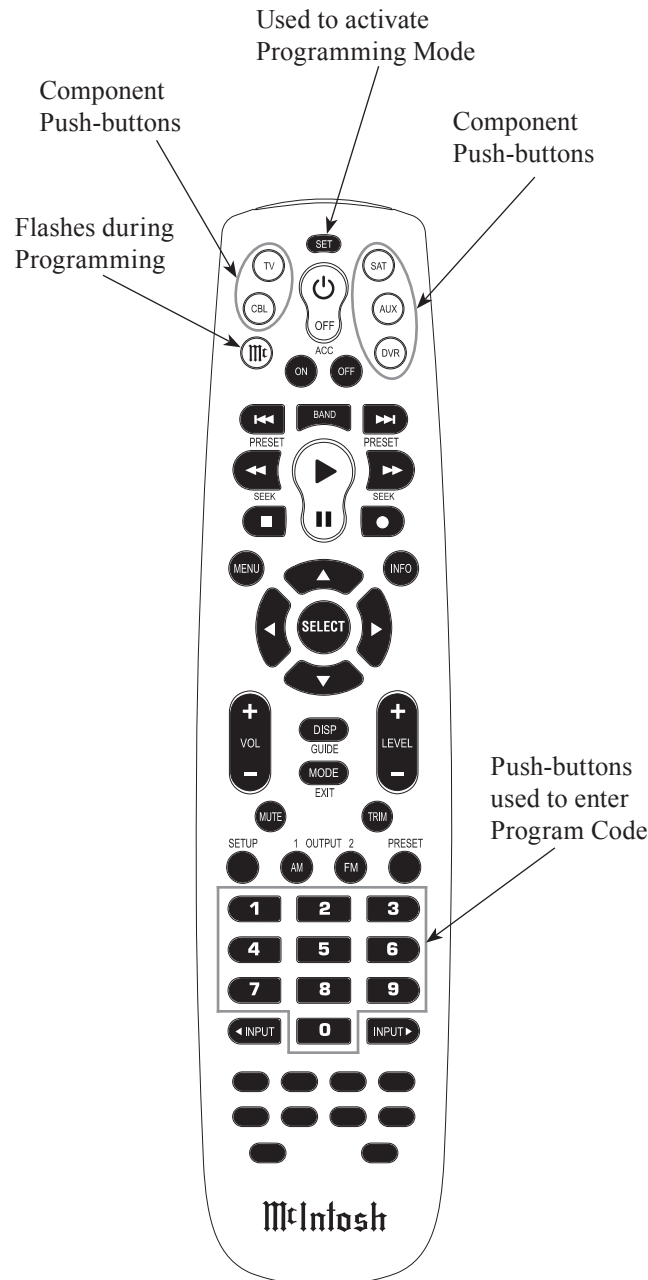


Code Number	Component Group
0	Cable (Cable Converter, Video Accessories, Satellite Receivers)
1	TV
2	VCR (VCRs, DVD Players)
3	Audio (Audio Amplifiers, Audio Amp /Tuners, CD Players)

5. Aim the Remote Control at the TV and press Power Off. The Remote Control sends IR Codes from its library to the selected TV, starting with the most popular code first. If the component responds, go to step 7.
6. If the component does not respond, press LEVEL+ Push-button and the Remote Control will test the next code for that TV type. Continue to press LEVEL+ Push-button until the TV switches Off.
Note: Press LEVEL- Push Button to try the previous code.




7. Now that you have found the correct code, press SET to save the code that worked for the TV. The  Push-button will blink twice to indicate the code has been saved. To search for other component codes, repeat steps 1 to 5.

Verify Programmed Codes

At any time, an already entered code to operate a specific component can be verified. For example, to find out which code is assigned to your TV perform the following steps:

1. Press TV once.
2. Press and hold SETUP Push-button until the  Push-button blinks twice, then release.
3. Enter 9 9 0. The  Push-button blinks twice.
4. To view the first digit of the stored code press 1. Count the light blinks (for example, three blinks = 3), and write down the number.
Note: If a code digit is 0, the  Push-button does not blink.
5. Repeat step 4 for the four remaining digits, using 2 for the second digit, 3 for the third digit, 4 for the fourth digit, and 5 for the fifth digit.
6. To check for other component, repeat steps 1—5, substituting the component push-button you would like to check.



Diagnostic Assistance

Difficulty	Suggested Remedy
 does not blink when you press a Push-button	Try pressing other push-buttons; replace the batteries
 blinks when you press a key, but device does not respond	Make sure the remote control is aimed at your component and is not more than 40 feet away
 blinks one long blink while in SETUP mode	An entry error has occurred (for example, pressing the wrong push-button); try entering the sequence again

Difficulty	Suggested Remedy
Remote Control does not control component or commands are not working-properly	Try all listed codes for the component; make sure the component operates with the original remote control
CH+, CH-, and LAST do not work for your RCA TV	Due to design of RCA TVs from 1983 to 1987, only the original TV Remote Control will operate these functions
Channels do not change properly when directly entering digits to change channels	If the original remote control required you to press Enter to change channels, press SELECT on the McIntosh Remote Control after entering the channel number

Restoring Default Settings


In the unlikely event the Remote Control no longer controls McIntosh Components (the default McIntosh Command Codes were accidentally deleted) follow the steps below to restore them:

1. Press  Push-button on the Remote Control to be restored to default Command Codes. Refer to figure 5.
2. Press and hold SET Push-button until the  Push-button illumination blinks twice, then release.
3. Enter the five-digit code (using the numeric push-buttons) for the version of the McIntosh Remote Control (model number is located near the bottom of the remote control)

Note: If the McIntosh Component the Remote Control came with was changed (in the Setup Mode) to respond to the "Alternate Control Codes" then enter the Alternate Control Code

five digit number instead of the Normal Control Code Number.

HR Series Remote Control Programming		
Remote Control Model Number	Normal or Alternate Code	Code Number
HR070 or HR071	Normal	32428
HR070 or HR071	Alternate	32429
HR072	Normal	32436
HR072	Alternate	32437
HR073	Normal	32431

The  Push-button blinks once as each digit is entered. If the code is valid, the Push-button blinks twice.

Note: If the Push-button does not blink twice, repeat steps 2 to 4 and try entering the code again.

4. Aim the Remote Control at the McIntosh Component and verify normal operation using the remote control.

**Amplifier**

Adcom.....	30577, 31100
Bose.....	30674
Carver.....	30892
Curtis Mathes.....	30300
Durabrand.....	31561
Elan.....	30647
GE.....	30078
Harman/Kardon.....	30892
JVC.....	30331
Left Coast.....	30892
Lenoxx.....	31561
Marantz.....	30892
McIntosh.....	30251
Modulaire.....	30395
NEC.....	30264
Optimus.....	30395, 30013, 30300, 30823
Parasound.....	30246
Philips.....	30892
Pioneer.....	30013, 30300, 30823
Polk Audio.....	30892
RadioShack.....	30395
RCA.....	30013, 30300, 30823
Realistic.....	30395, 30013
Shure.....	30264
Sony.....	30689, 30815
Soundesign.....	30078
Victor.....	30331
Wards.....	30078, 30013
Yamaha.....	30354, 30133

Cable Set Top Box

A-Mark.....	00008, 00144
ABC.....	00237, 00003, 00008, 00014, 00017
Accuphase.....	00003, 00014, 00017
Acorn.....	00237
Action.....	00237

Active.....	00237
Americast.....	00899
Amino.....	01822
Archer.....	00237
BCC.....	00276
Bell & Howell.....	00014
Bell South.....	00899
British Telecom.....	00003
Century.....	00008
Citation.....	00017
Clearmaster.....	00883
ClearMax.....	00883
Cool Box.....	00883
Coolmax.....	00883
Digeo.....	01187
Digi.....	00637
Director.....	00476
Dumont.....	00637
DX Antenna.....	01500
Emerson.....	00014
Fosgate.....	00276
Fujitsu.....	01497
GE.....	00144
General Instrument.....	00476, 00810, 00276 00003, 00012, 00014
Gibraltar.....	00003
GMI.....	00883
GoldStar.....	00144
Hamlin.....	00009, 00273
Hitachi.....	0003, 00008, 00009
Insight.....	00476, 00810
Jebsee.....	00014
Jerrold.....	00476, 00810, 00276, 00003, 00012, 00014
Maspro.....	01510
Memorex.....	00000
Mitsubishi.....	00003
Motorola.....	01376, 00476, 00810, 00276

.....	01187, 01254, 00014, 01106
Multitech.....	00883
Myrio.....	01822
NEC.....	01496
Nova Vision.....	00008
Novaplex.....	00008, 00017
NSC.....	00012, 00637
Oak.....	00017
Pace.....	01877, 00877, 00237, 00008
Panasonic.....	00000, 00008, 00144, 00107, 01488
Panther.....	00637
Paragon.....	00000, 00008, 00525
Penney.....	0000, 00637
Philips.....	01305, 00317
Pioneer.....	01877, 00877, 00144, 00533, 01500
Prism.....	00012
Pulsar.....	00000
Quasar.....	00000
RadioShack.....	00883
RCA.....	01256
Regal.....	00276, 00279, 00273
Runco.....	00000
Samsung.....	00003, 00144
Scientific Atlanta.....	01877, 00877, 00477, 00237 00003, 00000, 00008, 00012 00017, 01510
Sony.....	01006, 01460
Sprucer.....	00144
Starcom.....	00003, 00014
Stargate.....	00014
Storm.....	00637
Sumitomo.....	01500
Supercable.....	00276
Supermax.....	00883
Thomson.....	01256
Tocom.....	00012
Torx.....	00003

Cable Set Top Box, con't

Toshiba.....	00000, 01509
Tristar.....	00883
United Cable.....	00276, 00003, 00014
US Electronics.....	00276, 00003, 00008, 00017
V2.....	00883
Videoway.....	00000
Viewmaster.....	00883
Vision.....	00883
Vortex View.....	00883
Zenith.....	00000, 00525, 00899, 00017

Cable/PVR Combination

Americast.....	00899
Amino.....	01822
Digeo.....	01187
General Instrument.....	00810
Jerrold.....	00810
Motorola.....	01376, 00810, 01187, 01106
Myrio.....	01822
Pace.....	01877, 00237
Pioneer.....	01877, 00877
RCA.....	01256
Scientific Atlanta.....	01877, 00877
Sony.....	01006
Supercable.....	00276
Thomson.....	01256
Zenith.....	00899

CD Player

Acoustic Research.....	30420
Admiral.....	30305
Aiwa.....	30157
Arcam.....	30157
Audio Research.....	30157
Burmester.....	30420
Cairn.....	30157

California Audio Labs.....	30029, 30303
Cambridge Soundworks.....	30157
Carver.....	30157, 30179
Curtis Mathes.....	30032
Denon.....	30626, 30003, 30034
DKK.....	30000
DMX Electronics.....	30157
Emerson.....	30305
Fisher.....	30000, 30179
Funai.....	30305
Garrard.....	30393, 30420
Genexxa.....	30032, 30305
Grundig.....	30157
Hafler.....	30173
Harman/Kardon.....	30100, 30157, 30173
Hitachi.....	30032
Inkel.....	30157, 30180
Integra.....	30101
Jerrold.....	30003
JVC.....	30032, 30072
Kenwood.....	30626, 30000, 30029, 30028, 30037, 30190
KLH.....	31318, 31372, 31373, 31711
Krell.....	30157
Linn.....	30157
LXI.....	30179, 30305
Magnavox.....	30157, 30038, 30274, 30305
Marantz.....	30626, 30029, 30157, 30038, 30180, 30435
Matsui.....	30157
McIntosh.....	30256, 30290, 30660
MCS.....	30029
Memorex.....	30000, 30032, 30179, 30420, 30468
Micromega.....	30157
Miro.....	30000
Mission.....	30157
Modulaire.....	30000, 30032, 30087, 30179
.....	30180, 30420, 30468
MTC.....	30420

NSM.....	30157
Onkyo.....	31327, 30101
Optimus.....	30000, 30032, 30037, 30087
.....	30179, 30305, 30393, 30420, 30468
Panasonic.....	30029, 30303, 30388, 30752
Parasound.....	30420
Penney.....	30029
Philips.....	30626, 30157, 30274
Pioneer.....	31062, 30032, 31087, 30305, 30468
Polk Audio.....	30157
Proceed.....	30420
Proton.....	30157
QED.....	30157
Quad.....	30157
Quasar.....	30029
RadioShack.....	30000, 30032, 30179, 30180, 30420, 30468
RCA.....	31062, 30032, 30053, 30179, 30305, 30420, 30468
Realistic.....	30000, 30032, 30087, 30179
.....	30180, 30305, 30420, 30468
Revox.....	30157
Roksan.....	30435
Rotel.....	30157, 30420
SAE.....	30157
Sansui.....	30000, 30157, 30305
Sanyo.....	30000, 30087, 30179
Scott.....	30305
Sears.....	30179, 30305
Sharp.....	30037, 30034, 30180
Sherwood.....	30180
Sonic Frontiers.....	30157
Sony.....	30490, 30000, 30100, 31364, 30185
Sugden.....	30157
Sylvania.....	30157
Symphonic.....	30180, 30305
TAG McLaren.....	30157
Tandy.....	30032
Tascam.....	30393, 30420



Teac	30490, 30180, 30378, 30393, 30420
Technics	30029, 30303
Techwood	30303
Thule Audio	30157
Victor	30072
Wards	30032, 30157, 30053, 30087, 30179
Yamaha	30490, 30036, 31292
Yorx.....	30000

Home Automation

Accutec	31215
Amana.....	31716
Bionaire.....	30846, 31215
Frigidaire.....	31333
GE	30240
GoldStar	31537
Holmes	31215
Kenmore.....	31537
Lasko.....	30846
LG	31537
Lightolier.....	30184
Lutron.....	30597, 30318, 31239, 31597
Marmitek.....	30167
One For All	30167
PCS	30184
RadioShack	30240
Royal Sovereign	31651
Security System	30167
Sharper Image.....	30846
SmartLinc	30184
Universal	30167
Universal X10	30167
Whirlpool	31332
Windmere.....	31215
X10.....	30167

Audio - Accessory

Accurian.....	31106
---------------	-------

Altec Lansing.....	31056, 31485
Apple.....	31115, 31644
Cambridge Soundworks.....	31530
Creative	30872
D-Link.....	31522
Imerge	31491
Integra	31789
iPort.....	31917
Marantz	31491
Motorola.....	31464
NaviPod.....	31644
Netgear.....	31785
Omnifi.....	31605
Onkyo	31789
Roku.....	31828
Russound.....	32019
Slim Devices	31844
Sonance	31917
SSI.....	31522
Yamaha	31809, 31810

Video - Accessory

ABS.....	01272
Accurian.....	01653
Alienware.....	01272
Allegro	00160
Archer	00160
Bantor.....	00160
Centronic.....	00160
CyberPower.....	01272
D-Link.....	01554, 01731
Epson.....	01563
Gateway	01272
GC Electronics.....	00160
Hauppauge	01757
Hewlett Packard	01272, 01267
Howard Computers	01272
HP	01272, 01267

Hush	01272
iBUYPOWER.....	01272
Jebsee.....	00160
JVC.....	01384
Keyspan.....	01344
Leadtek.....	01614
LG	01415
Linksys.....	01272, 01365
Macro Image Technology	01383
Media Center PC.....	01272
Microsoft.....	01272
Mind.....	01272
Motorola.....	01363
MyHD	01383
Niveus Media	01272
Northgate	01272
Panasonic	01120
Pinnacle Systems	01268
Pioneer	01010
Princeton.....	00113, 00295
RadioShack	00160
Ricavision	01272
Roku.....	01486
Samsung.....	01190, 01490
Sensory Science	01126
Sharp.....	01010
Sony	01272, 01324, 01364
Stack 9.....	01272
Sylvania.....	01563
Systemax	01272
Tagar Systems	01272
Toshiba.....	01272
Touch.....	01272
Verator.....	00113
Viewsonic.....	01272, 01329
Vizio.....	01126
Voodoo.....	01272
ZT Group	01272

Audio Receiver

ADC.....	30531	Initial.....	31426	Polk Audio.....	30189, 31289, 31414
Adcom.....	30616	Inkel.....	30491	Proscan.....	31254
Aiwa.....	31405, 30189, 30121, 31388, 31641	Insignia.....	31030	RadioShack.....	31609
Akai.....	30244, 31512	Integra.....	30135, 30842, 31298, 31320	RCA.....	31023, 31609, 31254, 30531, 31074, 31390, 31511
Alco.....	31390	JBL.....	30110, 31306	Realistic.....	31609, 30121, 30186
AMC.....	31077	JVC.....	31058, 30074, 31374, 31495, 31811	Regent.....	31437
Amphion Media Works.....	31563, 31615	Kawasaki.....	31390	Revox.....	30189
AMW.....	31563, 31615	Kenwood.....	31313, 31570, 31569, 30186	Rio.....	31869
Anam.....	31609, 31074	KLH.....	31390, 31412, 31428	Saba.....	31519
Apex Digital.....	31257, 31430, 31774	Koss.....	31366, 31497	Samsung.....	31295, 31304, 31500
Arcam.....	31189	Lasonic.....	31798	Sansui.....	31189, 30189, 31764
Audiotronic.....	31189	Lenoxx.....	31437	Sanyo.....	31251, 31469, 31801
Audiovox.....	31390, 31627	Lexicon.....	31076	Sharp.....	30186, 30771, 31286
B & K.....	30701, 30702, 30820, 30840	LG.....	31293	Sharper Image.....	31556
BK.....	30702	Linn.....	30189	Sherwood ...	30491, 30502, 31077, 31423, 31517, 31653
Bose.....	31229, 30639, 31253, 31841, 31933	Liquid Video.....	31497	Shinsonic.....	31426
Brix.....	31602	Magnavox.....	31189, 31269, 30189, 30391	Sirius.....	31602, 31627, 31811, 31987
Cairn.....	30189	30531, 31266, 31514	Sonic Blue.....	31532, 31869
Cambridge Soundworks.....	31370	Marantz.....	31189, 31269, 30189, 30891, 31289	Sony.....	31058, 31441, 31258, 31759, 31622, 30168, 30474, 31406,
Capetronic.....	30531	McIntosh.....	31289	31558, 31658, 31758, 31858
Carver.....	31189, 30189, 30121, 31289	Micromega.....	31189, 30189	Soundesign.....	30670
Classic.....	31352	Mitsubishi.....	31393	Stereophonics.....	31023
Coby.....	31389	Myryad.....	31189	Sunfire.....	31313
Criterion.....	31420	Nakamichi.....	31313, 30097	Teac.....	30463, 31074, 31390, 31528
Curtis Mathes.....	30014	New Castle.....	30502	Technics.....	31308, 31518, 30309, 31384, 31633
Daewoo.....	31250	Norcent.....	31389	Thorens.....	31189
Delphi.....	31414	Nova.....	31389	Toshiba.....	30135, 30842, 31788
Denon.....	31360, 30121, 30771, 31142, 31306	Onkyo.....	30135, 30380, 30842, 31298, 31320, 31531	Venturer.....	31390
Emerson.....	30531	Optimus.....	31023, 30074, 30014, 30121	Victor.....	30074
Fisher.....	31801	30186, 30502, 30531, 30670, 31074	Waitec.....	31352
Garrard.....	30463	Oritron.....	31366, 31497	Wards.....	30189, 30014
Gateway.....	31517	Outlaw.....	30391	XM.....	31406, 31414
Go Video.....	31532	Panasonic.....	31308, 31518, 30309, 30367, 31288	Yamaha.....	31023, 30176, 30186, 31176
Grundig.....	30189	31316, 31548, 31633, 31763, 31764	31276, 31331, 31375, 31476
Harman/Kardon.....	30110, 30189, 30891	Philips.....	31189, 31269, 30189, 30391, 30891, 31266	Zenith.....	30857, 31293
.....	31289, 31304, 31306	Pioneer.....	31023, 30014, 30150, 30244, 30531, 30630, 31384		
Hitachi.....	31273, 31801	Polaroid.....	31508		

**Satellite Set Top Box**

Aiwa.....	01514
AlphaStar.....	00772
Bell ExpressVu.....	00775
Chaparral.....	00216
Coolsat.....	01806
Crossdigital.....	01109
DirecTV.....	01377, 00392, 00566, 00639, 01639 01142, 00247, 00749, 01749, 00724 00819, 01856, 01076, 01108, 00099 01109, 01392, 01414, 01442, 01443 01444, 01609, 01640
Dish Network System.....	01505, 01005, 00775 01170, 01775
Dishpro.....	01505, 01005, 00775, 01775
DX Antenna.....	01530
Echostar.....	01505, 01005, 00775, 01170, 01775
Expressvu.....	00775, 01775
Fortec Star.....	01821
Funai.....	01377
GE.....	00392, 00566
General Instrument.....	00869
GOI.....	00775, 01775
Hisense.....	01535
Hitachi.....	00749, 00819, 01518
Houston.....	00775
HTS.....	00775, 01775
Hughes Network Systems.....	01142, 00749, 01749 01442, 01443, 01444
Humax.....	01790
iLo.....	01535
Innova.....	00099
Jerrold.....	00869
JVC.....	00775, 01170, 01507, 01775
LG.....	01226, 01414
Magnavox.....	00724, 00722
Maspro.....	01530
McIntosh.....	00869

Memorex.....	00724
Mitsubishi.....	00749
Motorola.....	00869
NEC.....	01519
Netsat.....	00099
Next Level.....	00869
Optimus.....	00724
Panasonic.....	00247, 00701, 01508
Pansat.....	01807
Paysat.....	00724
Philips.....	01142, 00749, 01749, 00775, 00724 00819, 01076, 00722, 00099, 01442
Pioneer.....	01142, 01442
Primestar.....	00869
Proscan.....	00392, 00566
Proton.....	01535
RadioShack.....	00566, 00775, 00869
RCA.....	00392, 00566, 01142, 00775 00855, 00143, 01392, 01442
Samsung.....	01377, 01142, 01276, 01108, 01109, 01442, 01609
Sharp.....	01489
SKY.....	00099
Sony.....	00639, 01639, 01524, 01640
Star Choice.....	00869
Star Trak.....	00772, 00869
Thomson.....	00392, 00566
Tivo.....	01142, 01442, 01443, 01444
Toshiba.....	00749, 01749, 00790, 00819 01285, 01501, 01530
UltimateTV.....	01392, 01640
Ultrasat.....	01806
Uniden.....	00724, 00722
US Digital.....	01535
USDTV.....	01535
Voom.....	00869
Zenith.....	01856

DBS/PVR Combination

DirecTV.....	01377, 00392, 00639, 01142 01076, 00099, 01392, 01442 01443, 01444, 01640
Dish Network System.....	01505, 00775
Dishpro.....	01505, 00775
Echostar.....	01505, 00775, 01170
Expressvu.....	00775
Hughes Network Systems.....	01142, 01442, 01443, 01444
JVC.....	01170
Motorola.....	00869
Philips.....	01142, 01442
Proscan.....	00392
RCA.....	01392
Samsung.....	01442
Sharp.....	01489
Sony.....	00639, 01640
Star Choice.....	00869

Television

A-Mark.....	10047, 10054, 10165
Accuscan.....	10047, 10018, 10135
Action.....	10030, 10185
Admiral.....	10047, 10054, 10017, 10051, 10093 10463, 10180, 10018, 10165
Advantz.....	10282
Advent.....	10761, 10783, 10815, 10817, 10842, 11933
Adventuri.....	10000
Agna.....	10150
Aiko.....	10092
Akai.....	10060, 10812, 10702, 10030, 10145 10151, 10672, 11903, 11935
Albatron.....	10700, 10843
Alfide.....	10672
Alleron.....	10030
Ambassador.....	10150, 10177
America Action.....	10180
American High.....	10000, 10060

Television, con't

Ampro	10751	Clarion	10180	Envision	10030, 10813
Amstrad	10171, 10177	Classic	10030, 10092	Epson.....	10833, 10840
Amtron.....	10000, 10180	Colortyme	10047, 10054, 10017, 10060,	ESA	10812, 10171, 11944
Anam.....	10180	10178, 10030, 10018	Fisher.....	10054, 10154, 10000, 10159
Anam National.....	10055	Commercial Solutions.....	11447, 10047	Fortress.....	10093
AOC	10180, 10030, 10185	Conic	10178	Fujitsu.....	10683, 10809, 10853
Apex Digital1	0156, 10748, 10879, 10765,	Contec	10180, 10185	Funai	10000, 10180, 10171, 11904
.....	10185, 10767, 11943	Craig.....	10180, 10171, 10282	Futuretech	10180
Audinac	10180	Crosley	10054, 10000, 10180, 10030, 10171, 10187	Gateway	11755, 11756
Audiovox.....	10451, 10180, 10092, 10623,	Crown.....	10093, 10180, 10672	GE	11447, 10047, 10000, 10051, 10451,
.....	10802, 10875, 11937, 11951, 11952	Crown Mustang.....	10672	10060, 10178, 10030,10135, 10055,
Aventura.....	10171	Curtis Mathes.....	10047, 10054, 10154, 10000,	10282, 11147, 11347, 10018, 11917,
Axion	11937	10051, 10451, 10093, 10180, 0060,	11919, 11922
Baysonic.....	10180	10702, 10178, 10030, 10145, 10166,	Gemini	10047
Beaumark.....	10017, 10178, 10030	10018, 10466,11147, 11347, 11919	Gibraltar.....	10017, 10000, 10030
Belcor.....	10030	CXC.....	10180	Go Video	10886
Bell & Howell.....	10054, 10154, 10093	Cytron	11326	Go Vision	11937
BenQ	11032	Daewoo	10451, 10178, 10092, 11661,10623,	GoldStar	10047, 10054, 10178, 10030,
Boxlight.....	10893	10661, 10672, 11755,11756, 11928	10018, 11154, 11926
Bradford	10180	Dayton.....	10092	Gradiente.....	10053
Brockwood.....	10178, 10030	Daytron	10178, 10030, 10092	Grundig.....	10706, 10672, 10683
Broksonic	10236, 10463, 10180, 10177,	Dell.....	11080, 11178	Grundy	10180
.....	11929, 11935, 11938	Denon.....	10145, 10055, 10511	Grunpy	10180
Candle	10030	Denstar.....	10628	Haier.....	11034, 10768
Capehart.....	10017, 10178, 10030, 10092	Digital Life.....	10872	Hallmark	10236, 10180, 10178, 10135, 10187
Carnivale.....	10030	Dumont	10017, 10180, 10178	Harley Davidson	10000, 10180, 10060,
Carver	10054	Durabrand	10463, 10180, 10178, 10171, 11034	10178, 10030, 11904
Celebrity.....	10000	Dwin	10093, 10720, 10774	Harman/Kardon.....	10054
Celera	10765	Eaton	10060	Harvard	10180
Changhong.....	10156, 10765, 10767, 10783	Electroband	10000, 10185	Havermy.....	10093
Cineral.....	10451, 10092	Electrograph.....	11755	Heathkit.....	10017
Citek	10047	Electrohome	0154, 10000, 10150, 10178,	Helios	10865
Citizen.....	10054, 10000, 10451, 10463,	10030, 10151, 10185	Hello Kitty	0451
.....	10180, 10060, 10030, 10171,	Emerald.....	10178, 10177	Hewlett Packard.....	11089, 11494, 11502
.....	10092, 10282, 11928	Emerson	10047, 10154, 10451, 10236,10463,	Hisense.....	10748
Civet.....	10185	10180, 10150, 10178, 10171, 11944,	Hitachi.....	10047, 10054, 10017, 10000, 10051,
Clairtone	10185	11929, 11928,10623, 10282, 10185,	10178, 11145, 10145,10018, 10055,
		10177, 10135	10151, 10185, 11904, 11960



HP	11089, 11494, 11502	10802, 11254, 11755, 11904, 11931, 11944	Optonica.....	10093, 10165
Hyundai.....	10849, 10865	Majestic.....	10017	Orion.....	10017, 10236, 10463, 10180,
Ima.....	10236, 10180, 10178	Marantz.....	11454, 10054, 10030, 10704,	10178, 11463, 10177, 11929
Infinity.....	10054	10854, 10855, 11154	Pace.....	10092
Insignia.....	10171, 11326, 11517	Matsui.....	10177	Panasonic.....	10054, 10000, 10156, 10250,
Inteq.....	10017, 10145	Matsushita.....	10250, 10051, 10650	10051, 10236, 10030, 10018,10055, 10650,
JBL.....	10054	Maxent.....	11755, 11756	11291, 11410, 11919, 11941, 11946, 11947
JCB.....	10000	Megapower.....	10700	Panda.....	10706
Jensen.....	10761, 10815, 10817, 11933	Megatron.....	10047, 10178, 10145, 10151	Paxonic.....	10060, 10030
JIL.....	10030	MEI.....	10185	PCE.....	10156, 10060
Jutan.....	10030	Memorex.....	10154, 10463, 10180, 10150,	Penney.....	10047, 10000, 10156, 10250,10051,
JVC.....	10054, 10053, 10030, 10055, 10731, 11253	10178, 10030, 10165, 11926	10060, 10178, 10030,10018, 10135,
Kamp.....	10017, 10180, 10185	MGA.....	10150, 10178, 10030	10159, 11347, 11919, 11926
Kawasho.....	10030, 10185	MGN Technology.....	10178	Philco.....	10054, 10463, 10030, 10145, 10187
KEC.....	10180, 10060	Micro Genius.....	10150	Philips.....	11454, 10054, 10030, 10171,
Kenwood.....	10180, 10030	Midland.....	10047, 10017, 10051, 10018, 10135	10187, 10690, 11154, 11254
KLH.....	10156, 10180, 10765, 10767	Mitsubishi.....	10154, 10250, 10093, 11250,10150,	Pilot.....	10051, 10060, 10178, 10030
Kloss.....	10030	10178, 10030, 10836,10868, 11917	Pioneer.....	10166, 10055, 10679, 10866, 11260
Konka.....	10180, 10080, 10628, 10632,	Monivision.....	10700, 10843	Polaroid.....	10765, 10865, 11262, 11276,11314,
.....	10638, 10703, 10707, 10720	Motorola.....	10054, 10051, 10093, 10150, 10055	11316, 11326, 11327, 11328, 11341
Kost.....	11262	MTC.....	10180, 10060, 10030, 10092, 10185, 10282	Portland.....	10451, 10092
KTV.....	10463, 10180, 10030, 10185	Multitech.....	10180	Precision.....	10236, 10180, 10177, 10185, 10282
Lark.....	10154	NAD.....	10156, 10178, 10166, 10866	Prima.....	10761, 10783, 10815, 10817, 11933
LG.....	10054, 11265, 10060, 10178,	NEC.....	10047, 10156, 10178, 10030, 10497,	Princeton.....	10700, 10717
.....	10030,10700, 10856, 11154,	10704, 10882, 11704	Prism.....	10250, 10051, 10055
.....	11178, 11758	NetTV.....	11755	Proscan.....	11447, 10047, 10018, 10135,
Lloyd's.....	10236, 10180, 10030, 11904	Nikko.....	10178, 10030, 10092	10466, 11347, 11922
Logik.....	10236, 10180	Nikkodo.....	10178, 10030, 10092	Proton.....	10178, 10466
LXI.....	10047, 10054, 10017, 10154,	Nishi.....	10030, 10018	Pulsar.....	10017, 10092
.....	10000, 10156, 10051, 10093,	Norcent.....	10748, 10824, 11089	Pulser.....	10178, 10092
.....	10060, 10053, 10178, 10030,	Noshi.....	10018	Quartz.....	10150, 10178
.....	10171, 10166, 10055, 10135,	NTC.....	10092	Quasar.....	10250, 10051, 10055, 10165, 10650, 11919
.....	10018, 10159, 10165	Nyon.....	10000	Rabbit.....	10047
Magnasonic.....	10054, 10000, 10156, 10093,	Olevia.....	11144, 11240, 11331	Radio Shack.....	10047, 10154, 10180, 10150, 10178,
.....	10030, 10092, 11928	Onwa.....	10180	10030, 10165, 11904
Magnavox.....	10047, 11454, 10054, 10154,10000,	Optimus.....	10154, 10250, 10093, 10180, 10150,		
.....	10250, 10051, 10180,10060, 10030,	10178, 10030, 10166, 10165, 10650		
.....	10171, 10092,10706, 10187, 10282, 10386,	Optoma.....	10887		

Television, con't

RCA.....	11447, 10047, 10054, 10000, 10051, 10093, 10178, 11958,11953, 11948, 11922, 11919, 11917, 11547, 11347, 11247,11147, 11047, 10774, 10679, 10165, 10135, 10090, 10018	Sole.....	10813	Toshiba.....	10154, 11256, 10156, 10150, 11265, 10060, 11145, 10145, 10166, 11945, 11936, 11935, 11918, 11704, 11656, 11356, 11156, 10845, 10832, 10650
Realistic.....	10047, 10154, 10180, 10150, 10178, 10030, 10165	Soundesign.....	10180, 10178	Tosonic.....	10185
Rhapsody.....	10185	Sova.....	11952	Totevision.....	10051
Road Authority.....	10282	Spectravisision.....	10156, 10178, 10159	Toyomenka.....	10178
Runco.....	10017, 10060, 10030, 10497, 10603	Squareview.....	10171	Truetone.....	10250, 10051, 10055
Sampo.....	10047, 10030, 11755, 11756	SR2000.....	10154, 10171	TVS.....	10463
Samsung.....	10047, 10054, 10017, 10154, 10060, 10812, 10702, 10178,0030, 11959, 11903, 11312, 11060, 10814, 10766, 10587, 10055	SSS.....	10180	Ultra.....	10092
Sanky.....	10060, 10030	Starlite.....	10236, 10180	Universal.....	10047, 10135
Sansui.....	10463, 10060, 10030, 10165, 11904, 11929, 11935	Studio Experience.....	10843	Universum.....	10177
Sanyo.....	10047, 10054, 10154, 10000, 10463, 10171, 10159, 10799, 10893, 11755	Superscan.....	10093, 10864, 11944	V.....	10864, 10885, 11755, 11756
Saville.....	10060	Supreme.....	10000	Vector Research.....	10030
Sceptre.....	10878	SV2000.....	10054	Victor.....	10053
Scotch.....	10178	SVA.....	10748, 10587, 10768, 10865, 10870, 10871, 10872	Vidikron.....	10054
Scott.....	10236, 10180, 10178, 10030, 10177	Sylvania.....	10047, 10054, 10154, 10000, 10051, 10178, 10030, 10171, 10092, 10159, 10187, 11904, 11926, 11931, 11944	Vidtech.....	10178
Sears.....	10047, 10054, 10017, 10154, 10000, 10156, 10051, 10093, 0060, 10053, 10178, 10030, 10171, 10166, 10055, 10135, 10018, 10159, 10165, 11904, 11926	Symphonic.....	10000, 10180, 10178, 10171, 11904, 11944	Viewsonic.....	10857, 10864, 10885, 11578, 11755
Sharp.....	10054, 10093, 10180, 10165, 10386, 10491, 10688, 10689, 10818, 10851, 11393, 11917	Syntax.....	11144, 11240, 11331	Viking.....	10060
Sheng Chia.....	10093	Tandy.....	10093, 10165	Vizio.....	10864, 10885, 11499, 11756, 11758
Shivaki.....	10178	Tatung.....	10000, 10051, 10055, 11756	Wards.....	10047, 10054, 10017, 10154, 10000,10051, 10093, 10236,10178, 10030, 10166, 11156, 10866, 10187, 10165, 10151, 10080, 10018
Siemens.....	10145	Teac.....	10154, 10706, 10159, 10282, 10689	Waycon.....	10156
Signature.....	10047, 10093, 10030, 10165, 10187	Technics.....	10054, 10250, 10051, 10055	Welton.....	10178
Signet.....	11262	Technovox.....	10030	Westinghouse.....	10000, 10451, 10885, 10889, 11282
Simpson.....	10178, 10030, 10187	Techview.....	10847	White Westinghouse.....	10451, 10236, 10463, 10623, 10889
Singer.....	10060, 10092	Techwood.....	10250, 10051, 10060, 10055	World.....	10451, 10236, 10463, 10180
Solar Drape.....	10000	Teknika.....	10054, 10463, 10180, 10150, 10060, 10178, 10092	XR-1000.....	10154, 10180, 10171
		Telecolor.....	10017	Yamaha.....	10030, 10769, 10833, 10839
		Telefunken.....	10702	Yorx.....	10030
		Thomas.....	10047, 10178, 11904	Zenith.....	10047, 10017, 10000, 10093, 10463, 11265, 10812, 10178, 10030, 11145, 10145, 10171, 10092, 11904, 11929
		Thomson.....	11447, 10047		
		TMK.....	10236, 10180, 10178, 10177		
		TNCi.....	10017		
		Tocom.....	10156		
		Tomashi.....	10282		

**TV/DVD Combination**

Advent.....	11933
Akai.....	11935
Apex Digital.....	11943
Audiovox.....	11937, 11951, 11952
Axion.....	11937
Broksonic.....	11935
Hitachi.....	11960
Jensen.....	11933
Panasonic.....	11941
Prima.....	11933
RCA.....	11948, 11958
Samsung.....	11903
Sansui.....	11935
Sova.....	11952
Toshiba.....	11935

TV/VCR Combination

America Action.....	10180
Audiovox.....	10180
Broksonic.....	11929
Citizen.....	11928
Curtis Mathes.....	11919
Daewoo.....	11928
Emerson.....	10236, 11928, 11929
Funai.....	11904
GE.....	11917, 11919, 11922
GoldStar.....	11926
Harley Davidson.....	11904
Hitachi.....	11904
Lloyd's.....	11904
Magnasonic.....	11928
Magnavox.....	11904, 11931
Memorex.....	11926
Mitsubishi.....	11917
Orion.....	11929
Panasonic.....	11919
Penney.....	11919, 11926

Quasar.....	11919
RadioShack.....	11904
RCA.....	11917, 11919, 11922
Samsung.....	11959
Sansui.....	11904, 11929
Sears.....	11904, 11926
Sharp.....	11917
Sony.....	11904, 11925
Sylvania.....	11931
Symphonic.....	11904
Thomas.....	11904
Toshiba.....	11918, 11936
Zenith.....	11904, 11929

TV/VCR/DVD Combination

Akai.....	11903
Broksonic.....	11938
Emerson.....	11944
ESA.....	11944
Magnavox.....	11944
Panasonic.....	11946, 11947
RCA.....	11953
Sharp.....	11917
Sylvania.....	11944
Symphonic.....	11944
Toshiba.....	11945

VCR

A-Mark.....	20037, 20240, 20000, 20278, 20046
ABS.....	21972
Admiral.....	20060, 20048, 20039, 20047, 20104, 20209, 20020, 20062, 20479
Adventura.....	20037, 20240, 20000
Adyson.....	20072
Aiko.....	20278
Aiwa.....	20037, 20000, 20124, 20307, 20479
Akai.....	20041, 20061, 20106, 20175
Alba.....	20209, 20072, 20278

Alienware.....	21972
Allegro.....	20039
America Action.....	20278
American High.....	20035, 20081
Amstrad.....	20000
Asha.....	20240
Astra.....	20035, 20240
Audiovox.....	20037, 20278, 20038
Avis.....	20000, 20072
Beaumarck.....	20240
Bell & Howell.....	20035, 20048, 20039, 20000, 20104, 20046, 20479
Broksonic.....	20184, 20121, 20209, 20002, 20208, 20479, 21479
Calix.....	20037
Candle.....	20037, 20038
Canon.....	20035
Capehart.....	20002, 20020, 20062
Carrera.....	20240
Carver.....	20035, 20081
CCE.....	20072, 20278
Cineral.....	20278
Citizen.....	20035, 20037, 20240, 20000, 20209, 20278, 20479, 21278
Classic.....	20037
Colortyme.....	20060, 20035, 20045, 20278
Colt.....	20000, 20072
Craig.....	20037, 20047, 20240, 20072, 20271
Criterion.....	20000, 20072
Crosley.....	20035, 20081, 20000, 20149
Crown.....	20072, 20278
Curtis Mathes.....	20060, 20035, 20162, 20240, 20000, 20041, 20278, 20432, 20760, 21035
Cybernex.....	20240
CyberPower.....	21972
Daewoo.....	20037, 20045, 20278, 20020, 20046, 20561, 21278
Daytron.....	20037, 20278, 20020

VCR, con't		
Dell.....	21972	
Denon.....	20081, 20042	
Derwent.....	20041	
DirecTV.....	20739	
Dual.....	20000	
Durabrand.....	20039, 20038	
Dynatech.....	20240, 20000	
Electrohome.....	20060, 20037, 20240, 20000,	
.....	20043, 20209, 20061	
Electrophonic.....	20037	
Emerald.....	20184, 20121	
Emerex.....	20032	
Emerson.....	20037, 20184, 20240, 20000,	
.....	20121, 20043, 20209, 20002, 20278,	
.....	20202, 20208, 20061, 20479, 20561,	
.....	20593, 21278, 21479, 21593	
Fisher.....	20039, 20047, 20000, 20104, 20046	
Fuji.....	20035, 20033	
Fujitsu.....	20045, 20000	
Funai.....	20037, 20000, 20072, 20278, 20593, 21593	
Garrard.....	20000	
Gateway.....	21972	
GE.....	20060, 20035, 20048, 20240, 20000, 20149,	
.....	20202, 20760, 20807, 21035, 21060	
Gemini.....	20060	
General.....	20045	
Genexxa.....	20037, 20000, 20278	
Go Video.....	20240, 20432, 20526, 20614	
GoldStar.....	20035, 20037, 20039, 20000,	
.....	20278, 20038, 21237	
Goodmans.....	20037, 20081, 20000, 20072,	
.....	20278, 20020, 20062	
Gradiente.....	20000, 20008	
Granada.....	20081, 20042	
Grundig.....	20081	
Harley Davidson.....	20000	
Harman/Kardon.....	20081, 20038	
Harvard.....	20072	
Harwood.....	20072	
Headquarter.....	20046	
Hewlett Packard.....	21972	
HI-Q.....	20035, 20047, 20000	
Hitachi.....	20035, 20037, 20045, 20000, 20042,	
.....	20041, 20089, 20105, 21037	
Howard Computers.....	21972	
HP.....	21972	
Hughes Network Systems.....	20042, 20739	
Humax.....	20739	
Hush.....	21972	
Hytek.....	20047, 20000, 20072	
iBUYPOWER.....	21972	
ITT Nokia.....	20240, 20041	
Janeil.....	20240	
Jensen.....	20067, 20041	
JVC.....	20067, 20041, 20008, 20061, 21162	
KEC.....	20037, 20278	
Kenwood.....	20067, 20041, 20038, 20046	
KLH.....	20072	
Kodak.....	20035, 20037	
KTV.....	20000	
LG.....	20037, 20240, 20038, 21037	
Linksys.....	21972	
Lloyd's.....	20240, 20000, 20072, 20038, 20208	
Loewe.....	20081	
Logik.....	20240, 20000, 20072	
Lumatron.....	20278	
Luxor.....	20046, 20106	
LXI.....	20037, 20000, 20042, 20067	
M Electronic.....	20240	
Magnasonic.....	20037, 20240, 20000, 20072, 20278,	
.....	20020, 20593, 21278	
Magnavox.....	20035, 20037, 20048, 20039, 20081,	
.....	20240, 20000, 20149, 20563, 20593,	
.....	20618, 21593, 21781	
Magnin.....	20240	
Marantz.....	20035, 20081, 20038, 20062	
Marta.....	20037	
Matsui.....	20037, 20209	
Matsushita.....	20035, 20162, 20081, 21162	
Media Center PC.....	21972	
MEI.....	20035	
Memorex.....	20035, 20162, 20037, 20048, 20039,	
.....	20047, 20240, 20000, 20104, 20209,	
.....	20072, 20278, 20062, 20046, 20307,	
.....	20479, 21037, 21162, 21237, 21262	
Metz.....	20037	
MGA.....	20060, 20240, 20043, 20061	
MGN Technology.....	20240	
Microsoft.....	21972	
Midland.....	20240	
Mind.....	21972	
Minolta.....	20042, 20105	
Mitsubishi.....	20060, 20048, 20047, 20000, 20042,	
.....	20067, 20043, 20041, 20061, 20807	
Motorola.....	20035, 20048	
Movie Walker.....	20072	
MTC.....	20240, 20000, 20072	
MTX.....	20000	
Multitech.....	20039, 20000, 20072	
NAD.....	20240, 20104	
NEC.....	20104, 20067, 20041, 20038	
New Tech.....	20072	
Nikko.....	20037, 20278	
Nikkodo.....	20037, 20278	
Nishi.....	20240	
Niveus Media.....	21972	
Noblex.....	20240	
Northgate.....	21972	
Olympus.....	20035, 20162, 20104	
Onkyo.....	20222	
Optimus.....	21062, 20035, 20162, 20037, 20048,	
.....	20047, 20240, 20000, 20104, 20062,	



.....20432, 20593, 21048, 21162, 21262
Optonica.....20062
Orion.....20184, 20240, 20000, 20104, 20121,
.....20209, 20002, 20278, 20208, 20479, 21479
Panama.....20035
Panasonic.....21062, 20035, 20162, 20000,
.....20020, 20225, 20614, 20616,
.....21035, 21162, 21262
Penney.....20035, 20162, 20037, 20047, 20081,
.....20240, 20000, 20042, 20067,
.....20038, 21035, 21237
Pentax.....20042, 20105
Philco.....20035, 20081, 20000, 20209, 20479
Philips.....20035, 20162, 20048, 20081, 20045,
.....20000, 20209, 20062, 20616, 20618,
.....20739, 21081, 21181
Pilot.....20037
Pioneer.....20162, 20081, 20042, 20067
Polk Audio.....20081
Portland.....20278, 20020
Presidian.....21593
Profitronic.....20240
Proscan.....20060, 20202, 20760, 21060
Protec.....20000, 20072
Protech.....20072
Pulsar.....20039, 20240, 20278
Pulser.....20240
Quarter.....20046
Quartz.....20035, 20047, 20046
Quasar.....20035, 20162, 20002, 21035, 21162
RadioShack.....20035, 20162, 20037, 20048,
.....20047, 20240, 20000, 20104,
.....20046, 20062, 21037, 21162
Radix.....20037
Randex.....20037
RCA.....20060, 20035, 20048, 20240, 20045,
.....20000, 20042, 20149, 20105, 20106, 20202,
.....20760, 20807, 20880, 21035, 21060

Realistic.....20035, 20162, 20037, 20048, 20047,
.....20240, 20000, 20104, 20121, 20278,
.....20046, 20062, 21162
ReplayTV.....20614, 20616
Ricavision.....21972
Runco.....20039
Samsung.....20060, 20240, 20045, 20000,
.....20038, 20432, 20739, 21014
Samtron.....20240
Sanky.....20048, 20039
Sansui.....20240, 20000, 20067, 20209, 20041,
.....20072, 20002, 20271, 20479, 21479
Sanyo.....20047, 20240, 20000, 20104,
.....20046, 20159, 20479
Scientific Atlanta.....20008
Scott.....20184, 20045, 20121, 20043, 20208
Sears.....20060, 20035, 20162, 20037, 20048, 20039,
.....20047, 20033, 20045, 20000, 20042, 20104,
.....20067, 20043, 20209, 20041, 20072, 20046,
.....20105, 21237
Sharp.....20048, 20047, 20032, 20000,
.....20062, 20807, 20848
Shintom.....20039, 20240, 20000, 20072, 20208
Shogun.....20240
Siemens.....20037, 20104
Signature.....20060, 20035, 20037, 20048,
.....20000, 20149, 20046, 20479
Singer.....20037, 20240, 20072
Sonic Blue.....20614, 20616
Sonographe.....20046
Sony.....20035, 20047, 20032, 20033, 20000,
.....20067, 20046, 20636, 21032, 21232, 21972
Soundmaster.....20000
Stack.....921972
STS.....20042, 20105
SV2000.....20000, 20072
SVA.....20000
Sylvania.....20035, 20081, 20000, 20043,

.....20593, 21593, 21781
Symphonic.....20240, 20000, 20002, 20593, 21593
Systemax.....21972
Tagar Systems.....21972
Tandy.....20000, 20104
Tatung.....20048, 20081, 20000, 20067, 20041, 20008
Teac.....20000, 20067, 20041
Technics.....20035, 20162, 20037, 20000
Teknika.....20035, 20037, 20000
Telecorder.....20240
Telefunken.....20041, 20208
Tevion.....20479
Thomas.....20000, 20002
Thomson.....20060, 20041, 20202
Tisonic.....20278
Tivo.....20618, 20636, 20739, 21996
TMK.....20240, 20000, 20208
TNIX.....20037
Tocom.....20240
Toshiba.....20240, 20045, 20000, 20042, 20043,
.....20209, 20041, 20062, 20845, 21008,
.....21145, 21972, 21996
Tosonic.....20278
Totevision.....20037, 20240
Touch.....21972
Trix.....20037
Ultra.....20045, 20278, 20020
Unitech.....20240
Vector.....20045
Vector Research.....20184, 20038
Vextra.....20072
Victor.....20067, 20041, 20008
Video Concepts.....20045, 20061
Videomagic.....20037
Videosonic.....20240, 20000, 20072
Viewsonic.....21972
Villain.....20000
Voodoo.....21972

VCR, con't		
Wards	20060, 20035, 20037, 20048, 20047, 20081, 20033, 20240, 20045, 20000, 20042, 20043, 20041, 20072, 20038, 20149, 20046, 20062, 20479, 20760	
Wharfedale.....	20593	
White Westinghouse	20000, 20209, 20072, 20278, 20479	
World.....	20209, 20002, 20479	
XR-1000	20035, 20240, 20000, 20072, 20208	
Yamaha	20041, 20038	
Zenith.....	20037, 20039, 20033, 20000, 20209, 20041, 20278, 20479, 21139, 21479	
ZT Group	21972	
DBS/PVR Combination		
Hughes Network Systems	20739	
Philips	20739	
Samsung.....	20739	
DVD/PVR Combination		
Emerson	20000	
RCA.....	20880	
Sylvania.....	20000	
Toshiba	21008, 21996	
PVR		
ABS.....	21972	
Alienware.....	21972	
CyberPower.....	21972	
Dell.....	21972	
DirecTV	20739	
Gateway	21972	
Hewlett Packard	21972	
Howard Computers	21972	
HP	21972	
Hughes Network Systems	20739	
Humax.....	20739	
Hush	21972	
iBUYPOWER.....	21972	
Linksys.....	21972	
Media Center PC.....	21972	
Microsoft.....	21972	
Mind	21972	
Niveus Media	21972	
Northgate	21972	
Panasonic	20616	
Philips	20618, 20739	
RCA.....	20880	
ReplayTV	20614, 20616	
Samsung.....	20739	
Sonic Blue.....	20614, 20616	
Sony	20636, 21972	
Stack 9.....	21972	
Systemax.....	21972	
Tagar Systems	21972	
Tivo	20618, 20636, 20739	
Toshiba	21008, 21972, 21996	
Touch.....	21972	
Viewsonic.....	21972	
Voodoo.....	21972	
ZT Group	21972	
TV/VCR Combination		
Aiwa	20479	
America Action.....	20278	
Audiovox.....	20278	
Broksonic	20002, 20479, 21479	
Citizen	21278	
Colt.....	20072	
Curtis Mathes.....	21035	
Daewoo	21278	
Emerson	20002, 20479, 20593, 21278, 21479	
Funai	20000	
GE	20240, 20807, 21035, 21060	
GoldStar.....	21237	
Harley Davidson	20000	
Hitachi.....	20000	
LG	21037	
Lloyd's.....	20000	
Magnasonic.....	20593, 21278	
Magnavox.....	20000, 20593, 21781	
Magnin.....	20240	
Memorex	20162, 21037, 21162, 21237, 21262	
MGA	20240	
Mitsubishi	20043, 20807	
Optimus.....	20162, 20593, 21162, 21262	
Orion.....	20002, 20479, 21479	
Panasonic	20162, 21035, 21162, 21262	
Penney.....	20240, 21035, 21237	
Quasar.....	20162, 21035, 21162	
RadioShack	20000, 21037	
RCA.....	20240, 20807, 21035, 21060	
Samsung.....	21014	
Sansui.....	20000, 20479, 21479	
Sanyo.....	20240	
Sears.....	20000, 21237	
Sharp.....	20807	
Sony	20000, 21232	
Sylvania.....	21781	
Symphonic	20000, 20593	
Thomas.....	20000	
Toshiba.....	20845, 21145	
Zenith.....	20000, 20479, 21479	
TV/VCR/DVD Combination		
Sharp.....	20807	
DVD Blue Ray Disk Players		
Integra.....	22147	
LG	20741	
Marantz.....	22414	
Onkyo	22147	
Panasonic	21641	



Sony	21516	Clairtone	20571	Goodmans	20790
Samsung	20199	Coby	20778, 21086, 21107, 21177	Gradiente	20490, 20651
DVD Players		Craig	20831	Greenhill	20717
3D LAB	20503, 20539	Creative	20503, 20539	Grundig	20539, 20705
Accurian	21072, 21416	Curtis Mathes	21087	Harman/Kardon	20582, 20702
Acoustic Solutions	20730	CyberHome	20816, 20874, 21023, 21024, 21117, 21129, 21502	Hitachi	20573, 20664, 21247, 21764
Advent	21016	Cytron	20705	Hiteker	20672
Afreedy	20698	Daewoo	20784, 20705, 20770, 20833, 20869, 21169, 21172, 21234, 21242	Humax	21588
Aiwa	20641	Dansai	20770	iLo	21348
Akai	20695, 20705, 20770, 20899, 21089	Daytek	20872	Initial	20717
Alba	20672, 20717	Decca	20770	Insignia	21268
Alco	20790	Denon	20490, 20634	Integra	20571, 20627
Allegro	20869	Denver	20778	IRT	20783
Amphion Media Works	20872	Desay	21407	JBL	20702
AMW	20872	Digitrex	20672	Jensen	21016
Apex Digital	20533, 20672, 20717, 20755, 20794, 20796, 20797, 20830, 21004, 21020, 21056, 21061, 21100	Disney	20675, 21270	JMB	20695
Arrgo	21023	DiViDo	20705	JVC	20558, 20623, 20867, 21164
Aspire Digital	21168, 21407	Dual	20675, 21068, 21085	Kawasaki	20790
Audiovox	20717, 20790, 21041, 21071, 21072, 21121, 21122	Durabrand	21127	Kenwood	20490, 20534
Awa	20730	DVD2000	20521	KLH	20717, 20790, 21020, 21149
Axion	21071, 21072	Electrohome	21003	Kloss	20533
Blaupunkt	20717	Emerson	20591, 20675, 20821, 21268	Koss	20651, 21061
Blue Parade	20571	Enterprise	20591	Lasonic	20627, 20798
Blue Sky	20695	Entivo	20503, 20539	Lecson	21533
Bose	21895	Enzer	20770	Lenoxx	21127
Brandt	20651	ESA	20821, 21268	LG	20591, 20741, 20801, 20869
Broksonic	20695, 20868	Firstline	20651	LiteOn	21058, 21158, 21416, 21440
Byd:sign	20872	Fisher	20670	Loewe	20511, 20741
California Audio Labs	20490	Funai	20675, 21268, 21334	Logix	20783
Celestial	21020	Gateway	21073, 21158	Magnasonic	20651, 20675
Centrex	20672, 21004	GE	20522, 20815, 20717	Magnavox	20503, 20539, 20646, 20675, 20821, 21268
Cinea	20831	Go Video	20573, 20744, 20717, 20715, 20741, 20783, 20833, 20869, 21044, 21075, 21099, 21158, 21304, 21730	Malata	20782, 21159
CineVision	20876, 20833, 20869	Go Vision	21071, 21072	Marantz	20503, 20539, 20675
Citizen	21003, 21277	GoldStar	20741, 20801, 20869	McIntosh	21533

DVD Players, con't

Minato.....	20752
Mintek.....	20839, 20717
Mitsubishi.....	21521, 20521, 21403
Momitsu.....	21082
Mustek.....	20730
NAD.....	20591, 20741
Naiko.....	20770
NEC.....	20785, 20869
Nesa.....	20717
NexxTech.....	21402
Norcent.....	21003, 20872, 21107, 21265
Onkyo.....	20503, 20627, 20792
Optimus.....	20571
Oritron.....	20651
Palsonic.....	20672
Panasonic.....	20503, 20490, 20571, 20703, 21362, 21462, 21490, 21632, 21762
Philips.....	20503, 20539, 20646, 20675, 20854, 21260, 21267, 21354
PianoDisc.....	21024
Pioneer.....	20525, 20571, 20631
Polaroid.....	21020, 21061, 21086
Polk Audio.....	20539
Portland.....	20770
Presidian.....	20675, 21072
Prima.....	21016
Proceed.....	20672
Proscan.....	20522
ProVision.....	20778
Qwestar.....	20651
Radionette.....	20741
RadioShack.....	20571
RCA.....	20522, 20571, 20717, 20790, 20822, 21022, 21132
Realistic.....	20571
Reoc.....	20752
Rio.....	20869

Rotel.....	20623
Rowa.....	20823, 21004
Saba.....	20651
Sampo.....	20698, 20752
Samsung.....	20490, 20573, 20744, 20820, 20899, 21044, 21075
Sansui.....	20695
Sanyo.....	20670, 20675, 20695, 20873, 21334
Schneider.....	20783
Schwaiger.....	20752
Sensory Science.....	21158
Sharp.....	20630, 20675, 20752, 21256, 21642
Sharper Image.....	21117
Sherwood.....	20770, 21043
Shinonic.....	20533, 20839
Slim Art.....	20784
SM Electronic.....	20730
Sonic Blue.....	20573, 20715, 20783, 20869, 21099
Sony.....	20533, 21533, 20864, 21033, 21070, 21431
Sova.....	21122
Superscan.....	20821
SVA.....	20717, 20860
Sylvania.....	20675, 20821, 21268
Symphonic.....	20675, 20821, 21268, 21334
Tatung.....	20770
Teac.....	20571, 20717, 20790
Technics.....	20490, 20703
Technika.....	20770
Technosonic.....	20730
Tevion.....	20651
Theta Digital.....	20571
Thomson.....	20522, 20511
Tivo.....	21503, 21588
Toshiba.....	20503, 20573, 20539, 20695, 21045, 21154, 21503, 21588, 21639
Tredex.....	20800
Unimax.....	20770

 
United.....	20730
Universum.....	20591
Urban Concepts.....	20503, 20539
US Logic.....	20839
V.....	21064, 21226
Venturer.....	20790
Victor.....	21597
Vizio.....	21064, 21226
Xbox.....	20522, 21708
Yamaha.....	20490, 20539, 20545
Yamakawa.....	20872
Zenith.....	20503, 20591, 20741, 20869
Zeus.....	20784
Zoece.....	21265

DVD/PVR Combination

Emerson.....	20675
Go Video.....	21730
Hitachi.....	21764
Mitsubishi.....	21403
Panasonic.....	20490, 21632
Pioneer.....	20631
RCA.....	20522
Sharp.....	20630, 21256, 21642
Sony.....	21033
Sylvania.....	20675
Toshiba.....	21503, 21639
Victor.....	21597

TV/DVD Combination

Advent.....	21016
Akai.....	20695
Apex Digital.....	20830
Audiovox.....	21071, 21121, 21122
Axion.....	21071
Broksonic.....	20695
Emerson.....	20675, 21268
ESA.....	21268

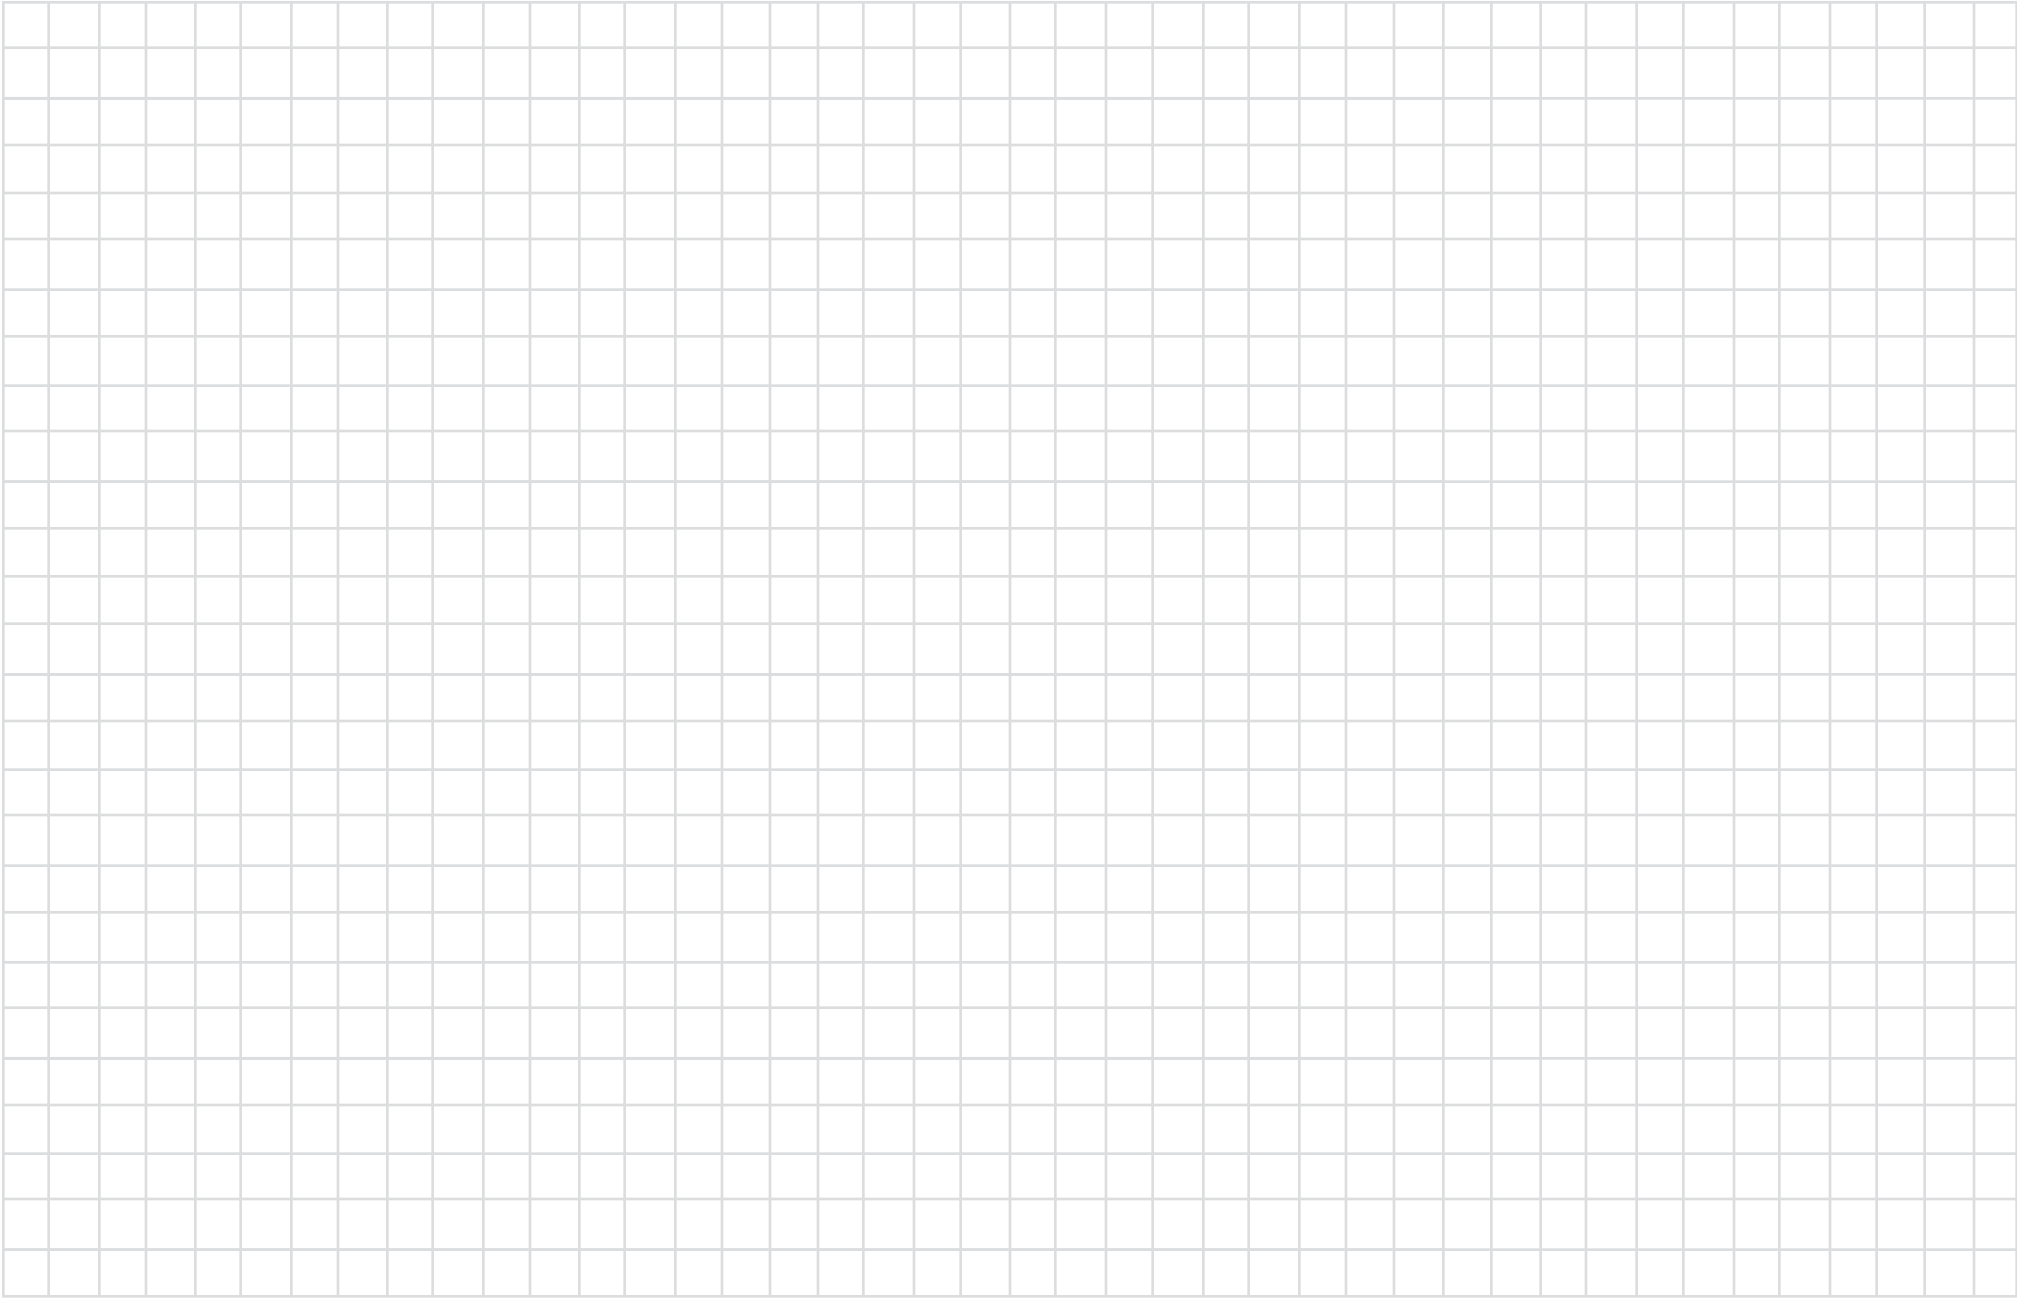



McIntosh Laboratory, Inc.
2 Chambers Street
Binghamton, NY 13903
www.mcintoshlabs.com

The continuous improvement of its products is the policy of McIntosh Laboratory Incorporated who reserve the right to improve design without notice.
Printed in the U.S.A.