


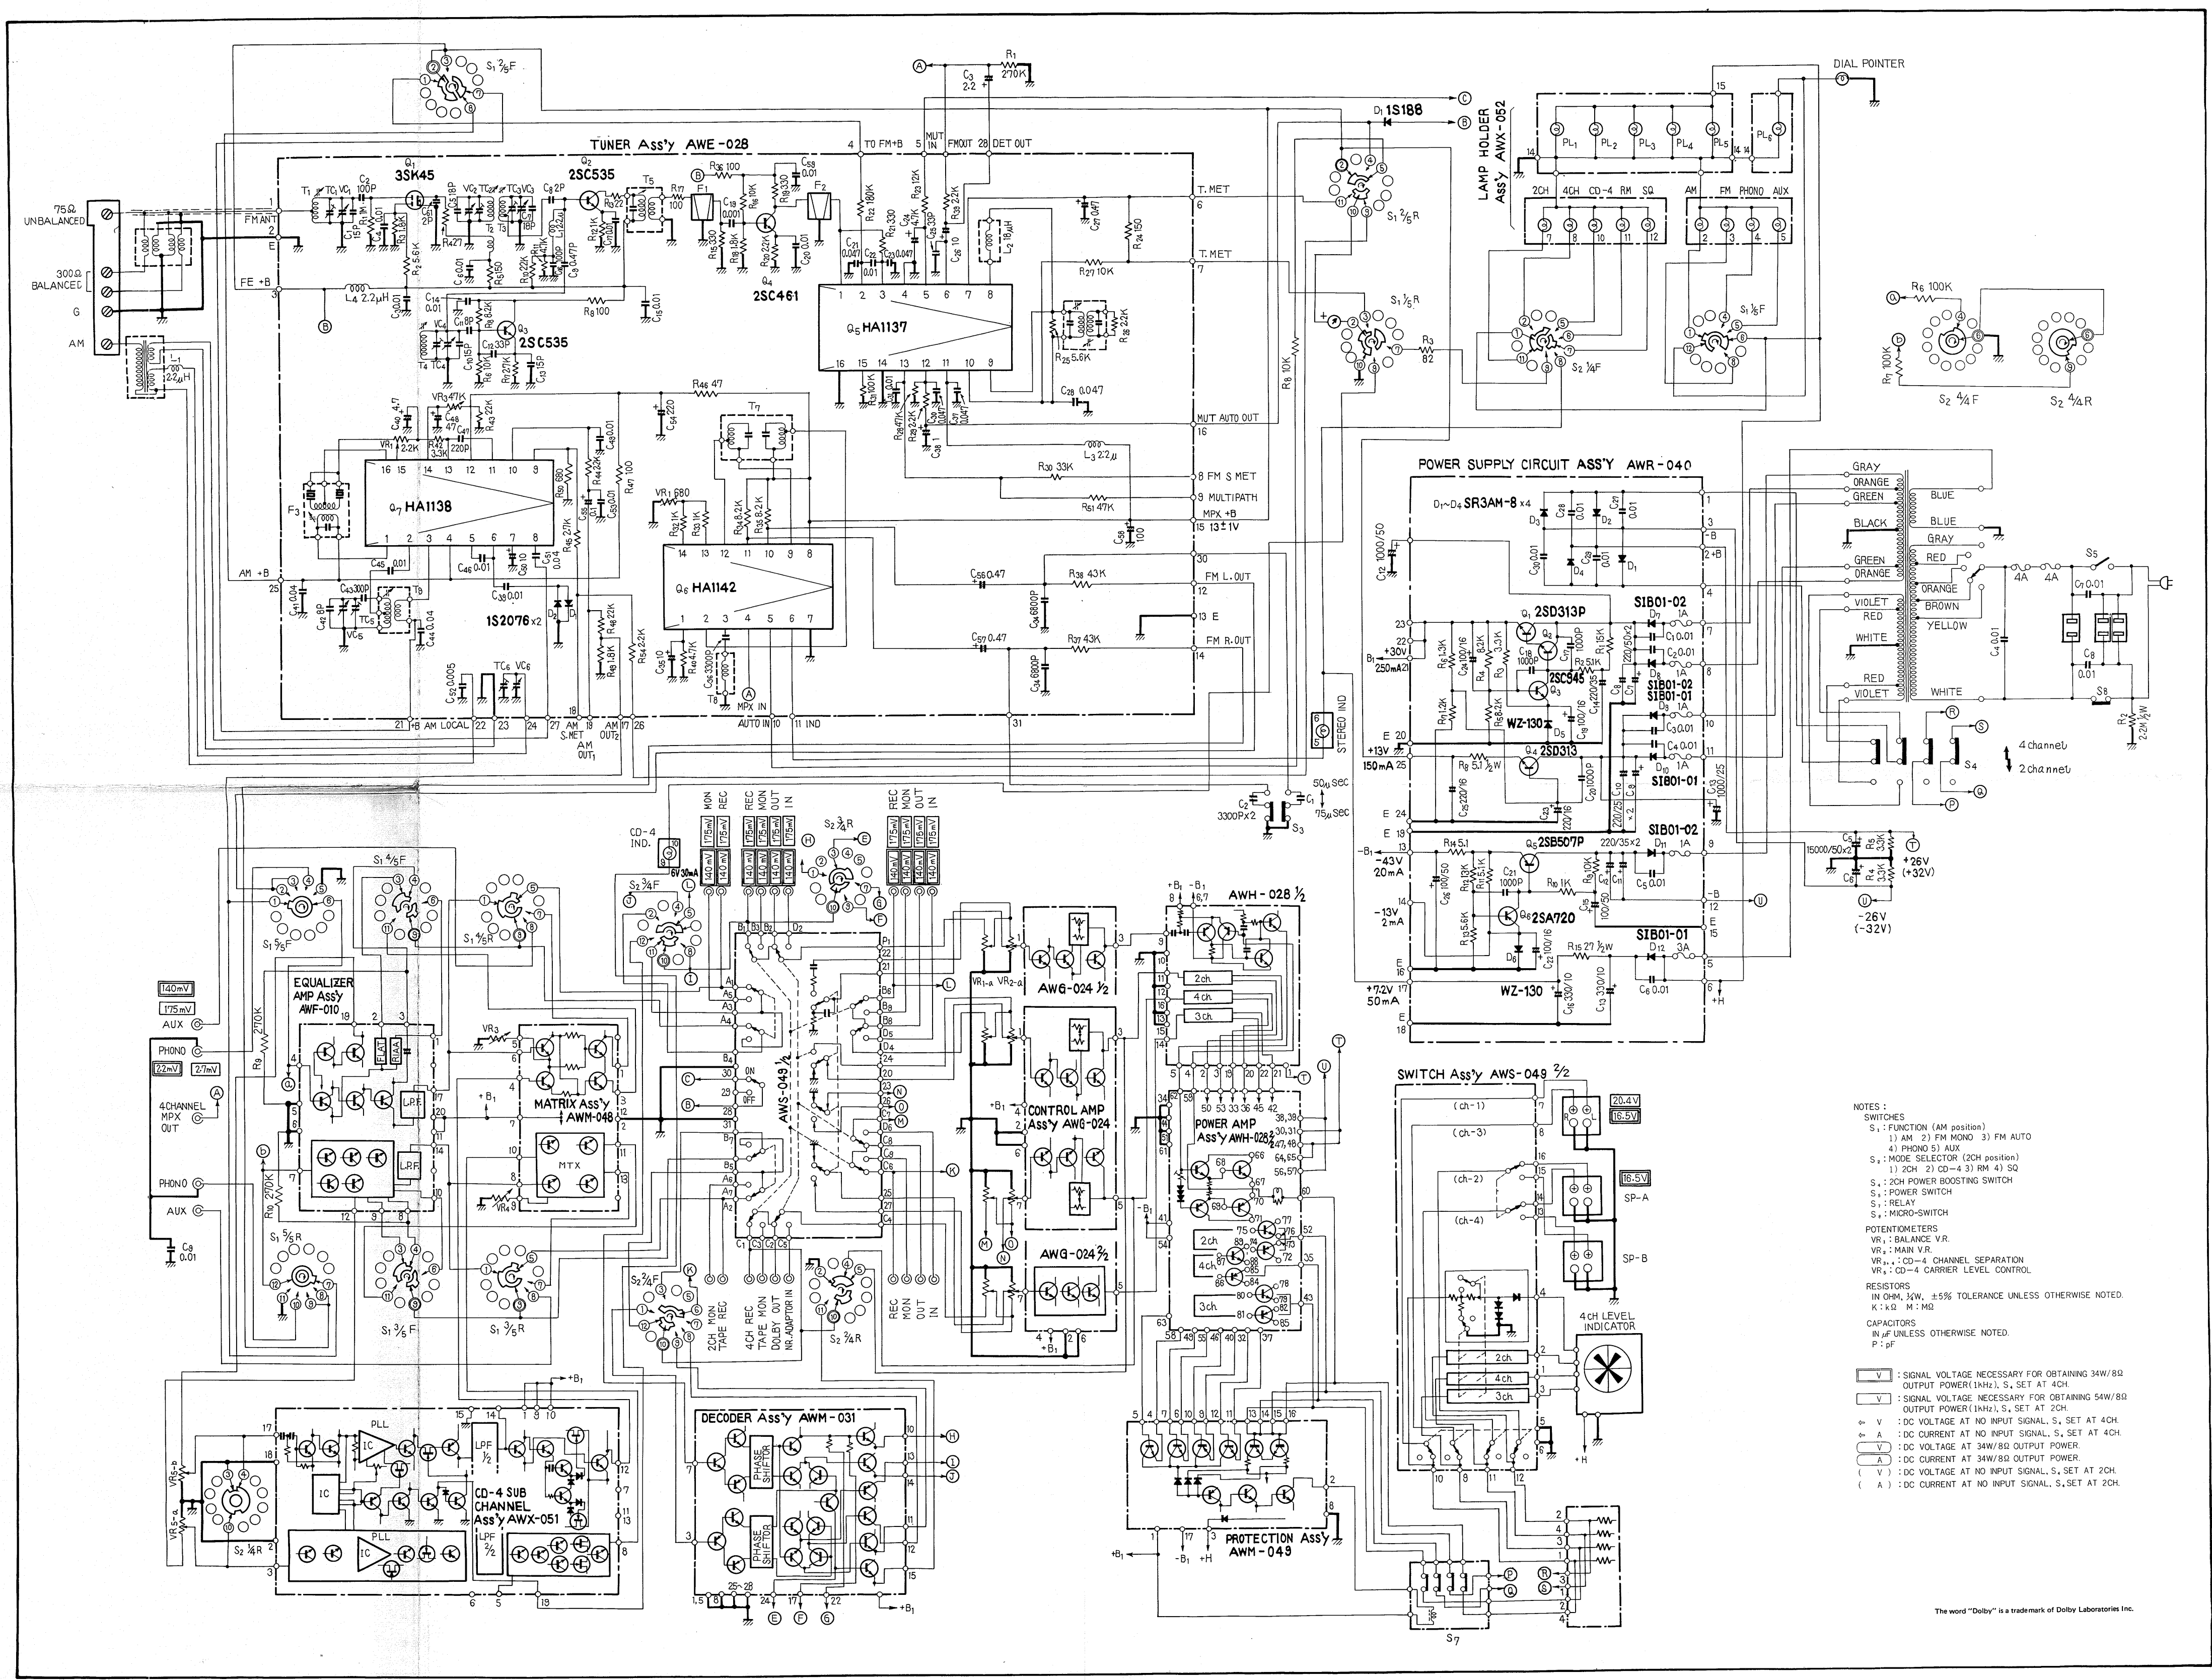

NOTES:

SWITCHES

S₁: FUNCTION (AM position)

1) AM 2) FM MONO 3) FM AUTO

4) PHONO 5) AUX

S₂: MODE SELECTOR (2CH position)

1) 2CH 2) CD-4 3) RM 4) SQ

S₃: 2CH POWER BOOSTING SWITCH

S₄: POWER SWITCH

S₅: RELAY

S₆: MICRO-SWITCH

POTENTIOMETERS

VR₁: BALANCE V.R.

VR₂: MAIN V.R.

VR₃: CD-4 CHANNEL SEPARATION

VR₄: CD-4 CARRIER LEVEL CONTROL

RESISTORS

IN OHM, 1/4W, ±5% TOLERANCE UNLESS OTHERWISE NOTED.

K: k Ω M: M Ω

CAPACITORS

IN μF UNLESS OTHERWISE NOTED.

P: pF

V: SIGNAL VOLTAGE NECESSARY FOR OBTAINING 34W/8Ω OUTPUT POWER (1kHz), S₁ SET AT 4CH.

V: SIGNAL VOLTAGE NECESSARY FOR OBTAINING 54W/8Ω OUTPUT POWER (1kHz), S₁ SET AT 2CH.

V: DC VOLTAGE AT NO INPUT SIGNAL, S₁ SET AT 4CH.

A: DC CURRENT AT NO INPUT SIGNAL, S₁ SET AT 4CH.

V: DC VOLTAGE AT 34W/8Ω OUTPUT POWER.

A: DC CURRENT AT 34W/8Ω OUTPUT POWER.

V: DC VOLTAGE AT NO INPUT SIGNAL, S₁ SET AT 2CH.

A: DC CURRENT AT NO INPUT SIGNAL, S₁ SET AT 2CH.

