


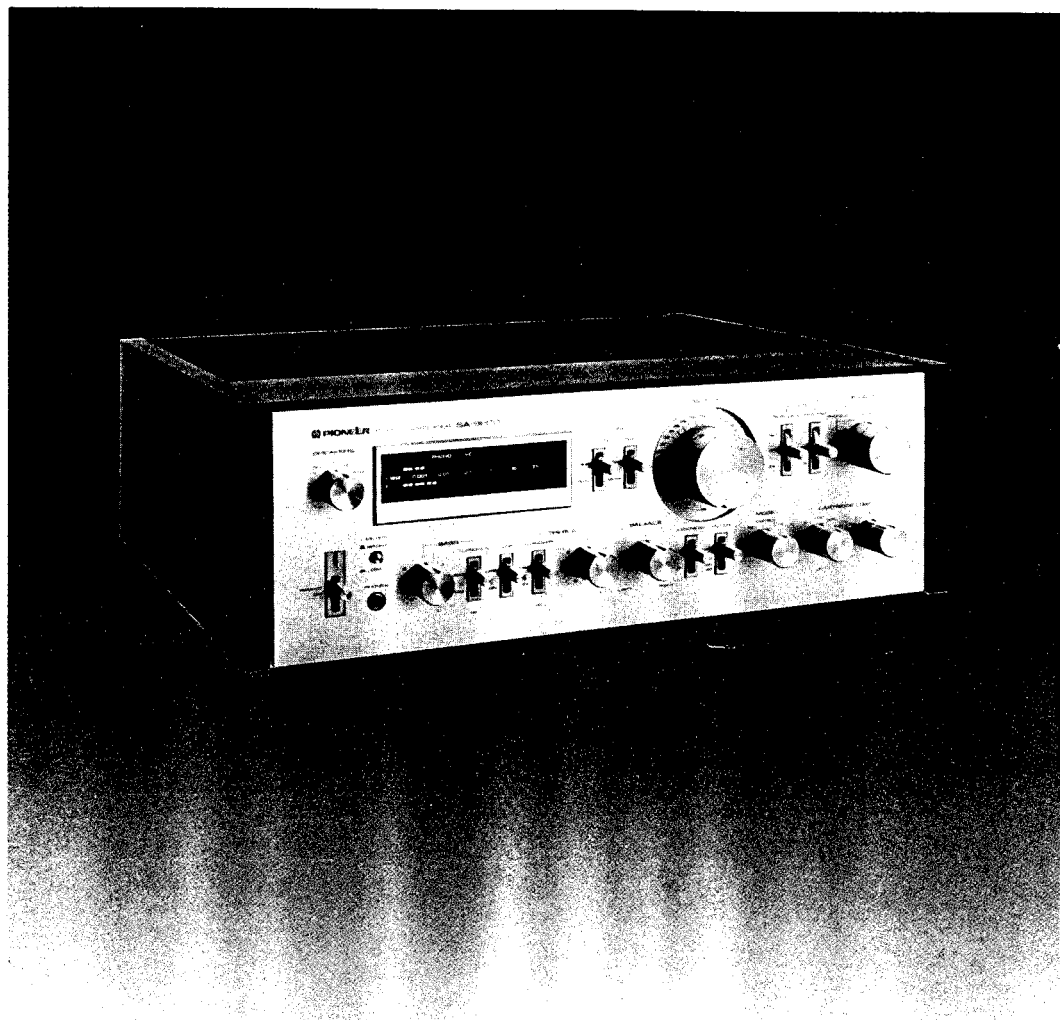

Service Manual

STEREO AMPLIFIER

SA-9800

 **PIONEER®**

MODEL SA-9800 COMES IN FIVE VERSIONS DISTINGUISHED AS FOLLOWS:

Type	Voltage	Remarks
KU	120V only	U.S.A. model
KC	120V only	Canada model
HG	220V and 240V (Switchable)	Europe or Oceania model
S/G	110V, 120V, 220V and 240V (Switchable)	U.S. Military model
S	110V, 120V, 220V and 240V (Switchable)	General export model

The variations in safety standards in different countries has also necessitated variations in power supply and circuit component specifications.

This service manual is applicable to the KU type. For the servicing of the other types please refer to the additional service manuals.

CONTENTS

1. SPECIFICATIONS	3	11.11 PA-R Assembly (GWH-120)	45
2. FRONT PANEL FACILITIES	4	11.12 Tape Terminal Assembly (GWX-262)	48
3. REAR PANEL FACILITIES	7	11.13 Tape Switch Assembly (GWS-172)	48
4. BLOCK DIAGRAM	8	11.14 Indicator Assembly (AWV-002)	49
5. CIRCUIT DESCRIPTIONS		11.15 VR Assembly (GWX-256)	51
5.1 Pre-amplifier Section	8	11.16 Protection Assembly (AWM-163)	52
5.2 Power Amplifier Section	10	11.17 Rectifier Assembly (AWR-192)	53
5.3 Indicator Circuit	13	11.18 Power Supply Assembly (AWR-191)	54
5.4 Protection Circuit	14	Additional Service Manual for S, S/G Types	57
6. DISASSEMBLY	15		
7. PARTS LOCATION	16		
8. ADJUSTMENTS	18		
9. PACKING	20		
10. EXPLODED VIEW	21		
11. SCHEMATIC DIAGRAMS, P.C. BOARD PATTERNS AND PARTS LIST			
11.1 Miscellanea	25		
11.2 Schematic Diagram	27		
11.3 P.C. Boards Connection Diagram	31		
11.4 Input Terminal Assembly (GWX-261)	35		
11.5 CR Assembly (GWX-257)	35		
11.6 EQ Assembly (GWF-116)	36		
11.7 Switch Assembly (GWS-171)	39		
11.8 TC Assembly (GWG-124)	40		
11.9 Filter Assembly (GWS-176)	41		
11.10 PA-L Assembly (GWH-119)	42		

1. SPECIFICATIONS

Semiconductors

ICs	3
FETs	6
Transistors	73
Diodes	36
Others	3

Power Amplifier Section

Continuous Power Output is 100watts* per channel, min., at 8 ohms from 10 Hertz to 20,000 Hertz with no more than 0.005% total harmonic distortion, or 100 watts* per channel at 4 ohms from 10 Hertz to 20,000 Hertz with no more than 0.005% total harmonic distortion.

Continuous Power Output

10Hz to 50kHz . . . 100W + 100W (T.H.D. 0.01%, 8 ohms)
120W + 120W (T.H.D. 0.02%, 4 ohms)

Total Harmonic Distortion (10 Hertz to 20,000 Hertz)

continuous rated power output . . No more than 0.005%
50 watts per channel power output, 8 ohms

..... No more than 0.004%

1 watt per channel power output, 8 ohms

..... No more than 0.004%

Intermodulation Distortion (50 Hertz : 7,000 Hertz = 4 : 1)

continuous rated power output . . No more than 0.002%
50 watts per channel power output, 8 ohms

..... No more than 0.002%

1 watt per channel power output, 8 ohms

..... No more than 0.002%

Frequency Response 5 to 200,000 Hertz ± 2 dB
(POWER AMP IN)

Input (Sensitivity/Impedance) 1V/50 kilohms
(POWER AMP IN)

Output

Speaker A, B, A+B

Headphones Low impedance

Damping Factor

(20 Hertz to 20,000 Hertz, 8 ohms) 55

Hum and Noise

(IHF, short-circuited, A network). 118dB

Preamplifier Section

Input (Sensitivity/Impedance)

PHONO 1 MM	2.5mV/50 kilohms
PHONO 2 MM	2.5mV/50 kilohms
PHONO 2 MC	100 μ V/100 ohms

CARTRIDGE LOAD Both Phono 1 and 2
100, 10k, 25k, 50k, 100k ohms
100, 200, 300, 400, 500pF

TUNER 150mV/50 kilohms

AUX 150mV/50 kilohms

TAPE PLAY 1 150mV/50 kilohms

TAPE PLAY 2 150mV/50 kilohms

Phono Overload Level (T.H.D. 0.002%, 1kHz)

PHONO 1 250mV

PHONO 2 250mV (MM), 10mV (MC)

Output (Level/Impedance)

TAPE REC 1 150mV

TAPE REC 2 150mV

PRE OUT 1V/600 ohms, 3V/600 ohms (max.)

Total Harmonic Distortion

10 to 50,000 Hertz, 1V output . . No more than 0.006%

Frequency Response

PHONO (RIAA Equalization)

..... 20Hz to 20,000Hz ± 0.2 dB

TUNER, AUX, TAPE PLAY . . 5Hz to 100,000Hz ± 1 dB

Tone Control

BASS 400Hz position . . . +10dB, -10dB (100Hz)

200Hz position . . . +10dB, -10dB (50Hz)

Turnover Frequency 400Hz/200Hz

TREBLE 2.5kHz position . . . +10dB, -10dB (10kHz)

5kHz position . . . +10dB, -10dB (20kHz)

Turnover Frequency 2.5kHz/5kHz

Filter SUBSONIC 15Hz (12dB/oct)

HIGH 8kHz (12dB/oct)

Hum and Noise (IHF, short-circuited, A network)

PHONO MM/MC 90dB/72dB

TUNER, AUX, TAPE PLAY 110dB

Muting -20dB

Loudness Contour (Volume control set at -40dB position)

..... +6dB (100Hz), +3dB (10kHz)

Miscellaneous

Power Requirements 120V, 60Hz

Power Consumption 230W (UL)

Dimensions 453(W) x 155(H) x 415(D) mm

17-11/16(W) x 6-1/8(H) x 16-3/4(D) in

Weight Without package 18.4kg (40 lb 9 oz)

Furnished Parts


Operating instructions 1

* Measured pursuant to Federal Trade Commission's Trade Regulation rule on Power Output Claims for Amplifier.

NOTE:

Specifications and the design subject to possible modification without notice due to improvements.

2. FRONT PANEL FACILITIES

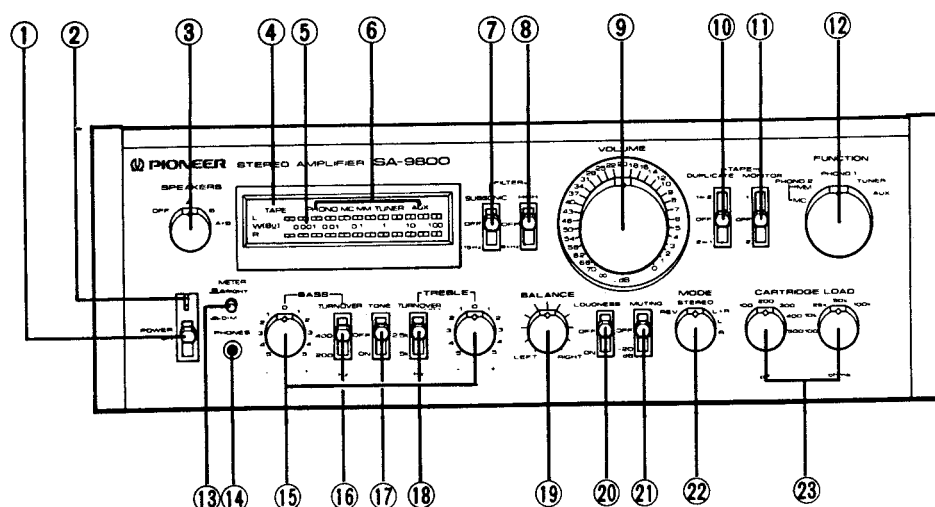

① POWER SWITCH

Set this switch to ON to supply power to the amplifier. There will be a short delay when it is set to ON, because the muting circuit has been actuated to suppress the unpleasant noise that is sometimes generated when the power is on and off.

② POWER INDICATOR

When the power switch is set to ON, this lamp lights up, indicating the amplifier is turned on.

③ SPEAKER SELECTOR

Use this selector to select the speaker systems.

OFF: Sound not obtained from speakers.

A: Sound obtained from speakers connected to the A speaker terminals.

B: Sound obtained from speakers connected to the B speaker terminals.

A+B: Sound obtained from speakers connected to both A and B speaker terminals.

④ TAPE MONITOR INDICATOR

The TAPE lamp lights up when the tape monitor switch is set to either position "1" or "2".

⑤ POWER METER

This meter allows you to read out the rated power level on the fluorescent display tube when speakers with a nominal impedance of 8 ohms are connected to the amplifier's speaker terminals.

⑥ FUNCTION INDICATORS

The PHONO, MC, MM, TUNER, AUX function indicators light up in accordance with the position of the function selector.

NOTE:

The function indicator will not go off when the tape monitor switch is set to position "1" or "2". This indicates a program at the recording source end during the monitoring of a recording.

⑦ SUBSONIC FILTER SWITCH

When this switch is set to the 15Hz position, the subsonic filter with a cut-off frequency of 15Hz is actuated. The subsonic filter serves to attenuate frequencies lower than 15Hz in a 12dB/oct slope. It is therefore effective in suppressing ultra-low frequency noise which is generated by record warp and other causes. You cannot actually hear this noise but it is a factor in the generation of intermodulation distortion and it may damage your speaker system. Set this switch to the 15Hz position during record play for the best effect.

⑧ HIGH FILTER SWITCH

The high filter with a cut-off frequency of 8kHz is actuated when this switch is set to the 8kHz position.

The high filter serves to attenuate frequencies higher than 8kHz in a 12dB/oct slope. This is why it is effective in suppressing high-frequency noise or noise from scratches on records being played.

⑨ VOLUME CONTROL

Use this control to adjust the output level to the speakers and headphones. Turn it clockwise to increase the output level. No sound will be heard if you set it to ∞ . The scale is graduated in dB which indicate the attenuation when the maximum output level is 0dB.

⑩ TAPE DUPLICATE SWITCH

Use this switch when employing two tape decks to duplicate recorded tapes or edit tapes. This switch is otherwise kept at the OFF position.

1►2: When playing back the tape on a deck connected to the TAPE 1 jacks and recording (duplicating) on a deck connected to the TAPE 2 jacks.

OFF: Set to this position when not duplicating.

2►1: When playing back the tape on a deck connected to the TAPE 2 jacks and recording (duplicating) on a deck connected to the TAPE 1 jacks.

⑪ TAPE MONITOR SWITCH

Use this switch to select the program source which is being reproduced.

1: Set here to monitor a recording or a tape being played back on a tape deck which is connected to the TAPE 1 jacks.

OFF: Set here whenever you are not playing back a tape or monitoring a recording (i.e. when you have set the function selector to PHONO 1, PHONO 2 MM, MC, TUNER, or AUX for an alternative program source).

2: Set here to monitor a recording or a tape being played back on a tape deck which is connected to the TAPE 2 jacks.

⑫ FUNCTION SELECTOR

Use this selector to select the program source. When set, the function indicator above the meter panel corresponding to the position of the function selector will light up.

PHONO 2 MC: Set here when playing records on a turntable with a moving coil (MC) cartridge connected to the rear PHONO 2 jacks.
(The PHONO MC function indicator lights up.)

PHONO 2 MM: Set here when playing records on a turntable with a moving magnet (MM) cartridge connected to the rear PHONO 2 jacks.
(The PHONO MM function indicator lights up.)

PHONO 1: Set here when playing records on a turntable connected to the PHONO 1 jacks.
(The PHONO MM function indicator lights up.)
If you intend to play a record on a turntable with a moving coil cartridge, connect the turntable to the rear PHONO 2 jacks and then set the function selector to the PHONO 2 MC position.

TUNER: Set here when listening to broadcasts on a tuner connected to the TUNER jacks.
(The TUNER function indicator lights up.)

AUX: Set here when listening to a program source which is connected to the AUX jacks.

(The AUX function indicator lights up.)

NOTE:

When the function selector is set to the PHONO 2 MM or PHONO 1 position, you can select the input circuit resistance and the input capacitance in line with the load impedance of the cartridge being used with the CARTRIDGE LOAD selectors (ohms and pF).

⑬ METER SWITCH

This allows you to select the brightness of the meter panel.

BRIGHT (released position): This brightens the meter panel.

DIM (depressed position): This dims the meter panel. When your listening room is dark and the meter panel is too bright, set the switch to the DIM position.

⑭ HEADPHONE JACK

Plug the headphones into this jack when you want to listen through your stereo headphones.

NOTE:

Set the speaker selector to OFF when listening only with headphones.

⑮ BASS AND TREBLE CONTROLS

Use these controls to adjust the bass and the treble. If you set the tone switch to ON and turn the bass control to right from its center position, you will be able to emphasize the sound in a frequency range is lower than that selected by the bass turnover switch.

Conversely, turning this control from the center position to the left will attenuate the sound.

You can use the treble control to adjust the sound in a frequency higher than that selected by the treble turnover switch. For further details, refer to "TURNOVER SWITCHES" on page 6.

⑯ BASS TURNOVER SWITCH

Use this switch to change over the frequency in which the sound adjustment with the bass control is starting to take effect. Select 200Hz or 400Hz in accordance with the characteristics of your listening room and of your speakers, and with your general preference.

⑰ TONE SWITCH

Set this switch to ON when adjusting the bass and treble controls. When set to OFF, the tone control circuits are disengaged and frequency response is flat. This function is convenient for checking phono cartridge and speaker tone quality and listening room acoustics.

⑱ TREBLE TURNOVER SWITCH

Use this switch to change over the frequency in which the sound adjustment with the treble control is starting to take effect. Select 2.5kHz or 5kHz in accordance with the characteristics of your listening room and of your speakers, and with your general preference.

⑲ BALANCE CONTROL

Use this control to balance the volume of the left and right channels. First, however, set the mode selector to mono (L+R, L, or R), and adjust so that the sound appears to come from somewhere exactly between the two speakers. If the sound appears to be louder on the right, it means that the volume of the right channel is higher. Turn the balance control to the left and adjust.

Conversely, if the sound appears to be louder on the left, it means that the volume of the left channel is higher. Therefore, turn the balance control to the right and adjust. After adjusting, return the mode selector to STEREO.

⑳ LOUDNESS SWITCH

When listening to a performance with the volume control turned down, set this switch to ON and the bass and treble will be accentuated.

When the volume is low, the human ear finds it harder to hear the bass and treble than when the volume is high. The loudness switch is thus designed to compensate for this deficiency. By setting it to ON, the bass and treble come through much more strongly and the sound takes on a punch even when the volume control is turned down.

㉑ MUTING SWITCH

Set this switch to -20dB to attenuate the audio output indicated by the volume control by 20dB. There is no need to adjust the volume control if you use this switch when turning down the audio output temporarily and when changing over records or tapes.

㉒ MODE SELECTOR

Use this selector for selecting the performances.

REV: Reverses left and right channel stereo signals and reproduces them stereophonically.

STEREO: Set to this position for normal stereo reproduction.

L+R: Mixes left and right channel signals and reproduces them monophonically.

L: Left channels signal is reproduced monophonically from both speakers.


R: Right channel signal is reproduced monophonically from both speakers.

㉓ CARTRIDGE LOAD SELECTORS (ohms and pF)

These selectors allow you to select the input resistance and input capacitance in line with the rated load impedance and load capacitance of a moving magnet (MM) cartridge for record play.

Use these two switches to produce the sound quality of your preference or the ideal conditions for your cartridge.

TURNOVER SWITCHES

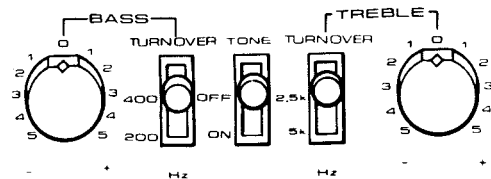

This amplifier adopts a tone control system that combined bass and treble controls with two turnover switches which are used to select the frequency. Select the frequency with the turnover switches and then enhance or attenuate the sound in the lower (or higher) frequencies with the bass (or treble) controls.

For instance, if the bass turnover switch is set to 400Hz (see Fig. A), the bass covers a wide with large gain per step of the bass control. For this reason, the reproduced sound sometimes seems unnatural depending on the program source, but this can be remedied by setting the switch to 200Hz.


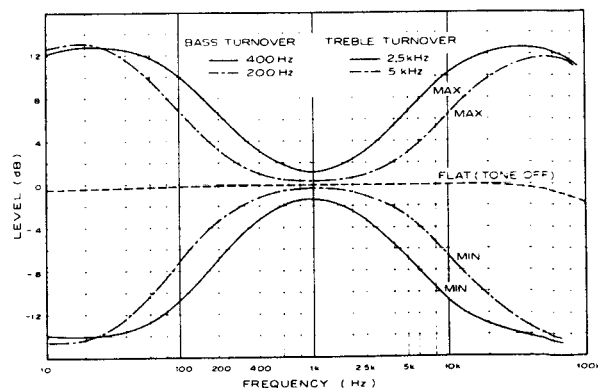


Fig. A

3. REAR PANEL FACILITIES

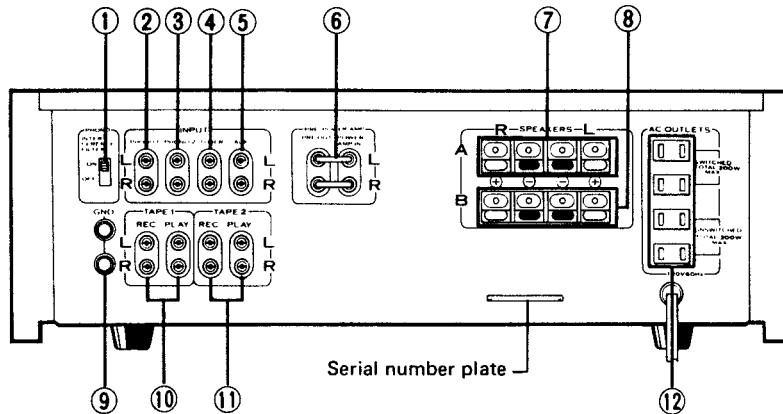

① PHONO INTERFERENCE FILTER SWITCH

This is used to attenuate radio-frequency interference from external electronic or electrical appliances or products during record play.

NOTE:

When the function selector is at *PHONO 2 MC*, this function doesn't operate, since it is not necessary when playing with the moving coil cartridge.

② PHONO 1 JACKS

Connect the output cords of the turntable with the moving magnet (MM) cartridge to these jacks.

③ PHONO 2 JACKS

When using the moving coil (MC) cartridge, be sure to connect the output cords of the turntable to these jacks. However, these jacks can also be used for the moving magnet (MM) cartridge.

④ TUNER JACKS

Connect the tuner cords to these jacks.

⑤ AUX JACKS

These are auxiliary input jacks. Connect a TV tuner or cartridge tape player to them.

⑥ PREAMPLIFIER/POWER AMPLIFIER CONNECTOR BAR

When this connector bar is disconnected from the jacks, you can separate the SA-9800's preamplifier and power amplifier.

NOTE:

If this bar is not connected properly, you will not hear any sound from the speakers connected to the *SPEAKERS* terminals.

⑦ SPEAKERS TERMINALS A

Connect your first pair of speakers to these terminals.

⑧ SPEAKERS TERMINALS B

Connect your second pair of speakers to these terminals.

⑨ GND TERMINALS

These are the ground terminals. Connect the ground wire of the turntable, etc. to these terminals.

⑩ TAPE 1 JACKS

Connect the tape deck cords to these jacks. Connect the REC (recording) jacks to the INPUT jacks on the tape deck, and the PLAY (playback) jacks to the OUTPUT jacks.

⑪ TAPE 2 JACKS

Connect your second tape deck cords to these jacks.

⑫ AC OUTLETS

These are spare power outlets. Insert the power plug on the stereo components (turntable, tuner, tape deck, etc.) into these outlets.


SWITCHED: The power supplied through these outlets is coupled to the operation of the amplifier's power switch. The maximum power capacity which may be connected to the two SWITCHED outlets is 200W.

UNSWITCHED: The power is always supplied through these two outlets regardless of the position of the power switch. The maximum power capacity which may be connected to these two outlets is 200W.

NOTES:

- Never connect an iron or a toaster to these outlets.
- Do not get the power outlets and the power plugs wet or touch them with wet hands, since you may get an electric shock.

4. BLOCK DIAGRAM

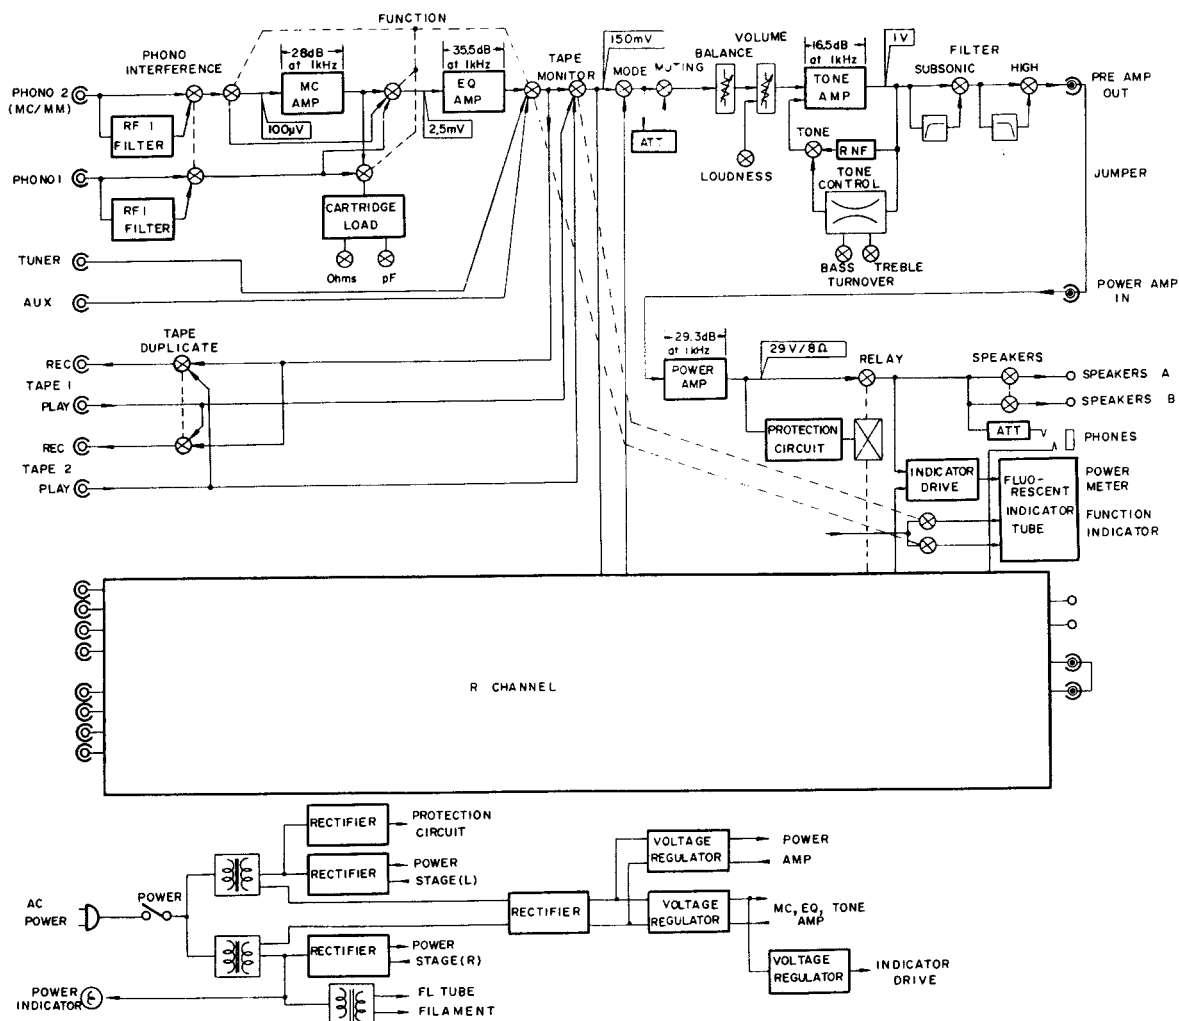

5. CIRCUIT DESCRIPTIONS

5.1 PRE-AMPLIFIER SECTION

Cartridge Load Selector

The input resistance and input capacitance of the PHONO (MM) input may be varied. The EQ amplifier input resistance is set to $100\text{k}\Omega$, and the input capacitance to 100pF . By operation of the CARTRIDGE LOAD selectors, different resistors and capacitors will be in parallel with the phono input circuit. Five different input resistance levels (100Ω , $10\text{k}\Omega$, $30\text{k}\Omega$, $50\text{k}\Omega$ and $100\text{k}\Omega$) and five different input capacitance levels (100pF , 200pF , 300pF , 400pF and 500pF) are available, permit-

ting the user to select optimum load conditions for the phono cartridge being employed in the turntable connected to the PHONO terminals.

This function is only effective when the FUNCTION switch is in the PHONO (1 or 2) MM position.

Phono Interference Filter

Because of the high sensitivity of the phono input circuits, a certain amount of radio frequency interference may occur. This may be reduced by simply turning the rear panel PHONO INTERFERENCE FILTER on (thereby connecting a resistor in series with the phono input circuits).

MC Amplifier

The MC amplifier is a flat-response voltage amplifier with a gain of 28dB, designed for use with low-output moving-coil-type cartridges. It is inserted in front of the equalizer amplifier when the FUNCTION switch is input in the PHONO 2 MC position.

Fig. 5-2 shows the basic configuration of the circuit. The MC amplifier is a completely symmetrical DC-coupled 3-stage amplifier, the first stage of which employs newly developed ultra-low-noise NPN and PNP transistors. The S-N ratio is 72dB (100 μ V input, IHF-A).

EQ Amplifier

Fig. 5-3 shows the basic circuit of the equalizer amplifier. The first stage is a differential amplifier consisting of a newly developed ultra-low-noise twin FET (Q_1) and NPN twin transistor (Q_2) connected in cascade, the load circuit of which is a current mirror circuit (Q_3 , Q_4).

Because an FET is used in the first stage of the equalizer amplifier, the input coupling capacitor is rendered unnecessary, and thus noise and distortion are correspondingly reduced. The cascade connection serves to reduce the load impedance of the FET. This prevents deterioration in high-frequency response due to the Miller Effect, and also reduce gate leak current noise on account of the reduced drain-to-source voltage.

The next stage (Q_5) is a class A amplifier, the load circuit of which is a constant-current source (Q_6). This results in a high voltage gain.

The output stage (Q_7 , Q_8) is a symmetrical complementary SEPP Class A configuration. The output current is of the same order of magnitude as that of a small power amplifier, and is sufficient to cope with low-impedance loads.

The resultant S-N ratio of the equalizer amplifier is 90dB, while the equalizer deviation is ± 0.2 dB (20Hz to 20,000Hz).

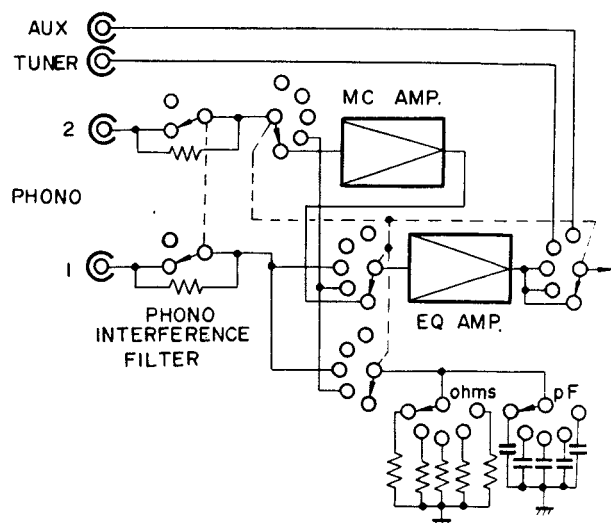


Fig. 5-1 Phono Circuit

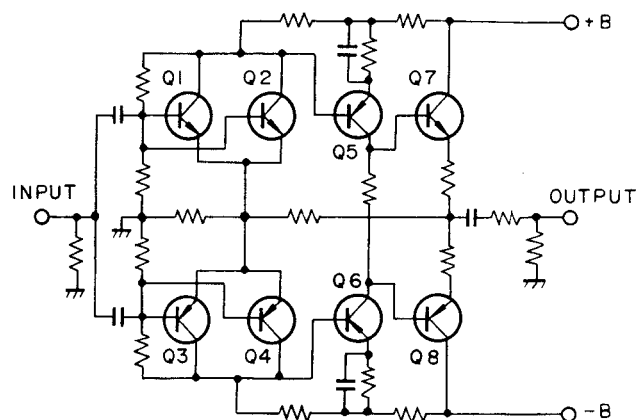


Fig. 5-2 MC Amplifier

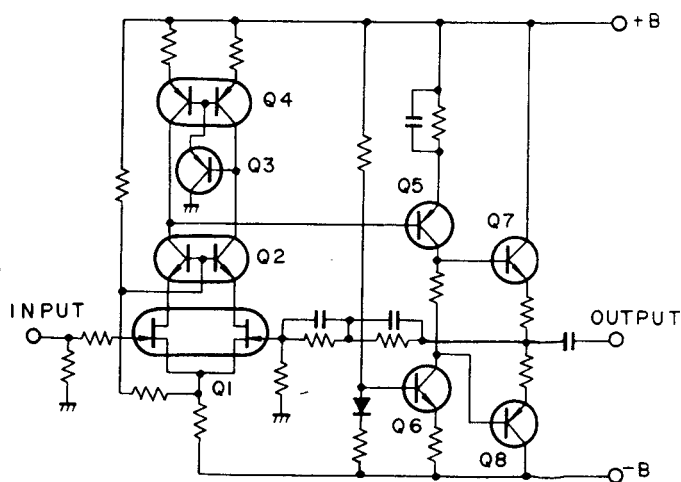


Fig. 5-3 EQ Amplifier

Tone Controls

Fig. 5-4 shows the basic tone control circuit. The tone amplifier is a 3-stage DC-coupled amplifier, the first stage is a differential amplifier consisting of a ultra-low-noise twin FET. The second stage is a differential amplifier consisting of a PNP twin transistor, and the output impedance lowered by using an emitter follower at the output stage.

Tone control (BASS, TREBLE) is accomplished by providing the tone amplifier NFB circuit with a frequency selective characteristic. The capacitance of $C_1 - C_4$ are changed by the TURNOVER switches (by adding another capacitors in series) to provide selection of the frequency. The NFB circuit is changed to a flat frequency characteristic when the TONE switch is in the OFF position.

5.2 POWER AMPLIFIER SECTION

Amplifier Circuit

The basic circuit arrangement of the power amplifier is shown in Fig. 5-5. The first stage is a differential amplifier comprising PNP twin transistor (Q_2), the load circuit of which is a current mirror employing an NPN twin transistor (Q_3). The current mirror provides push-pull operation in this stage, which serves to cancel even harmonics and further increase gain.

Q_1 in the input circuit absorbs outflow of base current from Q_2 , and prevents the generation of a DC voltage. Because Q_1 follows any temperature drift in Q_2 , temperature drift of the center point voltage is prevented.

The pre-driver stage (Q_4, Q_5) is a Darlington arrangement, the load circuit of which employs a constant-current source (D_1, Q_6) resulting a high voltage gain.

The power stage bias voltage is supplied by the NSA circuit. The NSA circuit provides non-switching operation in the power stage (refer to "NSA Circuit").

The power stage ($Q_7 - Q_{12}$) is a 2-stage Darlington arrangement, the last stage is parallel SEPP circuit employing an SL RET (Super Linearity Ring Emitter Transistor). The RET is a kind of IC consisting of a number of small transistors on a single chip, with each transistor being connected in parallel via an emitter resistor. This provides excellent high frequency characteristics comparable to those of a small-signal transistor. Furthermore, because there is no time constant in the NFB circuit in the low-frequency region, amplification is possible down to DC (DC inputs will be cut off, however, by the input coupling capacitor).

The circuit features described above provide an extremely wide power frequency range (100W + 100W, 10Hz to 20kHz, THD 0.005%, 8Ω).

Power Limiter

The power limiter is a high-speed protection circuit which operates to protect the power transistors from overcurrent conditions caused by load shorts, etc.

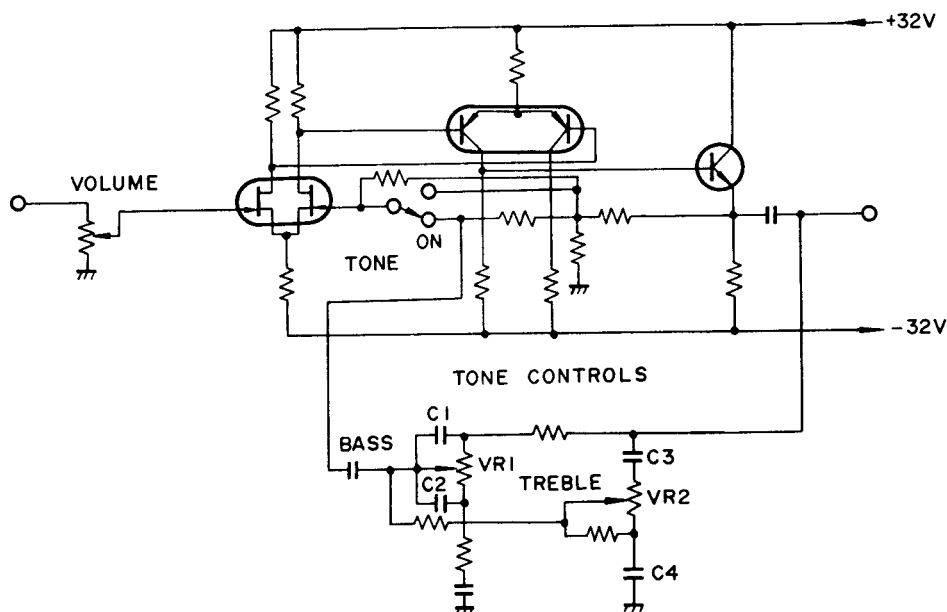


Fig. 5-4 Tone Control Circuit

The circuit (Fig. 5-6), constitutes a Wheatstone bridge (Fig. 5-7), one arm of which the load (R_L), which is arranged so that $Q_1(Q_2)$ is biased by the potential difference between the opposite corners of the bridge. As the value of R_L decreases, $Q_1(Q_2)$

start to conduct, thus holding down the drive voltage and controlling the magnitude of the current flowing in to the power transistors. Q_3 (Q_4) is link connected to Q_1 (Q_2) which provides sharp clipping characteristics.

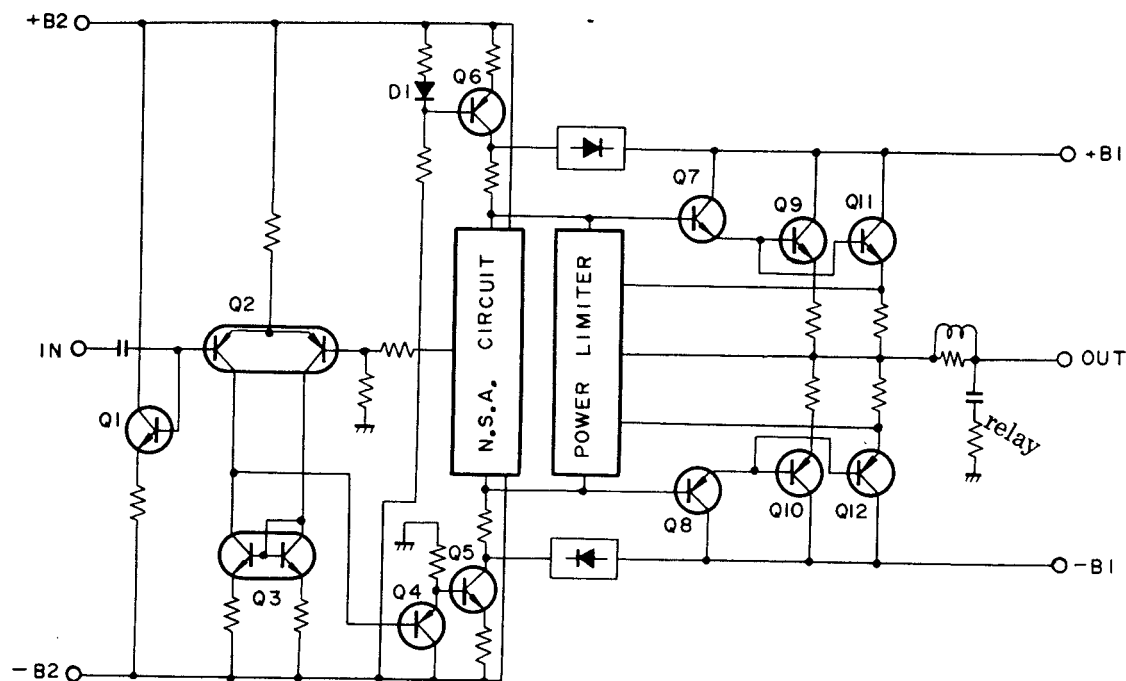


Fig. 5-5 Power Amplifier

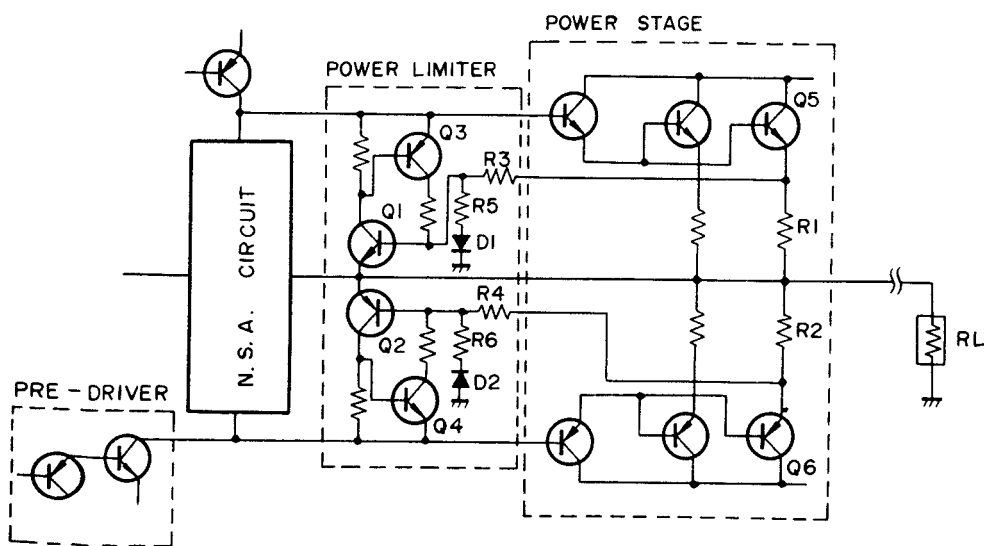


Fig. 5-6 Power Limiter

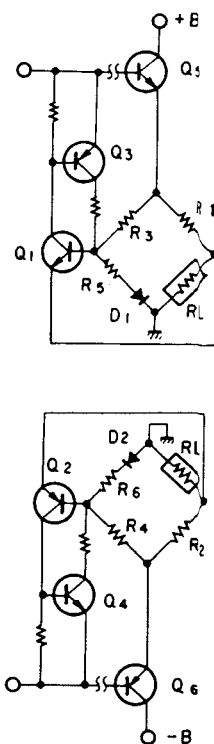


Fig. 5-7 Bridge Circuit

NSA (Non-Switching Amplifier) Circuit

By operating the power stage only within the active region (no possible cut-off) and with minimum idle current, the NSA circuit prevents the generation of switching distortion and reduces heat loss.

Operating Principle

Since idle current flows through normal class B SEPP power stages (see Fig. 5-8) when no signal is applied a fixed amount (with the voltage across points P and R serving as a bias). The voltages across points P and Q, and Q and R at this time will be equal. When the positive portion of a signal is applied to this circuit, the power stage current on the NPN side is increased, resulting in the voltage across points P and Q also being increased. However, since the voltage across points P and R is practically constant (see note), the voltage across points P and R (PNP power stage bias) will be decreased, resulting in the PNP power stage being cut off.

The NSA circuit increases the voltage across points P and R by the same amount as the voltage increase across points P and Q, thereby cancelling the voltage decrease across points Q and R, and preventing the PNP power stage from being cut off.

This NSA circuit is outlined in Fig. 5-9. When there is no signal applied to the circuit, Q_1 and Q_2 are almost cut off, while Q_3 and Q_4 will be on. The voltage across the collector and base of both of these transistors (Q_3 and Q_4) at this time may be disregarded. Consequently, with the power stage bias circuit consisting of 4 PN junctions formed by Q_3 , D_3 , and Q_4 , and VR_1 , this circuit is equivalent to the previous circuit shown in Fig. 5-8.

With R_1 and D_1 ensuring a constant flow of current, the base of Q_1 and point Q may be brought to the same level (see Fig. 5-10) on an AC basis (level fluctuations due to the signal) by a simple shift in DC level. Furthermore, Q_1 may be considered emitter-follower with R_3 as the emitter resistance.

When the voltage across points P and Q is increased by the positive portion of the signal applied to this circuit, it becomes the input signal of this emitter-follower (Q_1). Since the emitter-follower voltage gain is practically 1, a voltage more or less equal to that of the input signal (that is, the voltage increase across points P and Q) is produced at R_3 . And the R_3 voltage is the voltage applied across the base and collector of Q_3 , which forms part of the power stage bias circuit. So the bias voltage applied to Q_3 will be in excess by the same amount that the voltage across points P and Q is increased (by positive portion of the signal) above the voltage level when no signal is being

applied. Consequently, the increase in voltage across points P and Q cancels the decrease in voltage across points Q and R, thereby maintaining the idle current without cutting the PNP power

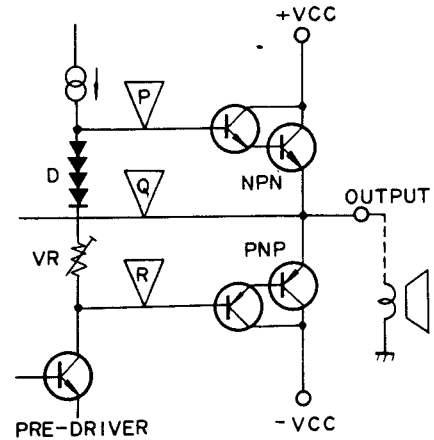


Fig. 5-8 Normal Power Stage

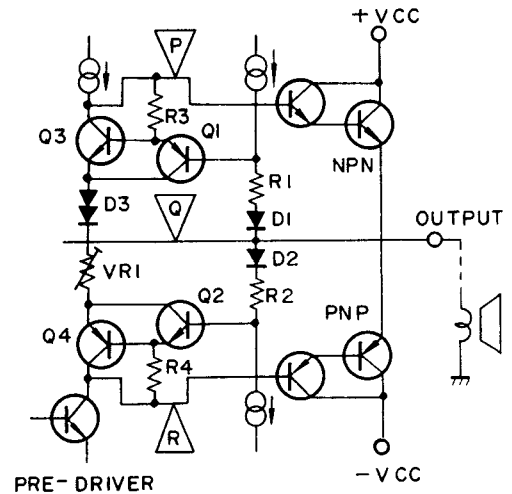


Fig. 5-9 NSA Circuit

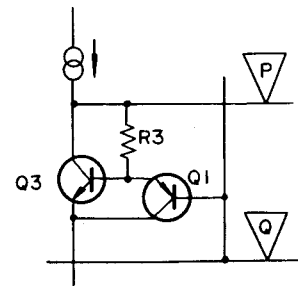


Fig. 5-10 NSA Circuit

stage off (noting that there actually is a slight decrease in current). For the negative portions of the signal, Q_3 and Q_4 are operated in the same manner, thereby preventing the NPN power stage from being cut off.

In other words, the NSA circuit acts to prevent any "power stage cut-off" signals from being applied to the power stage (see Fig. 5-11).

Note:

The pre-drive current actually decreases when the positive portion of the signal is applied, resulting in a decrease in the voltage across points P and R.

5.3 INDICATOR CIRCUIT

The SA-9800 output power and function indicators feature fluorescent indicator tube (FL tube). In this tube, thermionic emissions from the cathode are accelerated into the fluorescent substance of the segmental anodes, resulting in the emission of light. This tube is used to indicate numerals, letters, and other symbols.

An outline of the FL tube drive circuit is shown in Fig. 5-12. The output circuit signal is first passed through a low-pass filter and a compressor

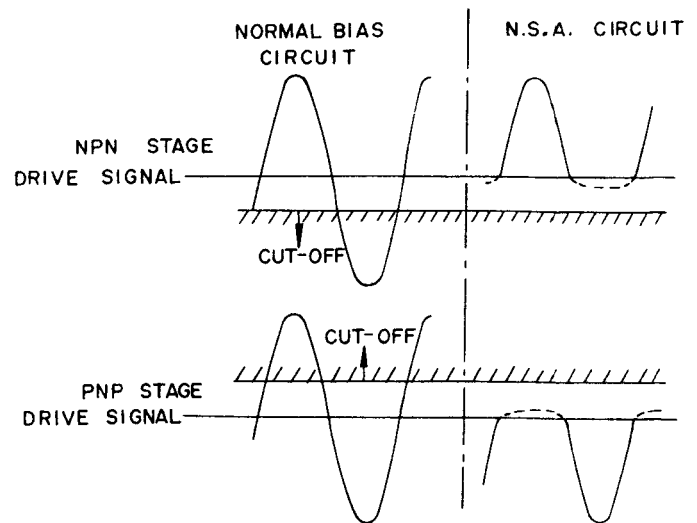


Fig. 5-11 Driving Signal of Power Stage

circuit before being applied to pin no.6 (4) of the IC (TA7318P-A). The compressor circuit makes use of the non-linearity of the rising portion of the diode's $V_d - I_d$ characteristics to contract the signal dynamic range by 20dB. The IC contains a detector circuit, compressor (40dB), and peak

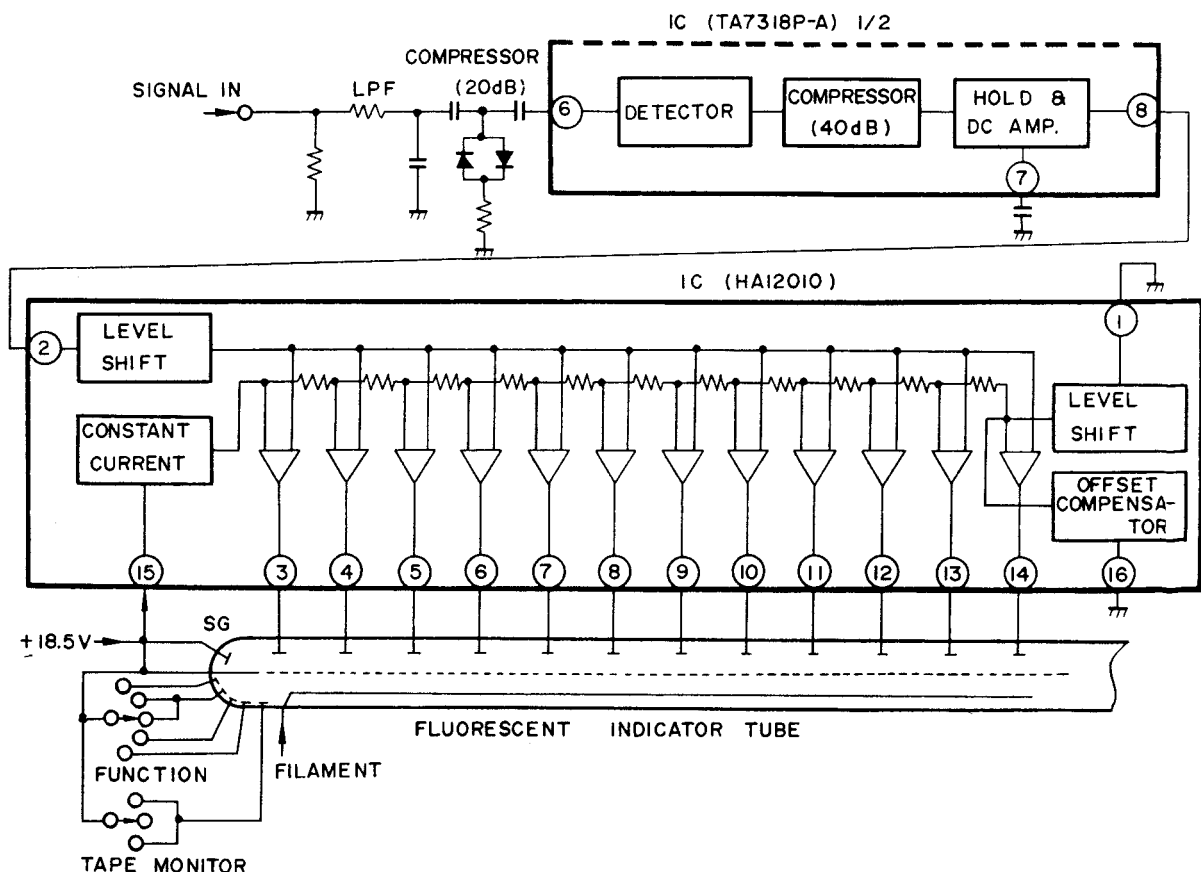


Fig. 5-12 Indicator Circuit

hold circuit for both left and right channels. The dynamic range of the signal is thus contracted by 60dB to obtain a "peak held" DC voltage.

The output power indicator segments of the FL tube are driven by the HA12010 ICs (one for each channel) equipped with 12 pairs of differential amplifiers. These amplifiers are biased at increasing levels, so each amplifier will commence to operate separately as the input level increases. And since these amplifiers apply the voltages to the output power indicator segments, each successive segment will light up in turn as the input level rises.

The function indicators are lit up as a result of a voltage being applied to the corresponding function indicator segment according to the selected positions of the FUNCTION and TAPE MONITOR switches.

5.4 PROTECTION CIRCUIT

The purpose of this circuit is to protect the speakers. The relay in the output circuit is automatically opened in any of the following cases:

1. During the "transient operations" when the power supply is turned on and off.
2. Upon detection of a DC voltage in the output circuit, caused by component failure or accident.

Muting Operation when Power Supply is Turned On and Off

With reference to Fig. 5-13 when the power supply is turned on, if there is no input (DC) on Q_1 and Q_2 , they will be off, and the timing capacitor C_2 charges up through R_5 and R_4 , and thus on. When Q_3 conducts, the relay operates, and the output muting on the power amplifier will be removed.

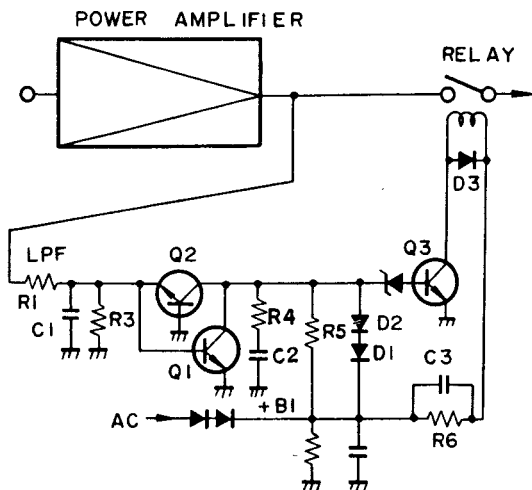


Fig. 5-13 Protection Circuit

When the power supply is turned off, $+B_1$ will abruptly decay, C_2 will discharge through D_1 and D_2 . Q_3 will cease to conduct, whereupon the relay will become de-energized and restore muting.

DC Voltage Detector

The output circuit is connected to the Q_2 emitter and Q_1 base via a low-pass filter (R_1 , C_1). Any DC voltages appearing the output circuit of the power amplifier, it will be applied to the Q_2 emitter and the Q_1 base. If the voltage is negative, Q_2 will rapidly discharge. As consequence, Q_3 will turn on and the relay will become de-energized, thus causing the output circuit to open.

6. DISASSEMBLY

Wooden Cover


Remove the two screws on each side of the wooden cover.

Bottom Plate

Remove the eleven screws to detach the bottom plate.

Front Panel


Loosen the setscrews of TUNING knob with a hexagonal wrench. Remove all the knobs by pulling. Remove the three screws from the top edge of the front panel. Remove the two nuts from the control shafts.

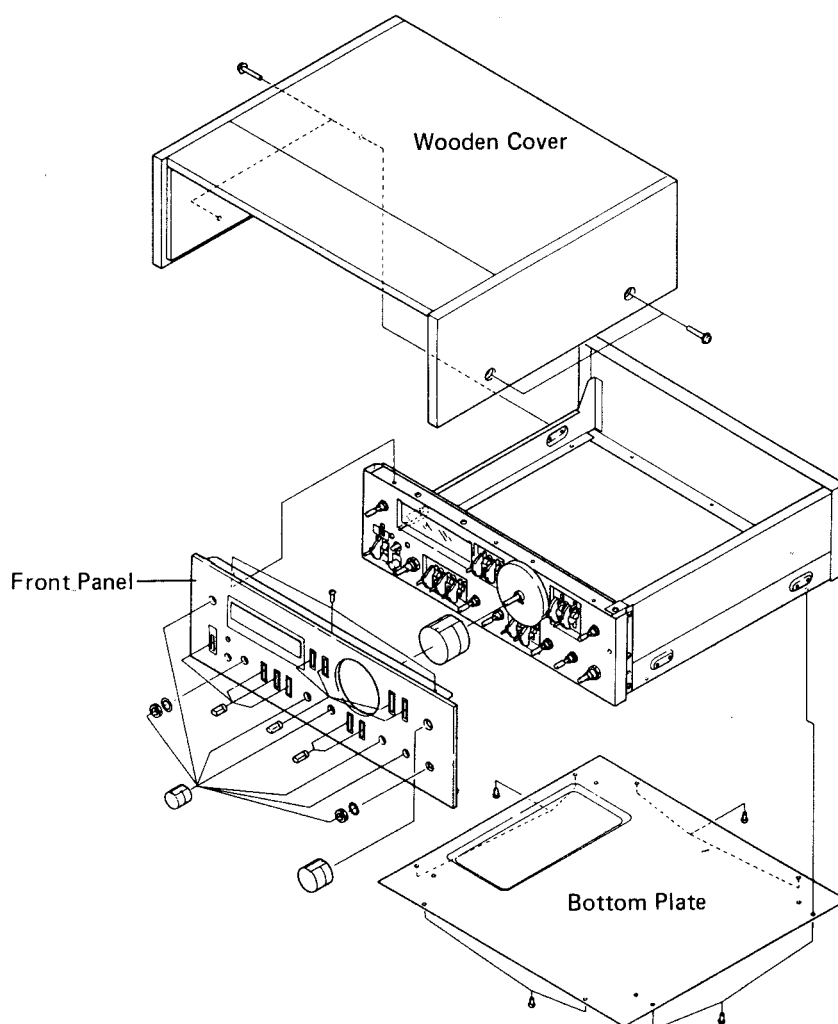


7. PARTS LOCATION

Front Panel View


The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

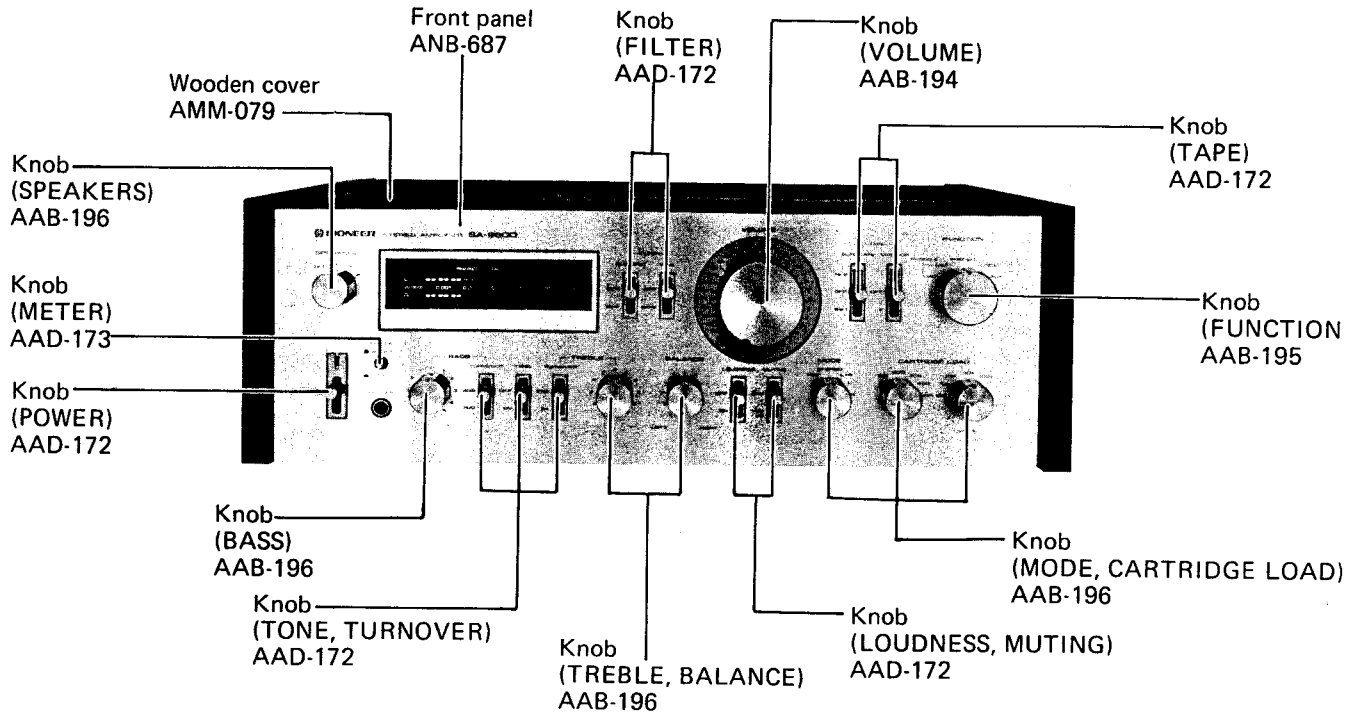


Front View with Panel Removed

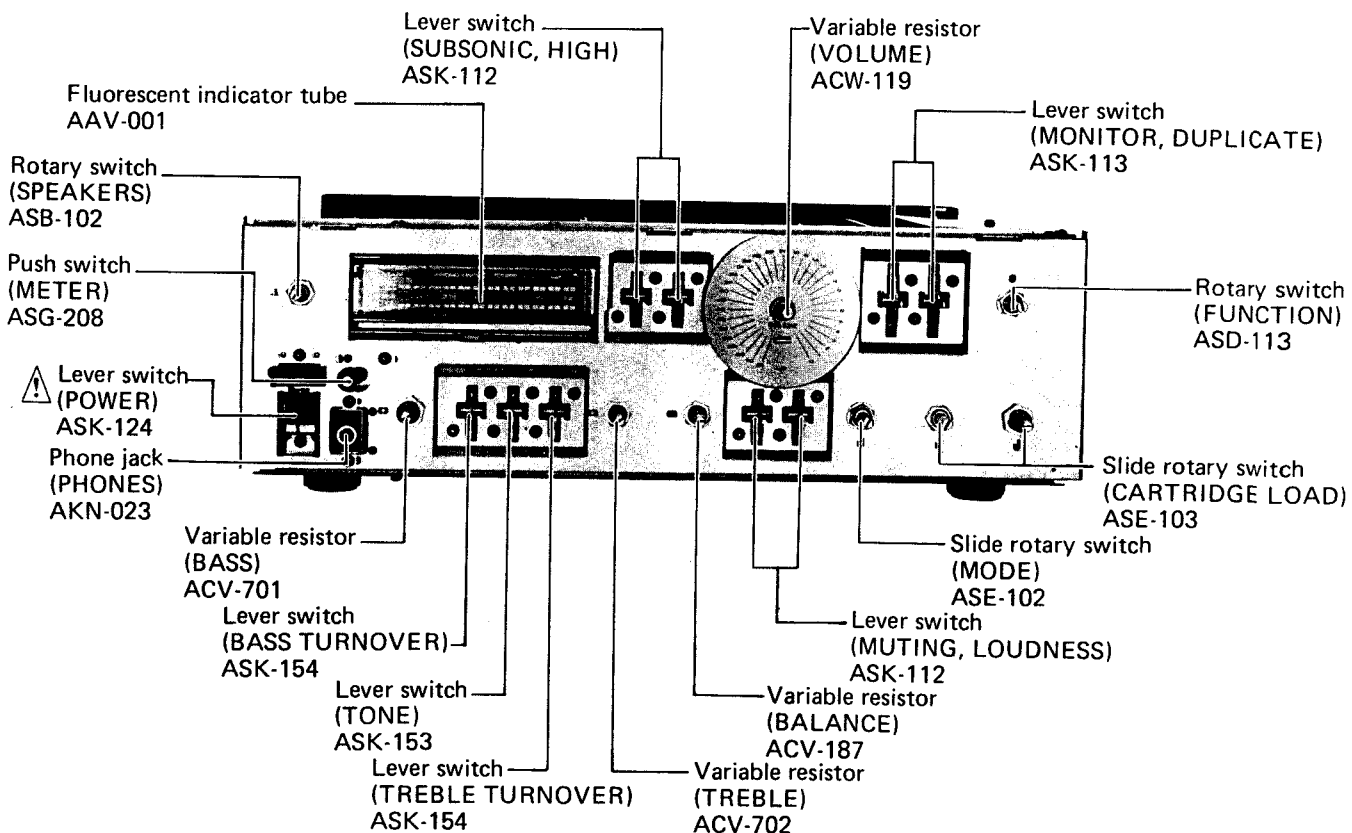


Top View

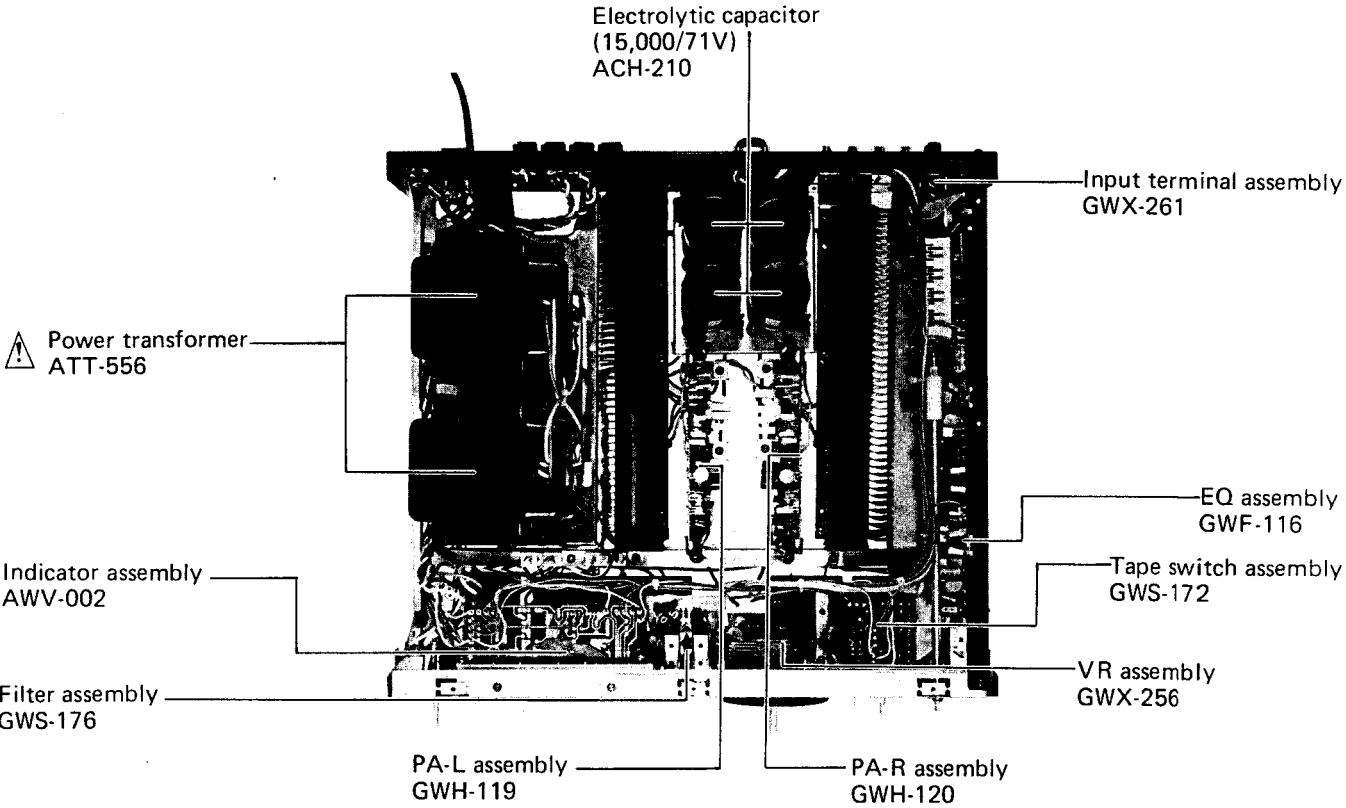

Bottom View

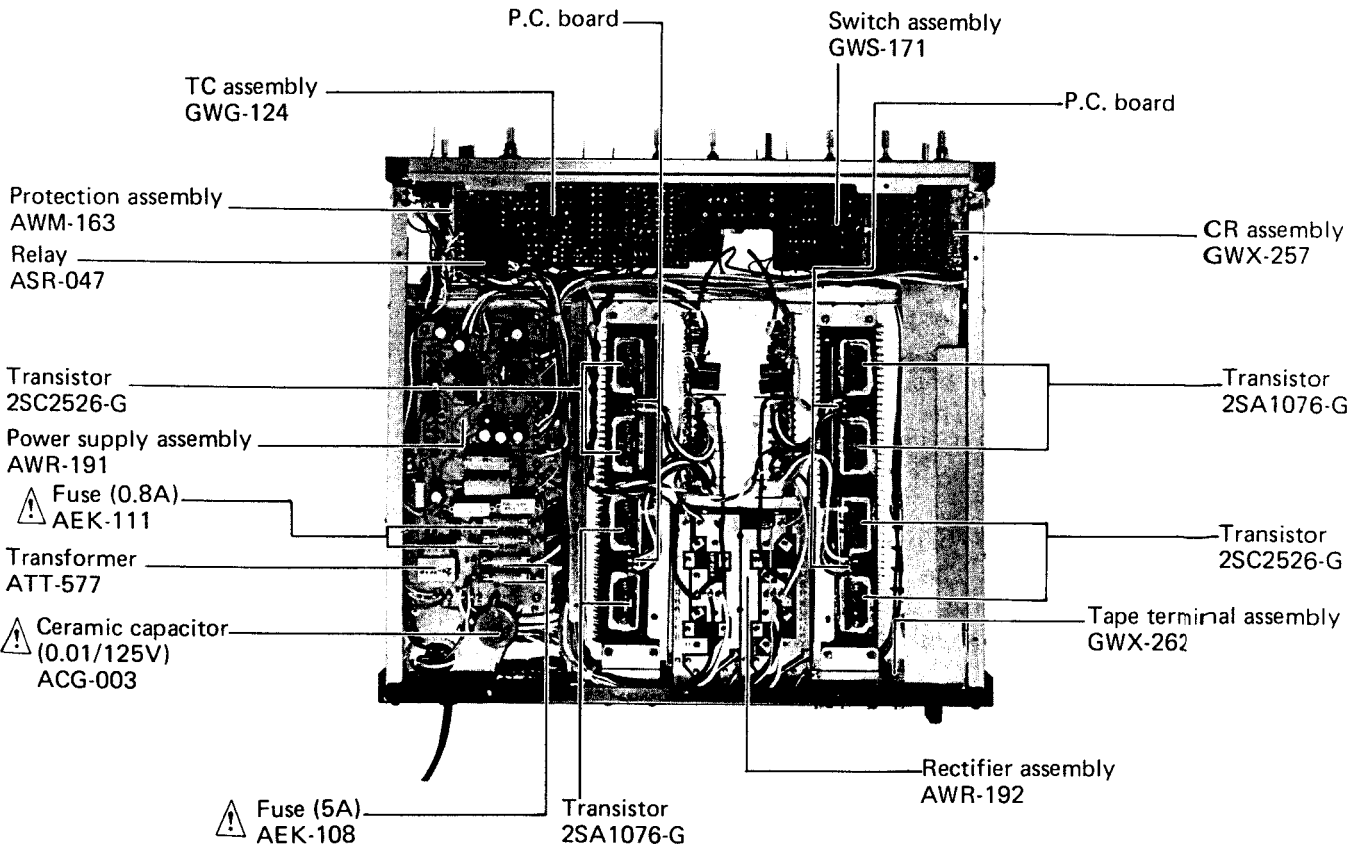

Rear Panel View

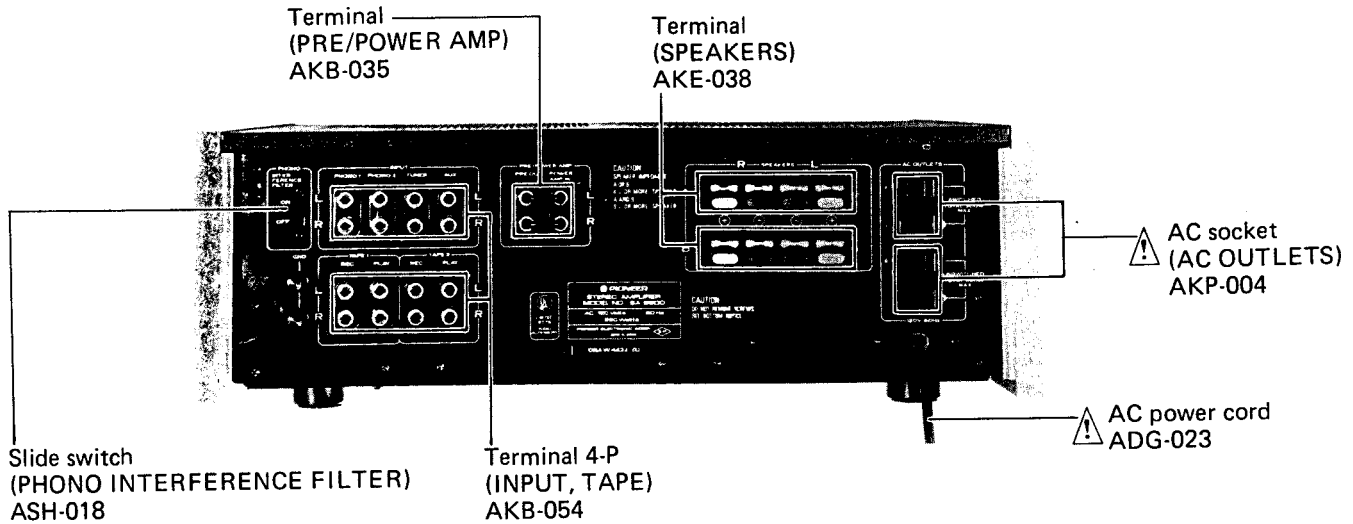

8. ADJUSTMENTS

Power Amplifier

Turn VR_3 , VR_5 (L) and VR_4 , VR_6 (R) fully around in the counter-clockwise direction, but set VR_1 (L) and VR_2 (R) to the center positions. Without any load or input signal, turn the POWER switch ON.

DC Balance

1. Adjust VR_1 (L) for 0V (to within $\pm 60\text{mV}$) between terminal No.26 and ground.
2. Adjust VR_2 (R) for 0V (to within $\pm 60\text{mV}$) between terminal No.11 and ground.

Idle Current

1. Adjust VR_3 (L) for 56mV between terminals No.39(+) and No.37(-). The potential difference between terminals No.40(+) and No.38(-) should register about 56mV at this time.
2. Adjust VR_4 (R) for 56mV between terminals No.18(+) and No.20(-). The potential difference between terminals No.17(+) and No.19(-) should register about 56mV at this time.
3. Adjust VR_5 (L) for 70mV between terminals No.39(+) and No.37(-). The potential difference between terminals No.40(+) and No.38(-) should register about 70mV at this time.
4. Adjust VR_6 (R) for 70mV between terminals No.18(+) and No.20(-). The potential difference between terminals No.17(+) and No.19(-) should register about 70mV at this time.

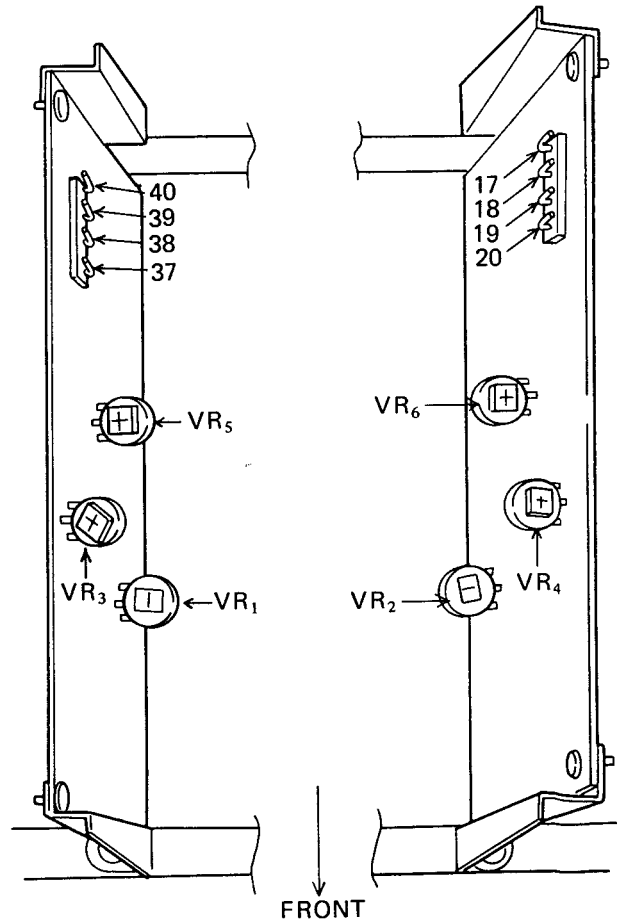


Fig. 8-1 Adjustments of Power Amplifier

Output Power Indicator Calibration

1. Apply a 1kHz signal to the POWER AMP IN terminals (or any other input power amplifier input terminals).
2. Adjust the level of this input signal so that the voltage on the output terminals (SPEAKERS) read 8.9V (AC).
3. Adjust VR₁(L) and VR₂(R) of the indicator assembly so that the output power indicator read 10 watts.

Preamplifier

Remove the shield covers.

MC Amplifier

Adjust VR₁(L) for DC 0V (to within $\pm 0.2V$) between terminal No.15 and ground.

Adjust VR₂(R) for DC 0V (to within $\pm 0.2V$) between terminal No.16 and ground.

EQ Amplifier

Adjust VR₃(L) for DC 0V (to within $\pm 0.2V$) between terminal No.17 and ground.

Adjust VR₄(R) for DC 0V (to within $\pm 0.2V$) between terminal No.18 and ground.

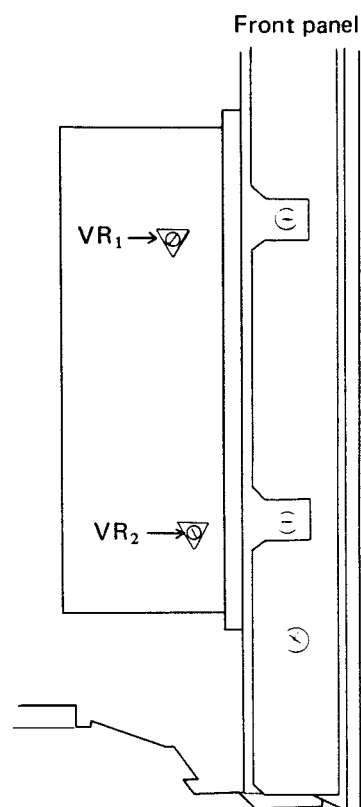


Fig. 8-2 Power Indicator Calibration


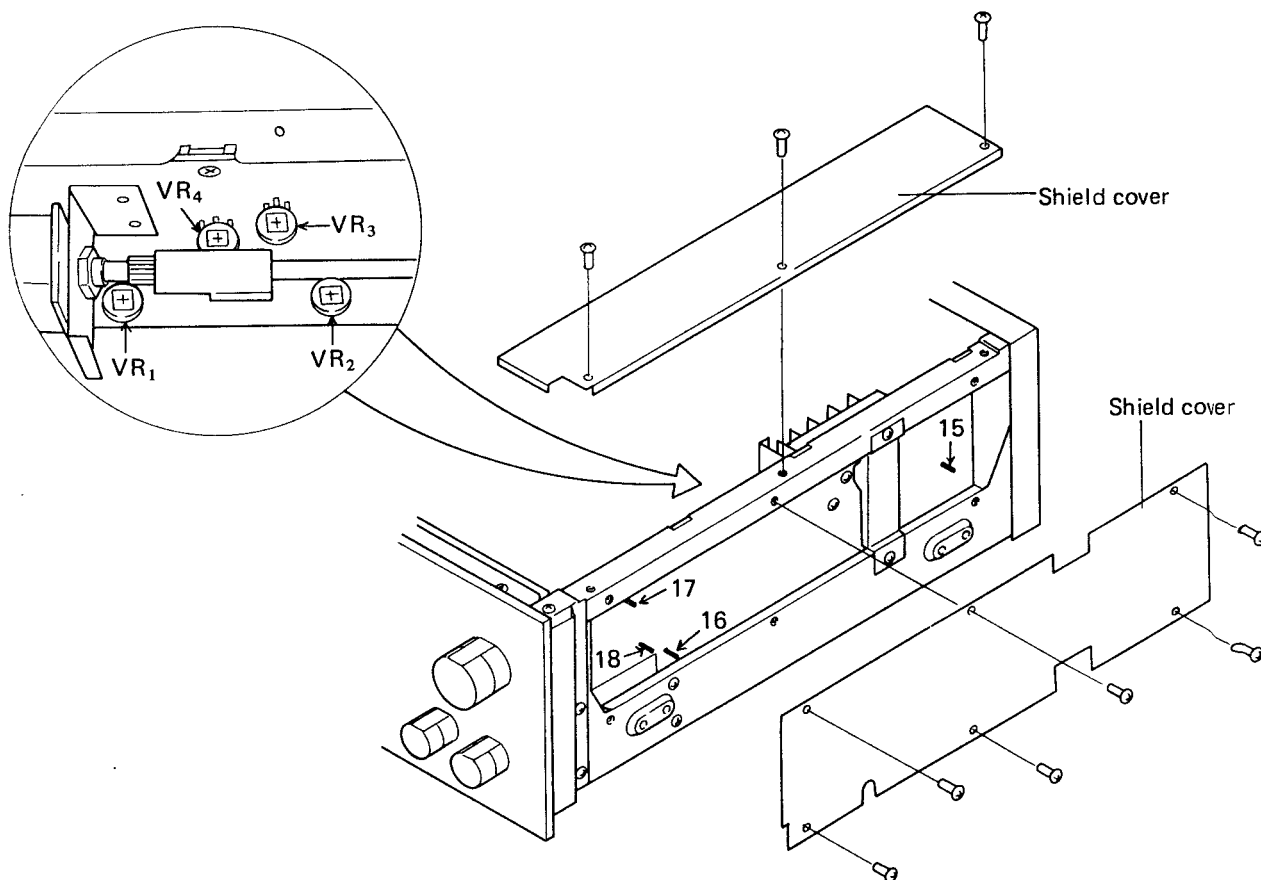


Fig. 8-3 Adjustments of Preamplifier


9. PACKING

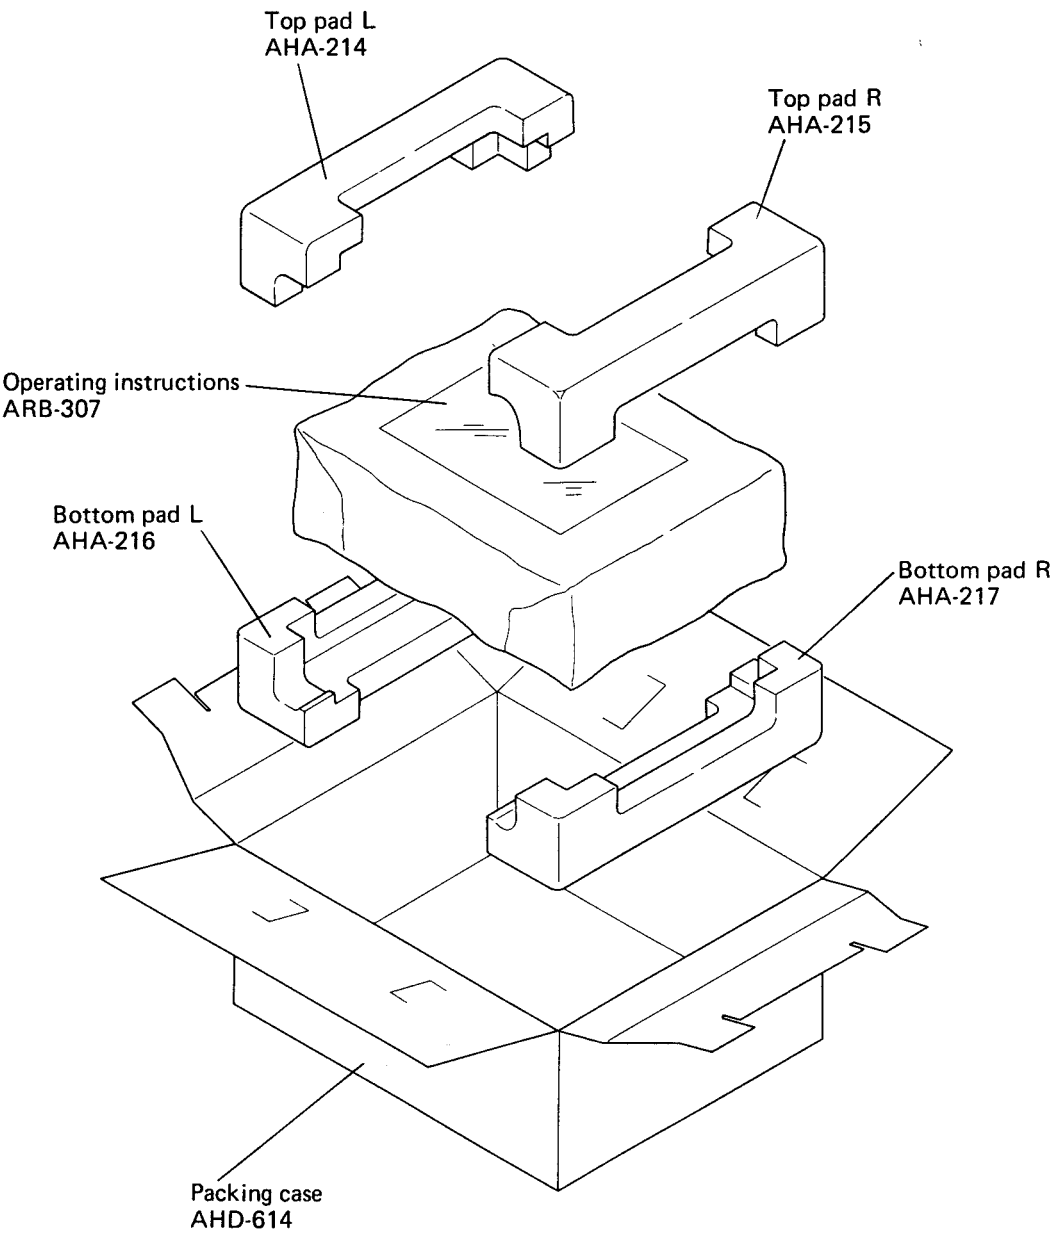


10. EXPLODED VIEW

NOTES:

-  marked parts cannot be supplied.
- The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

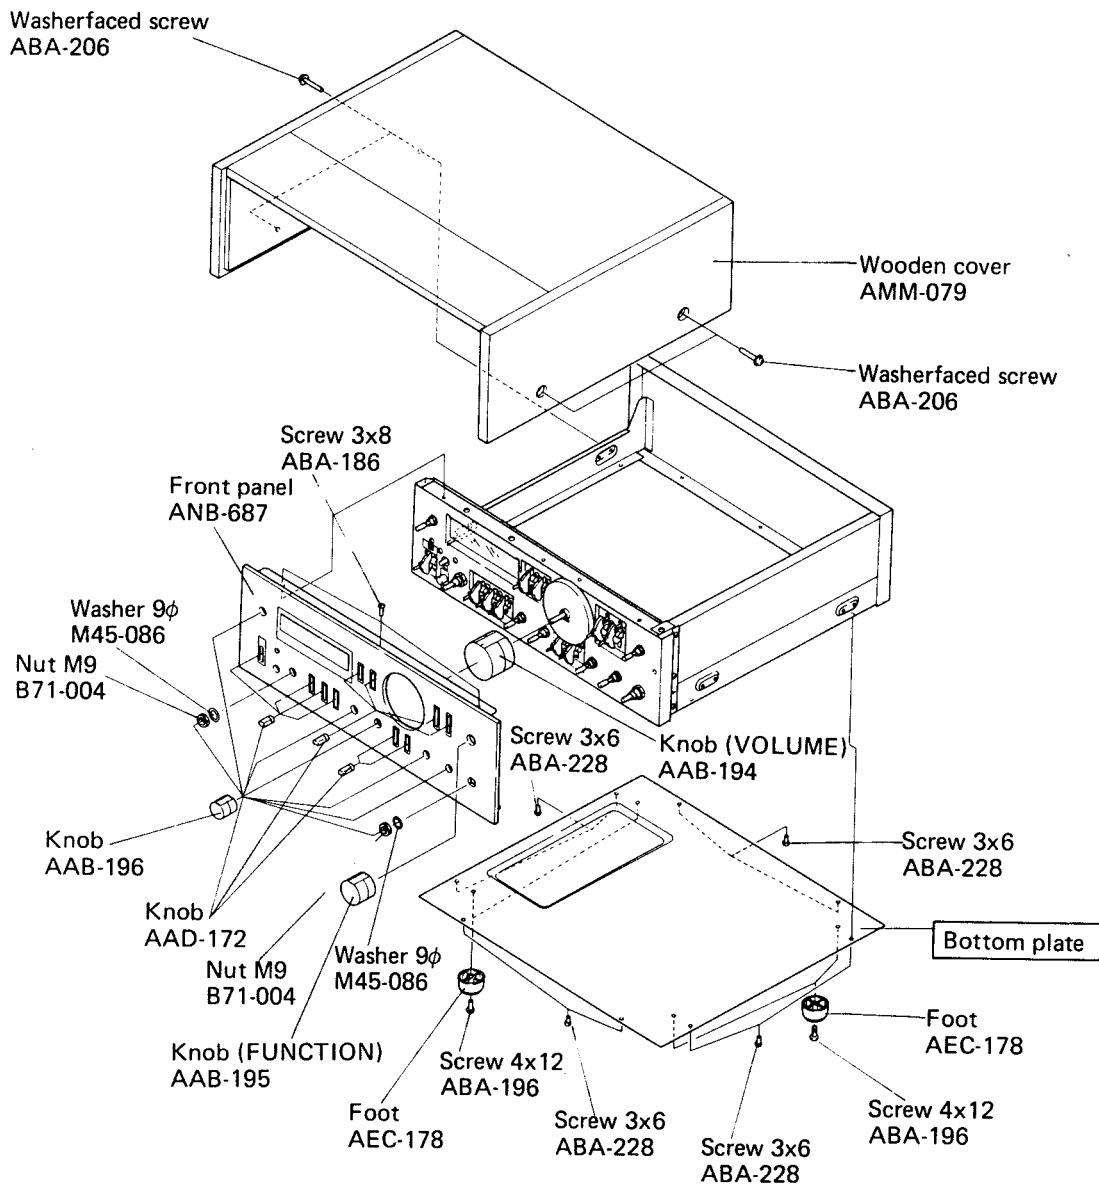

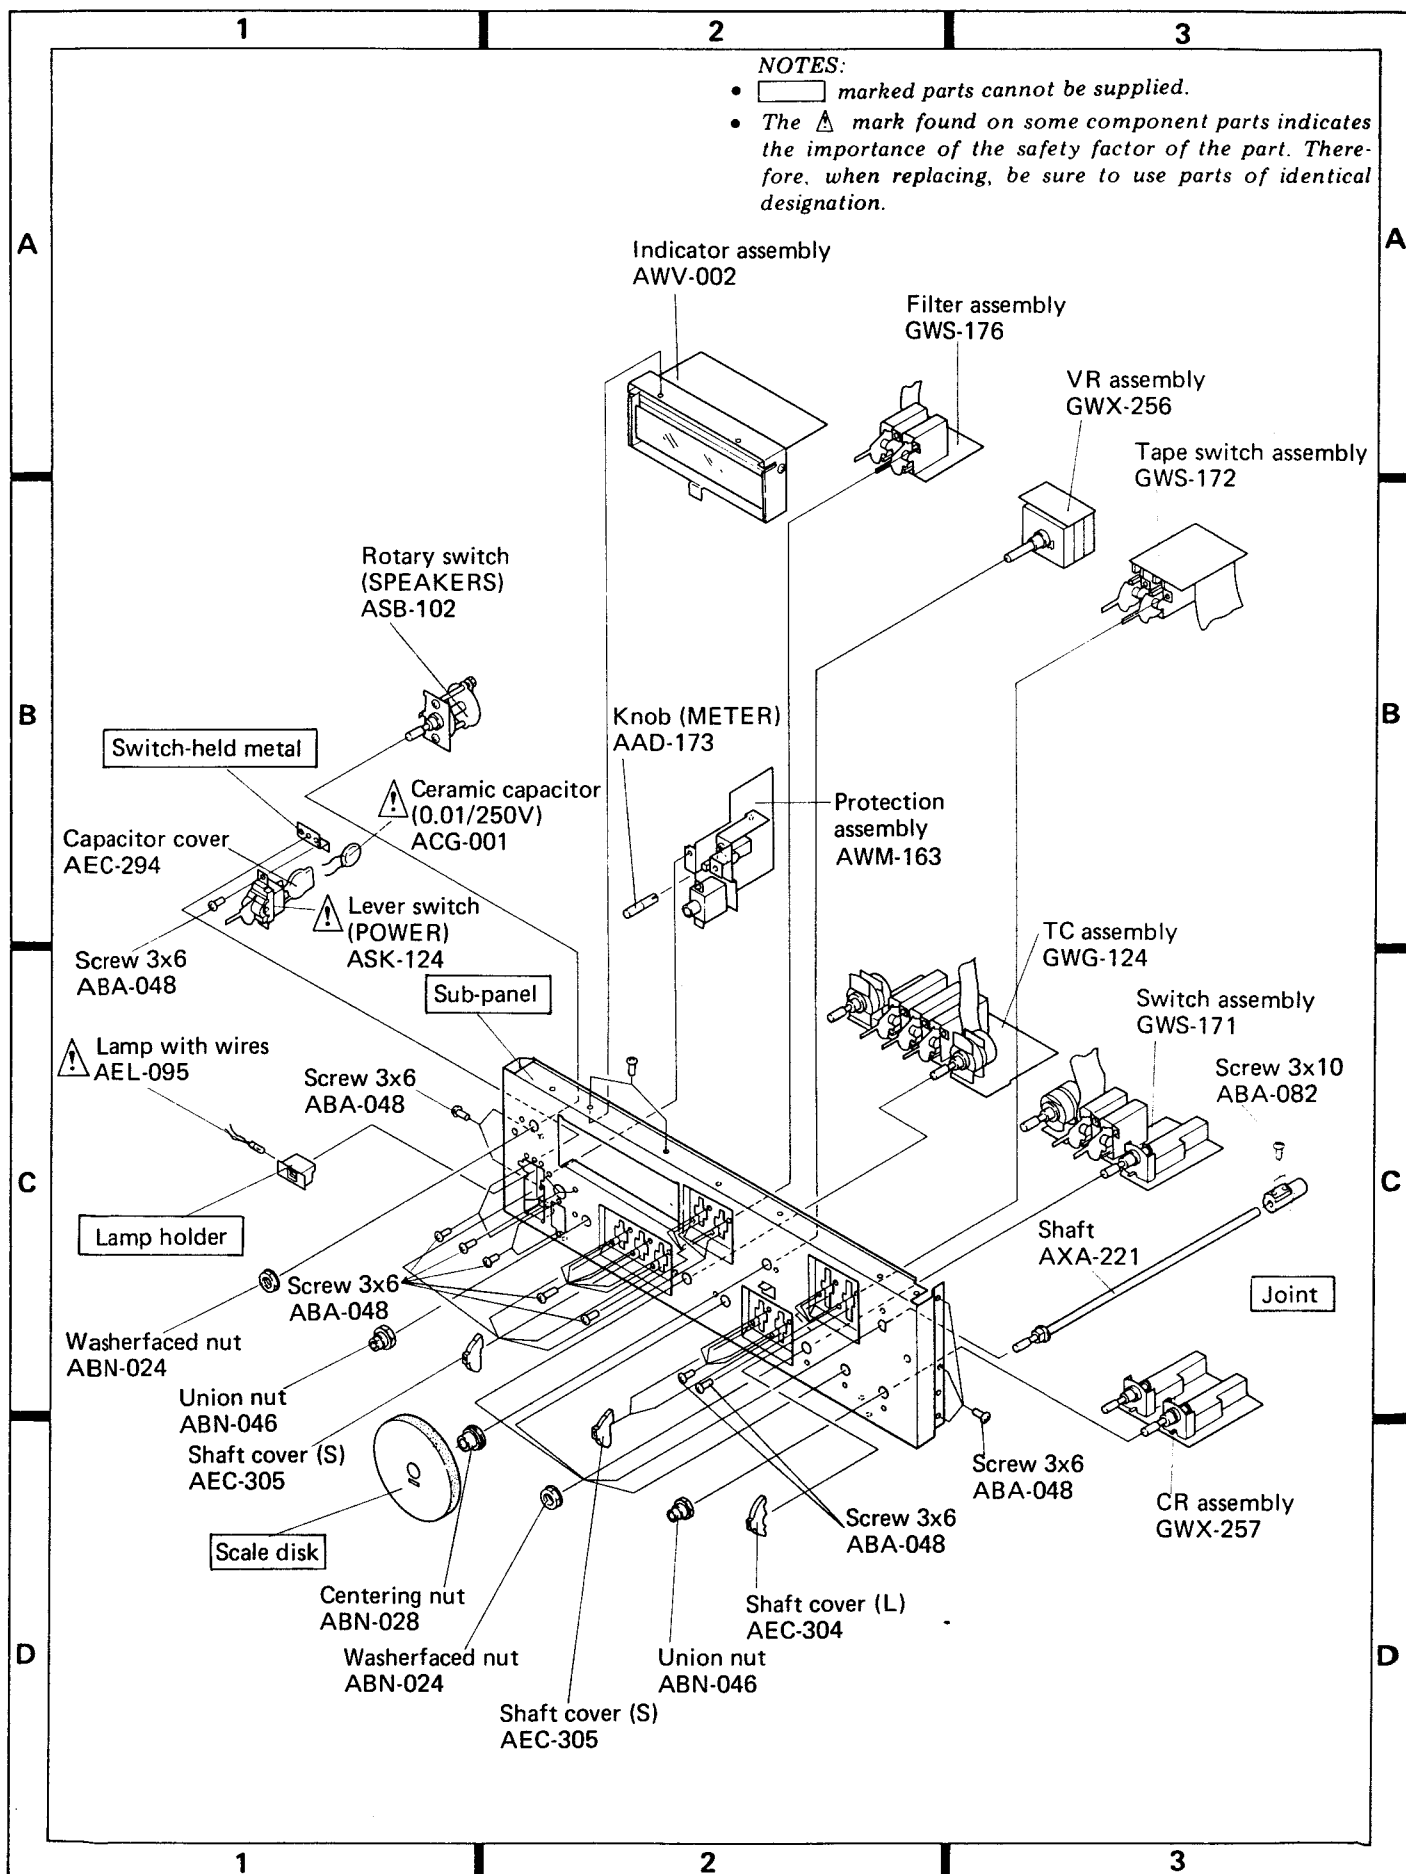

11. SCHEMATIC DIAGRAMS, P.C. BOARD PATTERNS AND PARTS LIST

- NOTES:
- When ordering resistors, first convert resistance values into code form as shown in the following examples.
Ex. 1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J = 5%, and K = 10%).
560Ω 56 × 10¹ 561 RD4PS 561J
47kΩ 47 × 10³ 473 RD4PS 473J
0.5Ω 0R5 RN2H 0R5K
1Ω 010 RSIP 010K
Ex. 2 When there are 3 effective digits (such as in high precision metal film resistors).
5.62kΩ 562 × 10¹ 5621 RN4SR 5621F
The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

11.1 MISCELLANEA

Miscellaneous Parts

LAMP AND FUSES

Part No.	Symbol & Description	
Δ AEL-095	PL1	Lamp with wires
Δ AEK-108	FU1, FU2	Fuse (5A)
Δ AEK-111	FU3, FU4	Fuse (0.8A)

SEMICONDUCTORS

Part No.	Symbol & Description	
2SC2526-G	Q1-Q4	
2SA1076-G	Q5-Q8	

SWITCHES

Part No.	Symbol & Description	
ASB-102	S16	Rotary (SPEAKERS)
Δ ASK-124	S18	Lever (POWER)

CAPACITORS

Part No.	Symbol & Description		
Δ ACG-001	C1	Ceramic	0.01/250V
CKDYF 473Z 50	C2-C6		
CEA 010P 50	C7		

RESISTORS

Part No.	Symbol & Description	
Δ ACN-031	R1	Wire wound 220/5W
Δ ACN-044	R2	Wire wound 150/5W

Note: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

P.C. BOARD ASSEMBLIES

Part No.	Description
GWF-116	EQ assembly
GWX-261	Input terminal assembly
GWG-124	TC assembly
GWS-176	Filter assembly
GWH-119	PA-L assembly
GWH-120	PA-R assembly
AWR-191	Power supply assembly
AWR-192	Rectifier assembly
AWM-163	Protection assembly
GWS-171	Switch assembly
GWX-256	VR assembly
GWX-257	CR assembly
AWV-002	Indicator assembly
GWX-262	Tape terminal assembly
GWS-172	Tape switch assembly
ANP-865	P.C. board

OTHERS


Part No.	Symbol & Description	
Δ ATT-556	T1, T2	Power transformer
Δ ADG-023		AC power cord
Δ AKP-004		AC socket (AC OUTLETS)
AKE-038		Terminal (SPEAKERS)
AKB-035		Terminal (PRE/POWER AMP)

External Appearance of Transistors and ICs


2SA1114
2SA904A
2SA726S
2SA726P
2SC1914A
2SC1919
2SC2602



 
2SA850
2SC1735



 
2SA733A
2SA750
2SC945A
2SC1400
2SC1775A
2SC1890A




2SB682
2SD712

 


2SA912
2SC1885

 


2SK129A
2SK131S

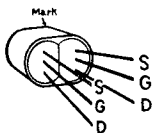


2SA798
2SA979

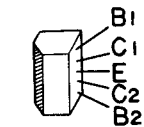


TA7318P-A

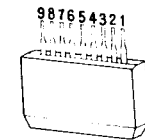


HA12010

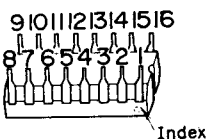


2SA995
2SC2291

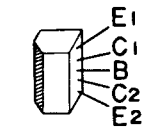


2SA913
2SC1913

 


2SK34

 


2SA1076-G
2SC2526-G

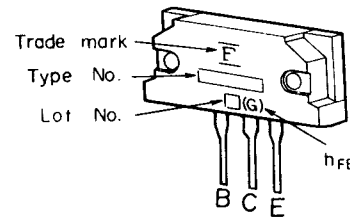

11.2 SCHEMATIC DIAGRAM

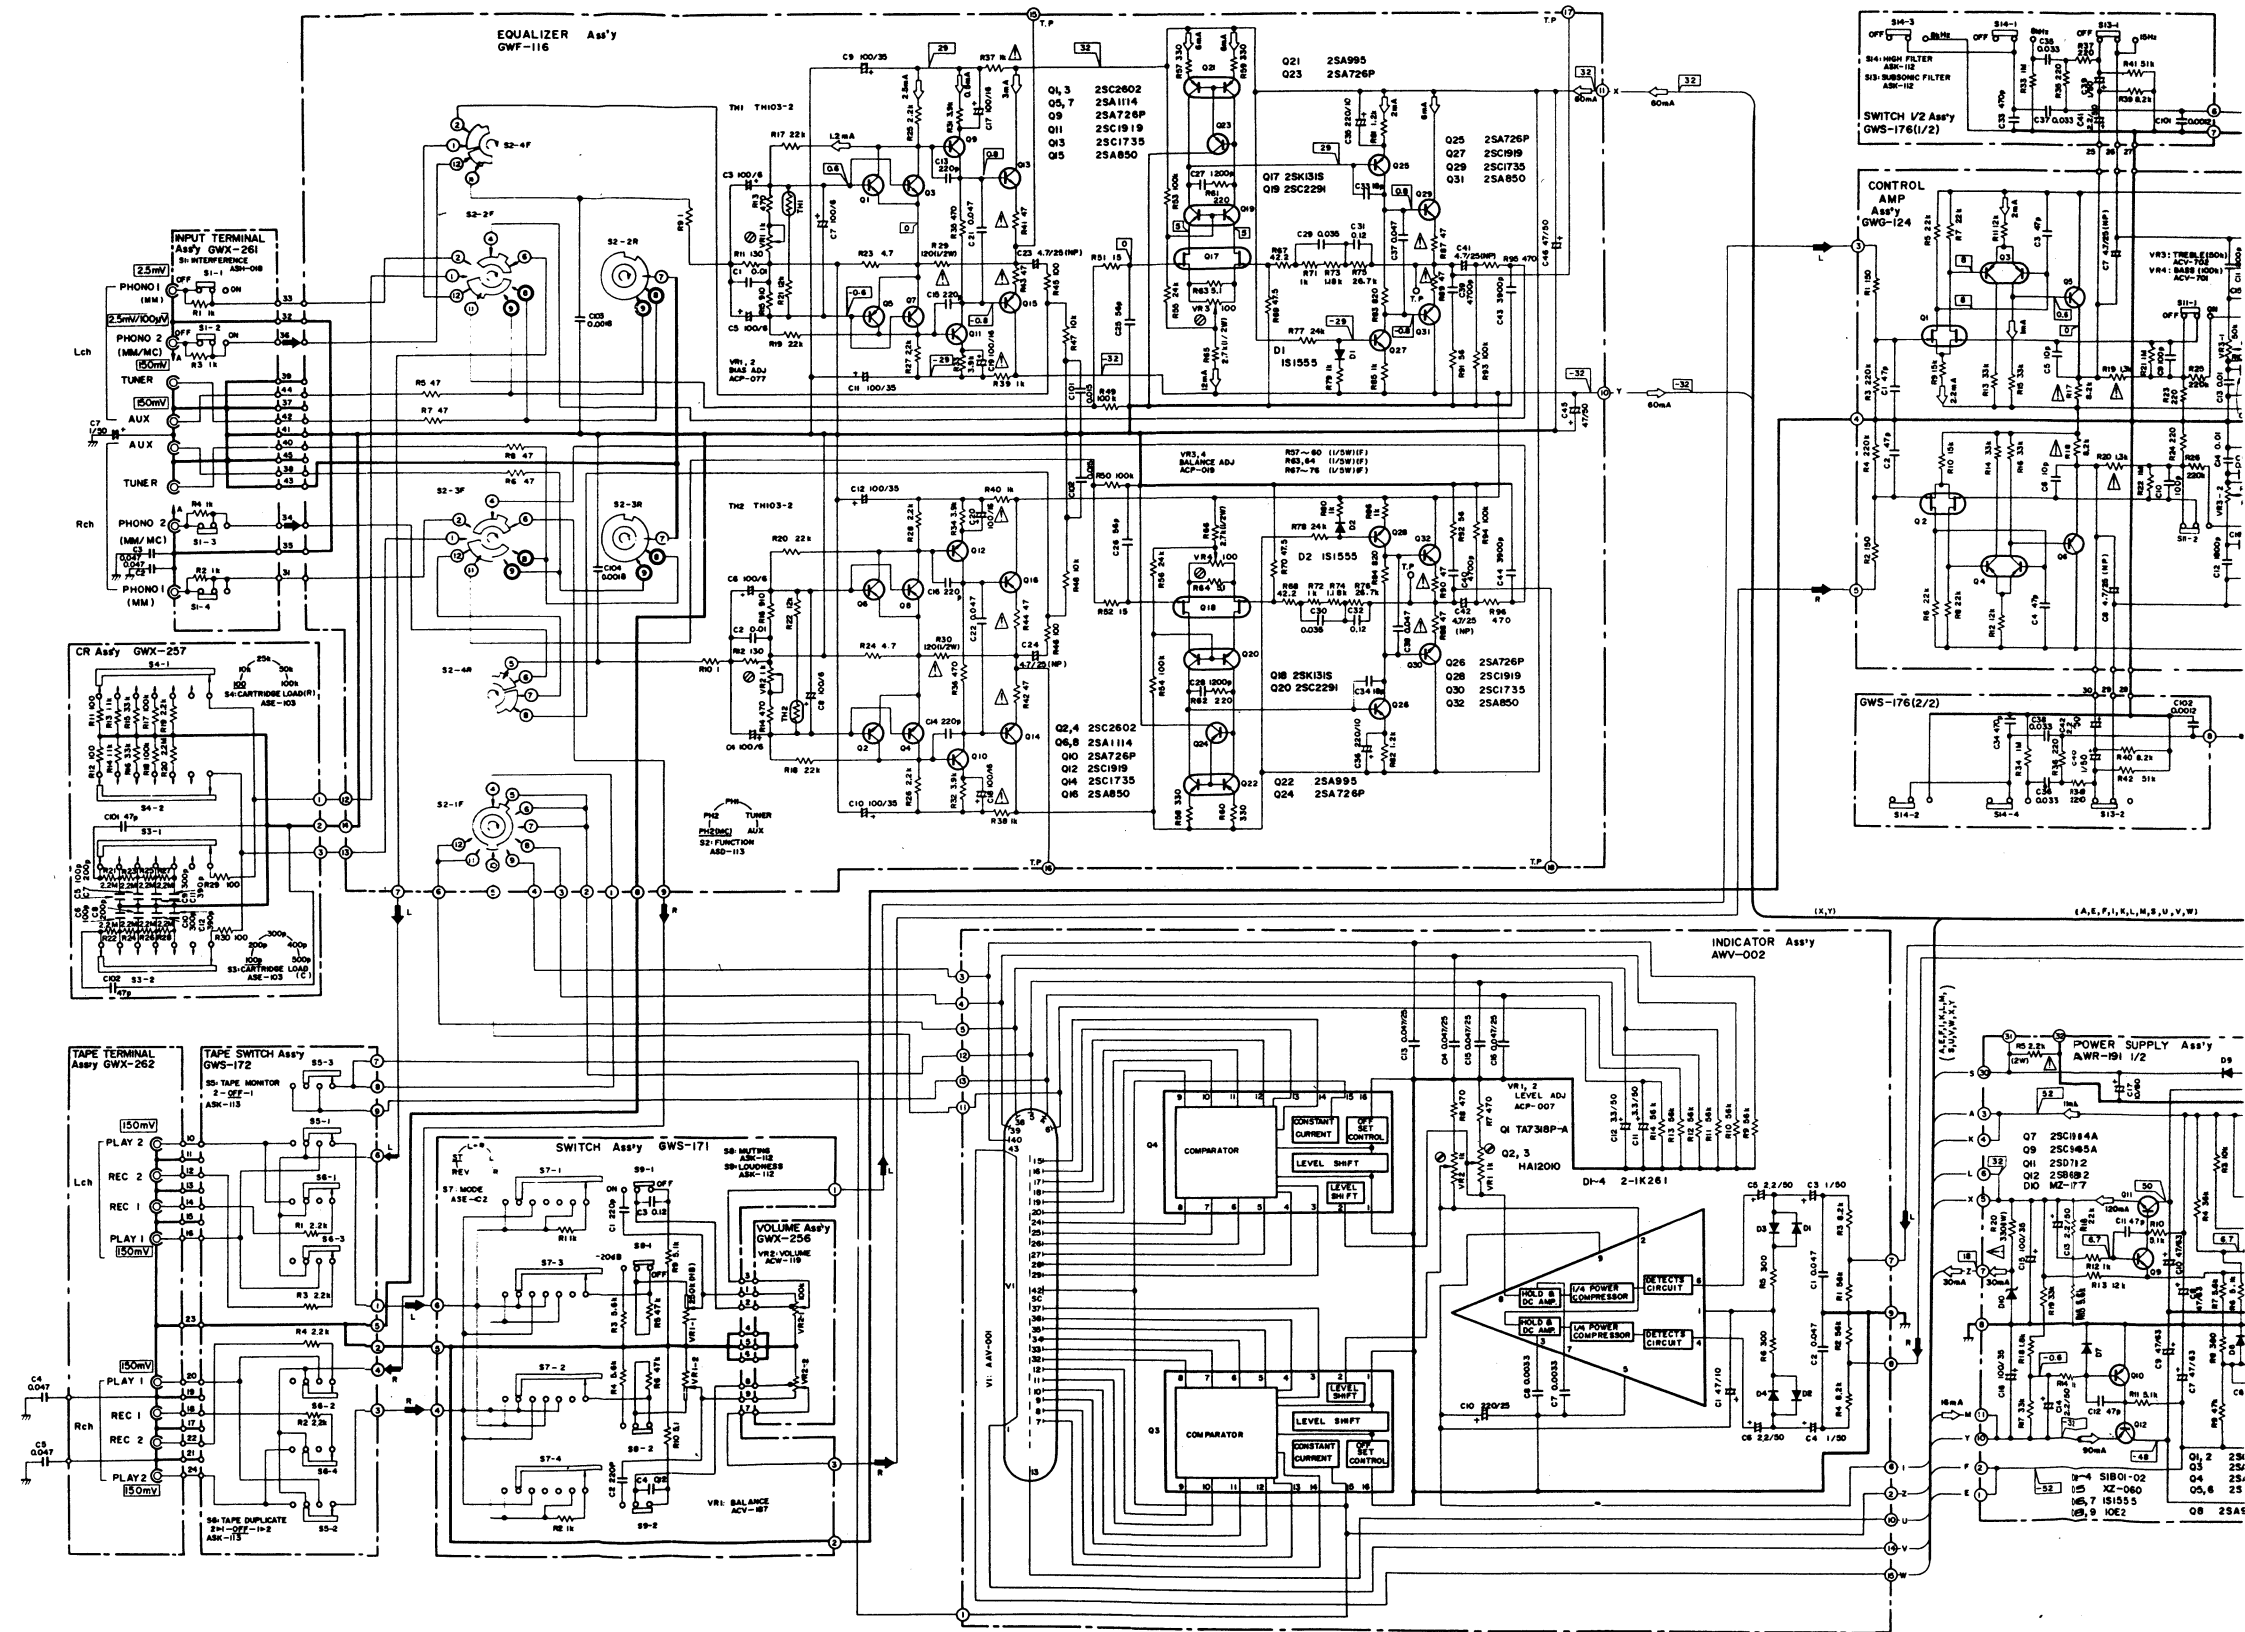

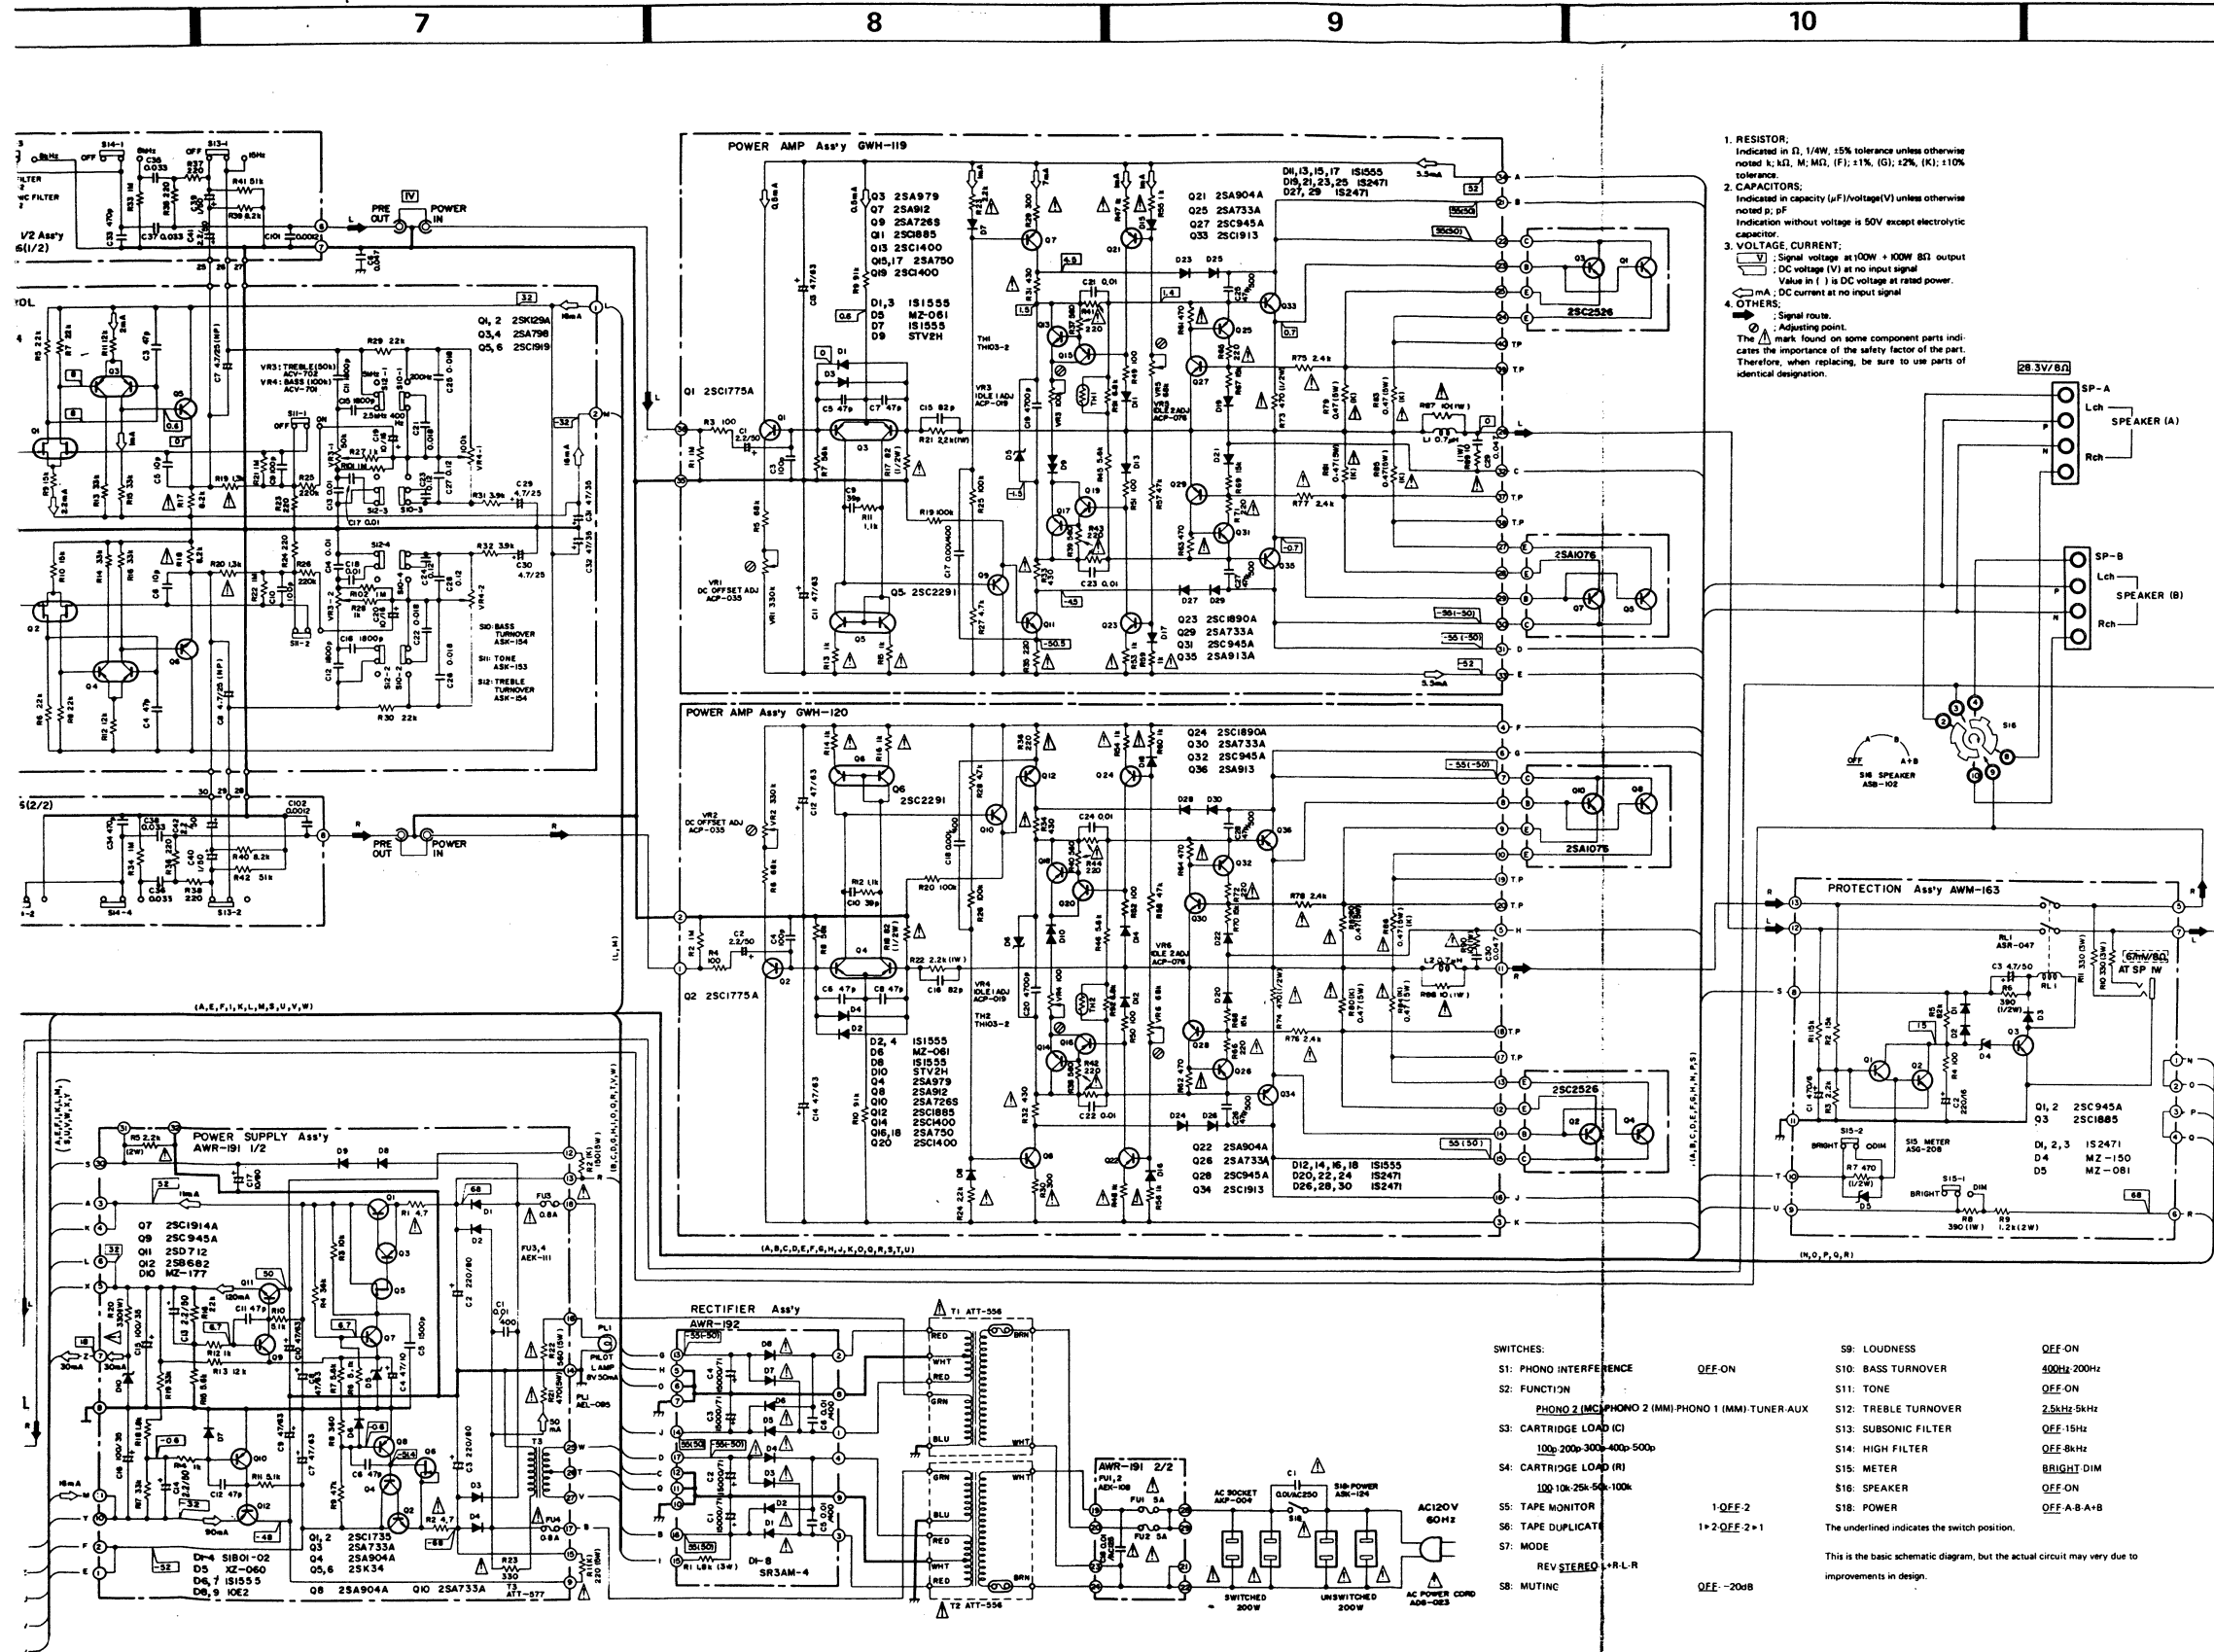

NOTE:
The indicated semiconductors are representative ones only. Other alternative semiconductors may be used and are listed in the parts list.


A


B

C


D

11.3 P.C. BOARDS CONNECTION DIAGRAM

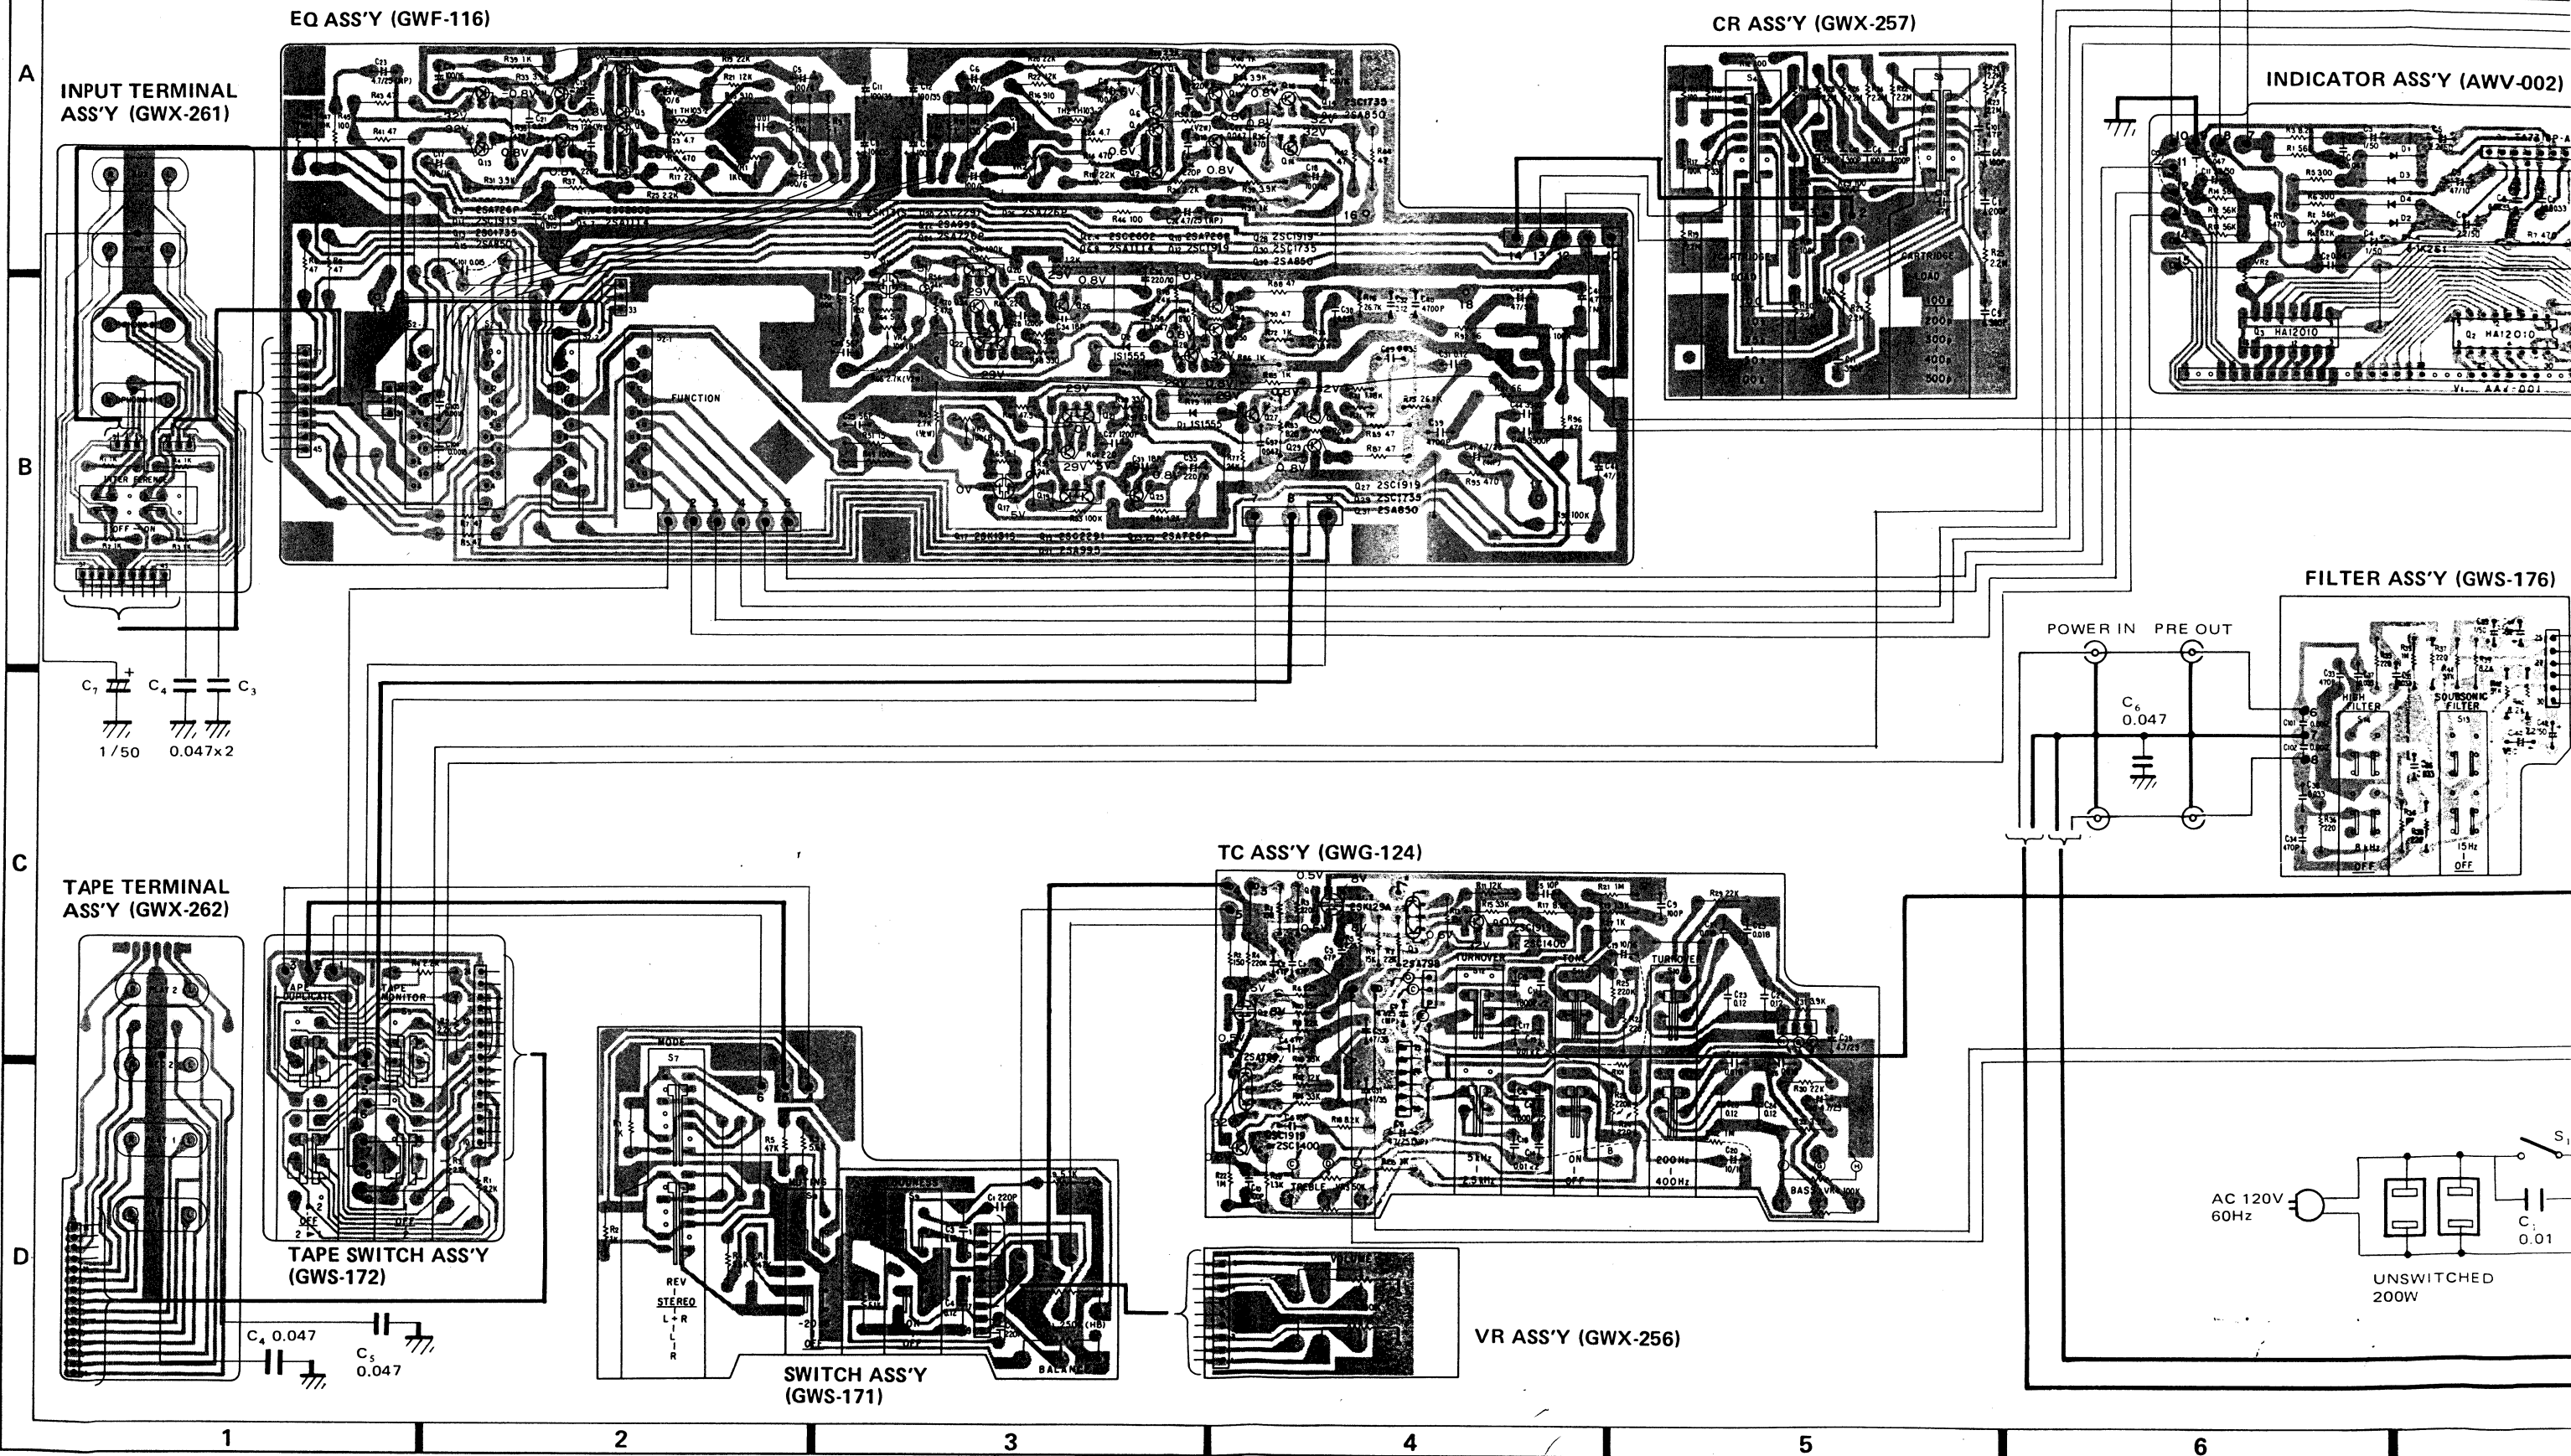

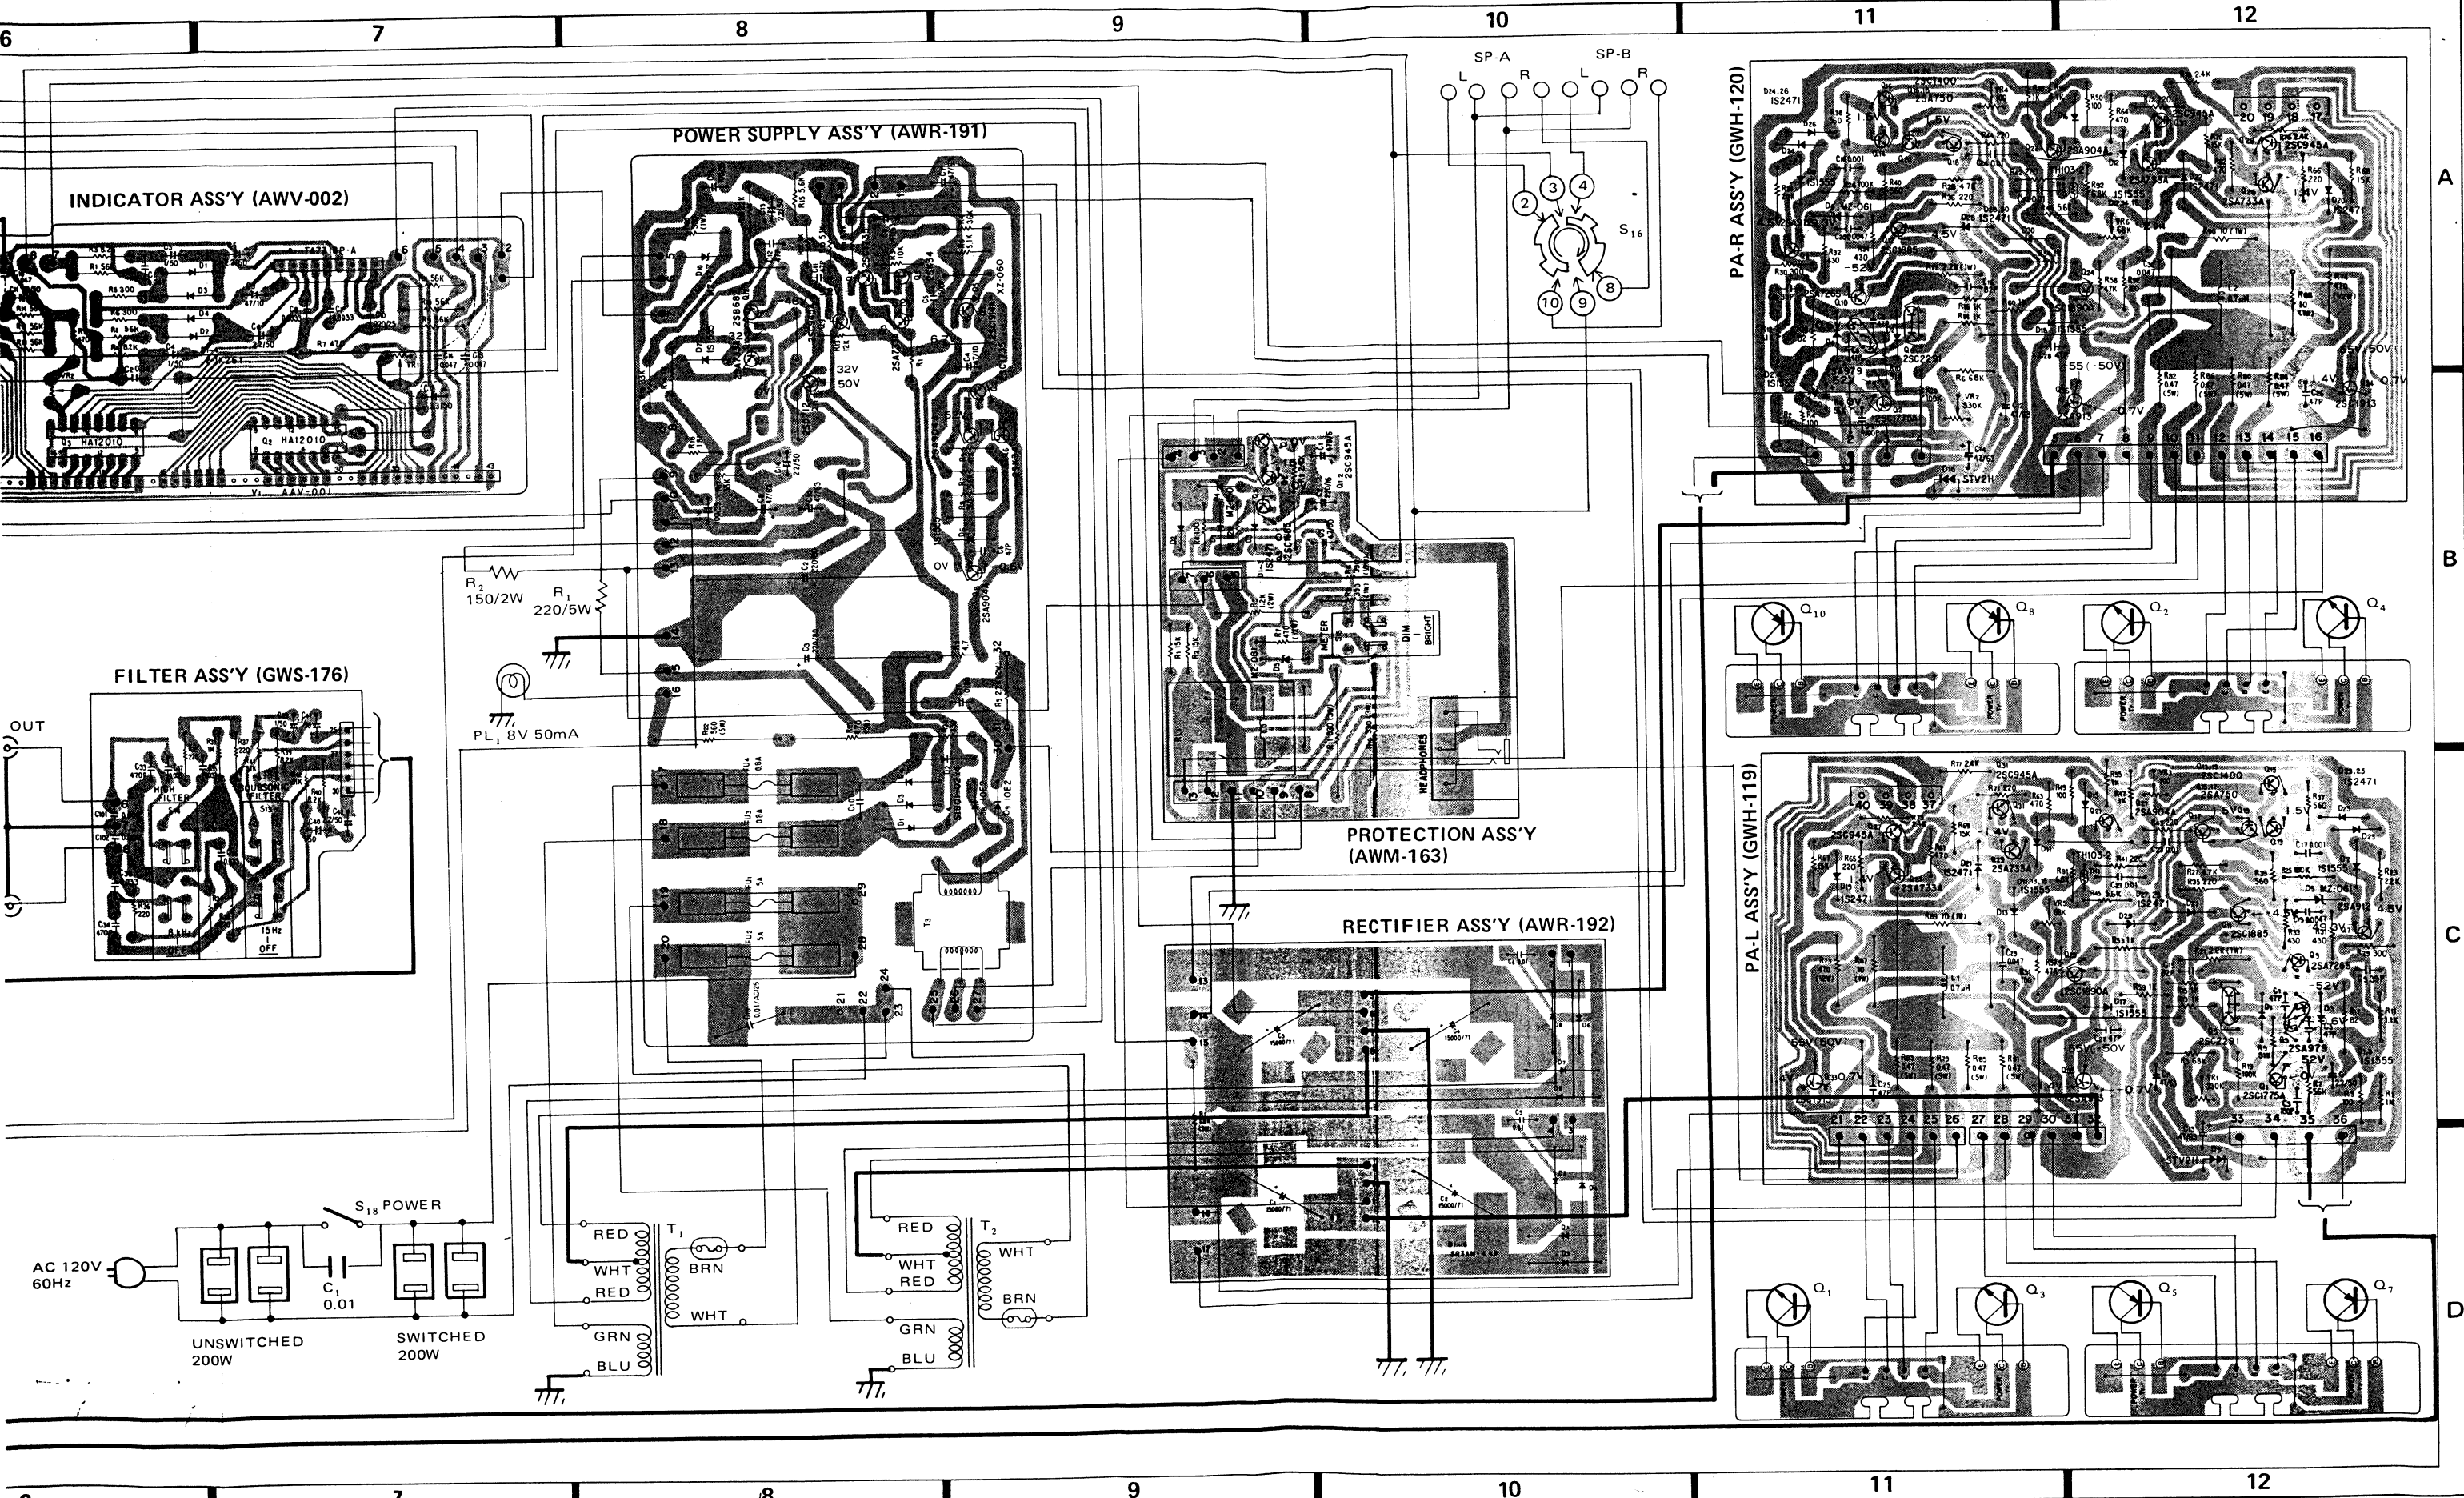


11.4 INPUT TERMINAL ASSEMBLY (GWX-261)

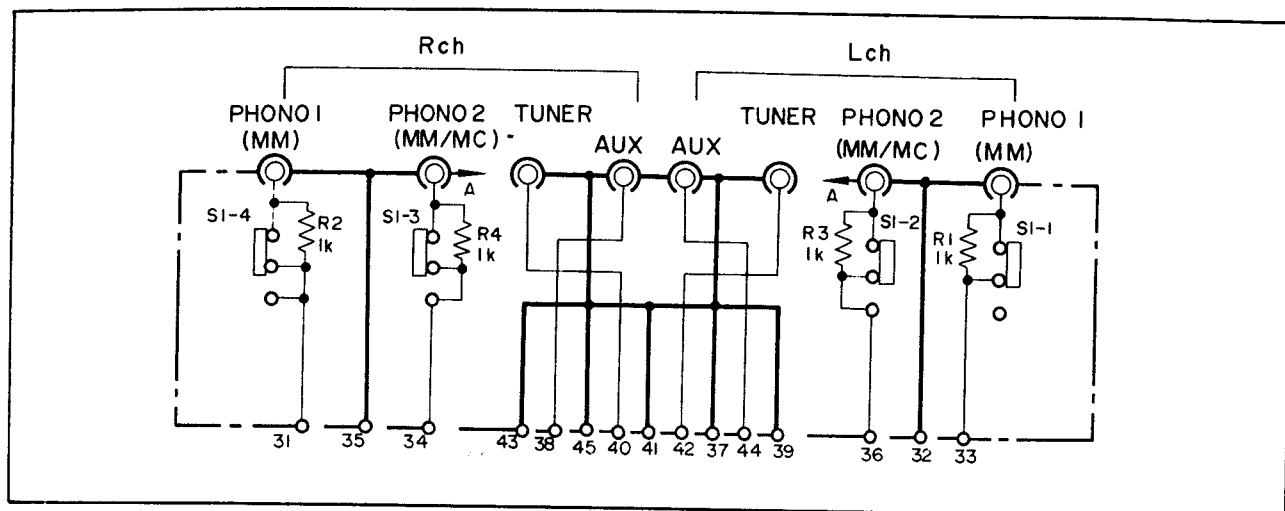

Parts List

Part No.	Symbol & Description	
ASH-018	S1	Slide switch (PHONO INTERFERENCE)
RD $\frac{1}{4}$ PM 102J AKB-054	R1-R4	Terminal (INPUT)

11.5 CR ASSEMBLY (GWX-257)

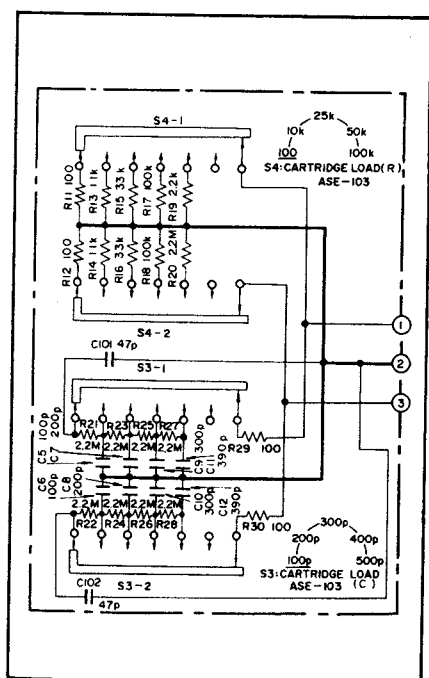

Parts List

SWITCHES

Part No.	Symbol & Description	
ASE-103	S3, S4	Slide rotary

Note: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

RESISTORS

Part No.	Symbol & Description	
RD $\frac{1}{4}$ PM $\square\square\square$ J	R11-R30	

CAPACITORS

Part No.	Symbol & Description	
CQSH 101K 50	C5, C6	
CQSH 201K 50	C7, C8	
CQSH 301K 50	C9, C10	
CQSH 391K 50	C11, C12	
CCDSL 470K 50	C101, C102	

Parts List

Part No.	Symbol & Description	
CQMA 103K 50	C1, C2	
CEANL 101M 6	C3—C8	
CEA 101P 35	C9—C12	
CCDSL 221K 50	C13—C16	
CEA 101P 16	C17—C20	
CQMA 473K 50	C21, C22, C37, C38	
ACH-318	C23, C24, C41, C42	
	Electrolytic	4.7/25 (NP)
CCDSL 560K 50	C25, C26	
CKDYB 122K 50	C27, C28	
CQPA 353G 50	C29, C30	
CQPA 124G 50	C31, C32	
CCDSL 180K 50	C33, C34	
CEA 221P 10	C35, C36	
CQMA 472K 50	C39, C40	
CQMA 392K 50	C43, C44	
CEA 470P 50	C45, C46	
CQMA 153J 50	C101, C102	
CQMA 182J 50	C103, C104	

RESISTORS


Part No.	Symbol & Description
ACP-077	VR1, VR2 Semifixed 1k-B
ACP-019	VR3, VR4 Semifixed 100-B
RD%PM □□□ J	R5—R28, R31—R36, R45—R56, R61
RD%PM □□□ J	R62, R77—R86, R91—R96
⚠ RD%PSF □□□ J	R29, R30
⚠ RD%PMF □□□ J	R37—R44, R87—R90
RN ¹ / _s SQ □□□ F	R57—R60, R67—R76
RD%PS □□□ J	R65, R66
RN%SR □□□□ F	R63, R64

Part No.	Symbol & Description
2SC2602	Q1—Q4
2SA1114	Q5—Q8
2SA726P (2SA750)	Q9, Q10, Q23—Q26
2SC1919 (2SC1400)	Q11, Q12, Q27, Q28
2SC1735	Q13, Q14, Q29, Q30
2SA850	Q15, Q16, Q31, Q32
2SK131S	Q17, Q18
2SC2291	Q19, Q20
2SA995	Q21, Q22
1S1555 (1S2473)	D1, D2
TH103-2	Th1, Th2


Part No.	Symbol & Description	
ASD-113	S2	Rotary switch (FUNCTION)
ABA-048		Screw 3x6
ABN-024		Washer faced unt

List of changed parts information will be furnished whenever necessary and you are requested to amend parts number in this parts list.

Symbol	Part No.	Description

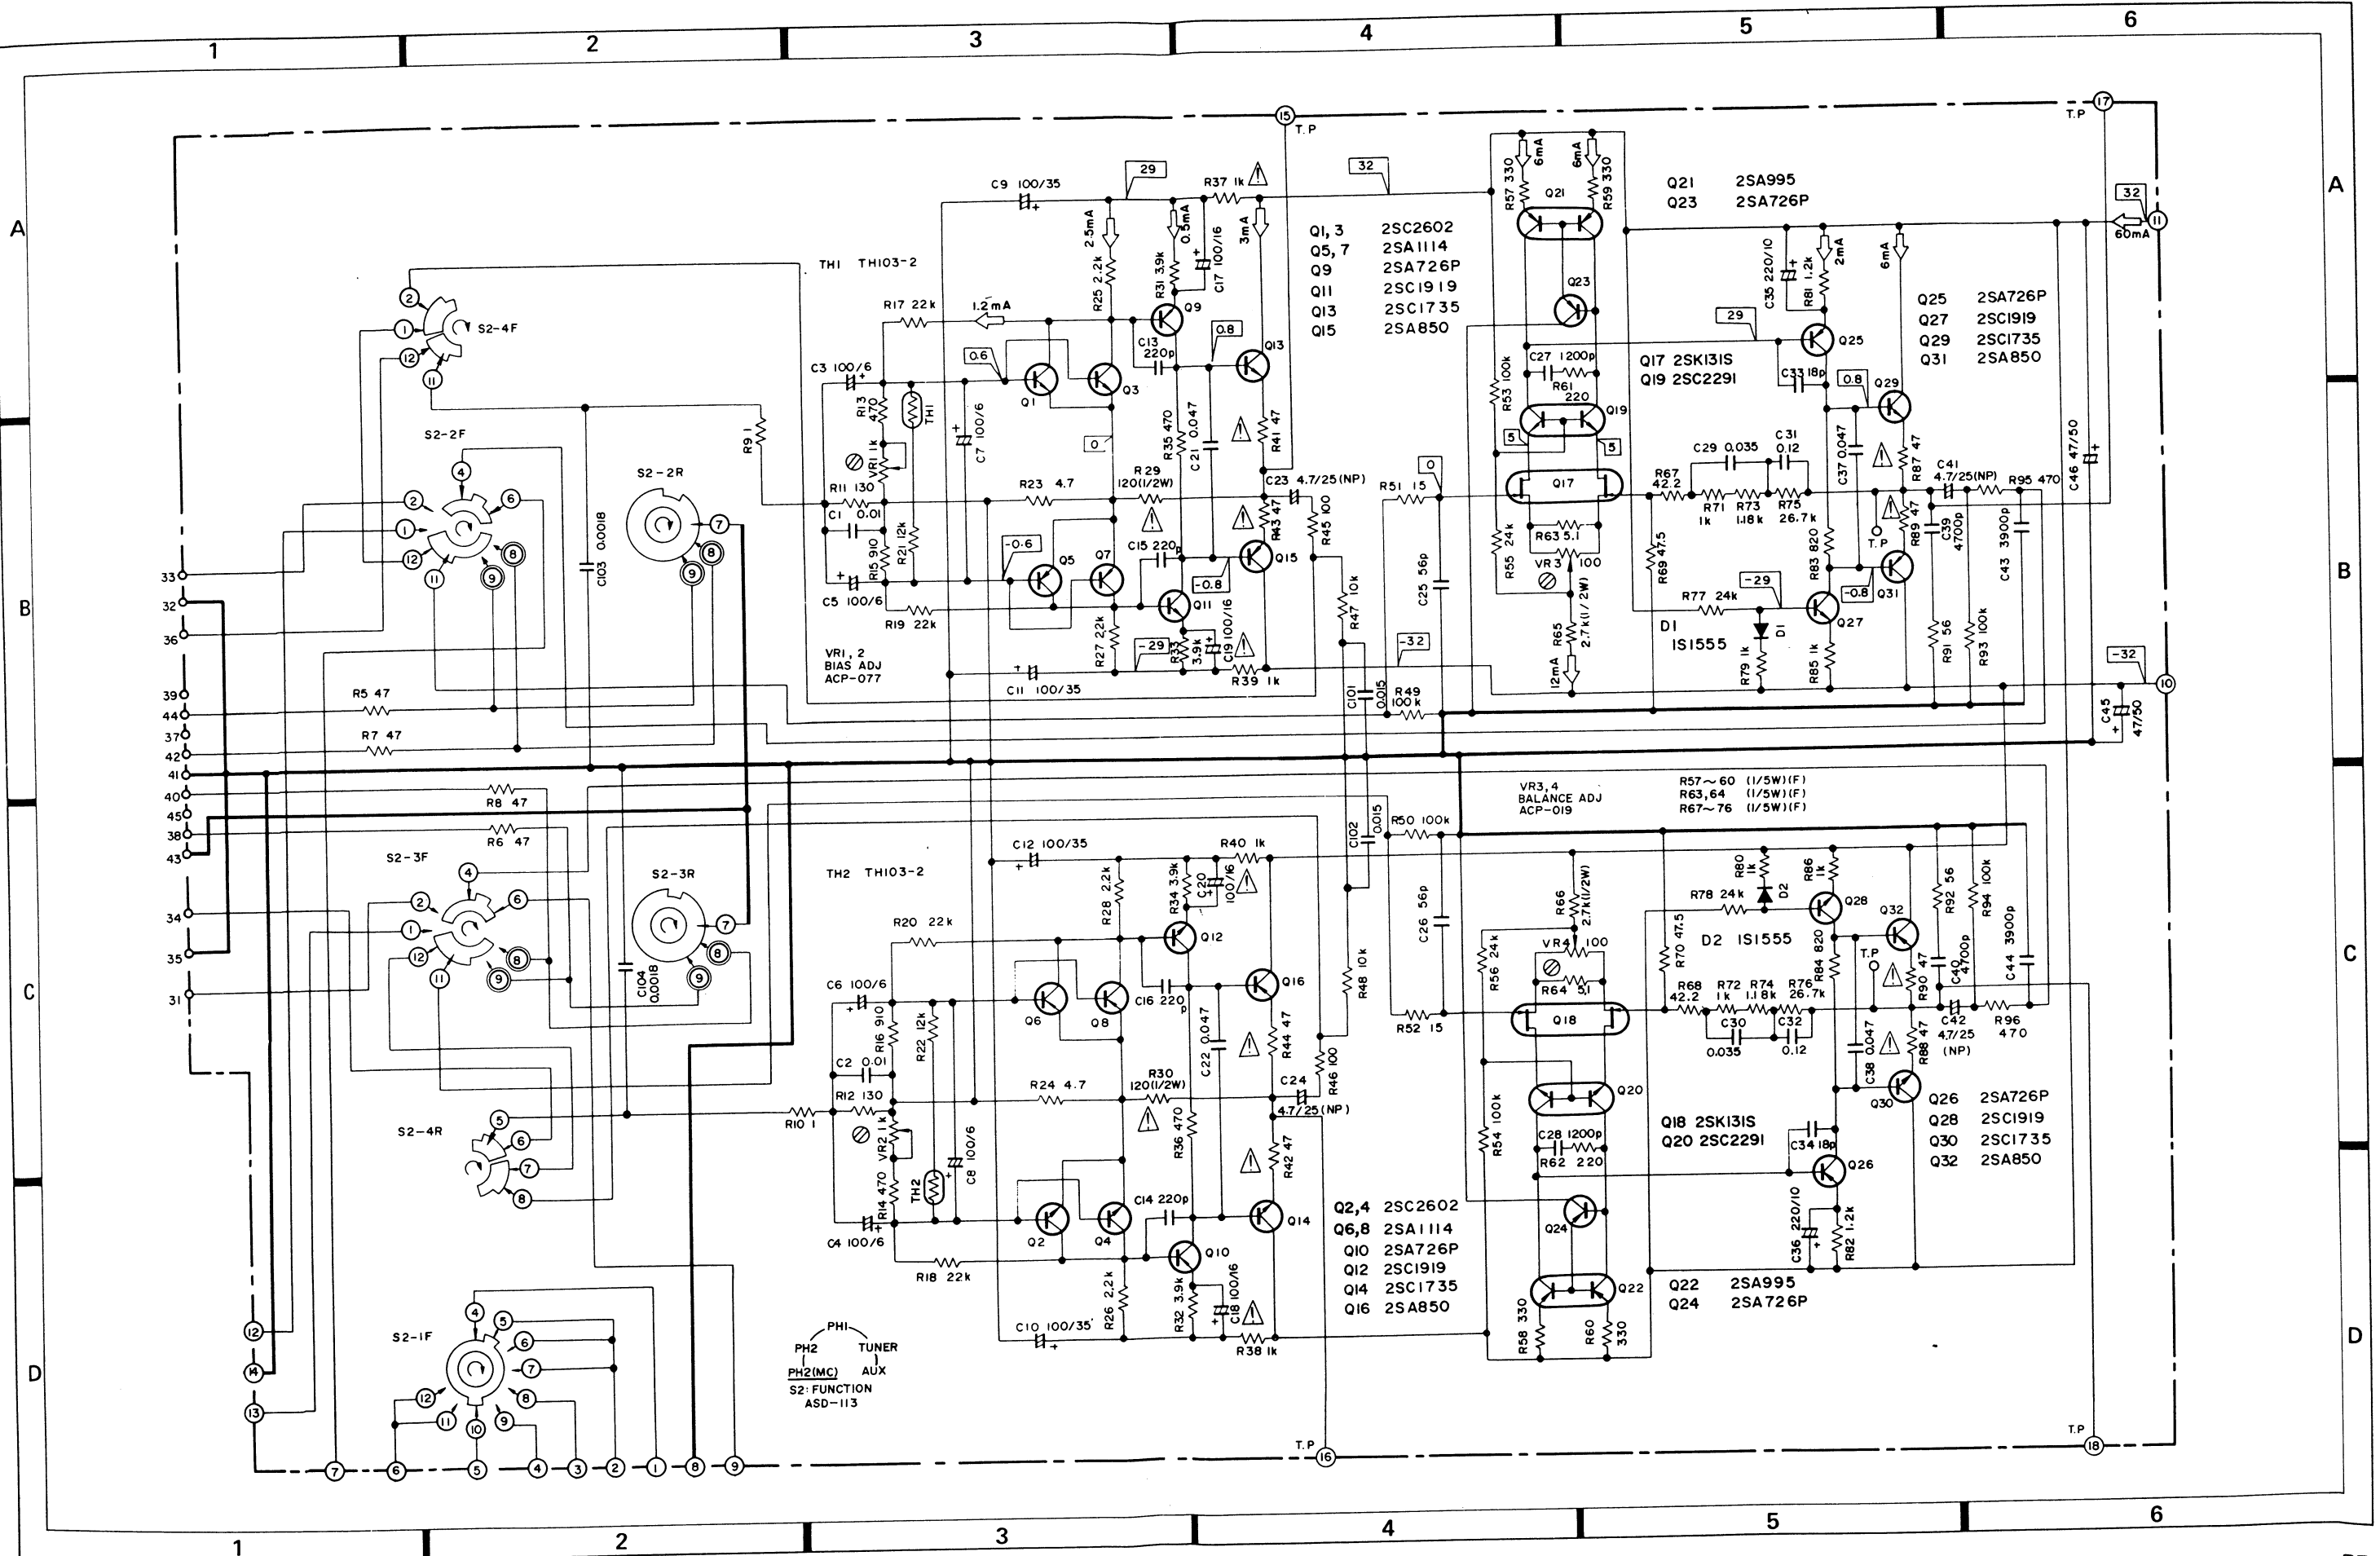

11.7 SWITCH ASSEMBLY (GWS-171)

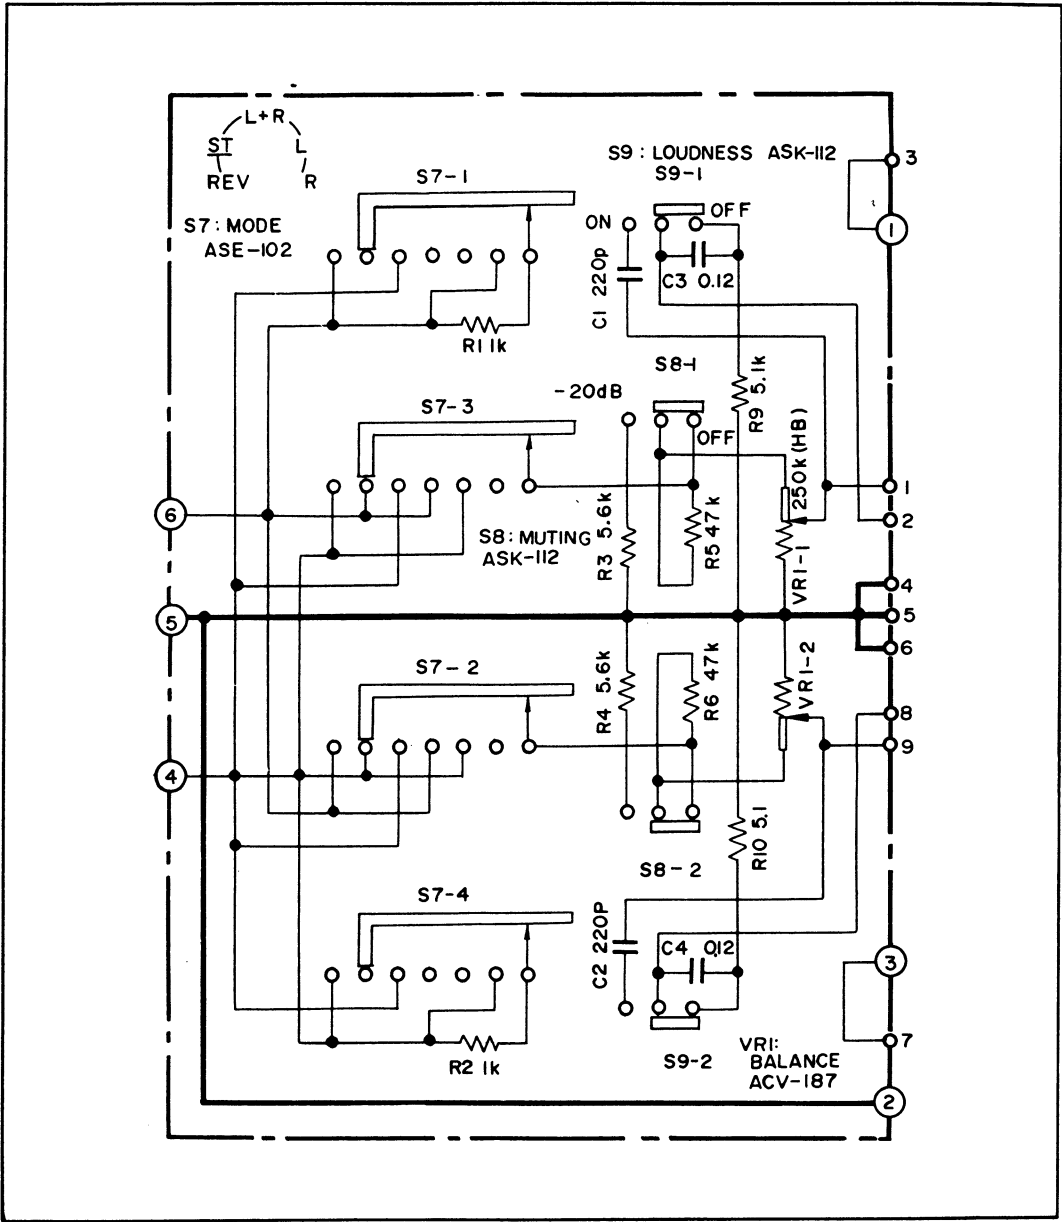

Parts List

CAPACITORS

Part No.	Symbol & Description
CCDSL 221J 50	C1, C2
CQMA 124J 50	C3, C4

SWITCHES


Part No.	Symbol & Description
ASE-102	S7 Slide-rotary (MODE)
ASK-112	S8, S9 Lever (MUTING, LOUDNESS)

RESISTORS

Part No.	Symbol & Description
ACV-187	VR1 Variable (BALANCE)
RD4PM □□□J	R1-R6, R9, R10

Note: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

11.8 TC ASSEMBLY (GWG-124)

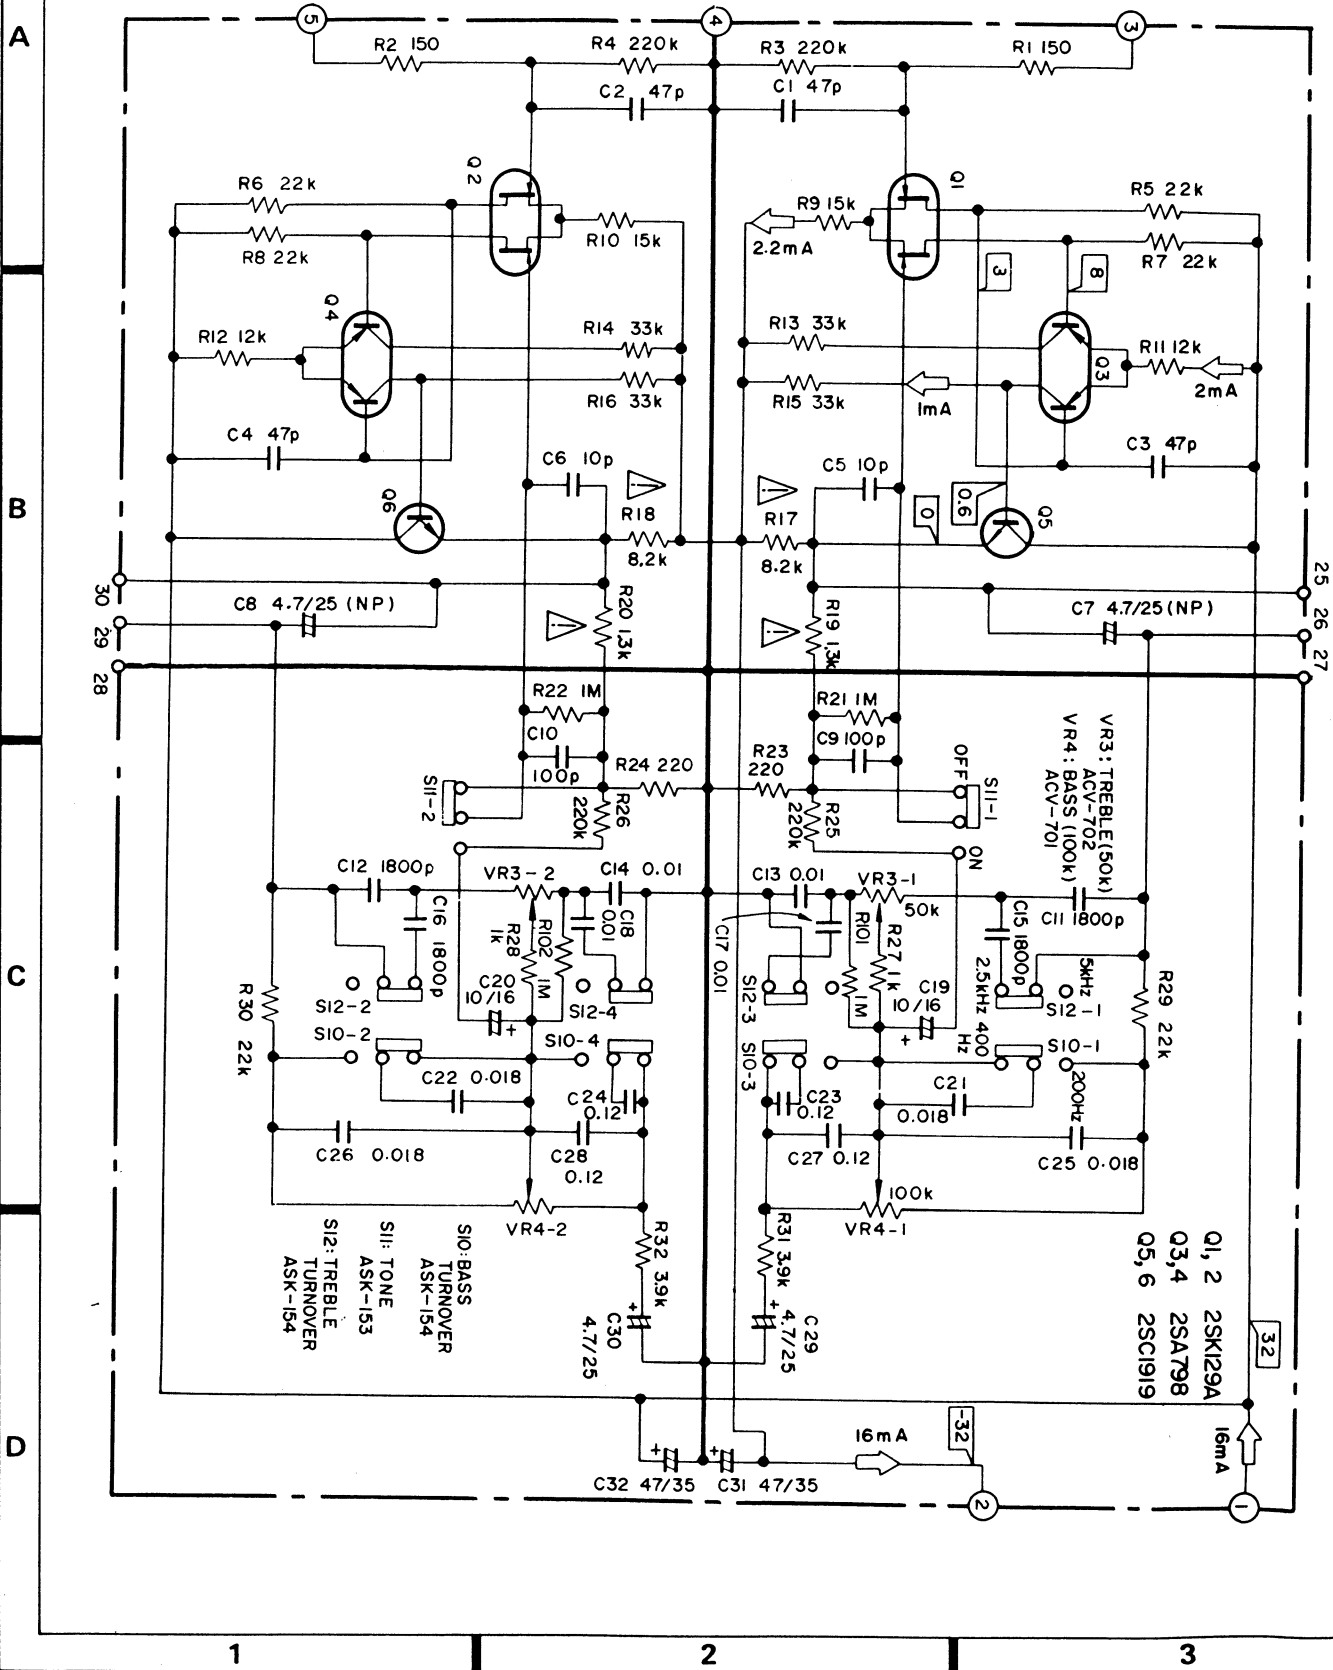

Parts List of TC Assembly (GWG-124)

OTHER

Part No.	Description
ABA-026	Pan head screw

CAPACITORS

Part No.	Symbol & Description
CCDSL 470K 50	C1-C4
CCDSL 100K 50	C5, C6
ACH-318	C7, C8 Electrolytic 4.7/25V (NP)
CCDSL 101K 50	C9, C10
CKDYB 182K 50	C11, C12, C15, C16
CQMA 103J 50	C13, C14, C17, C18
CEANL 100M 16	C19, C20
CQMA 183J 50	C21, C22, C25, C26
CQMA 124J 50	C23, C24, C27, C28
CEANL 4R7M 25	C29, C30
CEA 470P 35	C31, C32

Note: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

RESISTORS

Part No.	Symbol & Description
ACV-702	VR3 Variable (TREBLE)
ACV-701	VR4 Variable (BASS)
RD $\frac{1}{4}$ PM $\square\square\square$ J	R1-R16, R21-R32, R101, R102
Δ RD $\frac{1}{4}$ PMF $\square\square\square$ J	R17-R20


SEMICONDUCTORS

Part No.	Symbol & Description
2SK129A	Q1, Q2
2SA798	Q3, Q4
2SC1919	Q5, Q6
(2SC1400)	

SWITCHES

Part No.	Symbol & Description
ASK-154	S10, S12 Lever (TURNOVER)
ASK-153	S11 Lever (TONE)

11.9 FILTER ASSEMBLY (GWS-176)

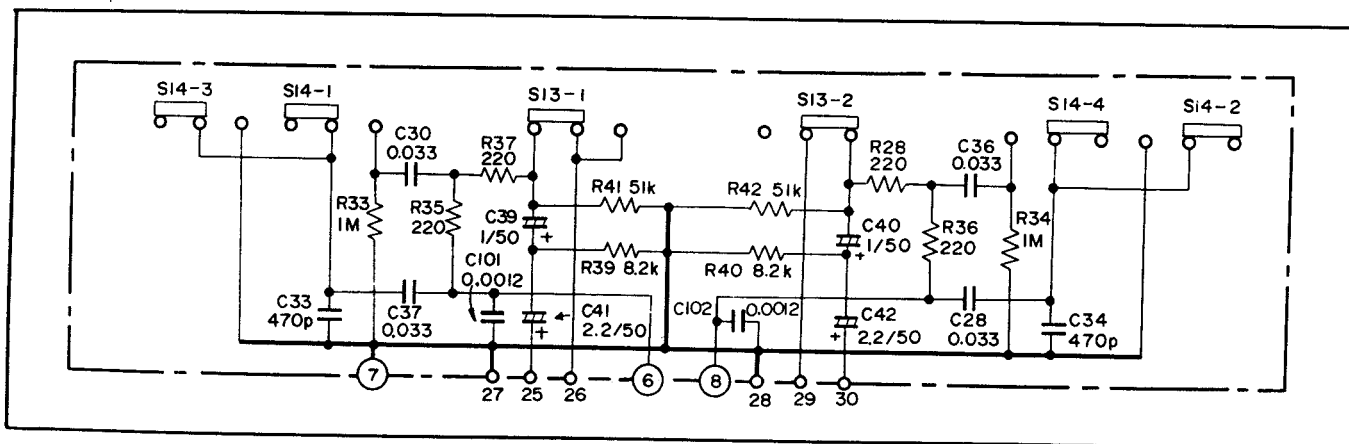

Parts List

CAPACITORS

Part No.	Symbol & Description
CCDSL 471K 50	C33, C34
CQMA 333J 50	C35-C38
CEANL 010M 50	C39, C40
CEANL 2R2M 50	C41, C42
CQMA 122J 50	C101, C102

Note: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

RESISTORS

Part No.	Symbol & Description
RD $\frac{1}{4}$ PM $\square\square\square$ J	C33-C42

SWITCHES

Part No.	Symbol & Description
ASK-112	S13, S14 Lever (FILTER)

11.10 PA-L ASSEMBLY (GWH-119)

Parts List

CAPACITORS

Part No.	Symbol & Description	Part No.	Symbol & Description
CEANL 2R2P 50	C1	2SA733A	Q25, Q29
CCDSL 101K 50	C3	2SC945A	Q27, Q31
CCDSL 470K 50	C5, C7	2SC1913	Q33
CCDSL 390K 50	C9	2SA913	Q35
CEA 470P 63	C11, C13		
CCDSL 820K 50	C15	1S1555	D1, D3, D7, D11, D13, D15, D17
CQMA 102K 400	C17	(1S2473)	
CQMA 472K 50	C19	MZ-061	D5
CQMA 103K 50	C21, C23	(WZ-061)	
CCDSL 470K 500	C25, C27	STV2H-O	D9
		1S2471	D19, D21, D23, D25, D27, D29
CQMA 473J 100	C29	TH103-2	Th1

Note: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

RESISTORS

Part No.	Symbol & Description
ACP-035	VR1 Semifixed 330k-B
ACP-019	VR3 Semifixed 100-B
ACP-076	VR5 Semifixed 68k-B
RD¼PM □□□ J	R1, R3, R5, R7, R9, R11, R19, R25
RD¼PM □□□ J	R27, R45, R49, R51, R57, R67
RD¼PM □□□ J	R69, R91
△RD¼PM □□□ J	R13, R15, R23, R29, R31, R37, R39
△RD¼PM □□□ J	R41, R47, R53, R55, R59
△RD¼PM □□□ J	R75, R77
△RD¼PS □□□ J	R17, R73
RS1P □□□ J	R21
△RD¼PMF □□□ J	R33, R35, R43, R61, R63, R65, R71
△ACN-041	R79, R81, R83, R85
	Wire wound 0.47/5W
△RS1P □□□ J	R87, R89

SEMICONDUCTORS

Part No.	Symbol & Description
2SC1775A-E	Q1
2SA979-F	Q3
2SC2291	Q5
2SA912	Q7
2SA726S	Q9
2SC1885	Q11
2SC1400	Q13, Q19
2SA750	Q15, Q17
2SA904A	Q21
2SC1890A	Q23


OTHER

Part No.	Description
ABA-048	Screw 3x6
ABA-026	Screw 3x6 (Pan head)

List of Changed Parts for Factory Modification

List of changed parts information will be furnished whenever necessary and you are requested to amend parts number in this parts list.

Symbol	Part No.	Description

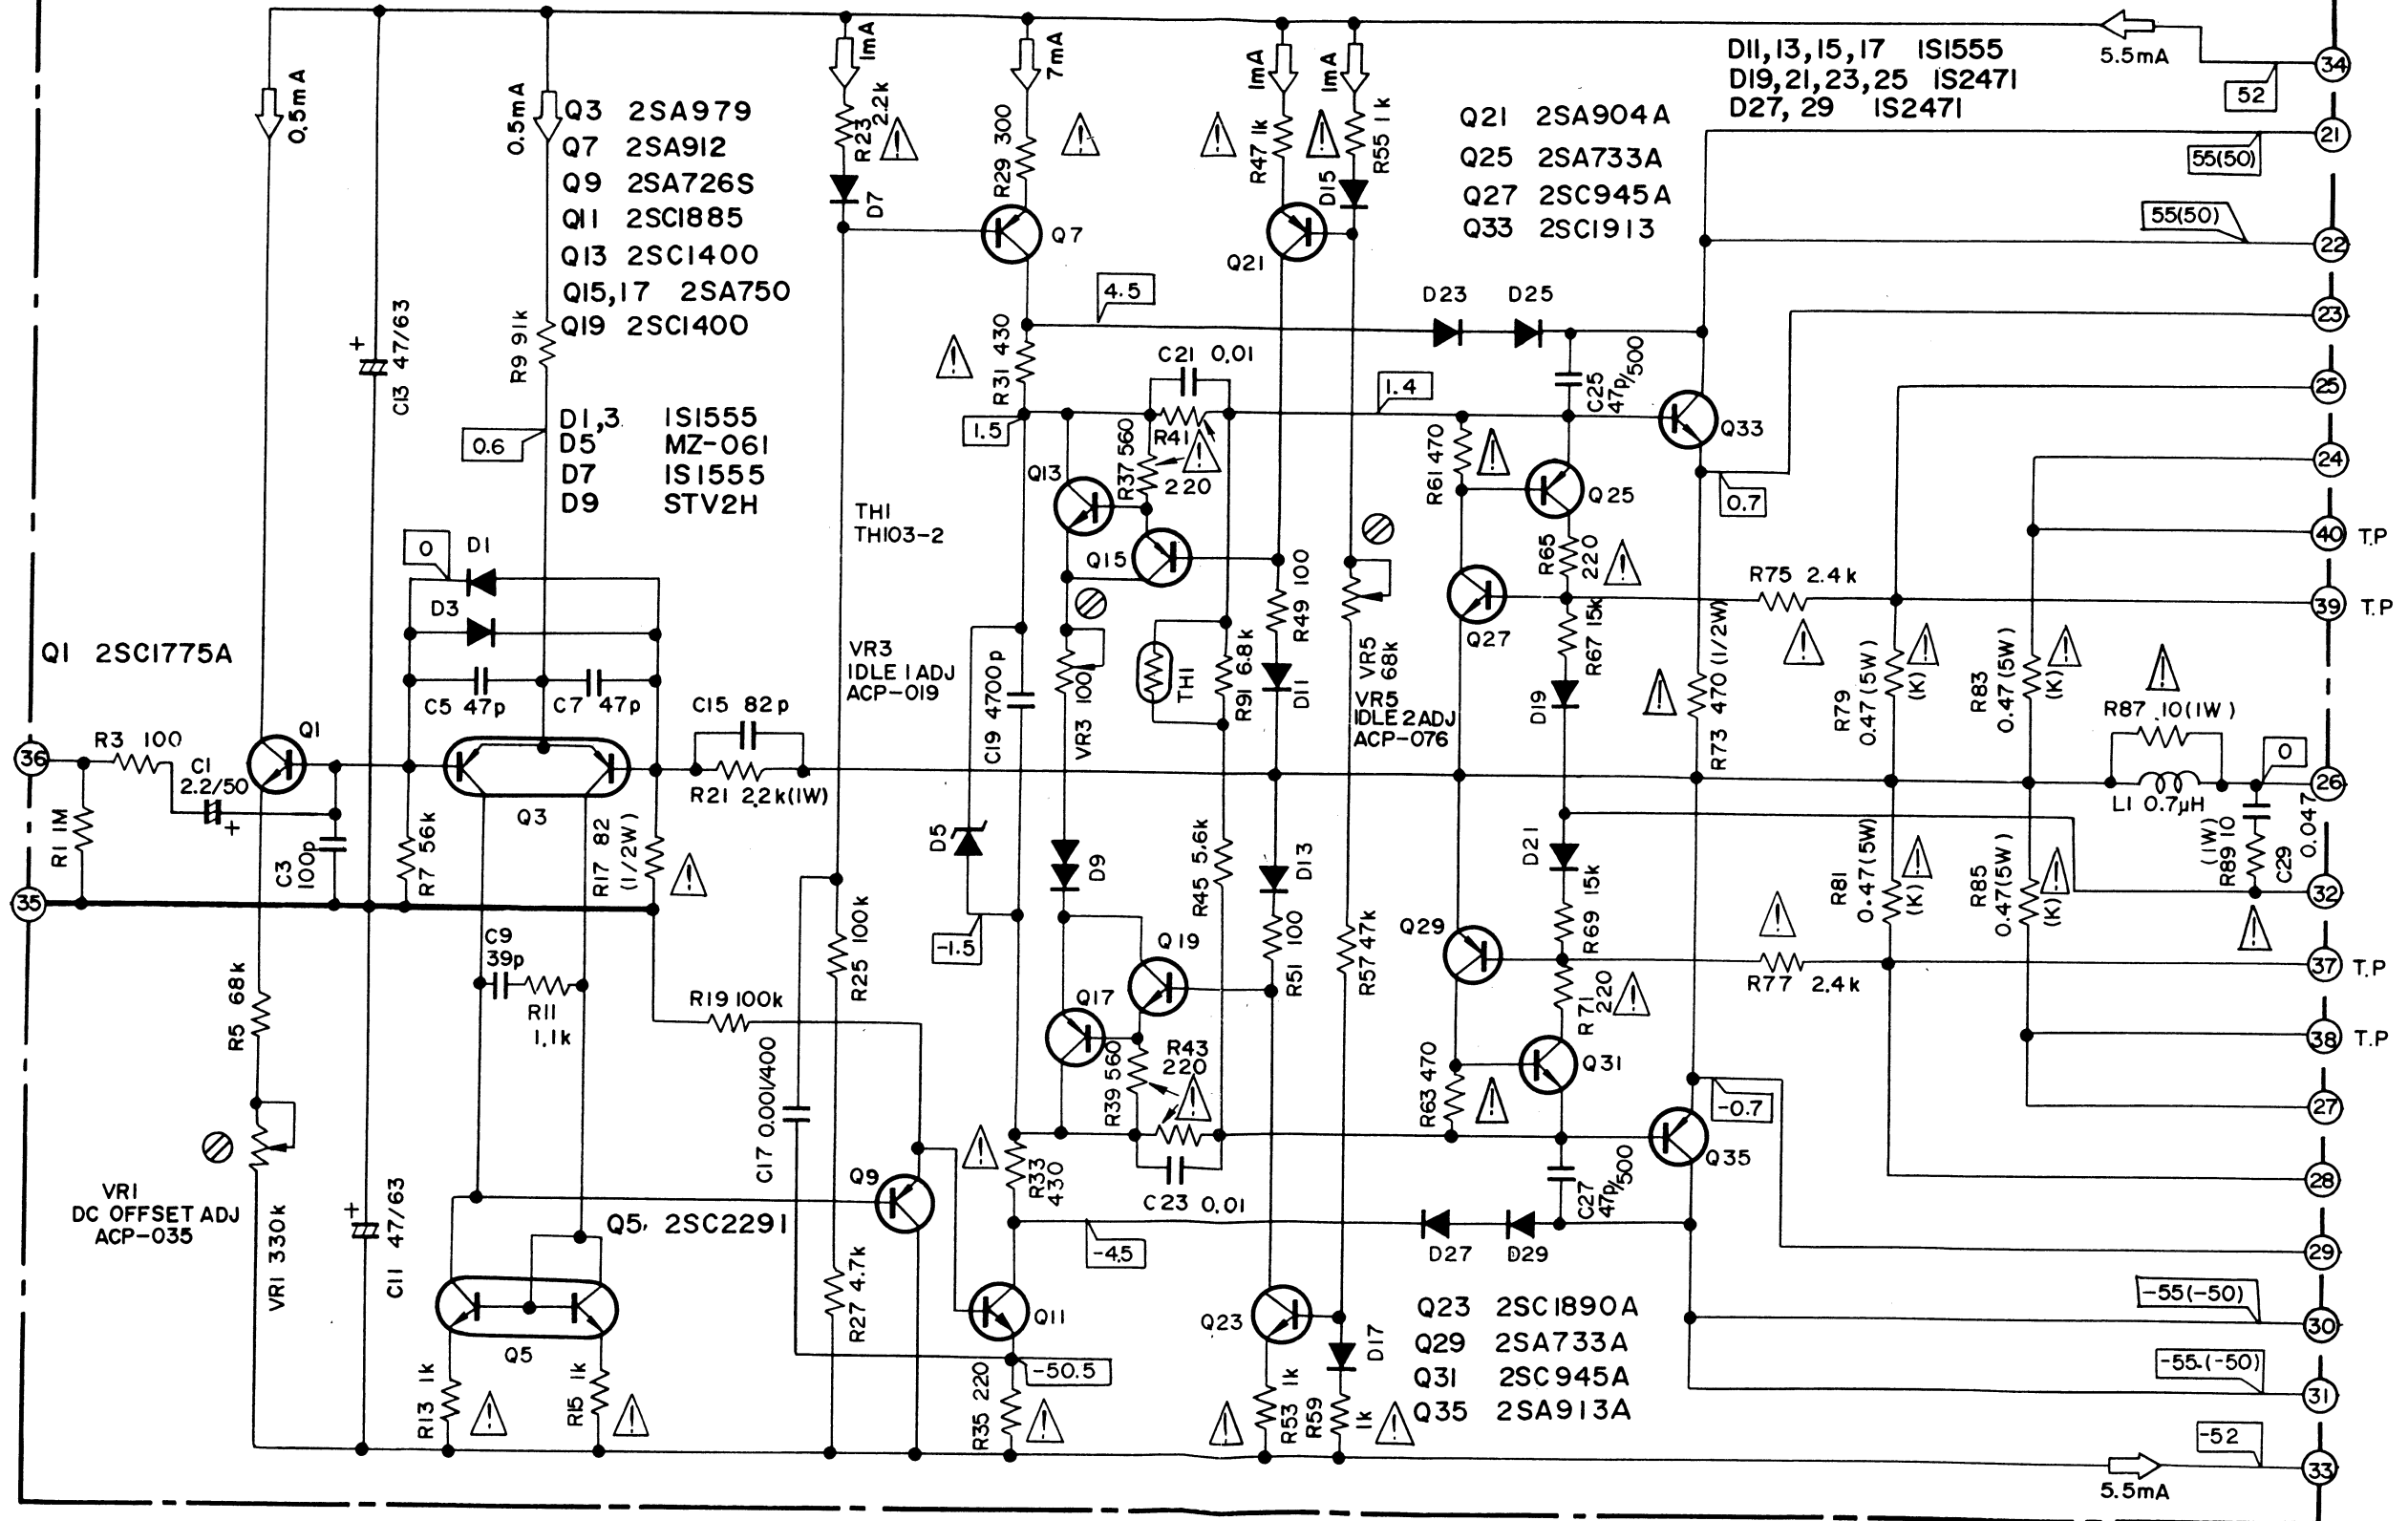

VR2 DC OFFSET ADJ ACP-035

VR4 IDLE I ADJ ACP-019

TH2 TH103-2

VR6 IDLE 2 ADJ ACP-076

Q2 2SC1775A

Q4 2SC2291

Q6 2SC2291

Q8 2SC1885

Q10 2SC1400

Q12 2SC1400

Q14 2SC1400

Q16 2SC1400

Q18 2SC1400

Q20 2SC1400

Q22 2SA904A

Q24 2SC1890A

Q26 2SA733A

Q28 2SC945A

Q30 2SA733A

Q32 2SC945A

Q34 2SC1913

Q36 2SA913

D2, 4 IS1555

D6 MZ-061

D8 IS1555

D10 STV2H

Q4 2SA979

Q8 2SA912

Q10 2SA726S

Q12 2SC1885

Q14 2SC1400

Q16, 18 2SA750

Q20 2SC1400

D12, 14, 16, 18 IS1555

D20, 22, 24 IS2471

D26, 28, 30 IS2471

R1 1M

R2 1M

R3 100

R4 100

R5 100

R6 68k

R7 330k

R8 56k

R9 1k

R10 91k

R11 1k

R12 1.1k

R13 1k

R14 1k

R15 1k

R16 1k

R17 1k

R18 1k

R19 1k

R20 100k

R21 100k

R22 2.2k (1W)

R23 100k

R24 22k

R25 1k

R26 100k

R27 100k

R28 4.7k

R29 1k

R30 300

R31 1k

R32 430

R33 1k

R34 430

R35 1k

R36 220

R37 1k

R38 560

R39 1k

R40 560

R41 1k

R42 220

R43 1k

R44 220

R45 1k

R46 5.6k

R47 1k

R48 1k

R49 1k

R50 100

R51 1k

R52 100

R53 1k

R54 1k

R55 1k

R56 1k

R57 1k

R58 47k

R59 1k

R60 1k

R61 1k

R62 470

R63 1k

R64 470

R65 1k

R66 220

R67 1k

R68 15k

R69 1k

R70 15k

R71 1k

R72 220

R73 1k

R74 470 (1/2W)

R75 1k

R76 2.4k

R77 1k

R78 2.4k

R79 1k

R80 (K) 0.47 (5W)

R81 (K) 0.47 (5W)

R82 (K) 0.47 (5W)

R83 (K) 0.47 (5W)

R84 (K) 0.47 (5W)

R85 (K) 0.47 (5W)

R86 (K) 0.47 (5W)

R87 (K) 0.47 (5W)

R88 10 (1W)

R89 10 (1W)

R90 10 (1W)

C1 100p

C2 2.2/50

C3 100p

C4 100p

C5 100p

C6 47p

C7 47p

C8 47p

C9 39p

C10 39p

C11 47/63

C12 47/63

C13 47/63

C14 47/63

C15 47/63

C16 82p

C17 47/63

C18 0.001

C19 47/63

C20 4700p

C21 47/63

C22 0.01

C23 0.01

C24 0.01

C25 47/63

C26 47/63

C27 47/63

C28 47/63

C29 47/63

C30 0.047

L1 0.7uH

L2 0.7uH

55 (-50)

55 (50)

T.P.

Parts List of PA-R Assembly (GWH-120)

CAPACITORS

Part No.	Symbol & Description	
CEANL 2R2P 50	C2	
CCDSL 101K 50	C4	
CCDSL 470K 50	C6, C8	
CCDSL 390K 50	C10	
CEA 470P 63	C12, C14	
CCDSL 820K 50	C16	
CQMA 102K 400	C18	
CQMA 472K 50	C20	
CQMA 103K 50	C22, C24	
CCDSL 470K 500	C26, C28	
CQMA 473J 100	C30	

Note: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

RESISTORS

Part No.	Symbol & Description		
ACP-035	VR2	Semifixed	330k-B
ACP-019	VR4	Semifixed	100-B
ACP-076	VR6	Semifixed	68k-B
RD¼PM □□□ J	R2, R4, R6, R8, R10, R12, R20, R26		
RD¼PM □□□ J	R28, R46, R50, R52, R58, R68		
RD¼PM □□□ J	R70, R92		
RD¼PM □□□ J	R14, R16, R24, R30, R32, R38, R40		
RD¼PM □□□ J	R42, R48, R54, R56, R60		
RD¼PM □□□ J	R76, R78		
RD½PS □□□ J	R18, R74		
RS1P □□□ J	R22		
RD¼PMF □□□ J	R34, R36, R44, R62, R64, R66, R72		
ACN-041	R80, R82, R84, R86		
RS1P □□□ J	R88, R90		
		Wire wound	0.47/5W

SEMICONDUCTORS

Part No.	Symbol & Description	
2SC1775A-E	Q2	
2SA979-F	Q4	
2SC2291	Q6	
2SA912	Q8	
2SA726S	Q10	
2SC1885	Q12	
2SC1400	Q14, Q20	
2SA750	Q16, Q18	
2SA904A	Q22	
2SC1890A	Q24	
2SA733A	Q26, Q30	
2SC945A	Q28, Q32	
2SC1913	Q34	
2SA913	Q36	

Part No.	Symbol & Description	
1S1555 (1S2473)	D2, D4, D8, D12, D14, D16, D18	
MZ-061 (WZ-061)	D6	
STV2H-O	D10	
1S2471	D20, D22, D24, D26, D28, D30	
TH103-2	Th2	

OTHER


Part No.	Symbol & Description	
ABA-048	Screw 3x6	
ABA-026	Screw 3x6 (Pan head)	

List of Changed Parts for Factory Modification

List of changed parts information will be furnished whenever necessary and you are requested to amend parts number in this parts list.

Symbol	Part No.	Description


11.12 TAPE TERMINAL ASSEMBLY (GWX-262)

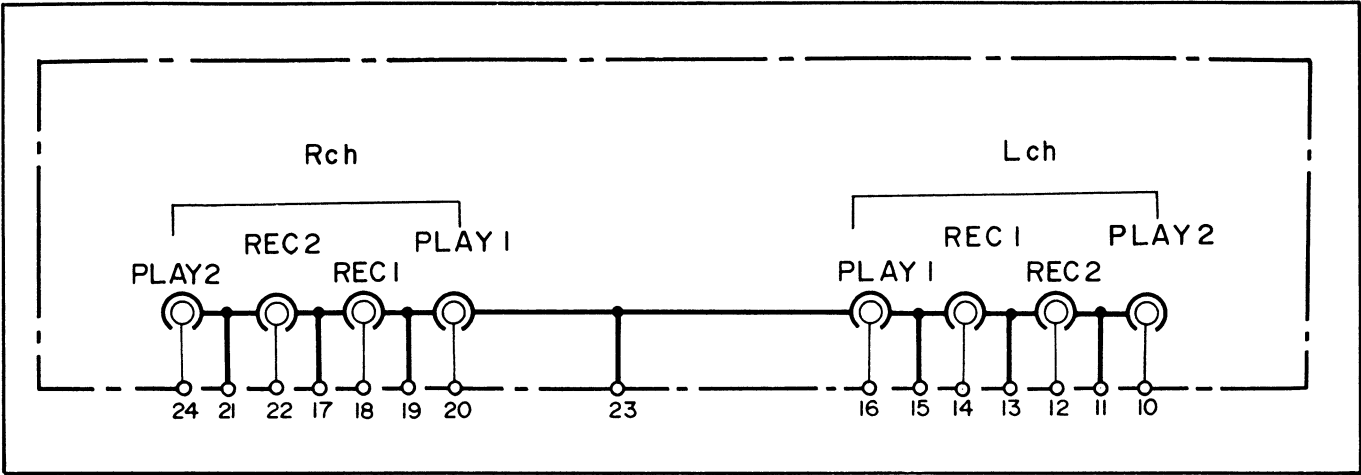

Parts List

Part No.	Description
AKB-054	Terminal (TAPE 1, 2)


11.13 TAPE SWITCH ASSEMBLY (GWS-172)

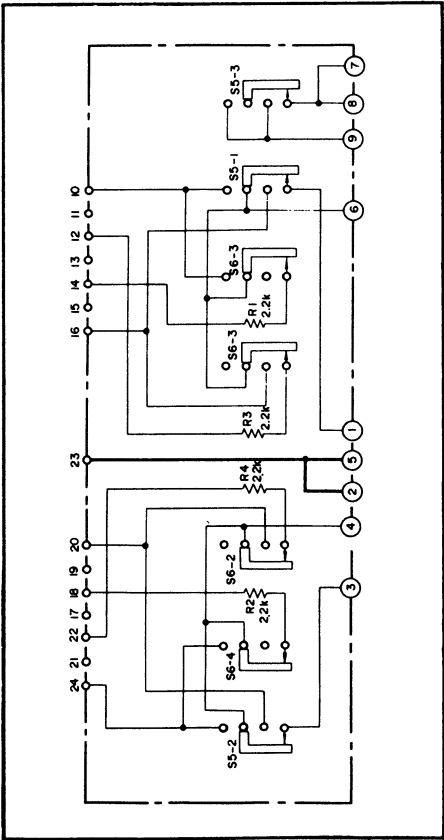

Parts List

Part No.	Symbol & Description	
ASK-113	S5, S6	Lever switch (TAPE)
RD¼PM □□□ J	R1-R4	

11.14 INDICATOR ASSEMBLY (AWV-002)

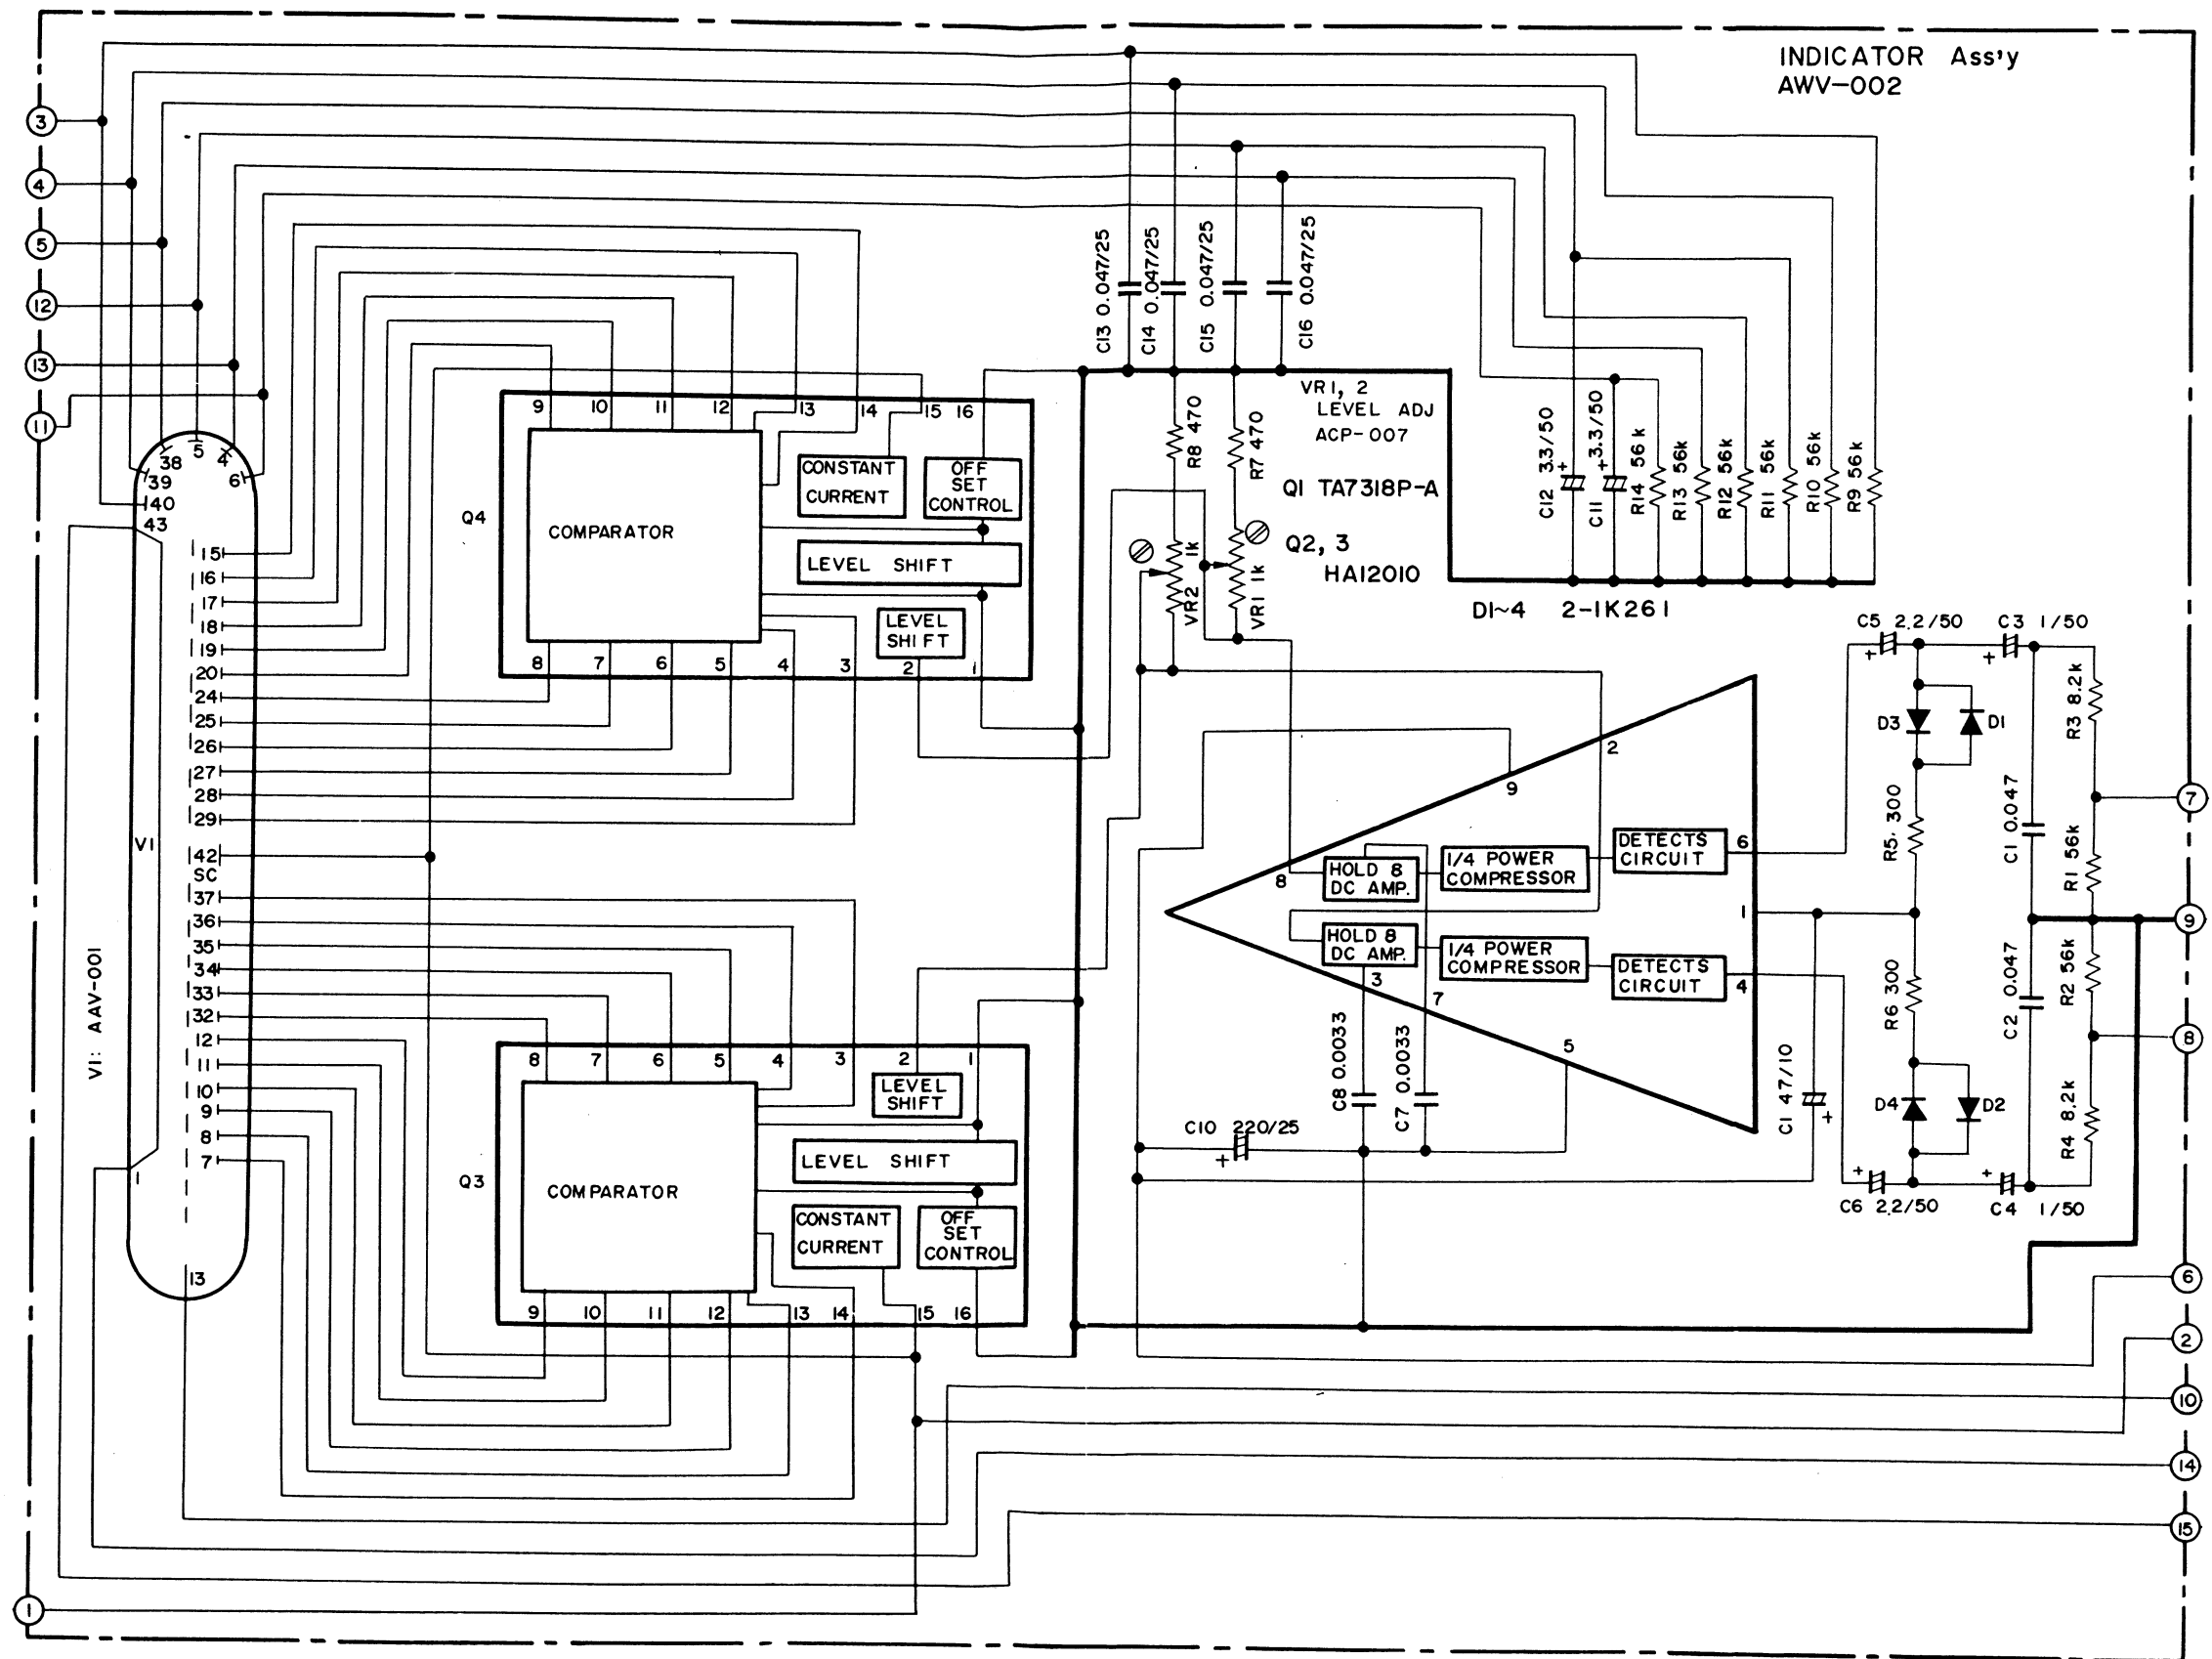

Parts List of Indicator Assembly (AWV-002)

CAPACITORS

Part No.	Symbol & Description
CQMA 473K 50	C1, C2
CEA 010P 50	C3, C4
CEA 2R2P 50	C5, C6
CQMA 332K 50	C7, C8
CEA 470P 10	C9
CEA 221P 25	C10
CEA 3R3P 50	C11, C12
CKDBC 473Z 25	C13-C16

Note: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

RESISTORS

Part No.	Symbol & Description
ACP-007	VR1, VR2 Semifixed 1k-B
RD¼PM □□□J	R1-R14


SEMICONDUCTORS

Part No.	Symbol & Description
TA7318P-A	Q1
HA12010	Q2, Q3
2-1K261	D1-D4

OTHERS

Part No.	Symbol & Description
AAV-001	V1
ABA-048	Fluorescent indicator tube Screw 3x6


11.15 VR ASSEMBLY (GWX-256)

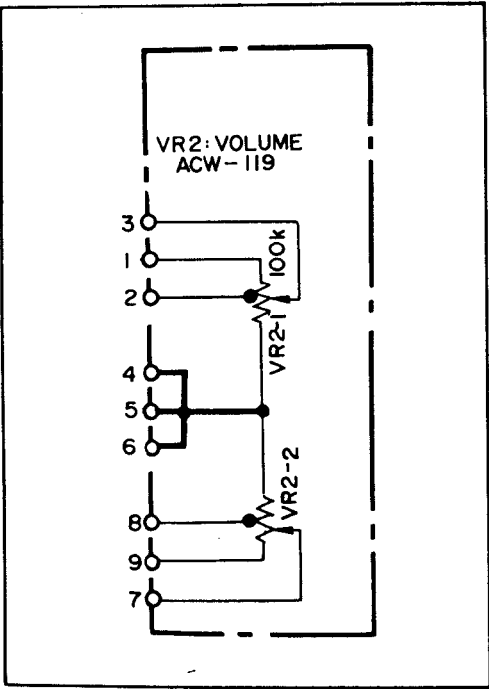

Parts List

Part No.	Symbol & Description
ACW-119	VR2 Variable resistor (VOLUME)

11.16 PROTECTION ASSEMBLY (AWM-163)

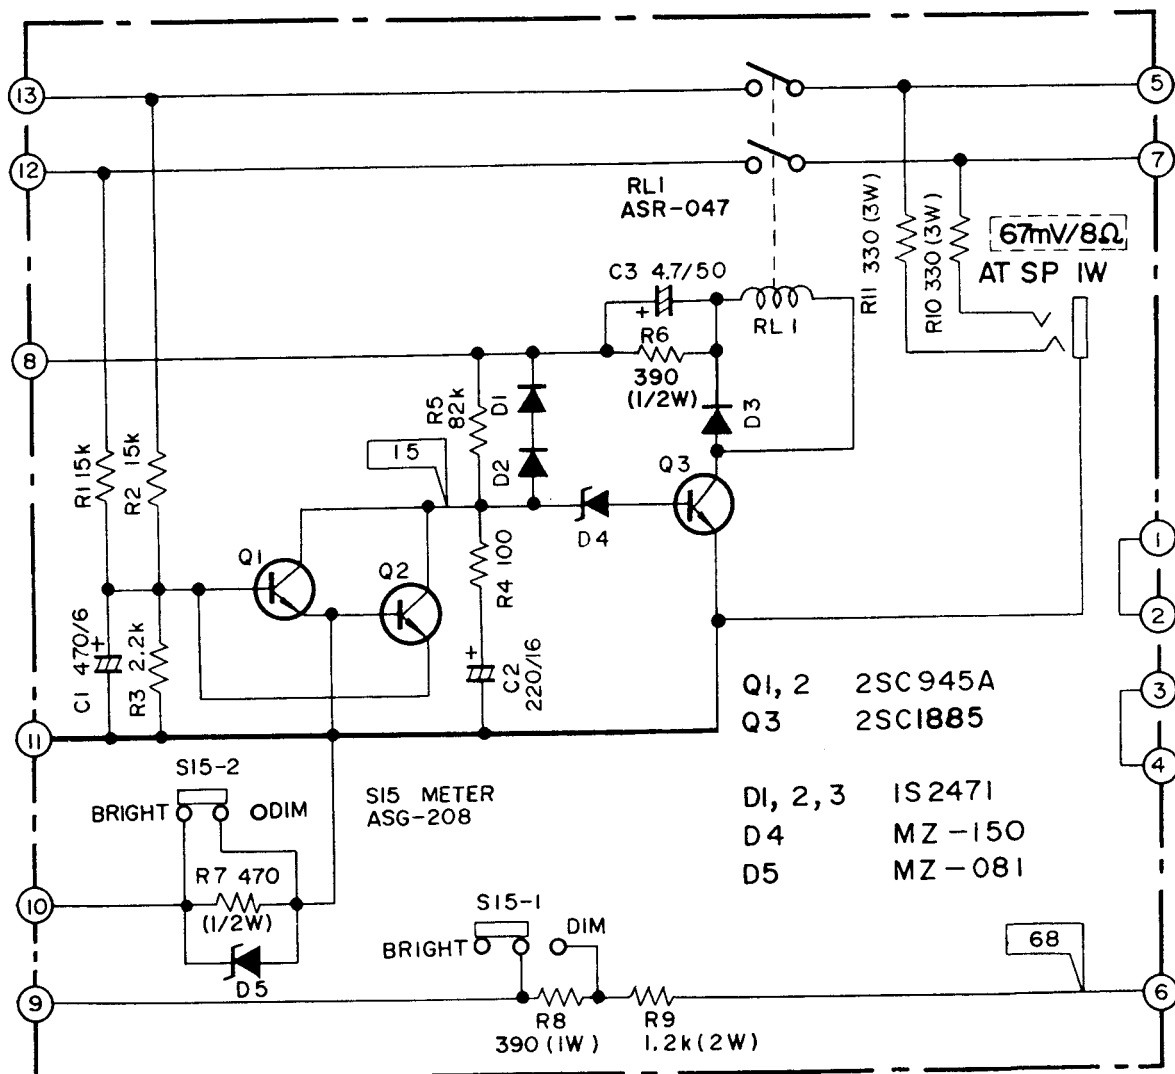

Parts List of Protection Assembly (AWM-163)

CAPACITORS

Part No.	Symbol & Description
CEA 471P 6	C1
CEA 221P 16	C2
CEA 4R7P 50	C3

Note: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

RESISTORS

Part No.	Symbol & Description
RD $\frac{1}{4}$ PM $\square\square\square$ J	R1-R5
RD $\frac{1}{2}$ PS $\square\square\square$ J	R6, R7
RS1P $\square\square\square$ J	R8
RS2P $\square\square\square$ J	R9
RS3P $\square\square\square$ J	R10, R11


SEMICONDUCTORS

Part No.	Symbol & Description
2SC945A	Q1, Q2
2SC1885	Q3
1S2471	D1-D3
MZ-150 (WZ-150)	D4
MZ-081 (WZ-081)	D5

OTHERS

Part No.	Symbol & Description
ASR-047	RL1 Relay
ASG-208	S15 Push switch (METER)
AKN-023	Phone jack (PHONES)
ABA-048	Screw 3x6

11.17 RECTIFIER ASSEMBLY (AWR-192)

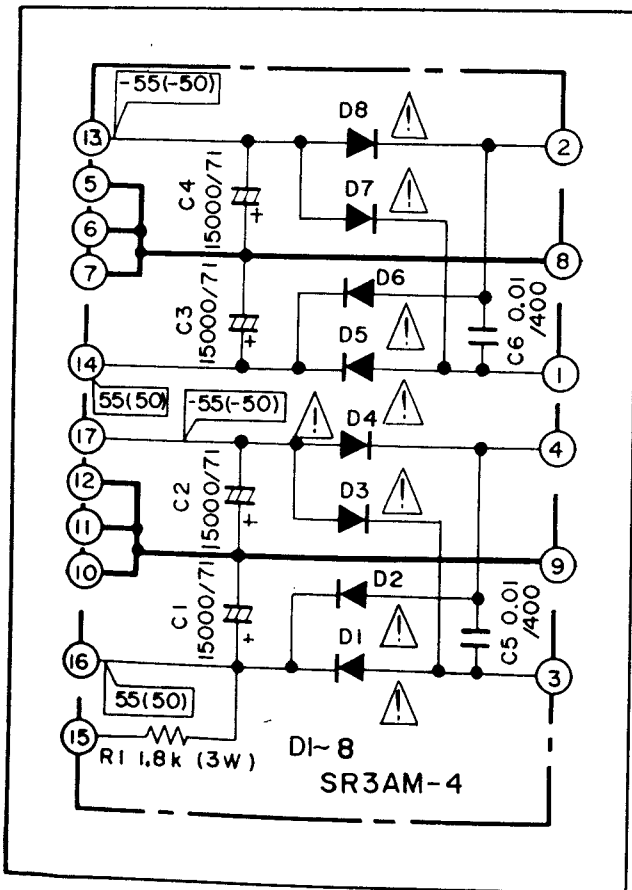

Parts List

CAPACITORS

Part No.	Symbol & Description
ACH-210	C1-C4 Electrolytic 15,000/71V
CQMA 103K 400	C5, C6

Note: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

RESISTORS

Part No.	Symbol & Description
RS3P $\square\square\square$ J	R1


SEMICONDUCTORS

Part No.	Symbol & Description
SR3AM-4	D1-D8

OTHERS

Part No.	Symbol & Description
ABA-048	Screw 3x6
ABA-051	Screw 3x12
ABE-020	Washer

11.18 POWER SUPPLY ASSEMBLY (AWR-191)

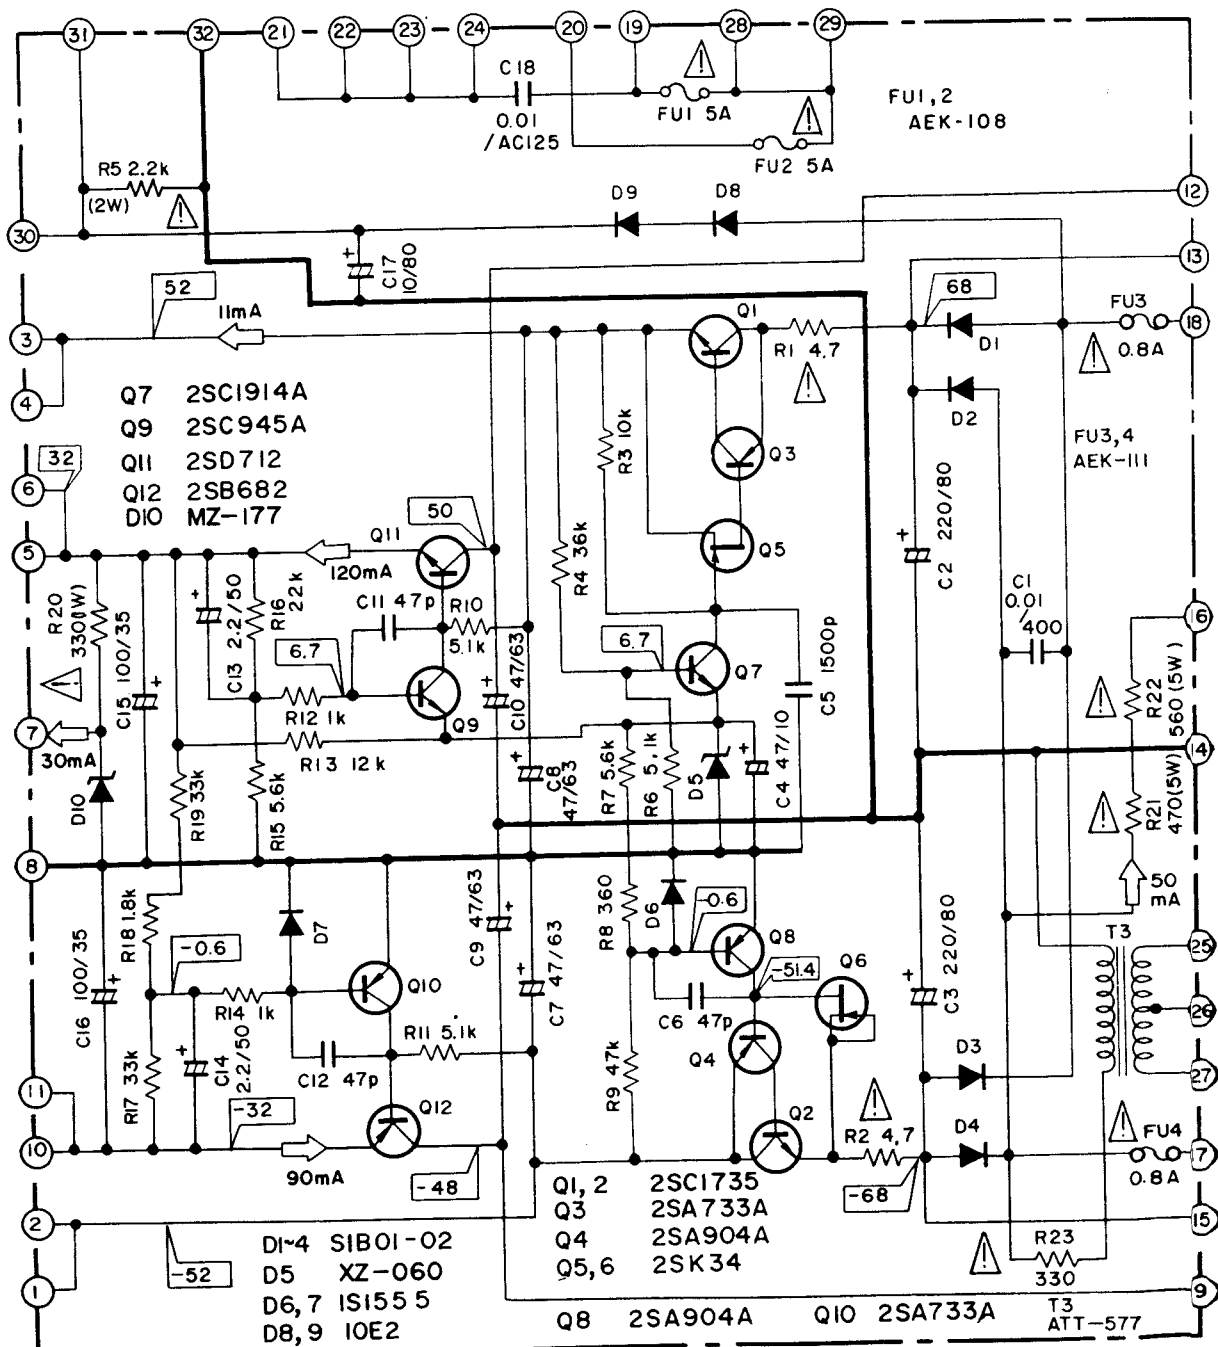

Parts List of Power Supply Assembly (AWR-191)

CAPACITORS

Part No.	Symbol & Description		
CQMA 103K 400	C1		
CEB 221P 80	C2, C3		
CEA 470P 10	C4		
CKDYB 152K 50	C5		
CCDSL 470K 50	C6, C11, C12		
CEA 470P 63	C7—C10		
CEA 2R2P 50	C13, C14		
CEA 101P 35	C15, C16		
CEA 100P 80	C17		
△ ACG-003	C18	Ceramic	0.01/125V

Note: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

RESISTORS

Part No.	Symbol & Description		
△ RD¼PMF □□□ J	R1, R2, R23		
RD¼PM □□□ J	R3, R4, R6—R19.		
△ RS2P □□□ J	R5		
△ RS1P □□□ J	R20		
△ RT5B □□□ K	R21, R22		

SEMICONDUCTORS

Part No.	Symbol & Description		
2SC1735	Q1, Q2		
2SA733A	Q3, Q10		
2SA904A	Q4, Q8		
(2SA893A)			
2SK34	Q5, Q6		
2SC1914A	Q7		
(2SC1890A)			
2SC945A	Q9		
2SD712	Q11		
(2SD313P)			
2SB682	Q12		
(2SB507P)			
SIB01-02	D1—D4		
XZ-060	D5		
1S1555	D6, D7		
(1S2473)			
10E2	D8, D9		
MZ-177	D10		
(WZ-177)			

OTHERS

Part No.	Symbol & Description		
ATT-577	T3	Transformer	
ABA-026		Pan head screw	
AEC-279		Capacitor cover	

ADDITIONAL

PIONEER

Service Manual

STEREO AMPLIFIER

SA-9800

S
S/G

The basic performance of the S and S/G types are the same as the KU type. The KU and S/G types have wooden covers, while S type employs metal. This additional service manual is applicable to the S and S/G types, please refer to the KU type service manual with the exception of this supplements.

SPECIFICATIONS

The specifications for S and S/G types are the same as the KU type except for following sections;

Micellaneous

Power Requirements . AC110/120/220/240V (switchable),
50/60Hz

Demensions (S type) 420(W)x150(H)x425(D)mm
16-17/32(W)x5-29/32(H)x16-3/4(D)in

Weight

S type Without Package; 18kg (39 lb 11 oz)
With Package; 20kg (44 lb 1 oz)

S/G type Without Package; 19.1kg (42 lb 2 oz)

Furnished Parts

Fuse (5A) 1
Fuse (10A) 1

CONTRAST OF MISCELLANEOUS PARTS

- The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

P.C. BOARD ASSEMBLIES

Symbol	Part Name	Part No.		
		KU type	S type	S/G type
	PA-L assembly	GWH-119	GWH-125	GWH-125
	PA-R assembly	GWH-120	GWH-126	GWH-126
	Power supply assembly	AWR-191	AWR-194	AWR-194

TRANSFORMERS

Symbol	Part Name	Part No.		
		KU type	S type	S/G type
△T1	Power transformer	ATT-556	ATT-578	ATT-559
△T2	Power transformer	ATT-556	ATT-579	ATT-560

FUSES

Symbol	Part Name	Part No.		
		KU type	S type	S/G type
△FU1	Fuse (5A)	AEK-108	AEK-108	(AEK-108)
△FU1	Fuse (10A)		(AEK-114)	AEK-114
△FU2	Fuse (5A)	AEK-108		

CAPACITOR

Symbol	Part Name	Part No.		
		KU type	S type	S/G type
△C7	Ceramic 0.01/250V		ACG-001	ACG-001
C7	Electrolytic 1/50V	CEA 010P 50		
C8	Electrolytic 1/50V		CEA 010P 50	CEA 010P 50

SWITCH

Symbol	Part Name	Part No.		
		KU type	S type	S/G type
△S18	Lever switch (POWER)	ASK-124	ASK-128	ASK-128


OTHERS

Symbol	Part Name	Part No.		
		KU type	S type	S/G type
△	AC power cord	ADG-023	ADG-017	ADG-017
△	AC socket (AC OUTLETS)	AKP-004	AKP-021	AKP-021
△	Plug in selector		AKR-031	AKR-031
	Top cover (wooden)	AMM-079		AMM-079
	Top cover (metal)		ANE-222	
	Screw (for top cover)	ABA-206	ABA-079	ABA-206

PACKING AND FURNISHED PARTS


Symbol	Part Name	Part No.		
		KU type	S type	S/G type
	Packing case	AHD-614	AHD-617	AHD-616
	Top pad L	AHA-214		AHA-214
	Top pad R	AHA-215		AHA-215
	Bottom pad L	AHA-216		AHA-216
	Bottom pad R	AHA-217		AHA-217
	Side pad		AHA-218	
	Cardboard spacer			AHB-099
	Operating instructions	ARB-307	ARB-312	ARB-312
△	Fuse (5A)		AEK-108	AEK-108
△	Fuse (10A)		AEK-114	AEK-114

SCHEMATIC DIAGRAM FOR S, S/G TYPES

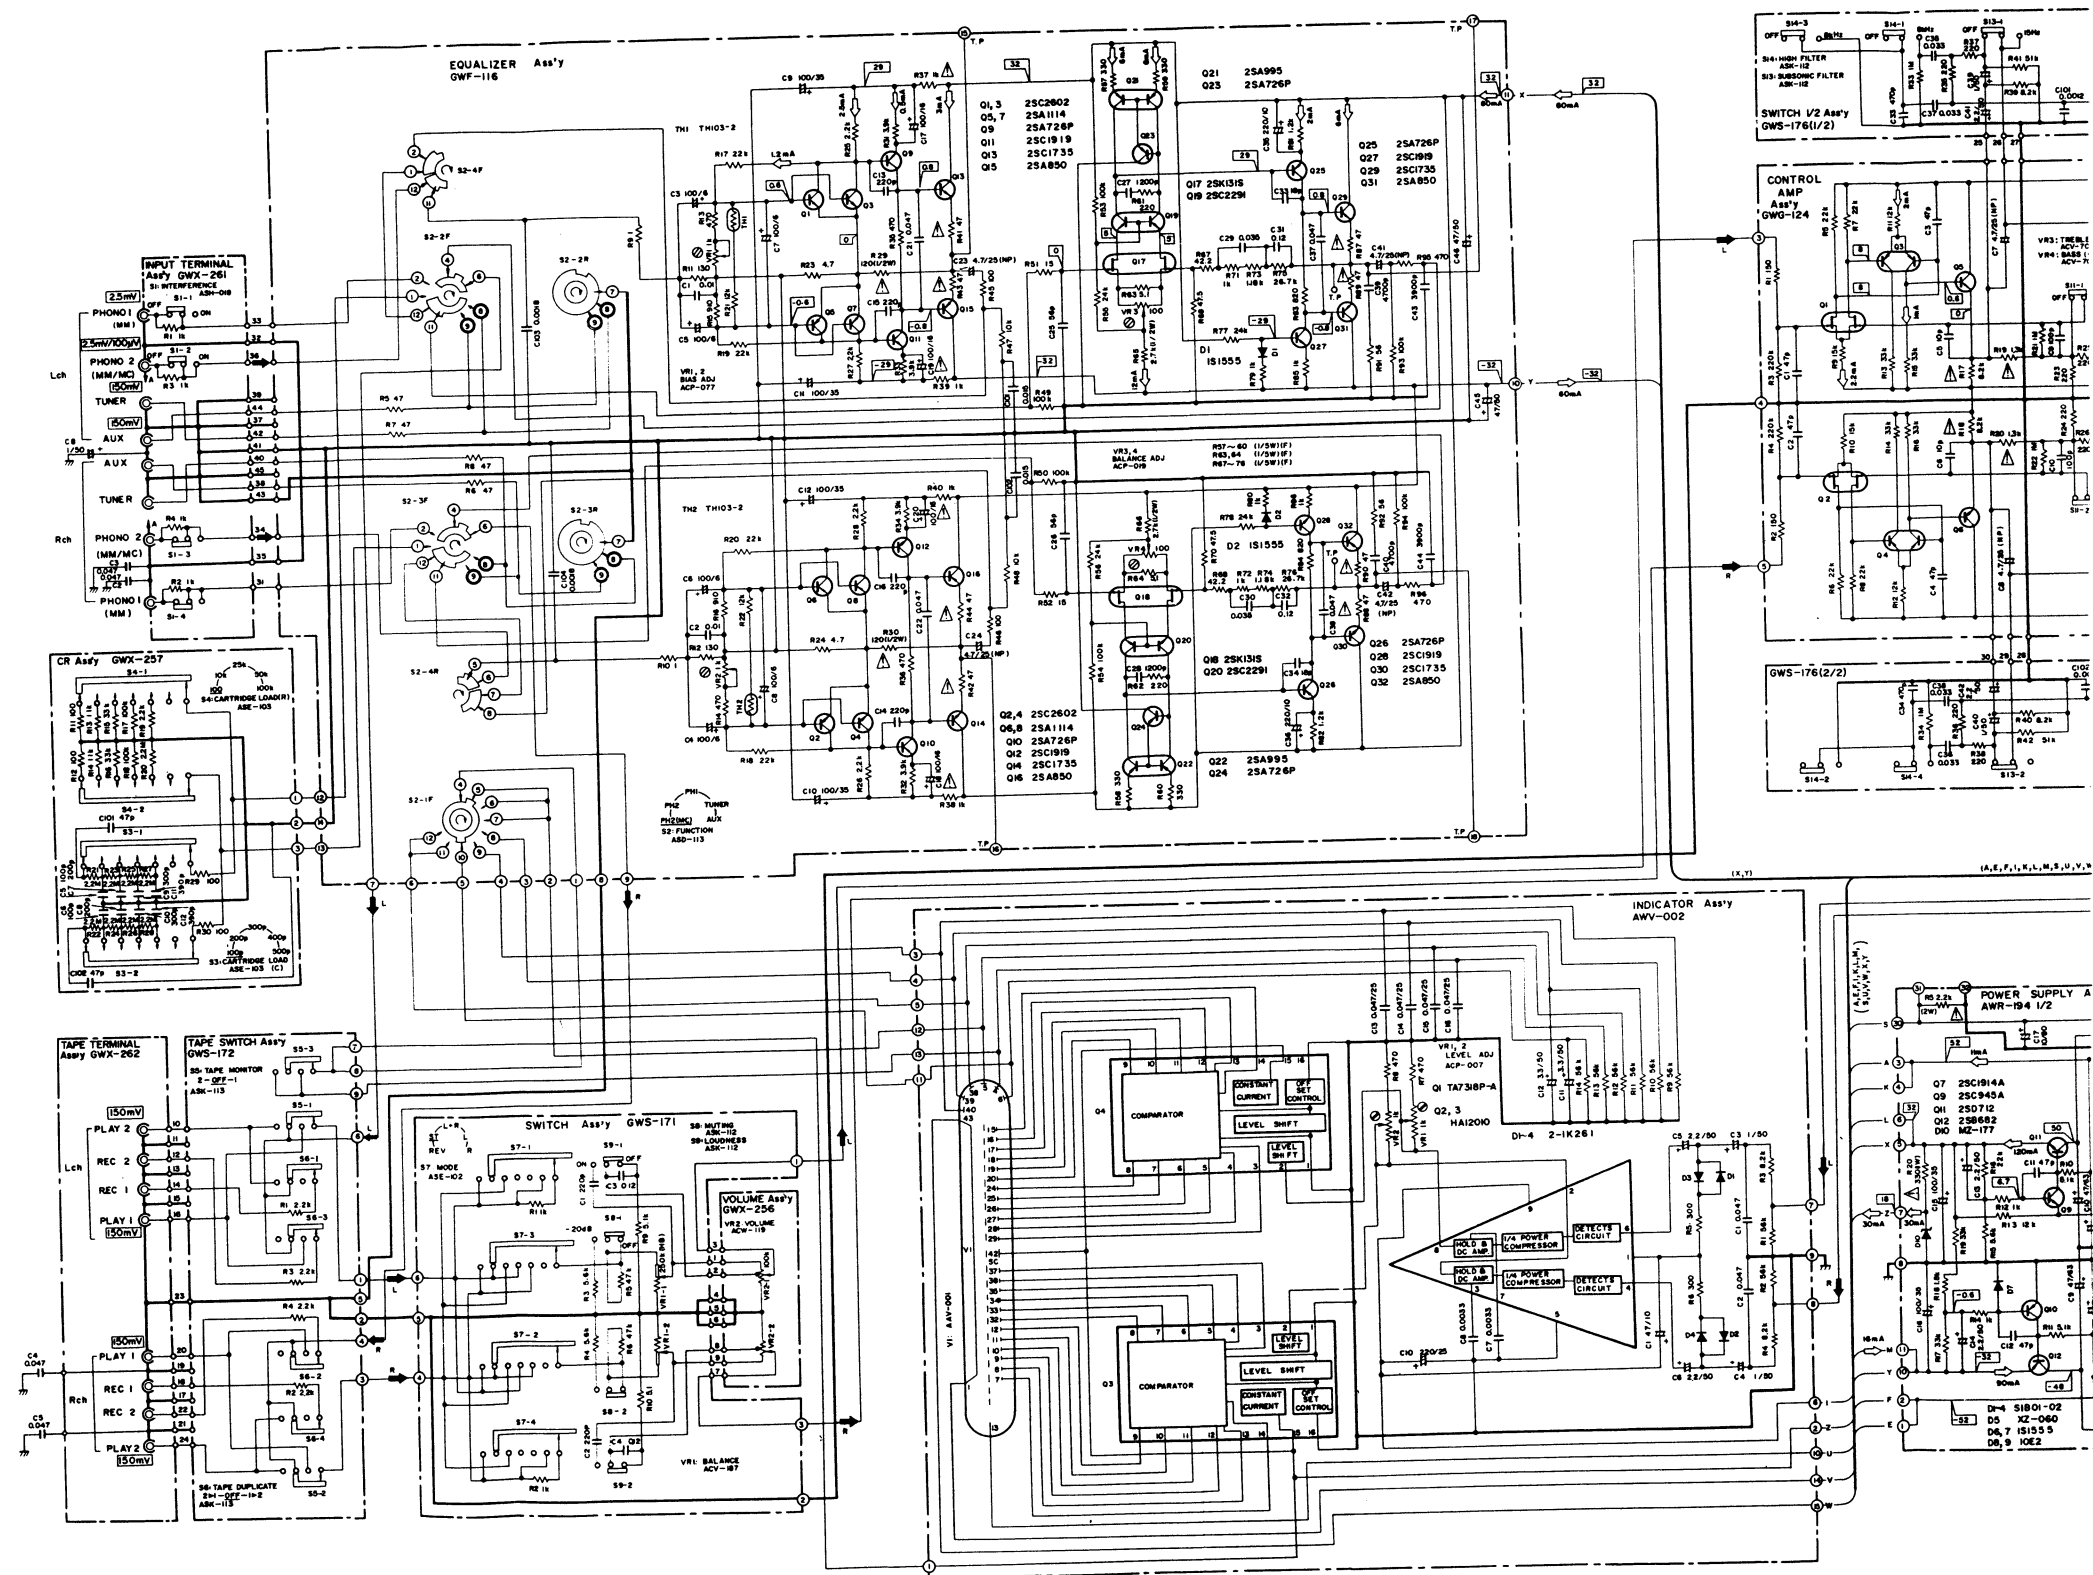

NOTE:

The indicated semiconductors are representative ones only. Other alternative semiconductors may be used and are listed in the parts list.

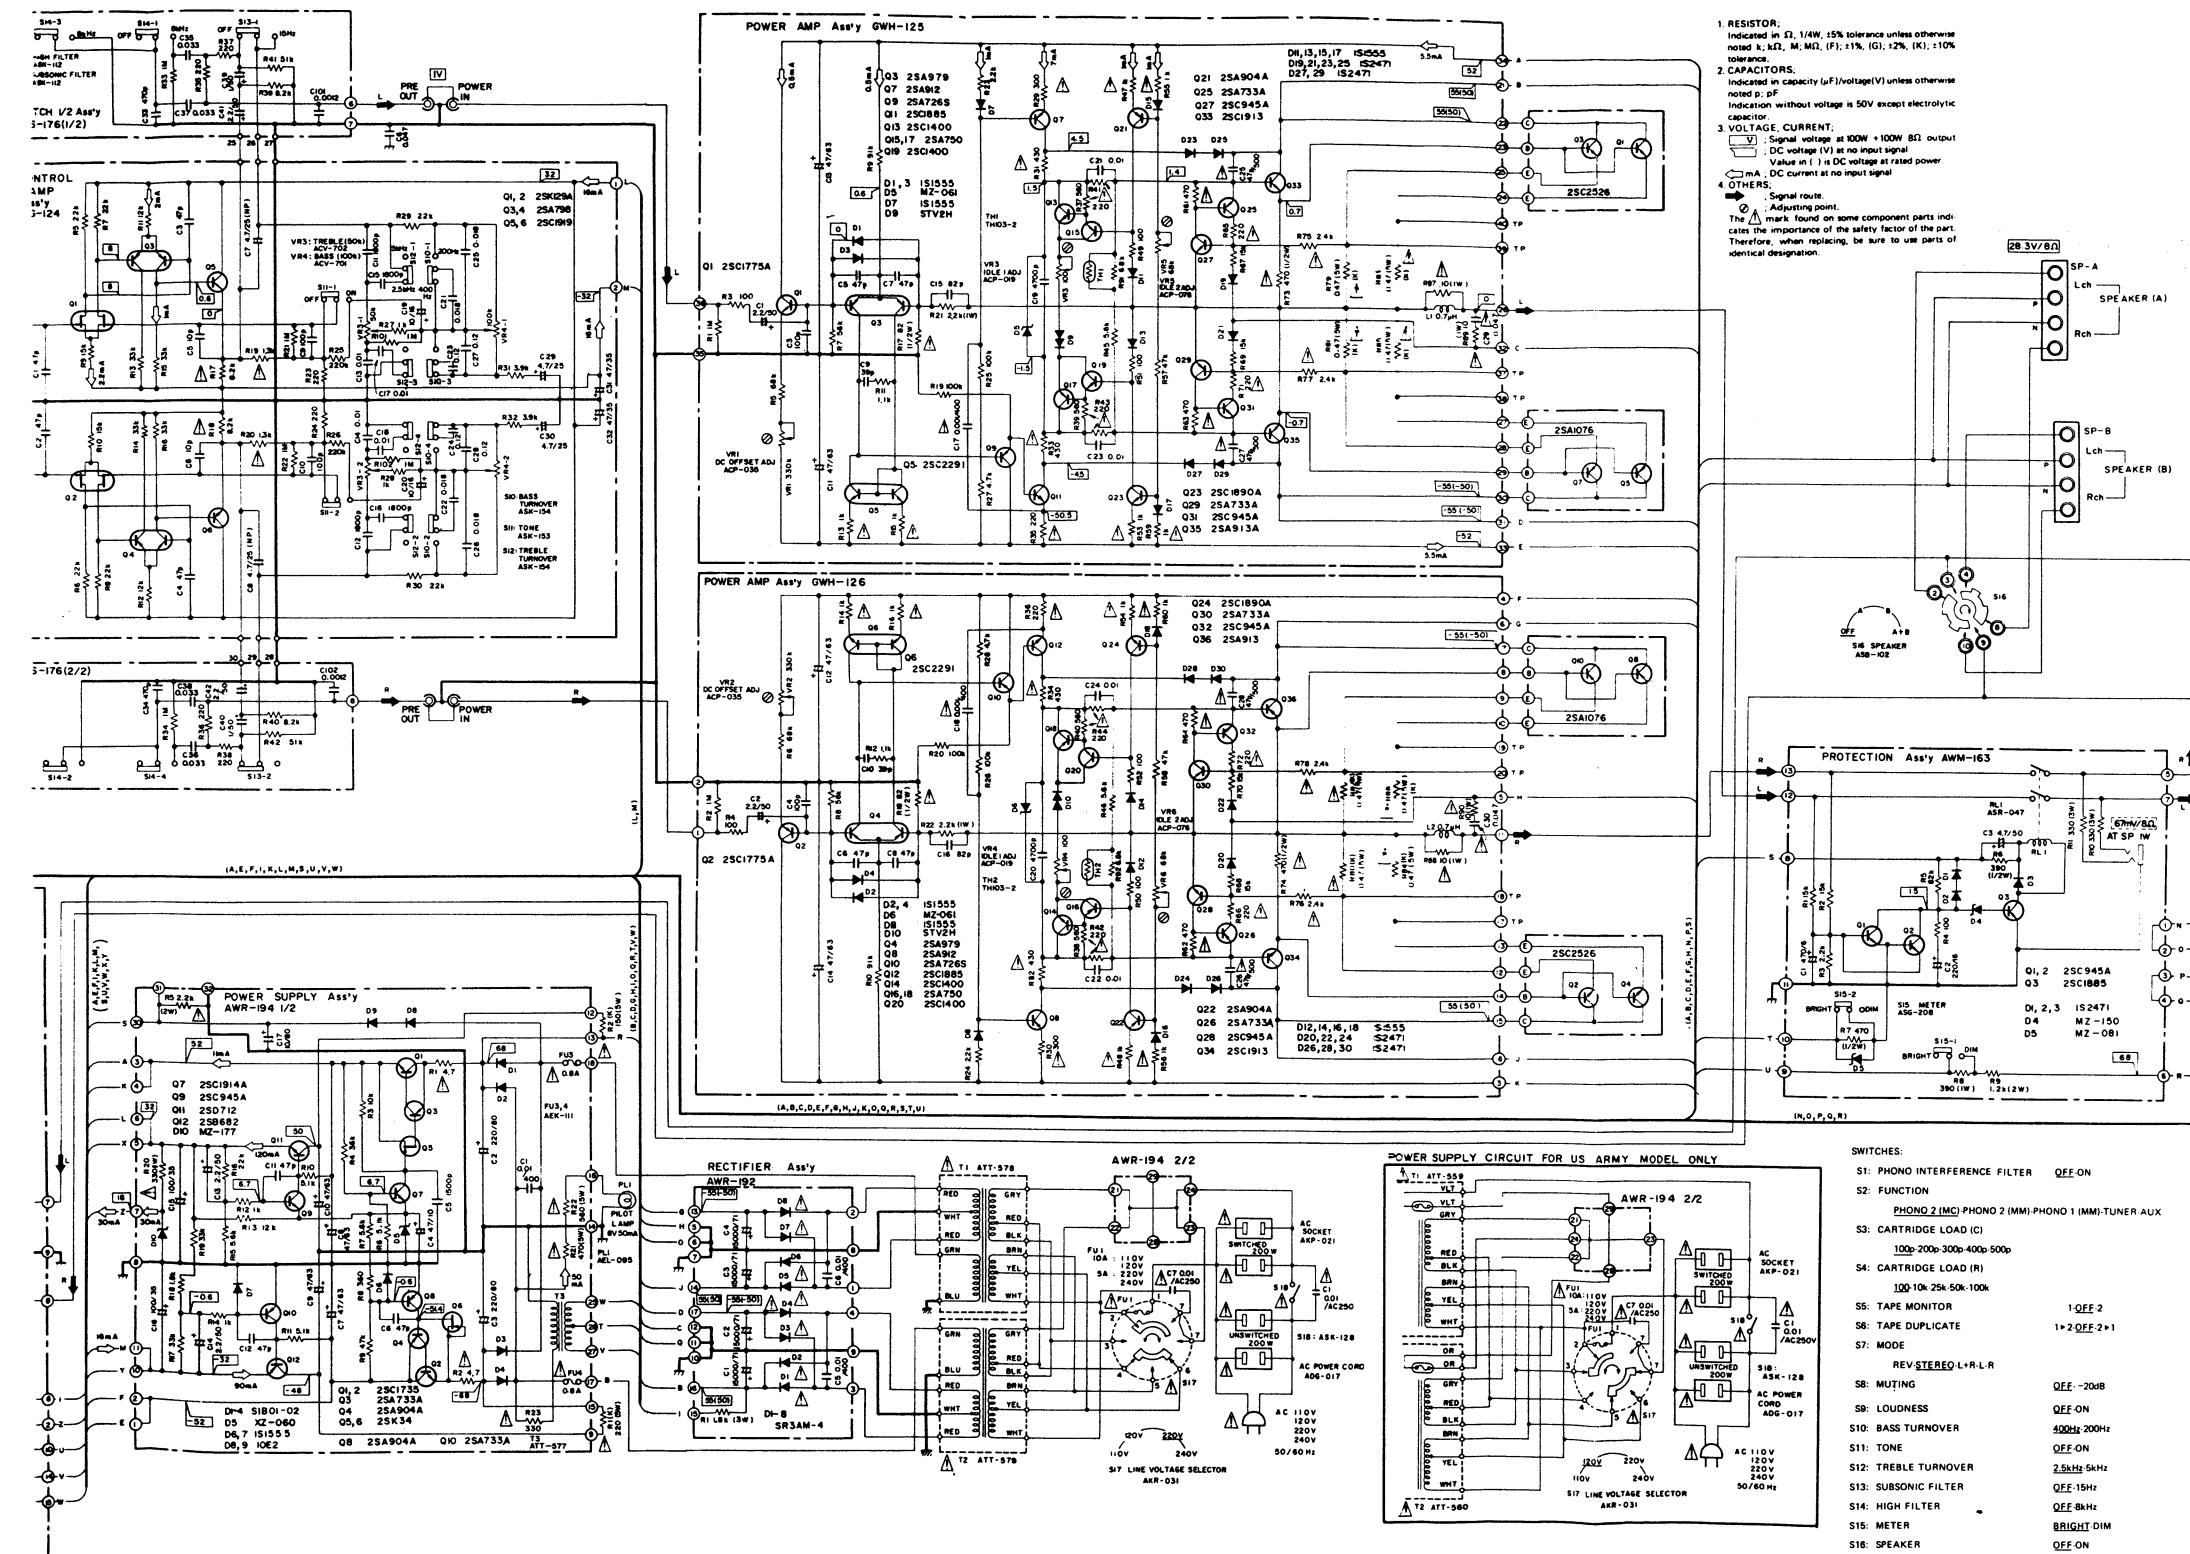

SWITCHES:

- S1: PHONO INTERFERENCE FILTER OFF ON
 S2: FUNCTION
 PHONO 2 (MC) PHONO 2 (MM) PHONO 1 (MM) TUNER AUX
 S3: CARTRIDGE LOAD (C)
 100p 200p 300p 400p 500p
 S4: CARTRIDGE LOAD (R)
 100 10k 25k 50k 100k
 S5: TAPE MONITOR 1-QUE 2
 S6: TAPE DUPLICATE 1-2 OFF 2-1
 S7: MODE
 REV STEREO L-R L-R
 S8: MUTING OFF -20dB
 S9: LOUDNESS OFF ON
 S10: BASS TURNOVER 400Hz 2000Hz
 S11: TONE OFF ON
 S12: TREBLE TURNOVER 2.5kHz 5kHz
 S13: SUBSONIC FILTER OFF 15Hz
 S14: HIGH FILTER OFF 8kHz
 S15: METER BRIGHT DIM
 S16: SPEAKER OFF ON
 S18: POWER OFF A-B A-B

The underlined indicates the switch position.


This is the basic schematic diagram, but the actual circuit may vary due to improvements in design.

A


B

C



D

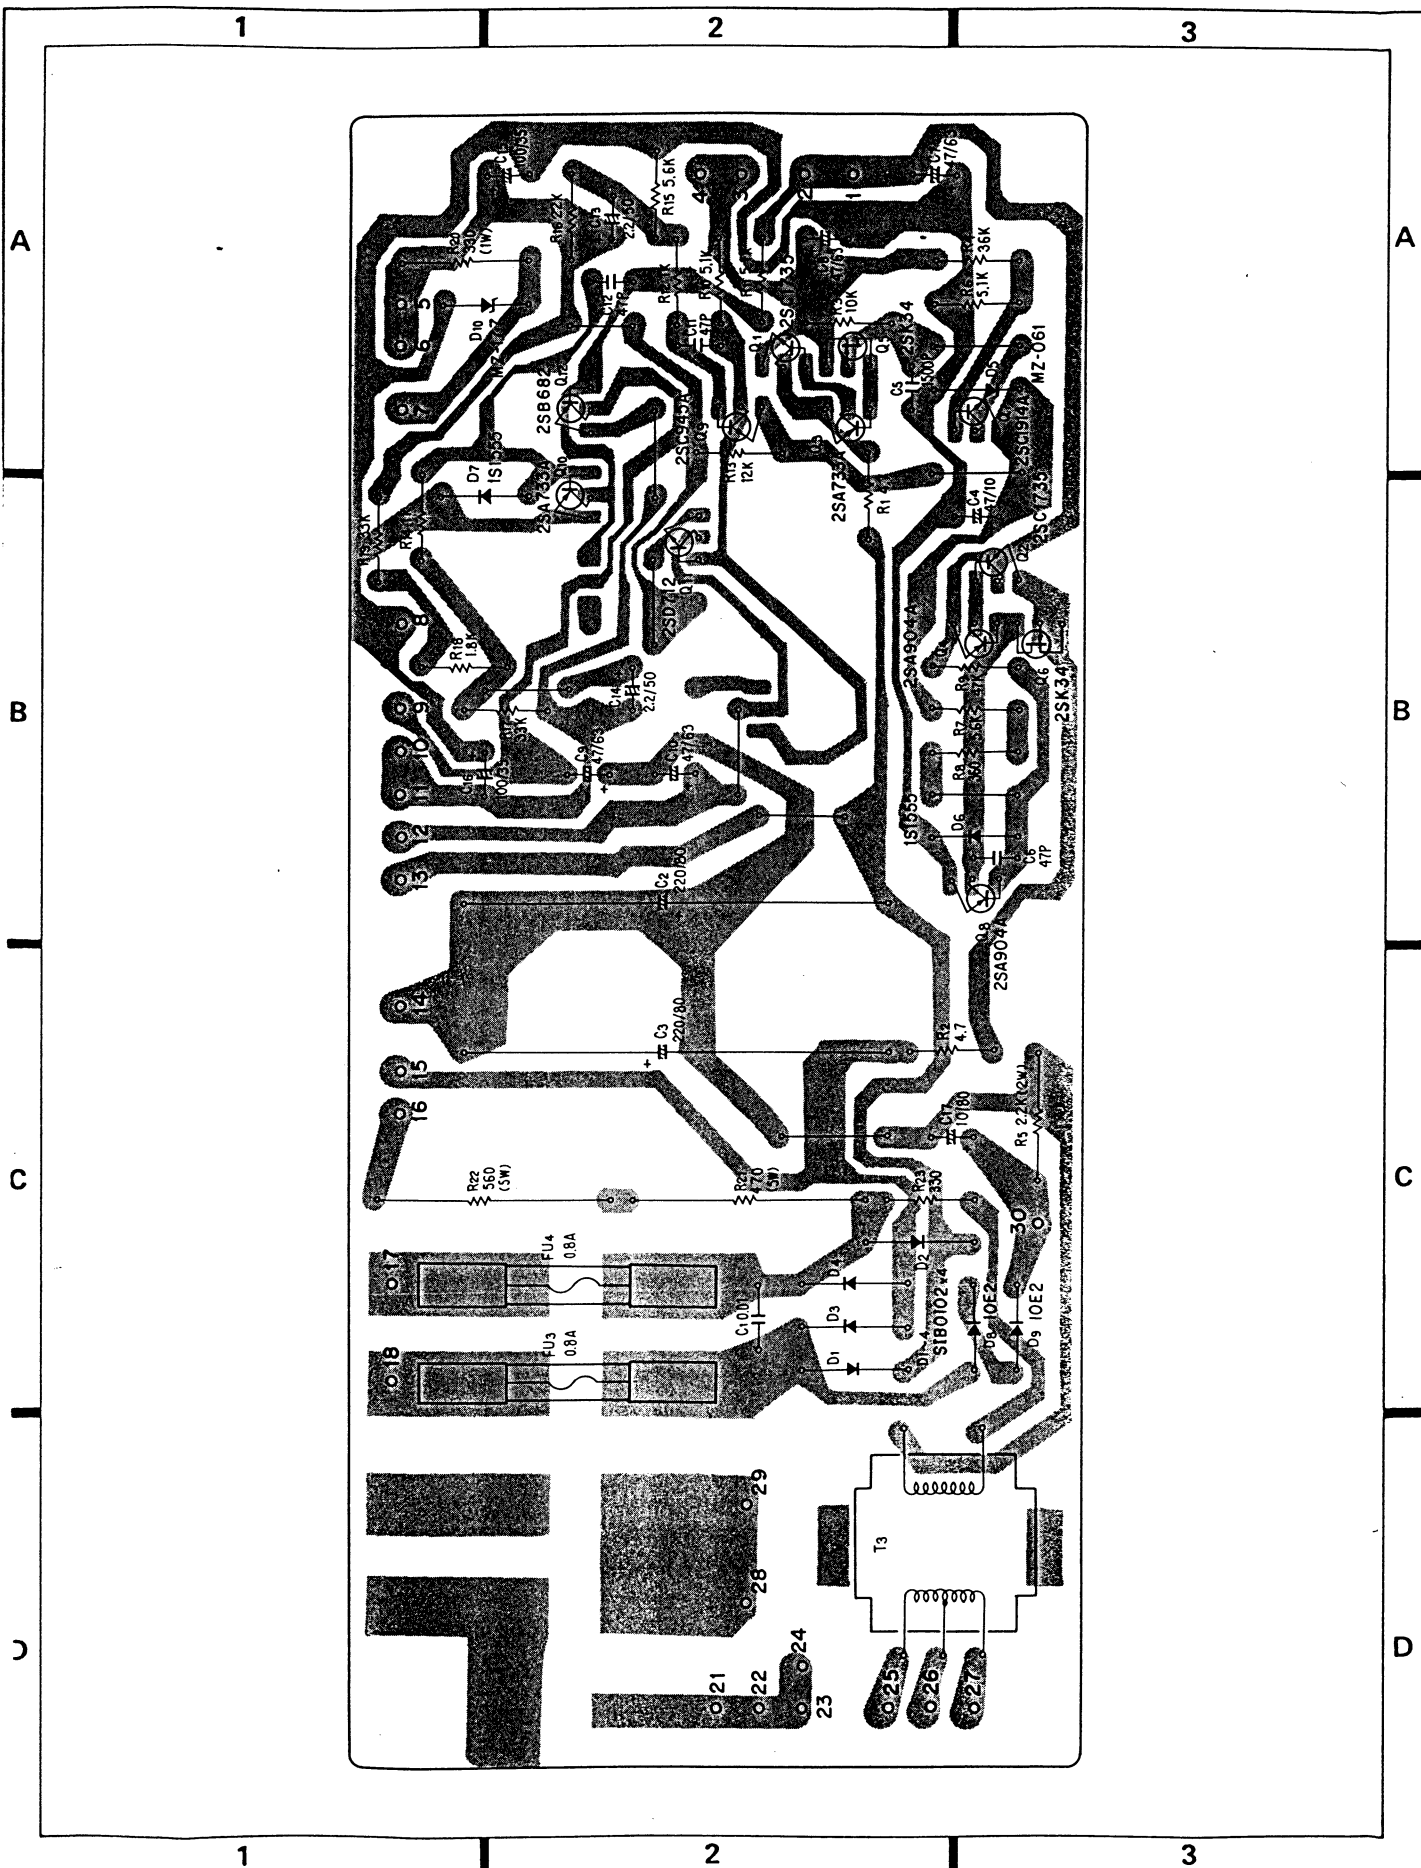

POWER SUPPLY ASSEMBLY (AWR-194)

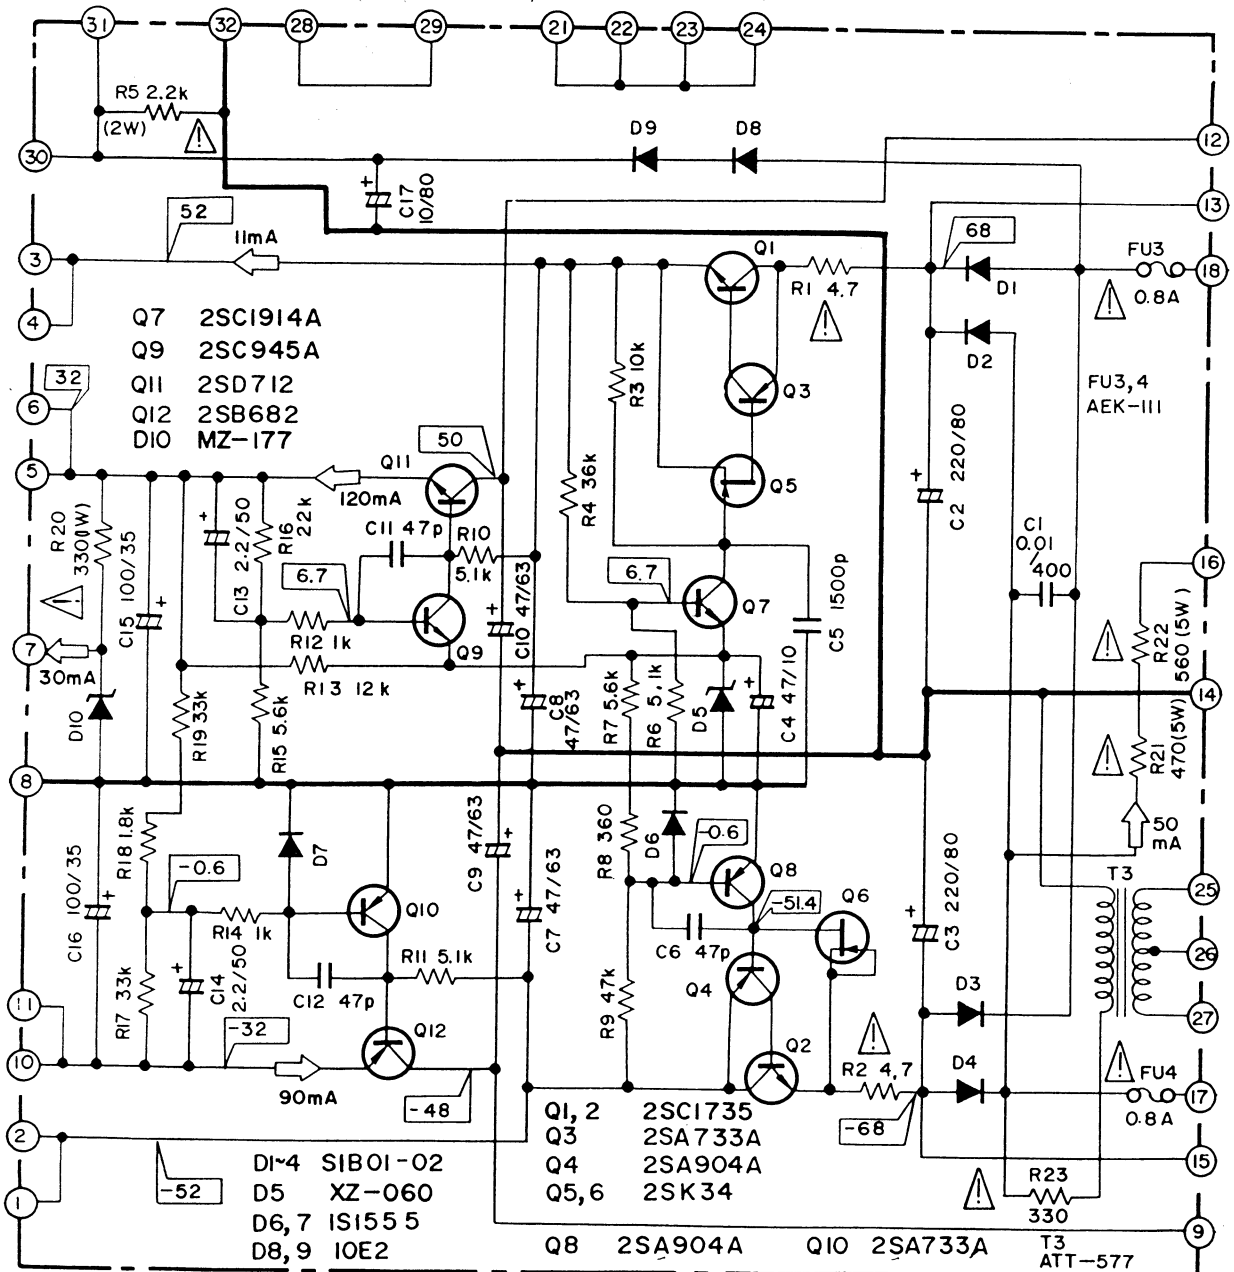

POWER SUPPLY ASSEMBLY (AWR-194)

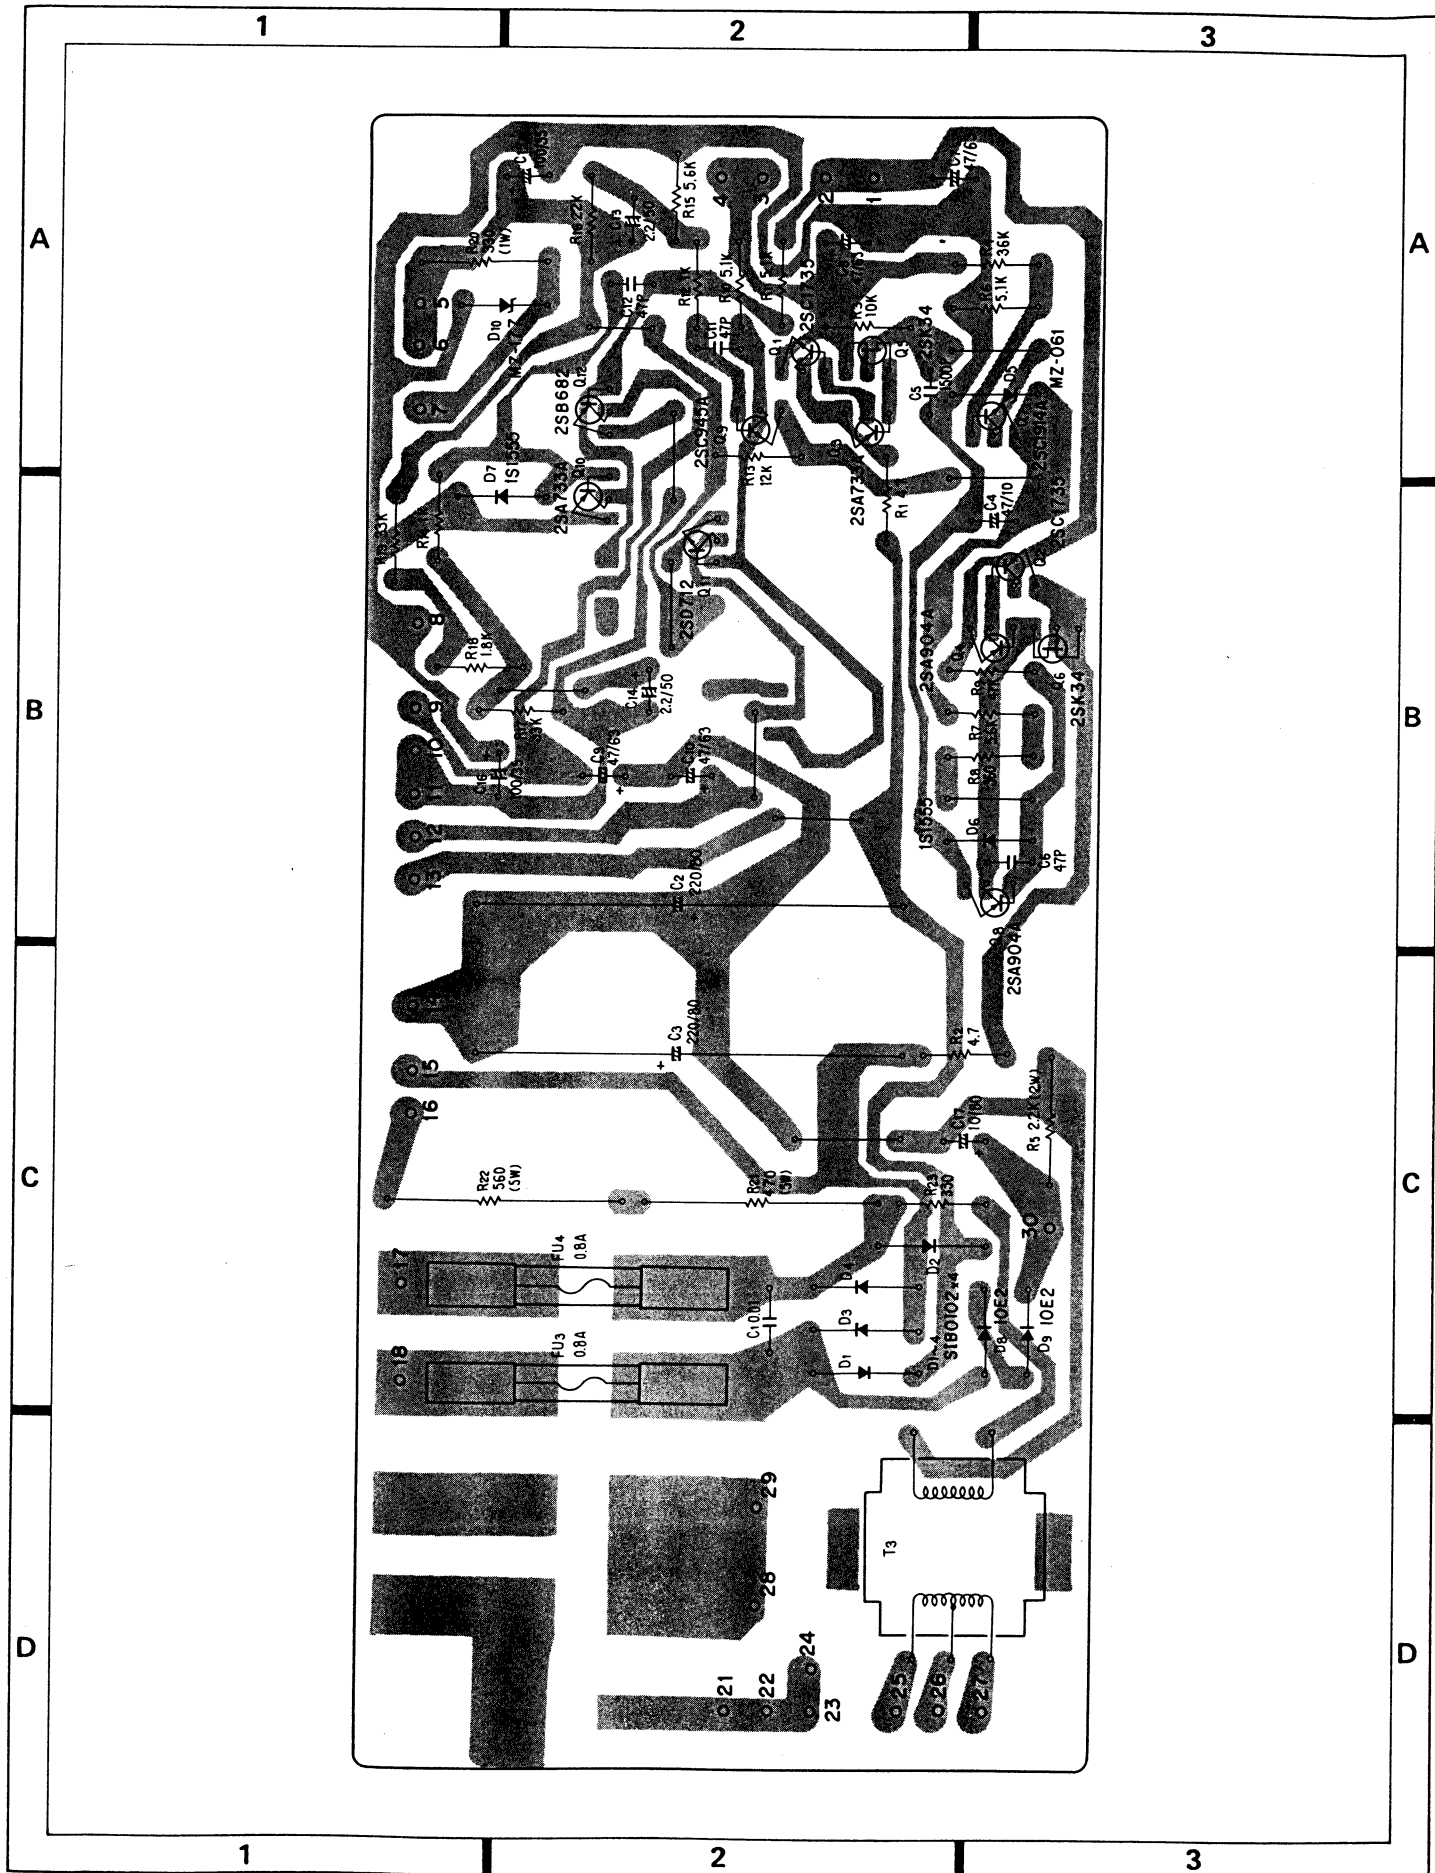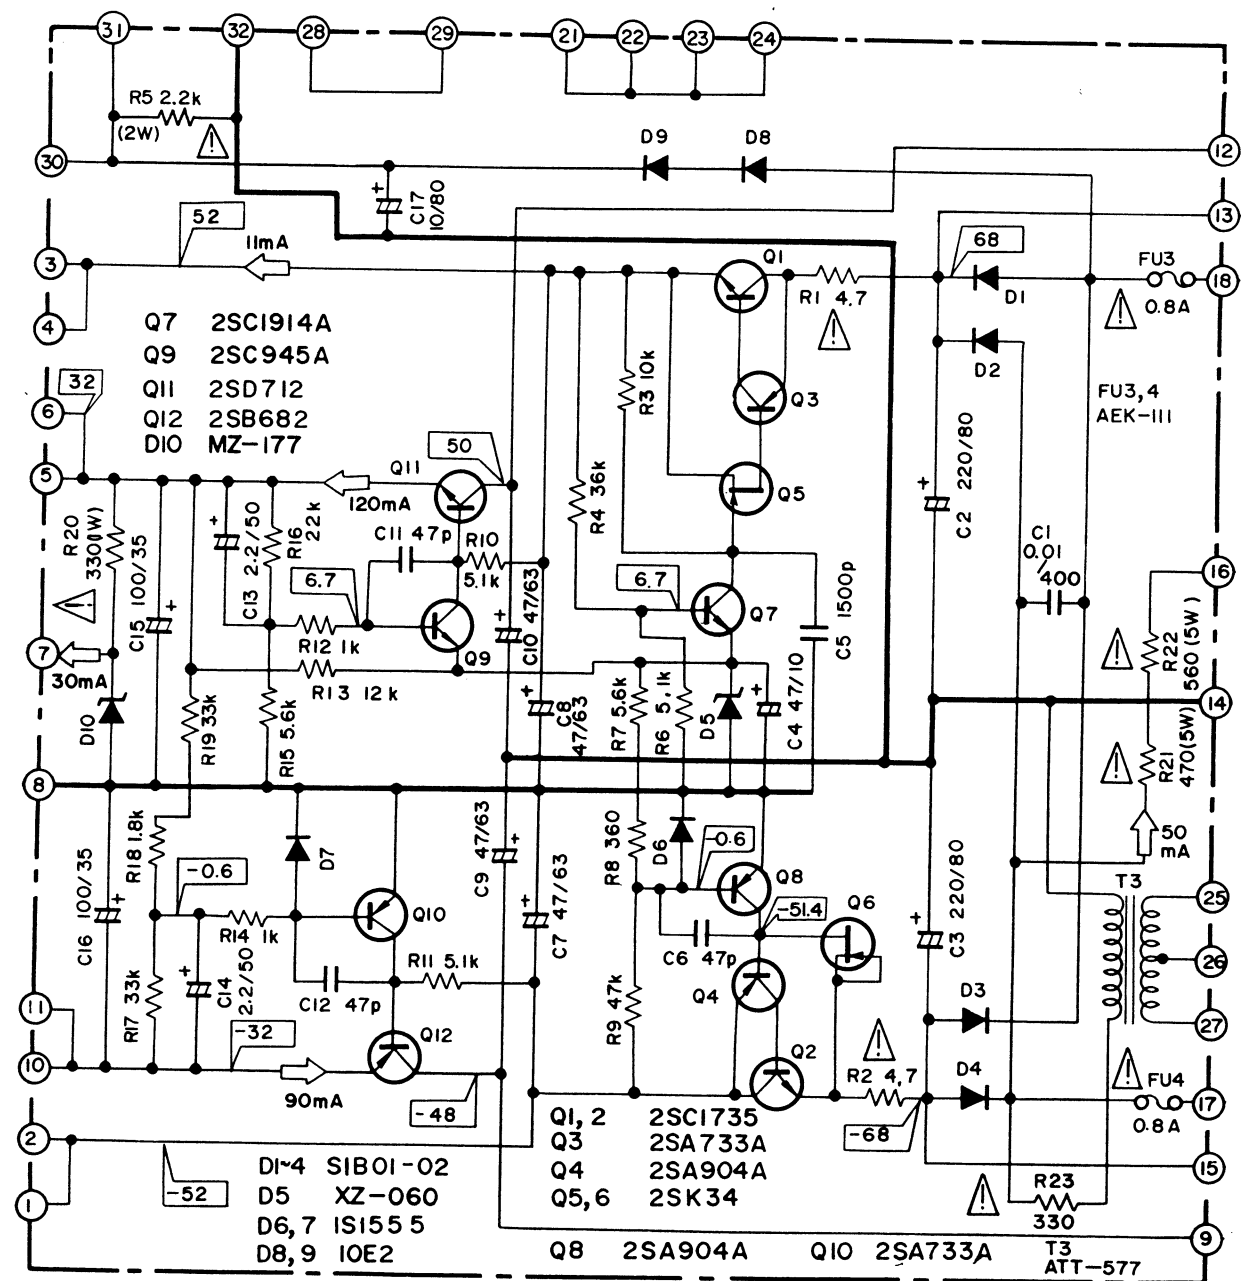

Parts List of Power Supply Assembly (AWR-194)

CAPACITORS

Part No.	Symbol & Description
CQMA 103K 400	C1
CEB 221P 80	C2, C3
CEA 470P 10	C4
CKDYB 152K 50	C5
CCDSL 470K 50	C6, C11, C12
CEA 470P 63	C7-C10
CEA 2R2P 50	C13, C14
CEA 101P 35	C15, C16
CEA 100P 80	C17

Note: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

RESISTORS

Part No.	Symbol & Description
RD%PMF □□□ J	R1, R2, R23
RD%PM □□□ J	R3, R4, R6-R19
RS2P □□□ J	R5
RS1P □□□ J	R20
RT5B □□□ K	R21, R22


SEMICONDUCTORS

Part No.	Symbol & Description
2SC1735	Q1, Q2
2SA733A	Q3, Q10
2SA904A	Q4, Q8
(2SA893A)	
2SK34	Q5, Q6
2SC1914A	Q7
(2SC1890A)	
2SC945A	Q9
2SD712	Q11
(2SD313P)	
2SB682	Q12
(2SB507P)	
SIB01-02	D1-D4
XZ-060	D5
1S1555	D6, D7
(1S2473)	
10E2	D8, D9
MZ-177	D10
(WZ-177)	


OTHERS

Part No.	Symbol & Description
ATT-577	T3 Transformer
ABA-026	Pan head screw

POWER AMPLIFIERS FOR S, S/G TYPES
Schematic Diagram for PA-L Assembly (GWH-125)

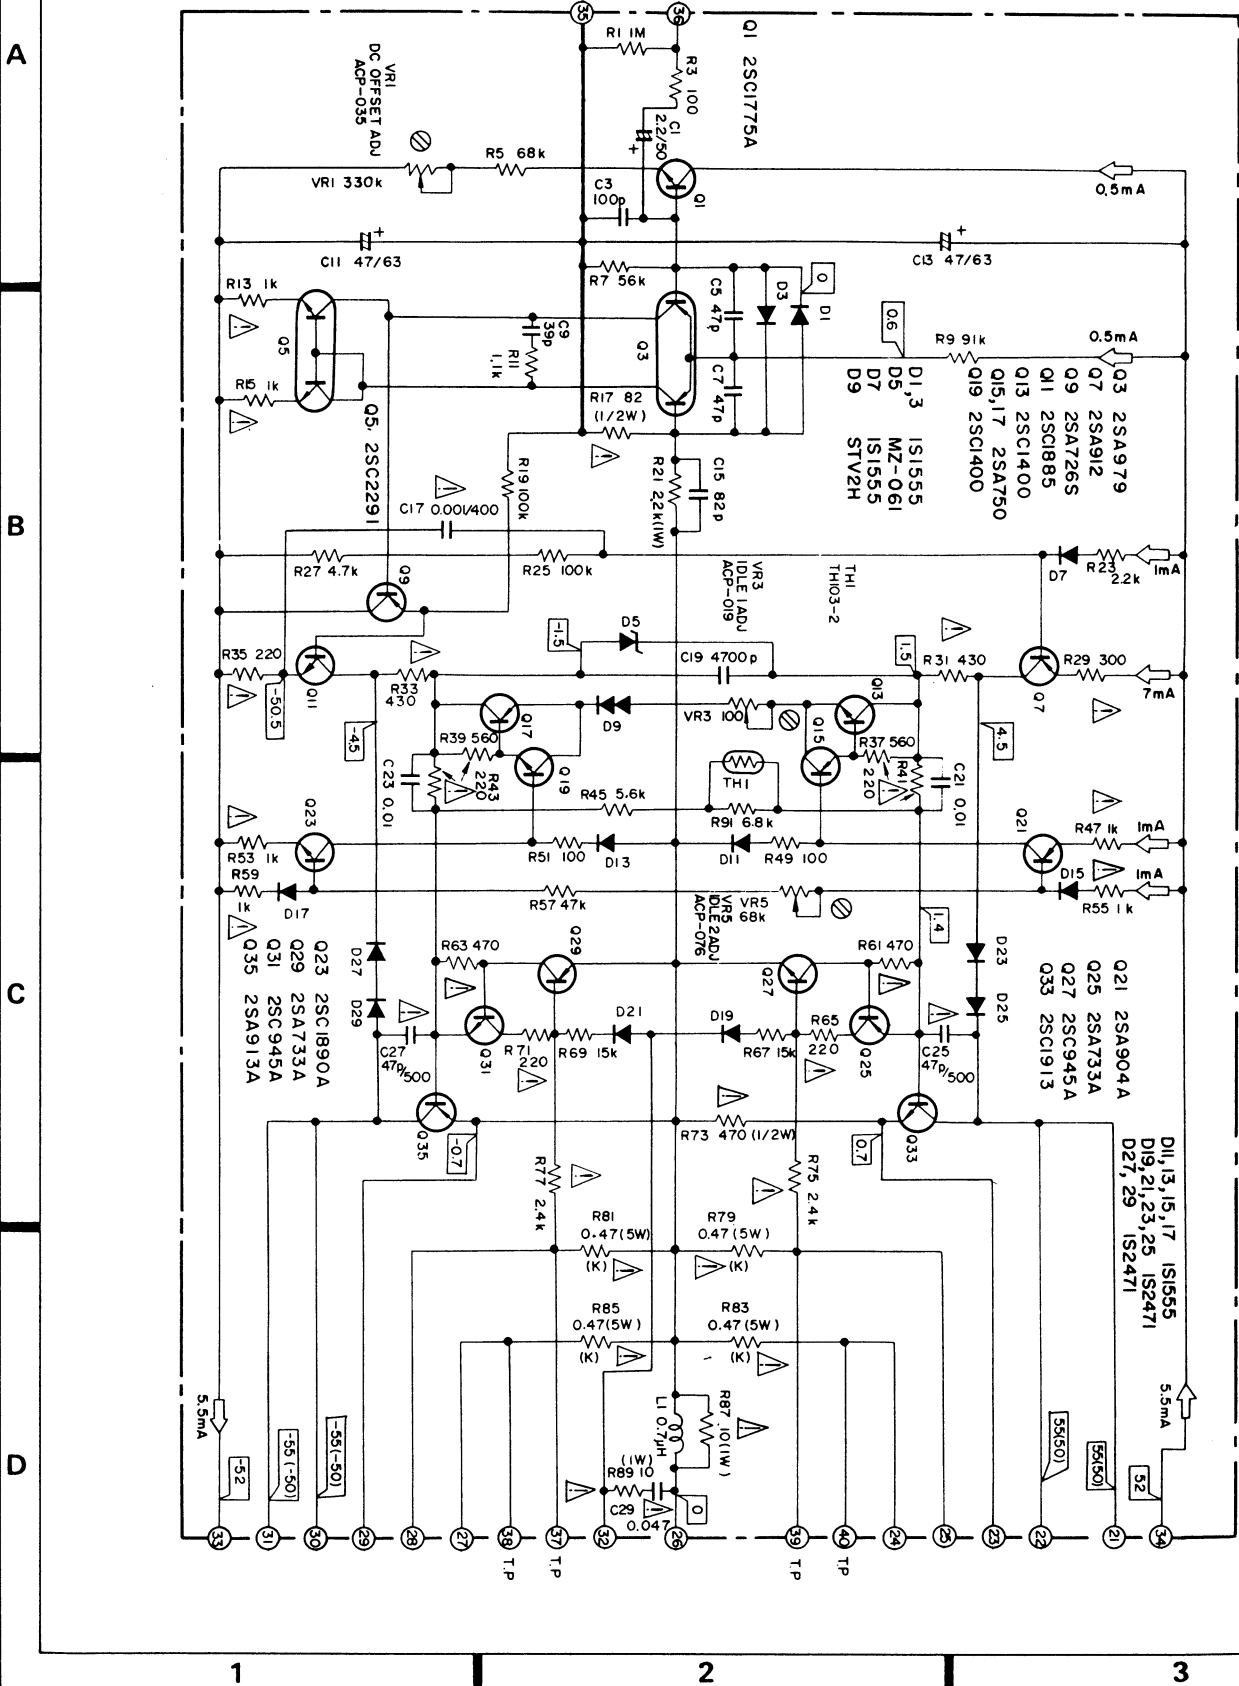

Schematic Diagram for PA-R Assembly (GWH-126)

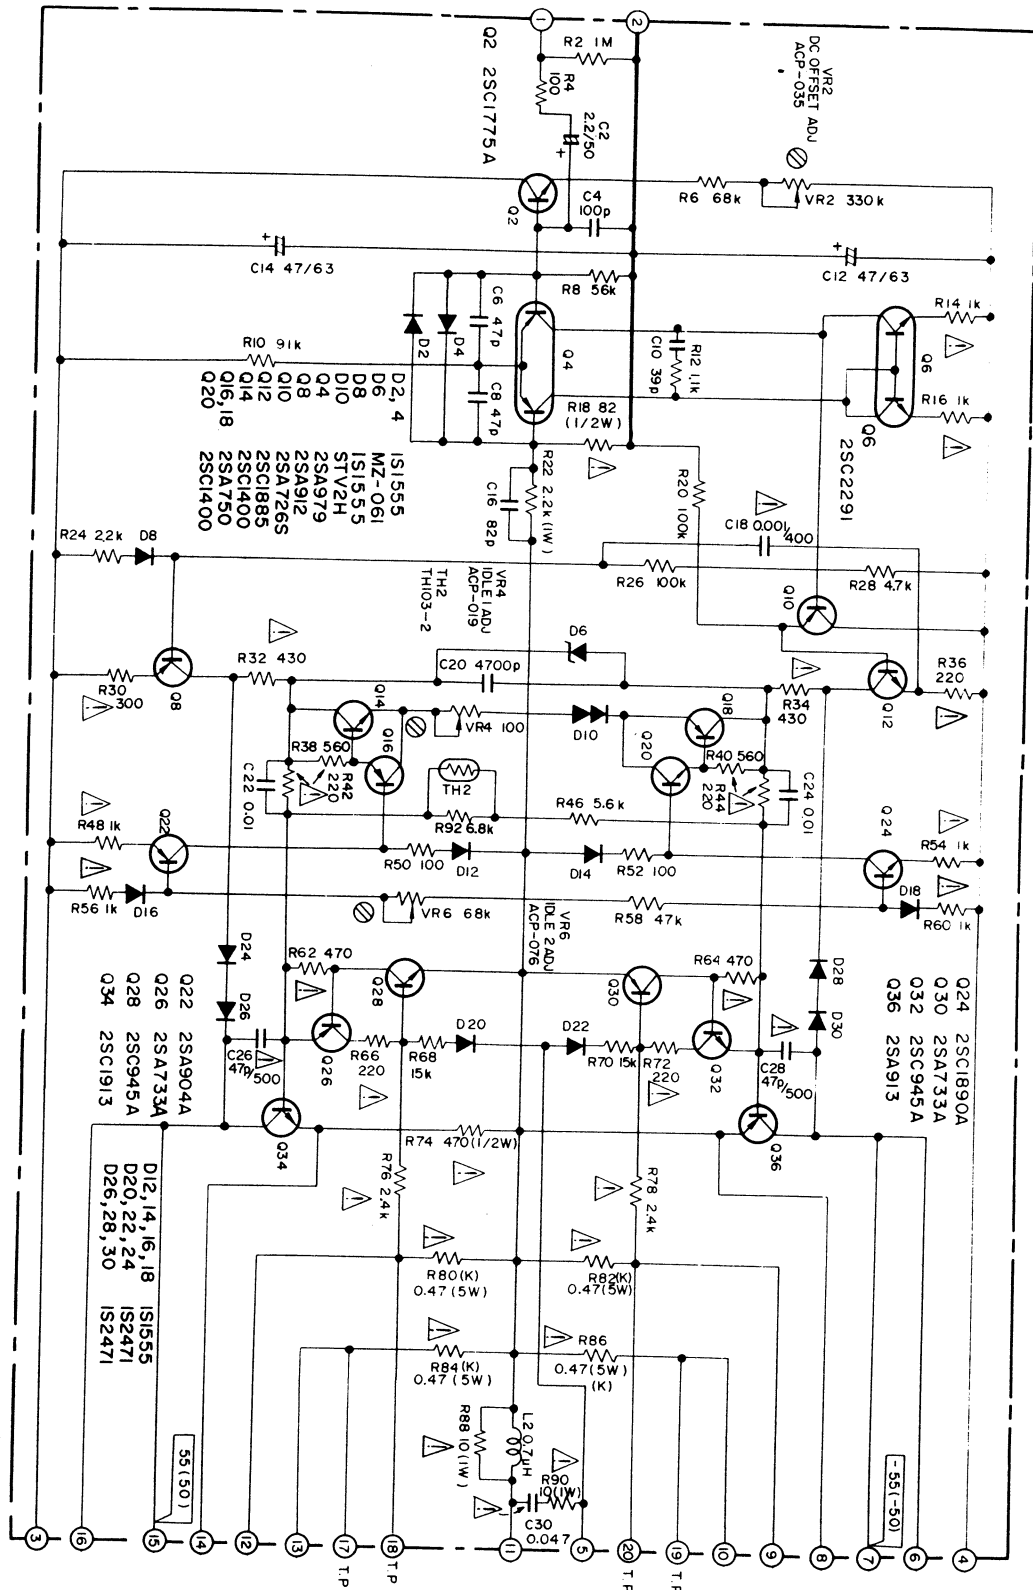

Part No.	Symbol & Description
△ RD½PS □□□ J	R18, R14
RS1P □□□ J	R22
△ RD½PMF □□□ J	R34, R36, R44
△ ACN-041	R80, R82, R84, R86
△ RS1P □□□ J	Wire wound 0.47/5W R88, R90

SEMICONDUCTORS

Part No.	Symbol & Description
2SC1775A-E	Q2
2SA979-F	Q4
2SC2291	Q6
2SA912	Q8
2SA726S	Q10
2SC1885	Q12
2SC1400	Q14, Q20
2SA750	Q16, Q18
2SA904A	Q22
2SC1890A	Q24
2SA733A	Q26, Q30
2SC945A	Q28, Q32
2SC1913	Q34
2SA913	Q36
1S1555 (1S2473)	D2, D4, D8, D12, D14, D16, D18
MZ-061 (WZ-061)	D6
STV2H-0	D10
1S2471	D20, D22, D24, D26, D28, D30
TH103-2	Th2

OTHERS

Part No.	Description
ABA-048	Screw 3x6
ABA-026	Screw 3x6 (Pan head)

- The circuitry of the PA-L (GWH-125) and PA-R (GWH-126) assemblies are the same as the GWH-119 and GWH-120 (for KU type), with exception of the circuit component specifications and the parts installation method.

Parts List of PA-L Assembly (GWH-125)

CAPACITORS

Part No.	Symbol & Description
CEANL 2R2P 50	C1
CCDSL 101K 50	C3
CCDSL 470K 50	C5, C7
CCDSL 390K 50	C9
CEA 470P 63	C11, C13
CCDSL 820K 50	C15
△CQMA 102K 400	C17
CQMA 472K 50	C19
CQMA 103K 50	C21, C23
△CCDSL 470 K 500	C25, C27
△CQMA 473J 100	C29

Note: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

RESISTORS

Part No.	Symbol & Description
ACP-035	VR1 Semifixed 330k-B
ACP-019	VR3 Semifixed 100-B
ACP-076	VR5 Semifixed 68k-B
RD%PM □□□ J	R1, R3, R5, R7, R9, R11, R19, R23, R25
RD%PM □□□ J	R27, R45, R49, R51, R57, R67, R69, R91
△RD%PM □□□ J	R37, R39, R75, R77
△RD%PMF □□□ J	R13, R15, R29, R31, R41, R47, R53
△RD%PMF □□□ J	R55, R59, R61, R63, R65, R71
△RD%PS □□□ J	R17, R73
RS1P □□□ J	R21
△RD%PMF □□□ J	R33, R35, R43
△ACN-041	R79, R81, R83, R85
	Wire wound 0.47/5W
△RS1P □□□ J	R87, R89

SEMICONDUCTORS

Part No.	Symbol & Description
2SC1775A-E	Q1
2SA979-F	Q3
2SC2291	Q5
2SA912	Q7
2SA726S	Q9
2SC1885	Q11
2SC1400	Q13, Q19
2SA750	Q15, Q17
2SA904A	Q21
2SC1890A	Q23

Part No.	Symbol & Description
2SA733A	Q25, Q29
2SC945A	Q27, Q31
2SC1913	Q33
2SA913	Q35
1S1555 (1S2473)	D1, D3, D7, D11, D13, D15, D17
MZ-061 (WZ-061)	D5
STV2H-O	D9
1S2471	D19, D21, D23, D25, D27, D29
TH103-2	Th1

OTHERS

Part No.	Description
ABA-048	Screw 3x6
ABA-026	Screw 3x6 (Pan head)

Parts List of PA-R Assembly (GWH-126)

CAPACITORS

Part No.	Symbol & Description
CEANL 2R2P 50	C2
CCDSL 101K 50	C4
CCDSL 470K 50	C6, C8
CCDSL 390K 50	C10
CEA 470P 63	C12, C14
CCDSL 820K 50	C16
△CQMA 102K 400	C18
CQMA 472K 50	C20
CQMA 103K 50	C22, C24
△CCDSL 470K 500	C26, C28
△CQMA 473J 100	C30

Note: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

RESISTORS

Part No.	Symbol & Description
ACP-035	VR2 Semifixed 330k-B
ACP-019	VR4 Semifixed 100-B
ACP-076	VR6 Semifixed 68k-B
RD%PM □□□ J	R2, R4, R6, R8, R10, R12, R20, R24, R26
RD%PM □□□ J	R28, R46, R50, R52, R58, R68, R70, R92
△RD%PM □□□ J	R38, R40, R76, R78
△RD%PMF □□□ J	R14, R16, R30, R32, R42, R48, R54
△RD%PMF □□□ J	R56, R60, R62, R64, R66, R72