





SX-3700 KU, KC

SCHEMATIC DIAGRAM

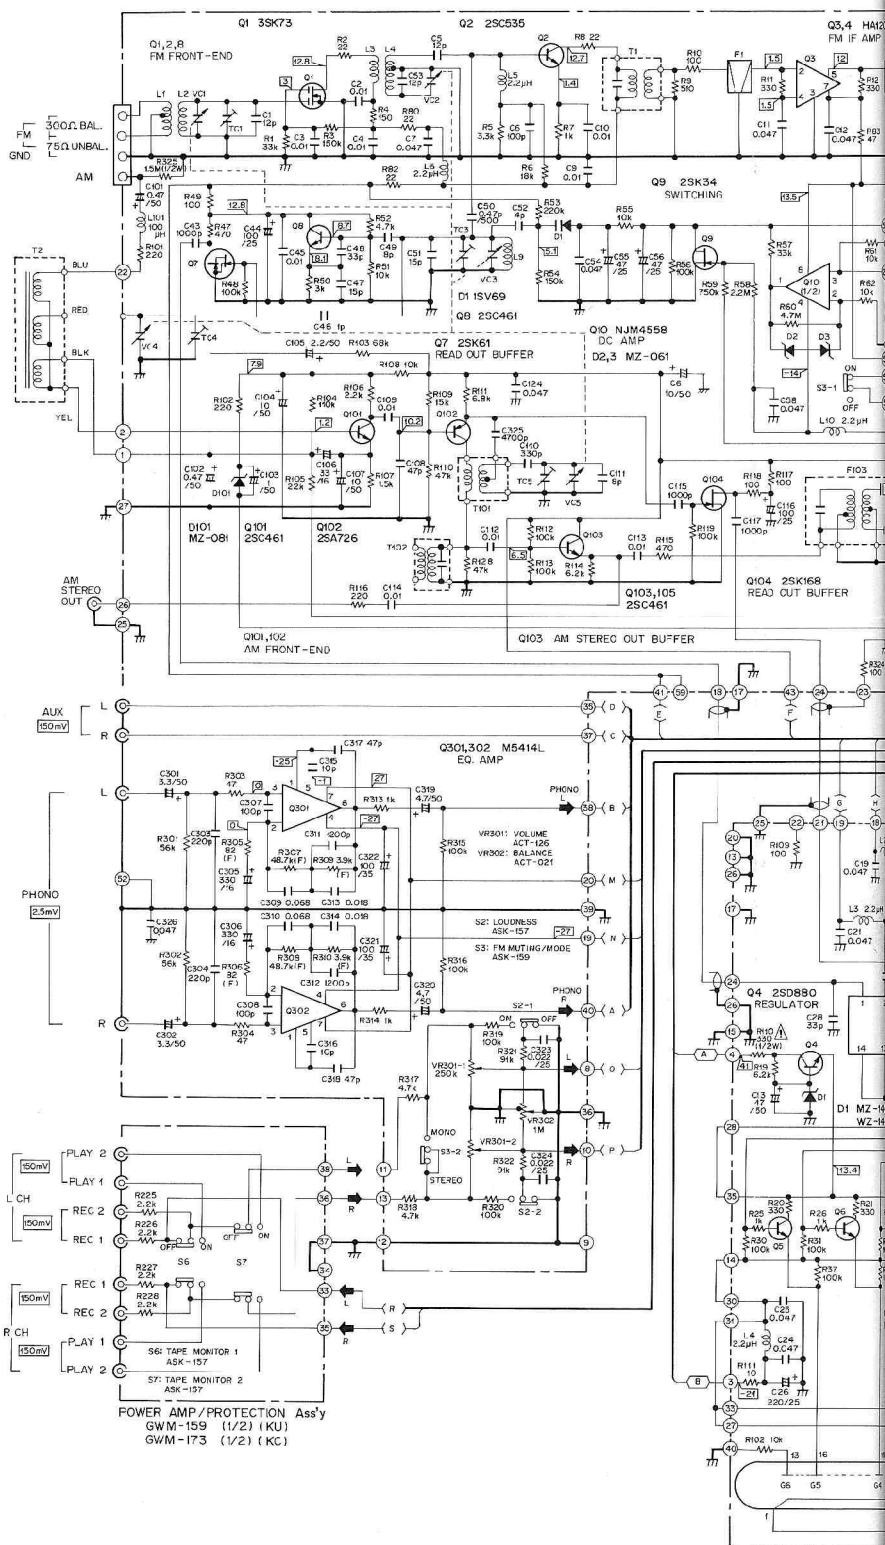

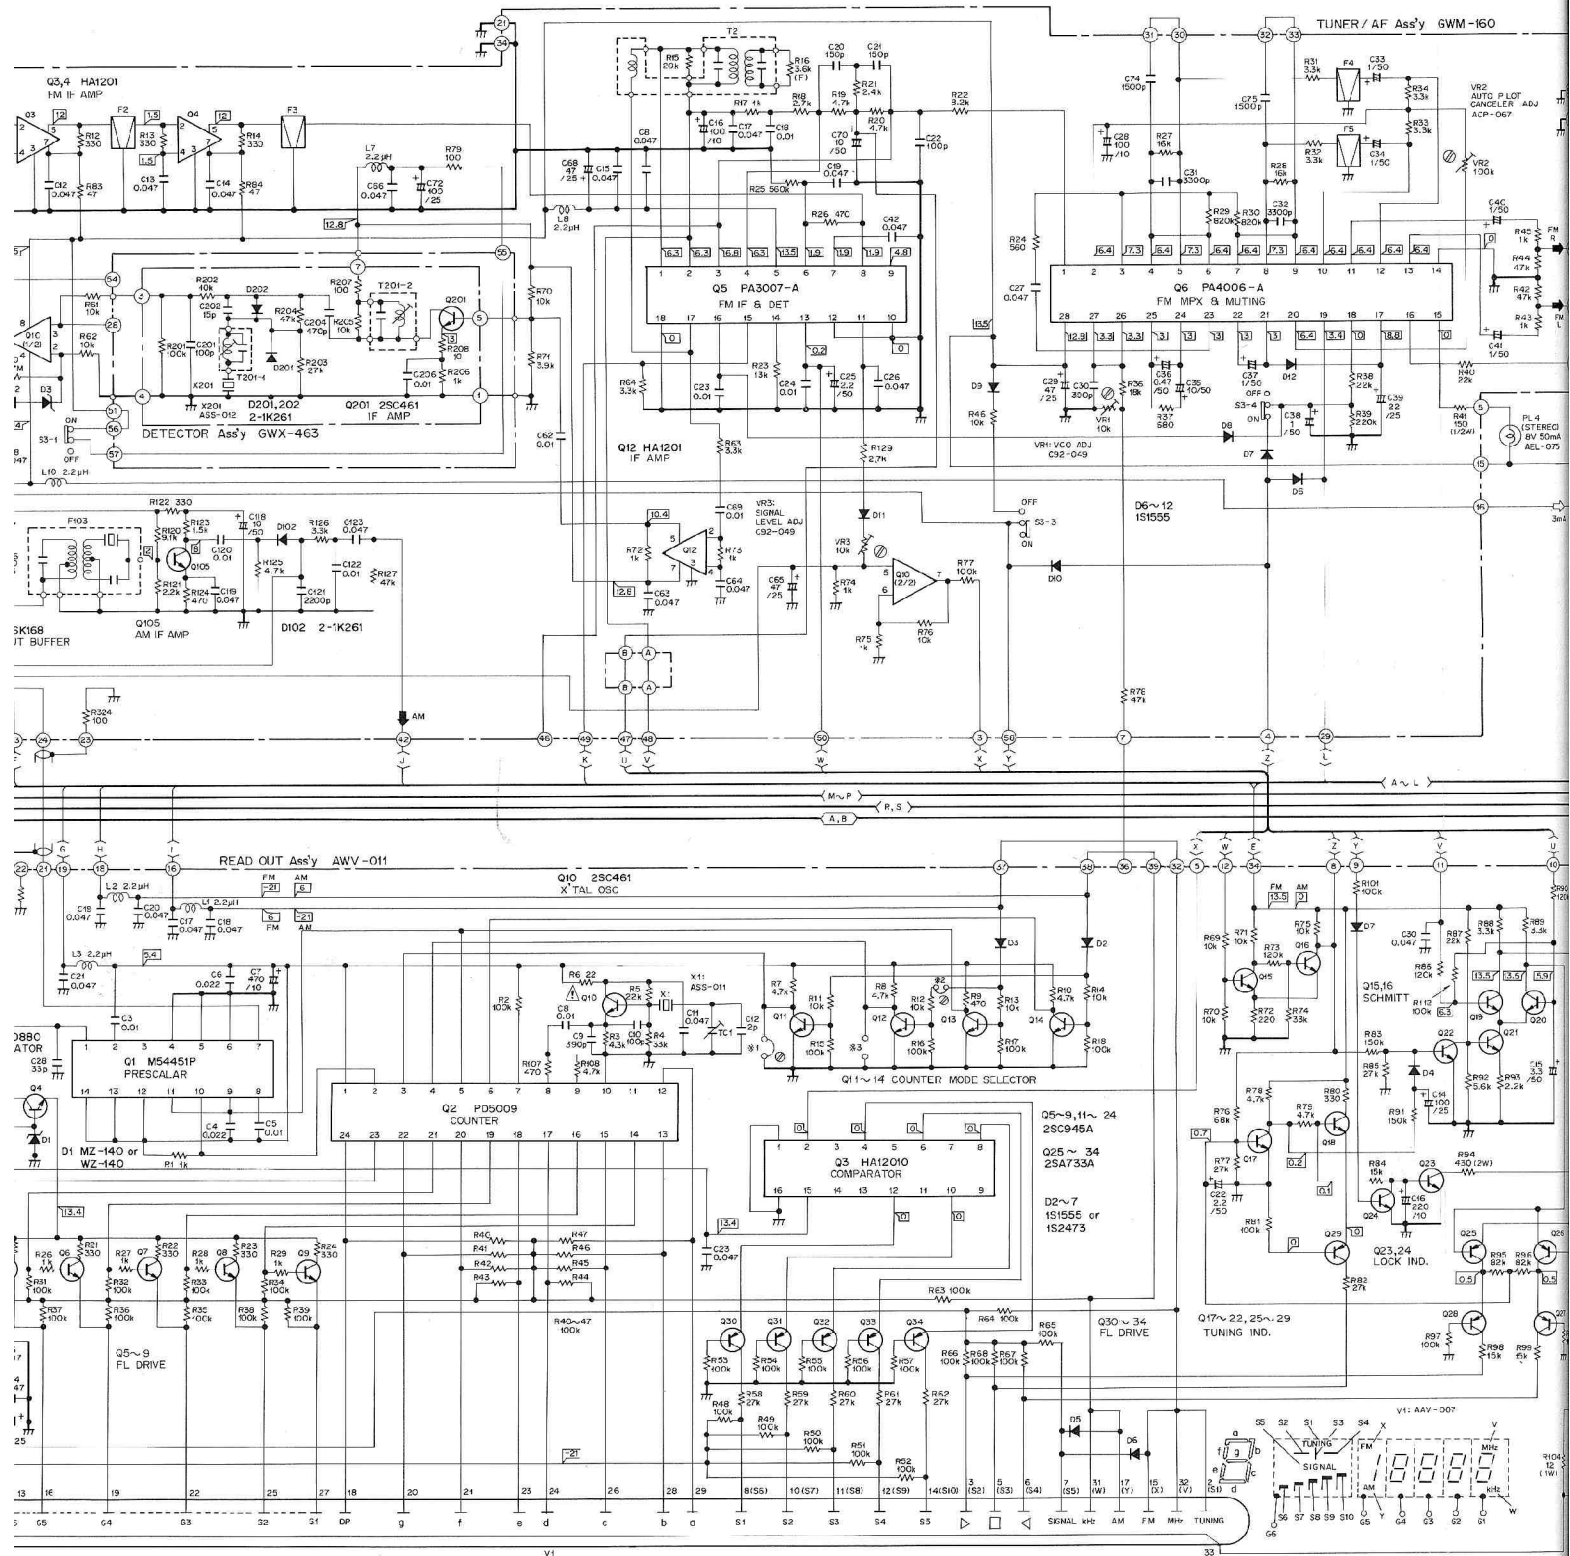

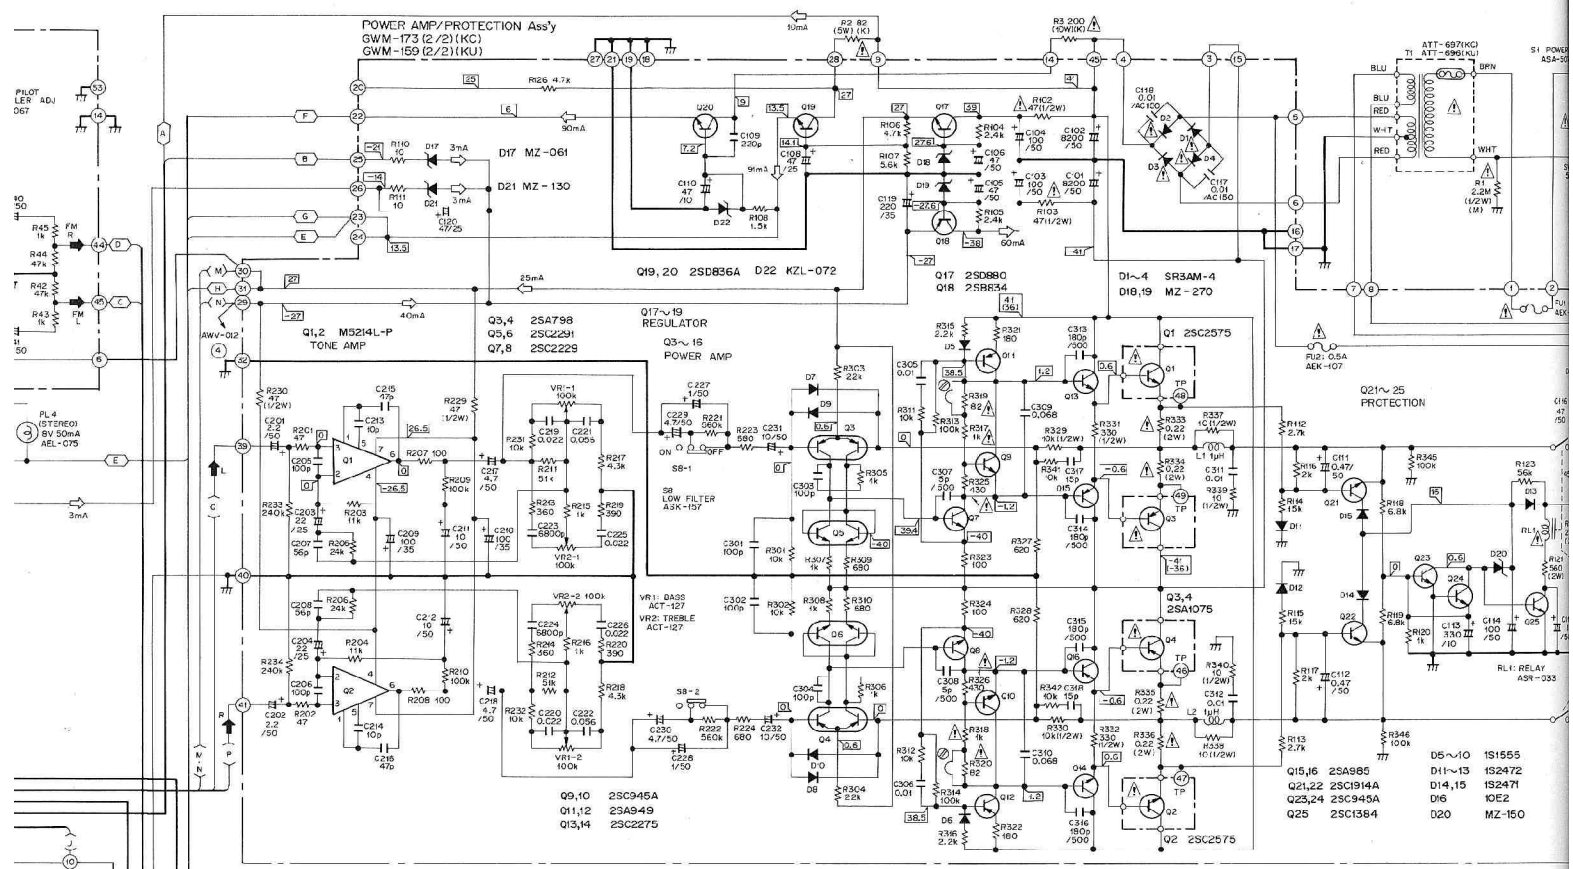

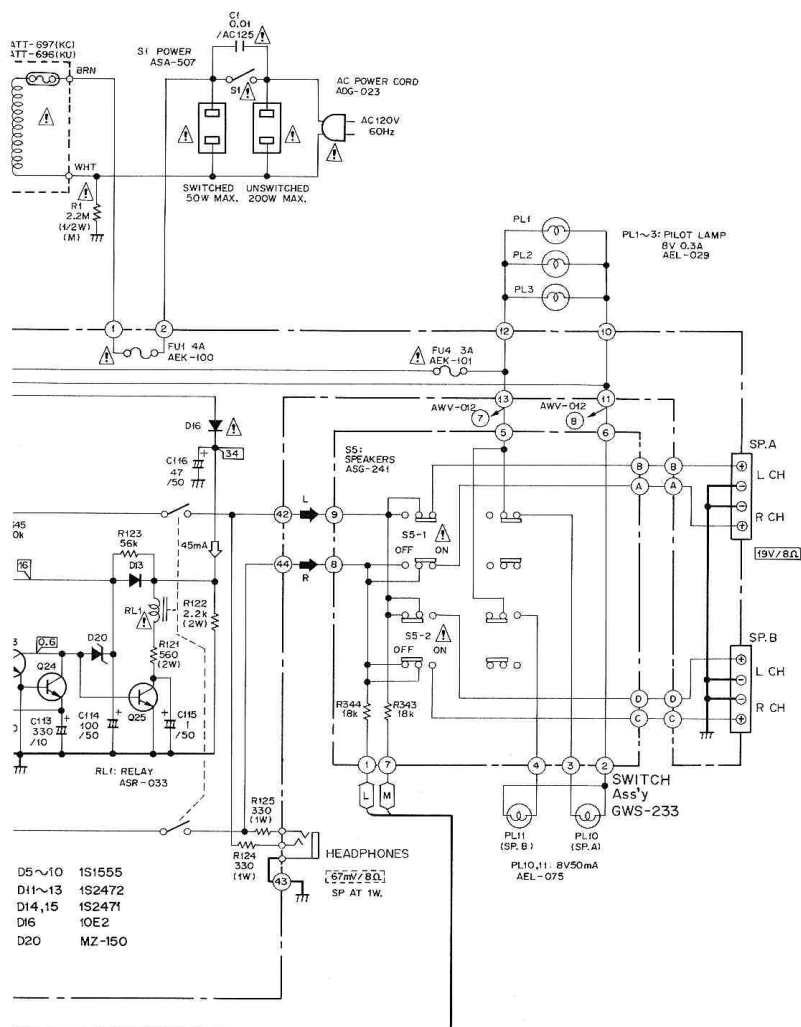

1. RESISTORS:
Indicated in Ω , $\frac{1}{4}W$, $\pm 5\%$ tolerance unless otherwise noted k : k Ω , M : M Ω , (F) : $\pm 1\%$, (G) : $\pm 2\%$, (K) : $\pm 10\%$ tolerance
2. CAPACITORS:
Indicated in capacity (μF)/voltage (V) unless otherwise noted p : pF
Indication without voltage is 50V except electrolytic capacitor.

3. VOLTAGE, CURRENT:
V : Signal voltage at 45 W + 45 W 8 Ω output (1kHz)
V : DC voltage (V) at no input signal
Value in () is DC voltage at rated power.
mA : DC current at no input signal

4. OTHERS:
Signal route.
Adjusting point.
The mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

- SWITCHES:
- | | |
|------------------------|----------------------|
| S1 : POWER | ON - OFF |
| S2 : LOUDNESS | ON - OFF |
| S3 : FM MUTING/MODE | ON/STEREO - OFF/MONO |
| S4-1: FUNCTION (FM) | ON - OFF |
| S4-2: FUNCTION (AM) | ON - OFF |
| S4-3: FUNCTION (AUX) | ON - OFF |
| S4-4: FUNCTION (PHONO) | ON - OFF |
| S5-1: SPEAKERS (A) | ON - OFF |
| S5-2: SPEAKERS (B) | ON - OFF |
| S6 : TAPE MONITOR 1 | ON - OFF |
| S7 : TAPE MONITOR 2 | ON - OFF |
| S8 : LOW FILTER (15Hz) | ON - OFF |

The underlined indicates the switch position.

This is the basic schematic diagram, but the actual circuit may vary due to improvements in design.

