



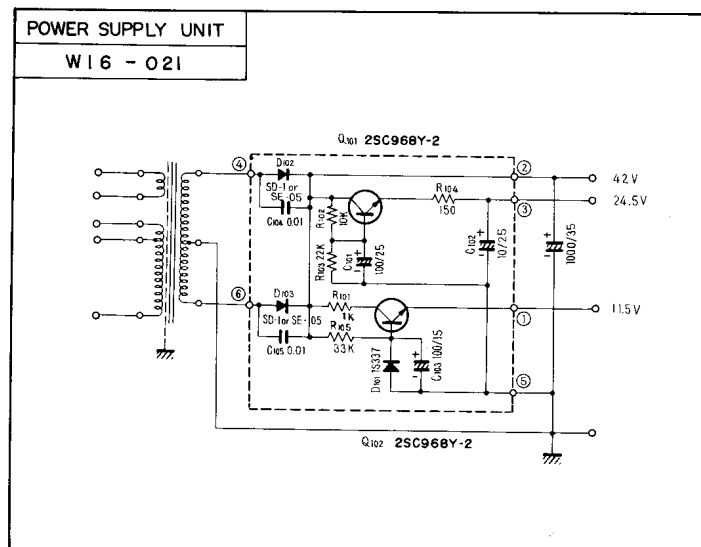

SX-440

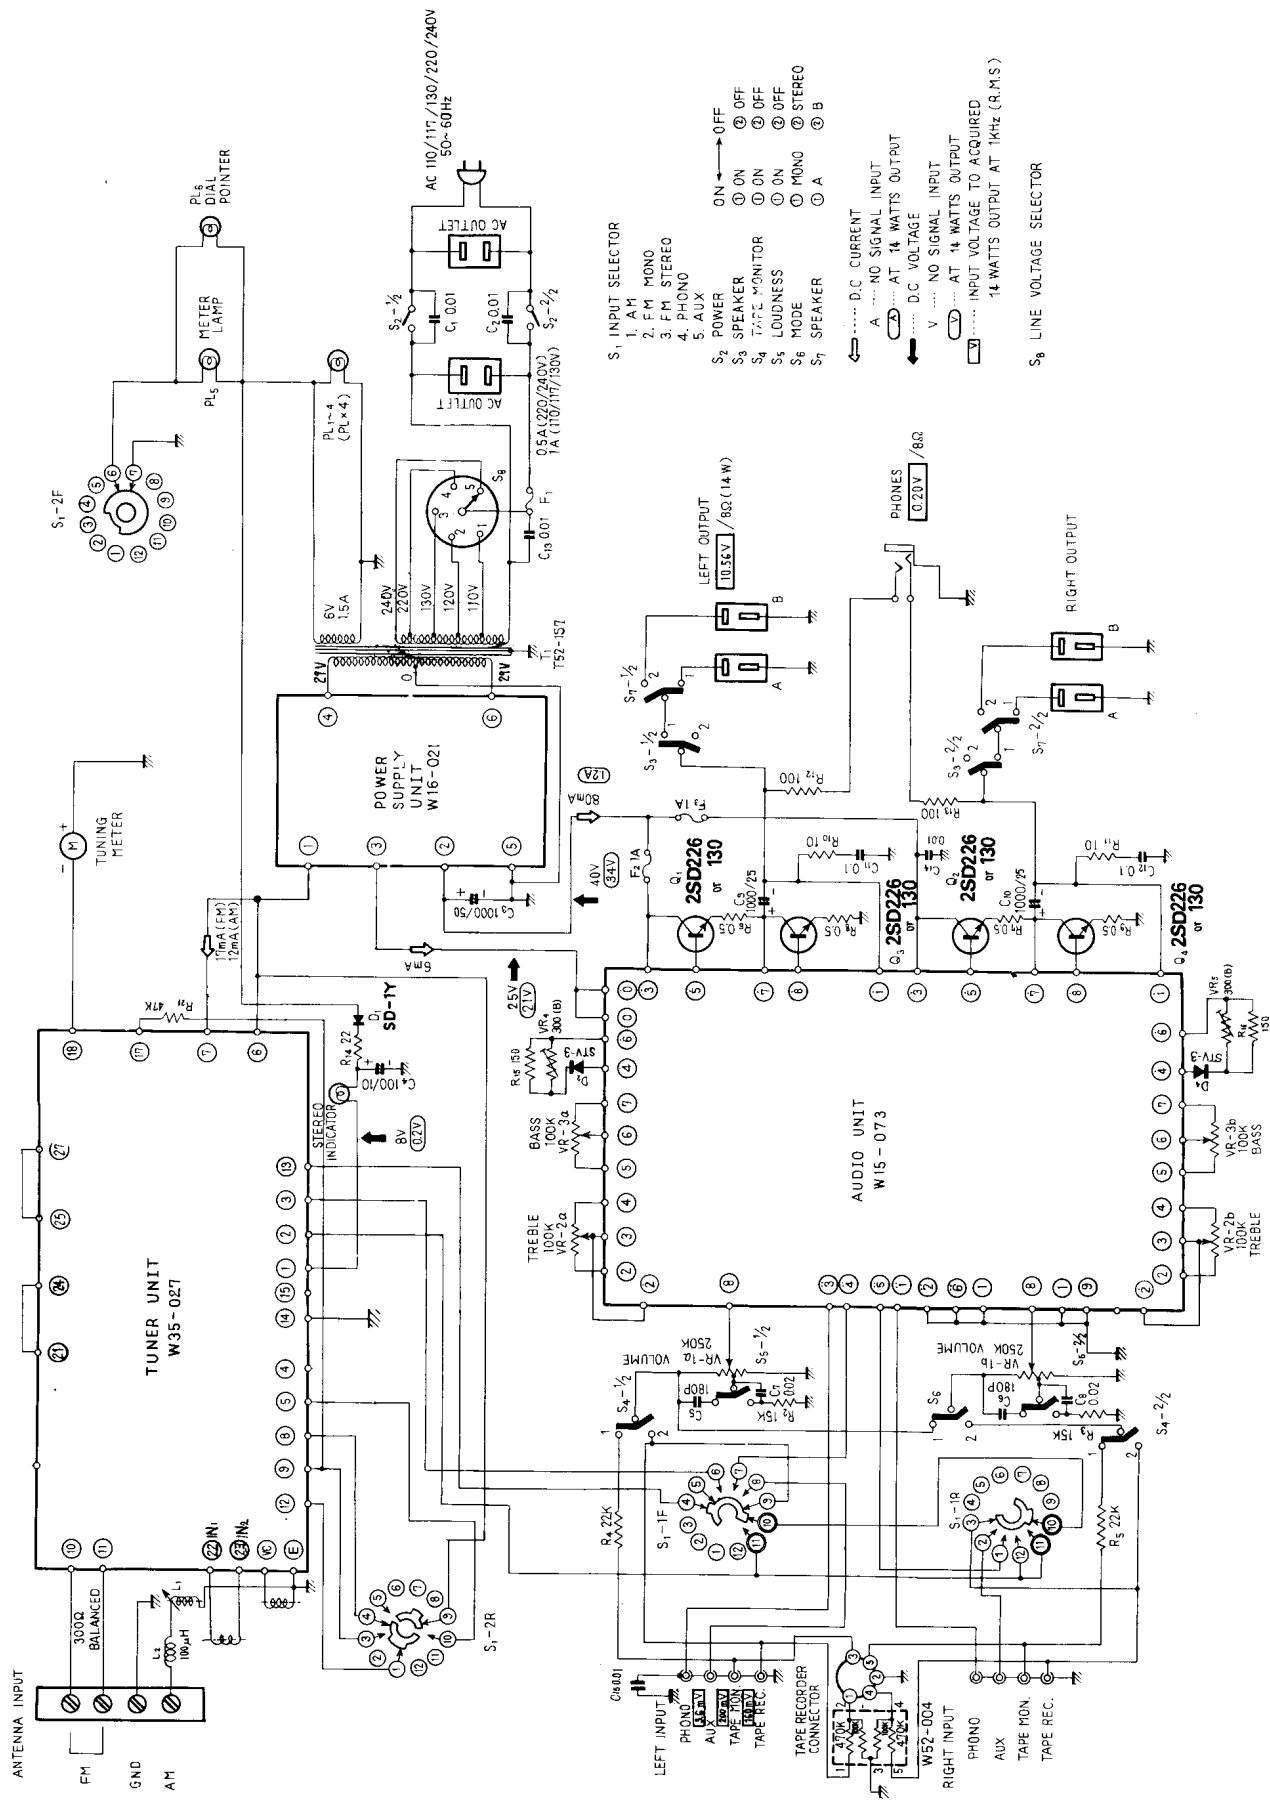

- S₁ INPUT SELECTOR**
- 1. AM MONO
 - 2. FM MONO
 - 3. FM STEREO
 - 4. PHONO
 - 5. AUX
- S₂ SPEAKER**
- ON → OFF
 - ① ON
 - ② OFF
- S₃ TAPE MONITOR**
- ON → OFF
 - ① ON
 - ② OFF
- S₄ LOUDNESS**
- ON → OFF
 - ① ON
 - ② OFF
- S₅ MODE**
- ① MONO
 - ② STEREO
- S₆ SPEAKER**
- ① A
 - ② B
- D.C. CURRENT**
- A → NO SIGNAL INPUT
 - AT 14 WATTS OUTPUT
- D.C. VOLTAGE**
- V → NO SIGNAL INPUT
 - AT 14 WATTS OUTPUT
 - INPUT VOLTAGE TO ACQUIRED
 - 14 WATTS OUTPUT AT 1kHz (R.M.S.)
- S₈ LINE VOLTAGE SELECTOR**

