


# 7. SCHEMATIC DIAGRAM

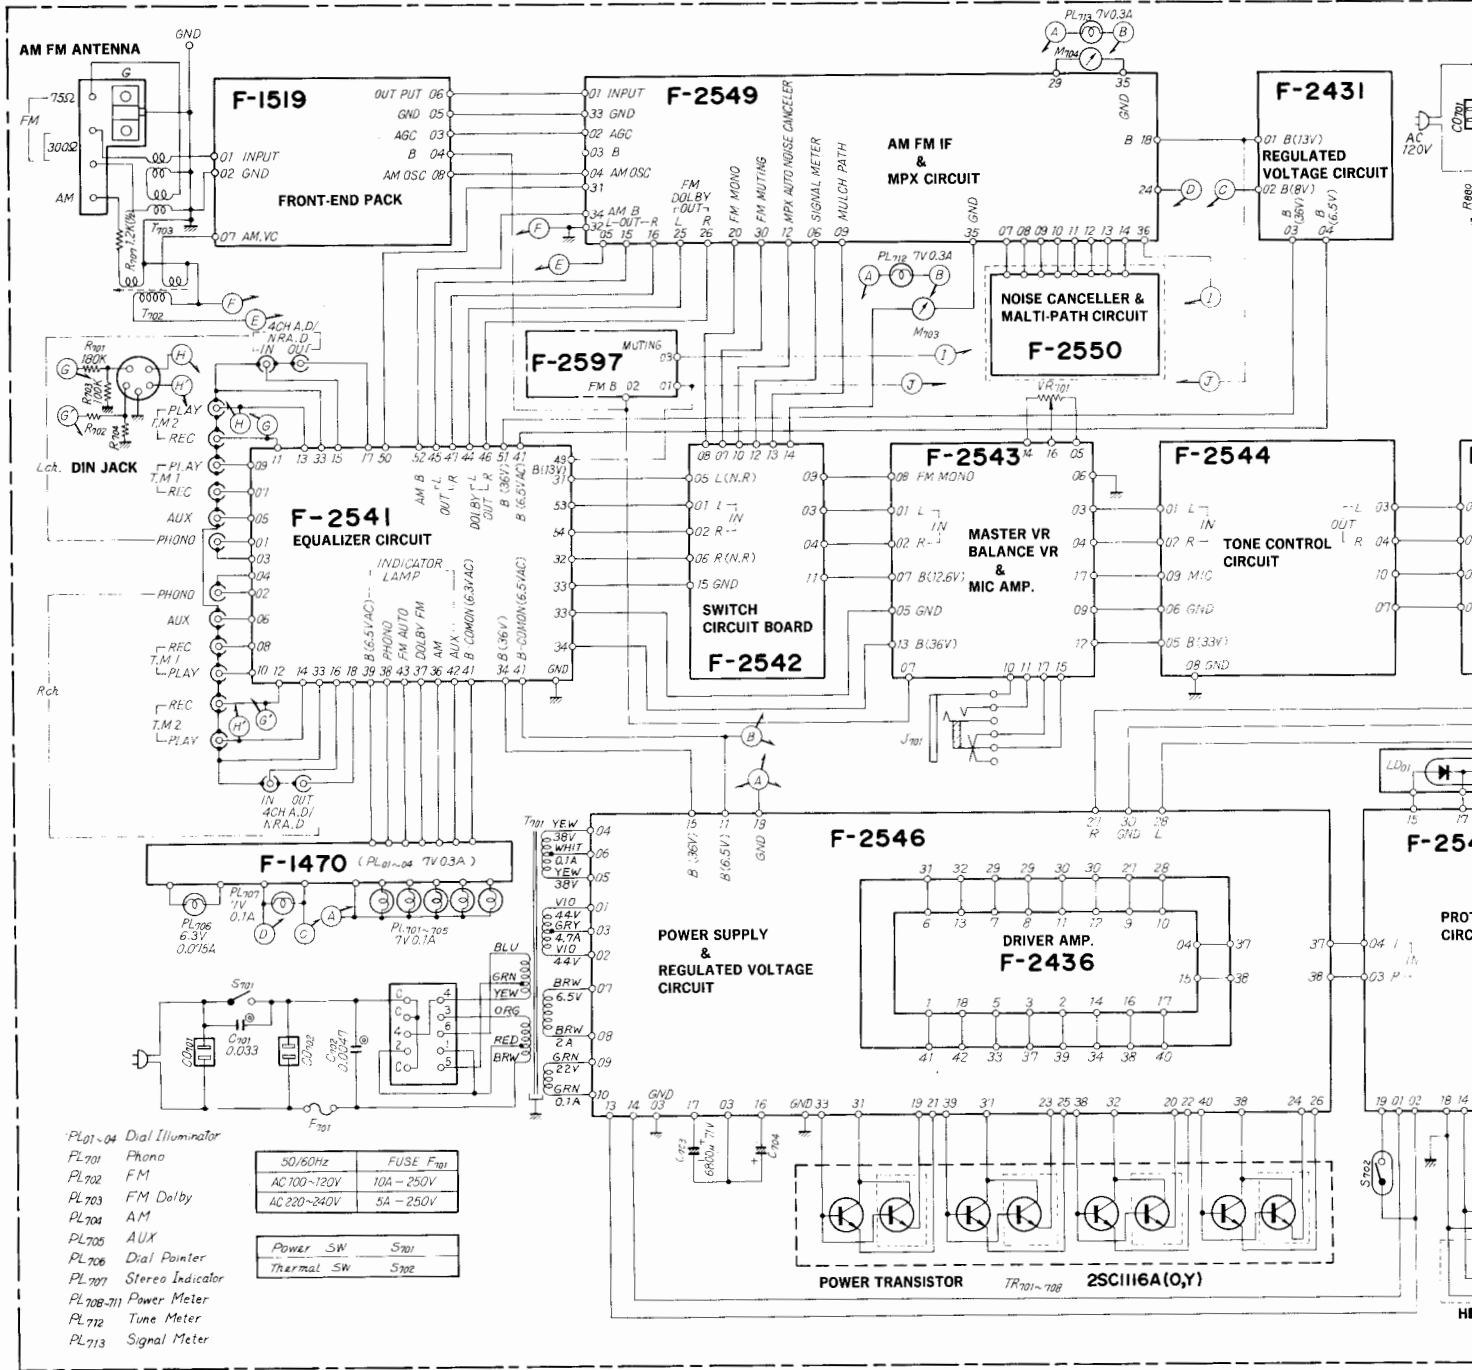

**Note:** In model **(B)**, the sections in      on schematic diagram above are not installed.

Schematic diagrams in this manual are combined with ones of model **(A)** and **(B)**. Therefore, when you use these diagrams, refer to the Notes shown in diagrams on page 18, 19 or 20. Regarding name of model **(A)**, **(B)**, please refer to "Notes" indicated on page 1.

- |           |               |                |        |
|-----------|---------------|----------------|--------|
| SELECTOR  | F-2541 S01a~f | 1. PHONO       | 4-CH A |
|           |               | 2. FM AUTO     | FM MU  |
|           |               | 3. DOLBY FM AD | MPX N  |
|           |               | 4. AM          | CANCE  |
|           |               | 5. AUX         | METER  |
| TAPE PLAY | F-2541 S02a~f | 1. DECK 1      | AUDIC  |
|           |               | 2. DECK 2      | LOW F  |
|           |               | 3. DECK 1      | HIGH I |
|           |               | 4. SOURCE      | LOUDI  |
|           |               | 5. DECK 2      | MODE   |
|           |               | 6. DECK 2      |        |
|           |               | 7. DECK 1      |        |