

TASCAM

TEAC Professional Division

SERVICE MANUAL

CD-RW750

CD Rewritable Recorder

CONTENTS

1. SAFETY INFORMATION	2
2. SPECIFICATIONS	3
3. TEST MODE	4
4. EXPLODED VIEW AND PARTS LIST	7
5. PC BOARDS AND PARTS LIST	10
6. INCLUDED ACCESSORIES	15

目次

1. SAFETY INFORMATION	2
2. 仕様	3
3. テストモード	4
4. 分解図とパーツリスト	6
5. 基板図とパーツリスト	10
6. 付属品	15

INSTRUCTIONS FOR SERVICE PERSONNEL

BEFORE RETURNING APPLIANCE TO THE CUSTOMER, MAKE LEAKAGE-CURRENT OR RESISTANCE MEASUREMENTS TO DETERMINE THAT EXPOSED PARTS ARE ACCEPTABLY INSULATED FROM THE SUPPLY CIRCUIT.


1. SAFETY INFORMATION

This product has been designed and manufactured according to FDA regulations "title 21, CFR, chapter 1, subchapter J, based on the Radiation Control for Health and Safety Act of 1968", and is classified as a class 1 laser product. There is no hazardous invisible laser radiation during operation because invisible laser radiation emitted inside of this product is completely confined in the protective housings. The label required in this regulation is shown ①.

● CAUTION

USE OF CONTROLS OR ADJUSTMENT OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

① For U.S.A

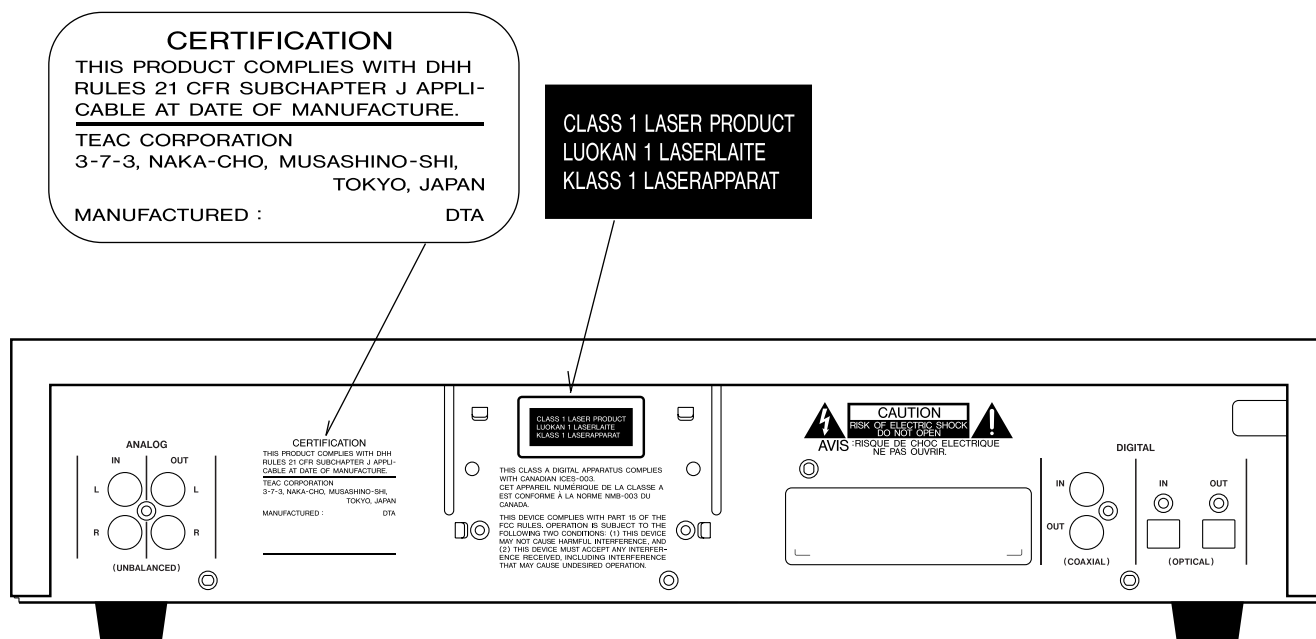

Optical pickup: Type : SF-W03PDX
 Manufacturer : SANYO Electric Co.Ltd
 Laser output : Less than 40 mW on the objective lens
 Wavelength : 780-786 nm

2. SPECIFICATIONS



仕様

Specifications

Recording media type:	CD-R, CD-R-DA CD-RW, CD-RW-DA (8cm Disc does not correspond.)
Recording resolution:	16-bit linear
Recording sampling frequency:	44.1 kHz
Frequency convertor input:	32 kHz - 48 kHz
Frequency response:	20 Hz - 20 kHz ±1.0 dB (playback) +1.0 ~ -1.5 dB(recording)
S/N ratio:	92 dB (playback), 88 dB (recording)
Dynamic range:	92 dB (playback), 88 dB (recording)
Total harmonic distortion:	0.008 % (playback), 0.010 % (recording)
Channel separation:	80 dB (playback : 1 kHz), 75 dB (recording : 1 kHz)
Analog inputs/Outputs	
Analog inputs:	Unbalanced RCA
Nominal input level:	-10 dBV (FS-16dB)
Maximum input level:	+6 dBV
Input impedance:	33 kΩ (unbalanced)
Analog outputs:	Unbalanced RCA
Nominal output level:	-10 dBV (FS-16dB)
Maximum output level:	+6 dBV
Output impedance:	1 kΩ (unbalanced)
Headphone output:	6 mm (1/4") stereo
Output level:	35 mW + 35 mW (into 32 Ω)
Digital input:	
COAXIAL:	RCA pin, IEC60958 TYPE II
OPTICAL:	TOSLINK, IEC60958 TYPE II
Digital output:	
COAXIAL:	RCA pin, IEC60958 TYPE II
OPTICAL:	TOSLINK, IEC60958 TYPE II
Voltage requirements:	USA/Canada 120 VAC, 60 Hz U.K./Europe 230 VAC, 50 Hz Australia 240 VAC, 50 Hz
Power consumption:	27 W
Weight:	6.3 kg (13.9 lbs)
Dimensions w x h x d:	483 x 98 x 312 (mm) 19 x 3.9 x 12.3 (in)
Supplied accessories:	RC-RW750 remote control unit

定格

記録ディスク:	CD-R, CD-R-DA CD-RW, CD-RW-DA (8cm disc は非対応)
量子化ビット数:	16 bit リニア
サンプリング周波数:	44.1 kHz
入出力サンプリング周波数:	32 kHz ~ 48 kHz
再生周波数特性:	20 Hz ~ 20 kHz ±1.0 dB (再生時) +1.0 ~ -1.5dB (記録時)
S/N 比:	92 dB (再生時)、 88 dB (記録時)
ダイナミックレンジ:	92 dB (再生時)、 88 dB (記録時)
歪率:	0.008 %以下 (再生時) 0.010 %以下 (記録時)
チャンネルセパレーション:	80 dB (再生時、1 kHz) 以下 75 dB (記録時、1 kHz) 以下
アナログ入出力	
アンバランス入力:	RCA ピン
基準入力レベル:	-10 dBV (FS - 16 dB)
最大入力レベル:	+6 dBV
入力インピーダンス:	33 kΩ (不平衡)
アンバランス出力:	RCA ピン
基準出力レベル:	-10 dBV (FS - 16 dB)
最大出力レベル:	+6 dBV
出力インピーダンス:	1 kΩ (不平衡)
ヘッドホン出力:	6 φ ステレオ
出力レベル:	35 mW+35 mW (32 Ω 負荷)
デジタル入力	
COAXIAL:	RCA ピン、IEC60958 TYPE II
OPTICAL:	TOSLINK、IEC60958 TYPE II
デジタル出力	
COAXIAL:	RCA ピン、IEC60958 TYPE II
OPTICAL:	TOSLINK、IEC60958 TYPE II
電源:	100 VAC 50-60 Hz
消費電力:	27 W
重量:	6.3 kg
外形寸法 (W×H×D):	483×98×312 mm
付属品:	RC-RW750 remote control unit

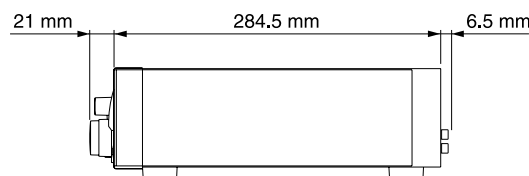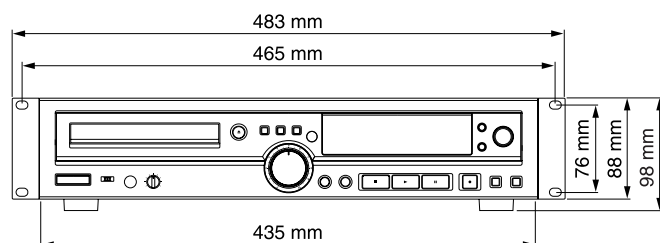

3. TEST MODE

テストモード

1: Entering and terminating test mode

1-1: Entering test mode

Hold down STOP+PLAY+PAUSE and switch on the power. When the model name and the microcomputer version number are displayed, release the three buttons and the unit enters test mode.

1-2: Terminating test mode

Switch off the power.

2: Test mode capabilities

2-1: Display of the front microcomputer version number

The default is for front microcomputer version number to be displayed when test mode is entered.

The unit can then move into various specific test modes.

Display example at this stage: 『RW750 01.00』 "

2-2: Initializing EEPROM

To initialize EEPROM, which holds a variety of settings like REPEAT MODE setting for example, press the ERASE button when the microcomputer version number is displayed as discussed in 2-1.

When the initialization is complete, 『EEPROM OK!!』 is displayed.

Press the ERASE button again and the unit returns to the status referred to in paragraph 2-1.

2-3. Displaying drive version number

To get the drive CRD-RA2 version number displayed, press the FINALIZE button at the start point (paragraph 2-1).

Display example at this stage: 『RA2 Ver3.40』

Press the FINALIZE button again and the unit returns to the status referred to in paragraph

2-4: Checking FL tube display operation

At the starting point (step 2-1), press the DISPLAY button. Each time you press the button, the next group of FL tubes additionally illuminate in sequence.

1st press: all tubes turned off

2nd press: Mode display characters turned on at left

3rd press: Level meter turned on

4th press: Mode display characters turned on at right

5th press: Calendar turned on

6th press: Dot matrix characters turned on at center (all FL tubes lit up)

7th press: FL tube display check mode is terminated, switching the unit back to the status referred to in paragraph 2-1.

1 : TEST MODEの起動と終了

1-1 : TEST MODEの起動

STOP+PLAY+PAUSEの3つのボタンを押した状態で電源を入れ、機種名とマイコンバージョンが表示されたら3つのボタンを同時に離すと、TEST MODEになります。

1-2 : TEST MODEの終了

TEST MODEを終了する場合は、電源を切ります。

2 : TEST MODE機能

2-1 : フロントマイコンのバージョン表示

TEST MODE起動時のデフォルト状態でフロントマイコンのバージョンを表示します。

この表示状態から各種TEST MODEへ移行する事が出来ます。

表示例 : 『RW750 01.00』

2-2 : EPROMのイニシャライズ

REPEAT MODE等の各種機能設定を記憶するEEPROMを初期化する場合は

2-1の状態からERASEボタンを押します。

『EEPROM OK!!』と表示されれば初期化が終了します。

再度、ERASEボタンを押すと2-1の表示状態に戻ります。

2-3 : ドライブバージョンの表示

ドライブCRD-RA2のバージョンを表示する場合は、2-1の状態からFINALIZEボタンを押します。

表示例 : 『RA2 Ver3.40』

再度、FINALIZE ボタンを押すと2-1の表示状態に戻ります。

2-4 : FL管表示CHECK

FL管の点灯を確認する場合は、2-1の状態からDISPLAYボタンを押します。下記の通り、押すたびに表示部が増えていきます。

1回目 : 全消灯

2回目 : 右側のモード表示文字の群が点灯します

3回目 : レベルメータが点灯します

4回目 : 左側のモード表示の群が点灯します

5回目 : カレンダーが点灯します

6回目 : 中央のドット文字表示の群が点灯し、全点灯状態となります。

7回目 : FL管表示CHECK MODEを終了し2-1の状態に戻ります。

2-5: Checking effectiveness of control panel buttons

To check whether the microcomputer identifies each of the buttons on the front panel when pressed, press the PLAY button when the unit is in the status referred to in paragraph 2-1.

Press buttons in sequence as indicated on the FL tube display. If you don't press the button indicated, the next button to press is not indicated. (Note: Understand that the display "ENTER" prompts you to push the JOG dial.) Initially 『open/close』 is displayed, and finally 『dial50』 is displayed.

"xx" in the 『dialxx』 changes as you rotate the JOG dial, between 00 and 99 (one up with one click).

These number displays are just for confirming that they change as you rotate the JOG dial and there is no proportional relationships between them and the amount of the JOG dial rotation.

Pressing the PLAY button when 『dialxx』 is displayed switches the unit back to the status referred to in paragraph 2-1.

2-6: Display of total recording time

To get the total recording time displayed, press the REC button when the unit is in the status referred to in paragraph 2-1.

Display example at this stage: 『R TM=000005h』 ("h" stands for hour).

Pressing the REC button again switches the unit back to the status referred to in paragraph 2-1.

It is the front microcomputer that takes care of counting the total recording time. So, replacing the drive at the service department or others does not clear the total count. (To clear this, refer to paragraph 2-7.)

2-7: Erasing the total recording time data

When the total recording time is displayed as discussed in 2-6, press the ERASE button and 『R TM=ERASE?』 is displayed. Then rotate the JOG dial (PUSH ENTER) to erase the data.

When asked if you are sure you want to erase the data, you can press the ERASE button again to abort the procedure. The unit then returns to the status referred to in paragraph 2-6.

When the erasing is complete, the unit returns to the status referred to in paragraph 2-6.

Note 1: The test mode is controlled with the main unit buttons.

Note 2: The test mode capabilities are available (except the drive version number display) even when the drive and the FRONT PCBA are not connected. (If 『- - - -』 is displayed when you try to display the drive version number in 2-3, this indicates that there are no communications established between the drive and front microcomputer.)

2-5：フロントパネルのボタン受付確認

フロントパネル上の各種ボタンが押された事をマイコンが認識できているか確認する場合は、2-1の状態からPLAYボタンを押します。

FL管に表示されたボタンを順次に押していきます。表示されたボタンを押さないと次に押すべきボタン名に表示が変化しません。(注：ENTERとはJOGダイヤルを押す事です)

最初は『open/close』と表示され、最後は『dial50』と表示されます。

『dialxx』表示はJOGダイヤルを回すとxxの部分の数字が00から99の間で変化します。(1クリックで1増減)

数字は変化を確認するための表示でありJOGの回転位置と数値の関連付けは有りません。

『dialxx』表示の時にPLAYボタンを押すと2-1の状態に戻ります。

2-6：録音積算時間表示

今までに録音された時間を表示する場合は、2-1の状態からRECボタンを押します。

表示例：『R TM=000005h』(単位はhour)

もう一度RECボタンを押すと2-1の表示状態に戻ります。

この機能はフロントマイコンが積算している時間であるため、サービス部門等でドライブを交換しても変化しません。ドライブを交換した場合には積算時間をクリアする必要があります。(2-7参照)

2-7：録音積算時間データのイレース

2-6にて積算時間を表示している状態でERASEボタンを押すと、『R TM=ERASE?』と表示されますので、JOGダイヤルを押して(PUSH ENTER)、イレースを実行します。

実行したくない時は、もう一度ERASEボタンを押すと2-6の状態に戻ります。

イレース実行後は2-6の積算時間表示に戻ります。

注1：TEST MODEは本体のボタン操作にて行います。

注2：TEST MODEではドライブバージョン表示以外は、ドライブとFRONT PCBAが接続されていなくても正常な動作が可能です。(2-3：ドライブバージョン表示の時『- - - -』を表示した場合は、ドライブとフロントマイコンが通信できていない事を示します。)

PARTS LIST SECTION

NOTES

- PC boards shown are viewed from parts side.
- Parts marked with * require longer delivery time.
- The parts with no reference number or no parts number in the exploded views are not supplied.
- As regards the resistors and capacitors, refer to the circuit diagrams contained in the manual.
- △ Parts marked with this sign are safety critical components. They must be replaced with identical components - refer to the appropriate parts list and ensure exact replacement.
- Parts of [] mark can be used only with the version designated.
[J]: JAPAN [US]: U.S.A. [C]: CANADA [K]: KOREA [E]: EUROPE
[A]: AUSTRALIA [GE]: GENERAL EXPORT


注 意

- プリント基板は部品面が示されています。
- *印の部品は納期が若干かかります。
あらかじめご了承ください。
- 分解図に部番のない部品及び品番のない部品は供給しません。
- 標準の抵抗、コンデンサーは省略してあります。
回路図を参照してください。
- △は安全重要部品です。
交換する時は必ずティアック指定の部品を使用してください。
- 仕向先
[J]: JAPAN [US]: U.S.A. [C]: CANADA [K]: KOREA [E]: EUROPE
[A]: AUSTRALIA [GE]: GENERAL EXPORT

4. EXPLODED VIEWS AND PARTS LIST

分解図とパーツリスト

EXPLODED VIEW-1

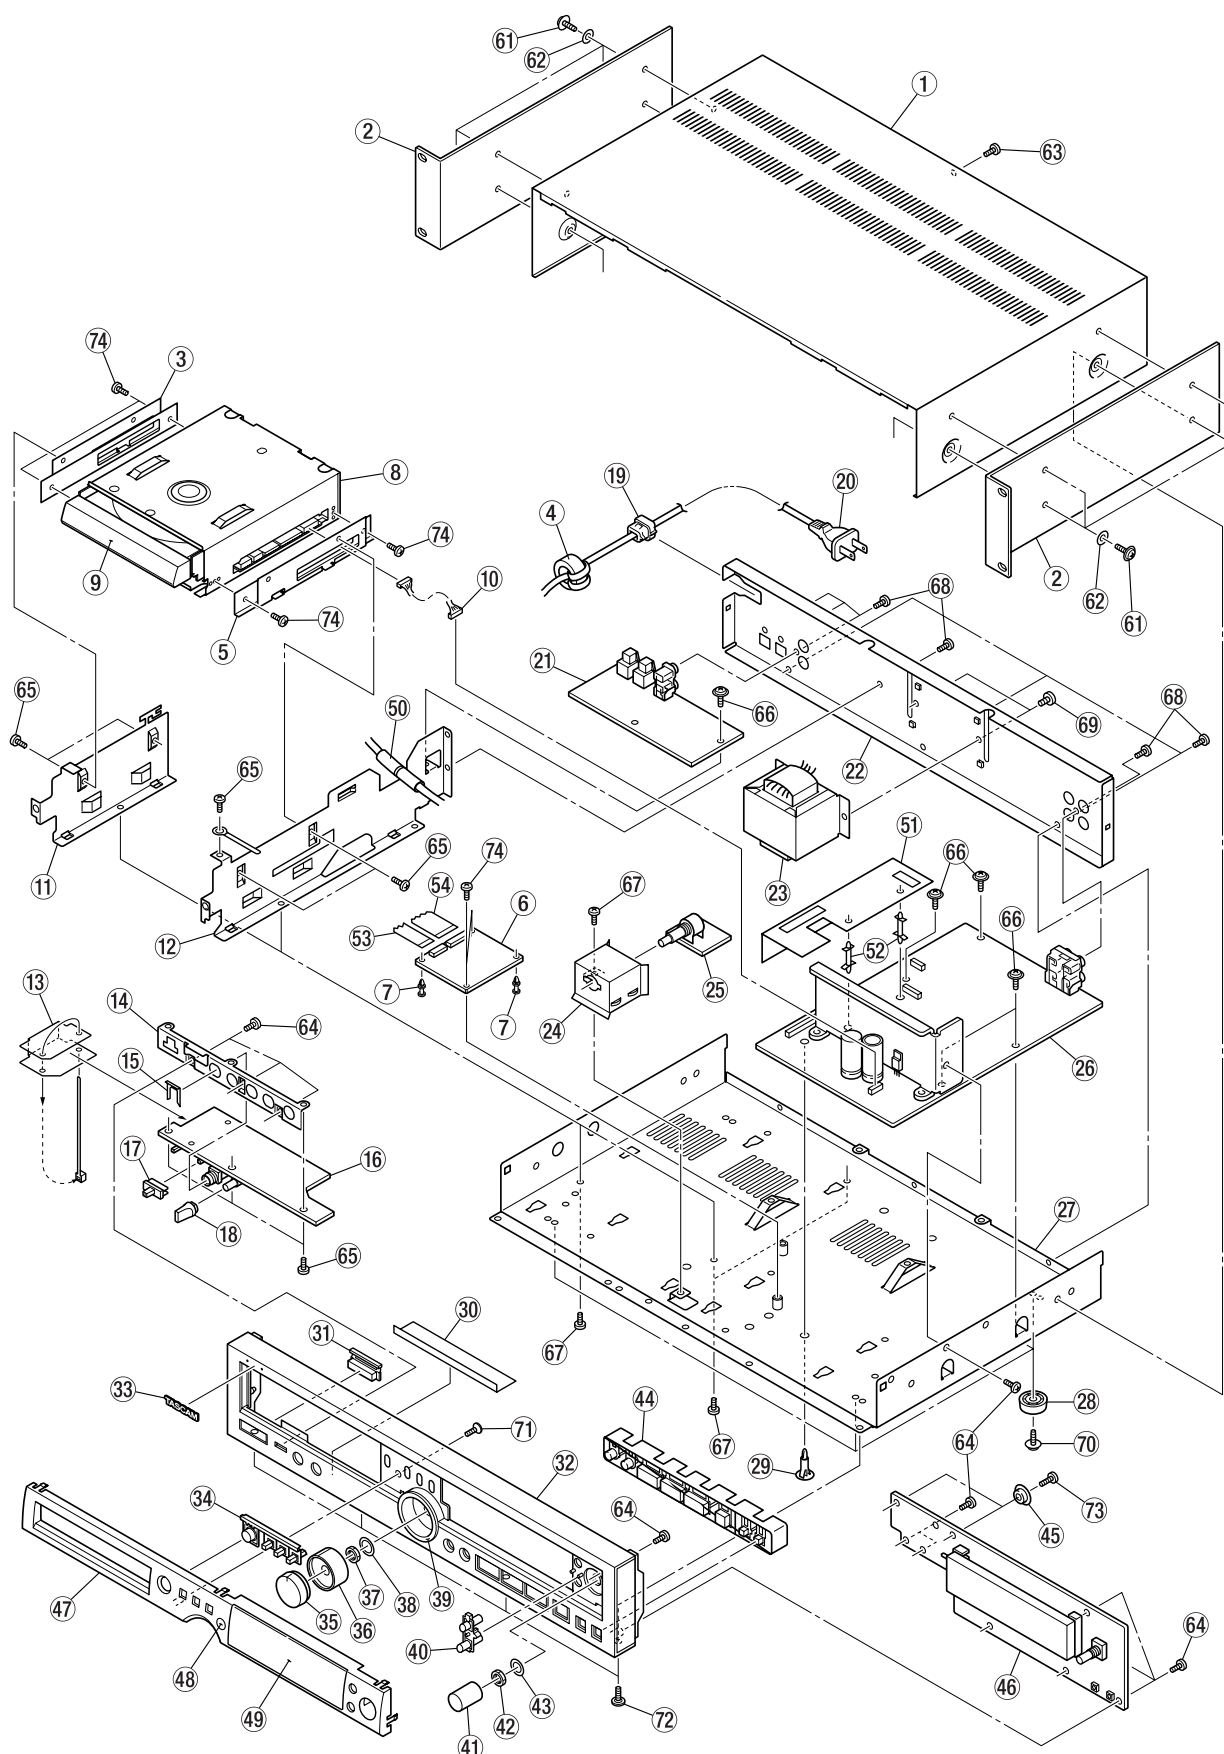

EXPLODED VIEW-1


REF.NO.	PARTS NO.	DESCRIPTION	REMARKS
1- 1	3M00581-20A	BONNET	
1- 2	3M00732-00B	RACK MOUNT ANGLE,RM-5	
1- 3	3M02167-00A	BRACKET-LEFT	
1- 4	3E010000	FER.CORE B18T 25X12X15	
1- 5	3M02168-00A	BRACKET-RIGHT	
1- 6	*	PCBY.ASSY,CODEC RW750	GATHER (C) PCB ASSY(Refer to page 14)
1- 7	3M02388-00A	PCB SUPPORT DCB-8	
1- 8	Y002348-00A	DRIVE UNIT,CRD-RA2A FIRMWARE UP DRIVE UNIT,CRD-RA2A SOFTWARE SPEC,RA2 V3.30	
1- 9	3M02169-00A	PANEL,TRAY	
1-10	E008738-00A	WIRE,POWER-DRIVE 6P	
1-11	3M00884-10A	BRACKET MECHA SIDE(L)	
1-12	3M00885-10A	BRACKET MECHA SIDE(R)	
1-13	3M02395-00A	SHEET BARRIER PSW RW750	
1-14	3M00886-00B	BRACKET,JACK	
1-15	3E011630	MOUNT PLATE,JACK	
1-16	*	PCB ASSY,MIC/HP RW750.....	GATHER (A) PCB ASSY(Refer to page 12)
1-17	3M00574-00A	KNOB,SLIDE(B) MD-5B	
1-18	3M0024800A	KNOB,PHONE VOLUME AD500	
1-19	△ 3M000880	BUSHING, #2271(CSA)	
1-20	△ 3E009000	POWER CORD [J]	
	△ 3E009230	POWER CORD [US/C]	
	△ 3E015210	POWER CORD [E]	
	△ 3E006330	POWER CORD [K]	
	△ 3E000360	POWER CORD [A]	
	△ 3E000350	POWER CORD,UK [UK]	
1-21	*	PCB ASSY,DIGITAL I/O RW750	GATHER (A) PCB ASSY(Refer to page 12)
1-22	3M00580-90A	PANEL,REAR	
1-23	△ E008730-00A	TRANS,RW750	
1-24	3M00966-00A	CASE SHIELD VR RW800	
1-25	*	PCB ASSY,VR RW750.....	GATHER (B) PCB ASSY(Refer to page 13)
1-26	*	PCB ASSY,AUDIO/POWER RW750	GATHER (A) PCB ASSY(Refer to page 12)
1-27	3M00579-20C	CHASSIS,MAIN RW-750	
1-28	3M001950	FOOT,21MM	
1-29	3M00626-00A	SUPPORT,PCB SCD-12	
1-30	3M01005-00B	SHEET,EARTH RW800	
1-31	3M01112-00A	BUTTON POWER N66 RW2000	
1-32	3M00887-50A	PANEL,FRONT(HB) [EXCEPT,T/C]	
	3M00887-51A	PANEL,FRONT(VO) [T/C]	
1-33	3M01349-00A	BADGE TASCAM SILVER	
1-34	3M00893-20B	BUTTON UNT O/C RW700	
1-35	3M00901-20A	KNOB REC(R) RW700	
1-36	3M00897-20B	KNOB REC(L) RW700	
1-37	3M001340	NUT,VR M9	
1-38	3M001350	PLAIN WSHR,VR M9.1	
1-39	3M00901-20A	KNOB REC(R) RW700	
1-40	3M00892-00A	BUTTON,MENU RW800B	
1-41	3M00898-00A	KNOB D15 JOG RW800B	
1-42	3M00969-00A	NUT,M7	
1-43	3M00968-00A	PLAIN WASHER M7	
1-44	3M00894-20A	BUTTON UNT OPE RW700	
1-45	3M00974-00B	STOPPER BONNET RW800	

EXPLODED VIEW-1


REF.NO.	PARTS NO.	DESCRIPTION	REMARKS
1-46	*	PCB ASSY,FRONT RW750	GATHER (B) PCB ASSY (Refer to page 13)
1-47	3M02166-00A	ESCUTCHEON FRONT	
1-48	3M00890-00A	COVER SENSOR RW800B	
1-49	3M00889-10D	WINDOW FL RW700	
1-50	3M00740-00A	HEAT BARRIER	
1-51	3M00992-00B	SHEET BARRIER E. PWR	
1-52	3M00991-00A	SUPPORT,PCB CBS-15	
1-53	E008733-00A	FFC,9P P=1.0 L=100	
1-54	E008732-00A	FFC,17P P=1.0 L=100	
1-61	3B00018-12B	SCREW,J,S M3X12 (BLK)	
1-62	3M002020	FIBER WSHR,3X8X0.3T BLK	
1-63	3B00038-08A	SCREW,VPCR M3X8 BLK	
1-64	3B00008-08A	SCREW,BPP M3X8	
1-65	3B00053-05A	SCREW,BPB M3X5	
1-66	3B00013-06A	SCREW,J,S M3X6	
1-67	3B00053-08A	SCREW,BPB M3X8	
1-68	3B00057-08A	SCREW,BPB M3X8 (BLK)	
1-69	3B00019-05A	SCREW,J, S M4X5 BLK	
1-70	3B00013-08A	SCREW,J,S M3X8	
1-71	3B00070-08A	SCREW,FPP M3X8	
1-72	3B00073-00A	SCREW,FPS TITE M3X6	
1-73	3B00008-10A	SCREW,BPP M3X10	
1-74	3B00001-06A	SCREW,BPS M3X6	

6. PC BOARDS AND PARTS LIST
基板図とパーツリスト


GATHER (A) PCB ASSY (PCB,AUDIO/POWER. PCB,MIC/HP. PCB,DIGITAL I/O)

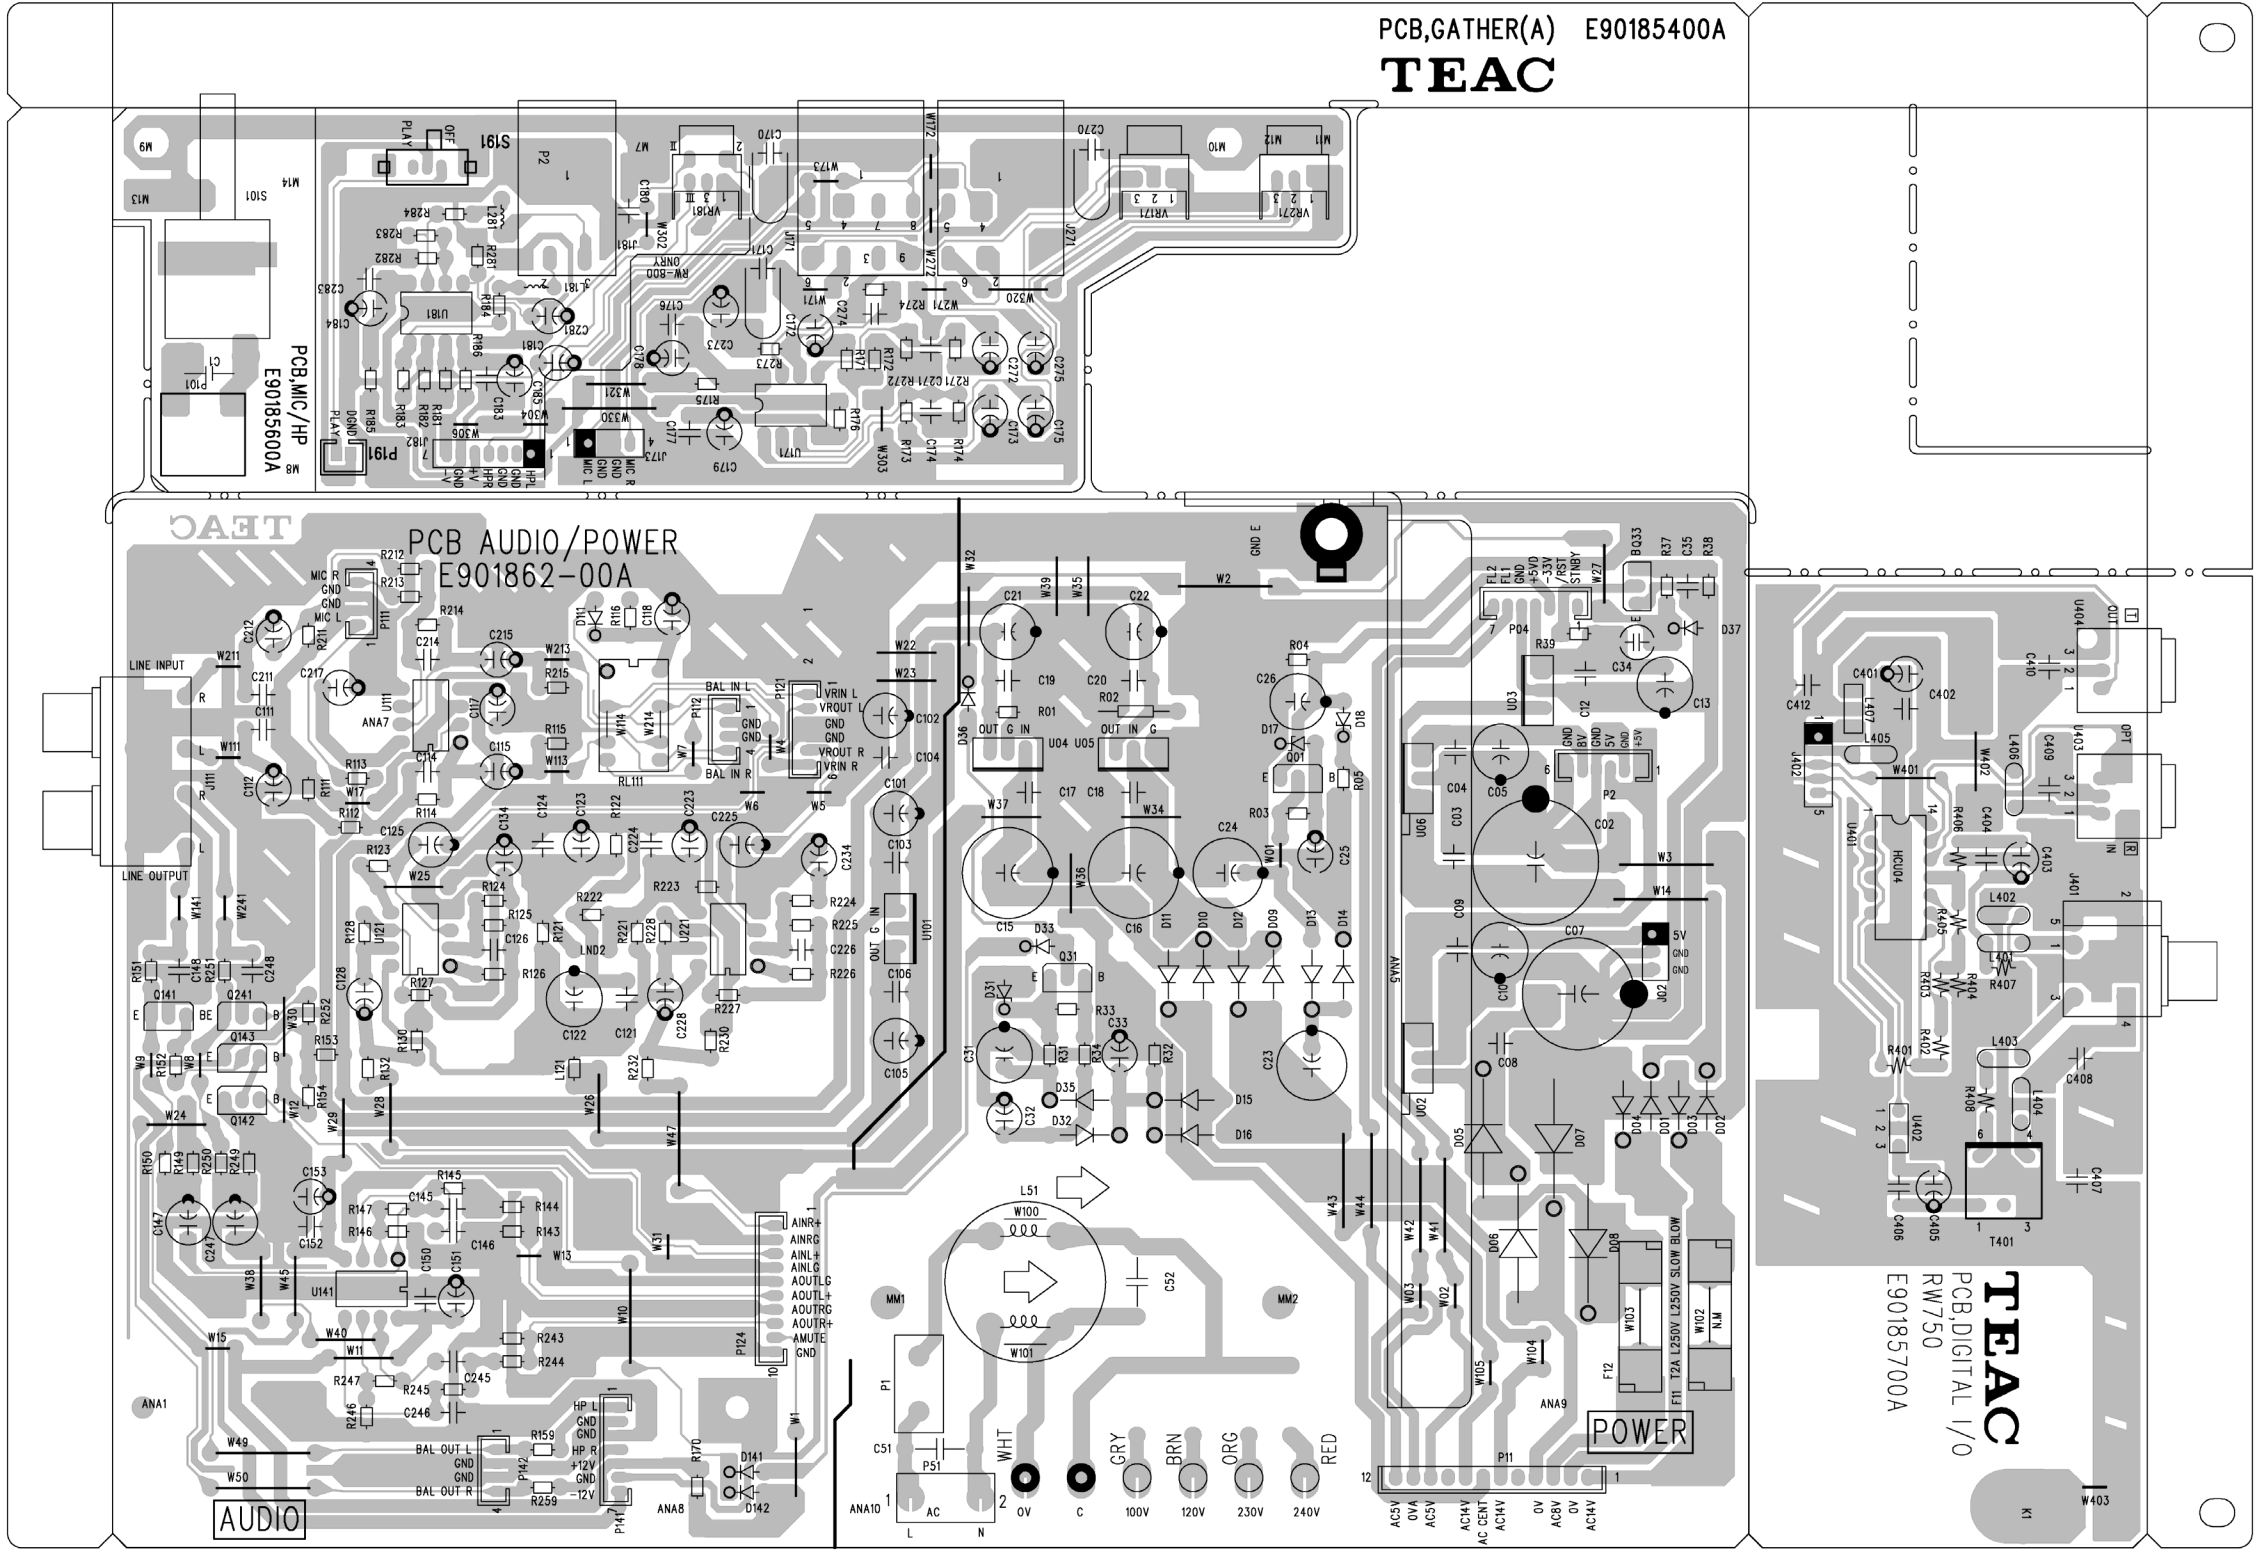

GATHER (B) PCB ASSY (FRONT PCB, VR PCB)

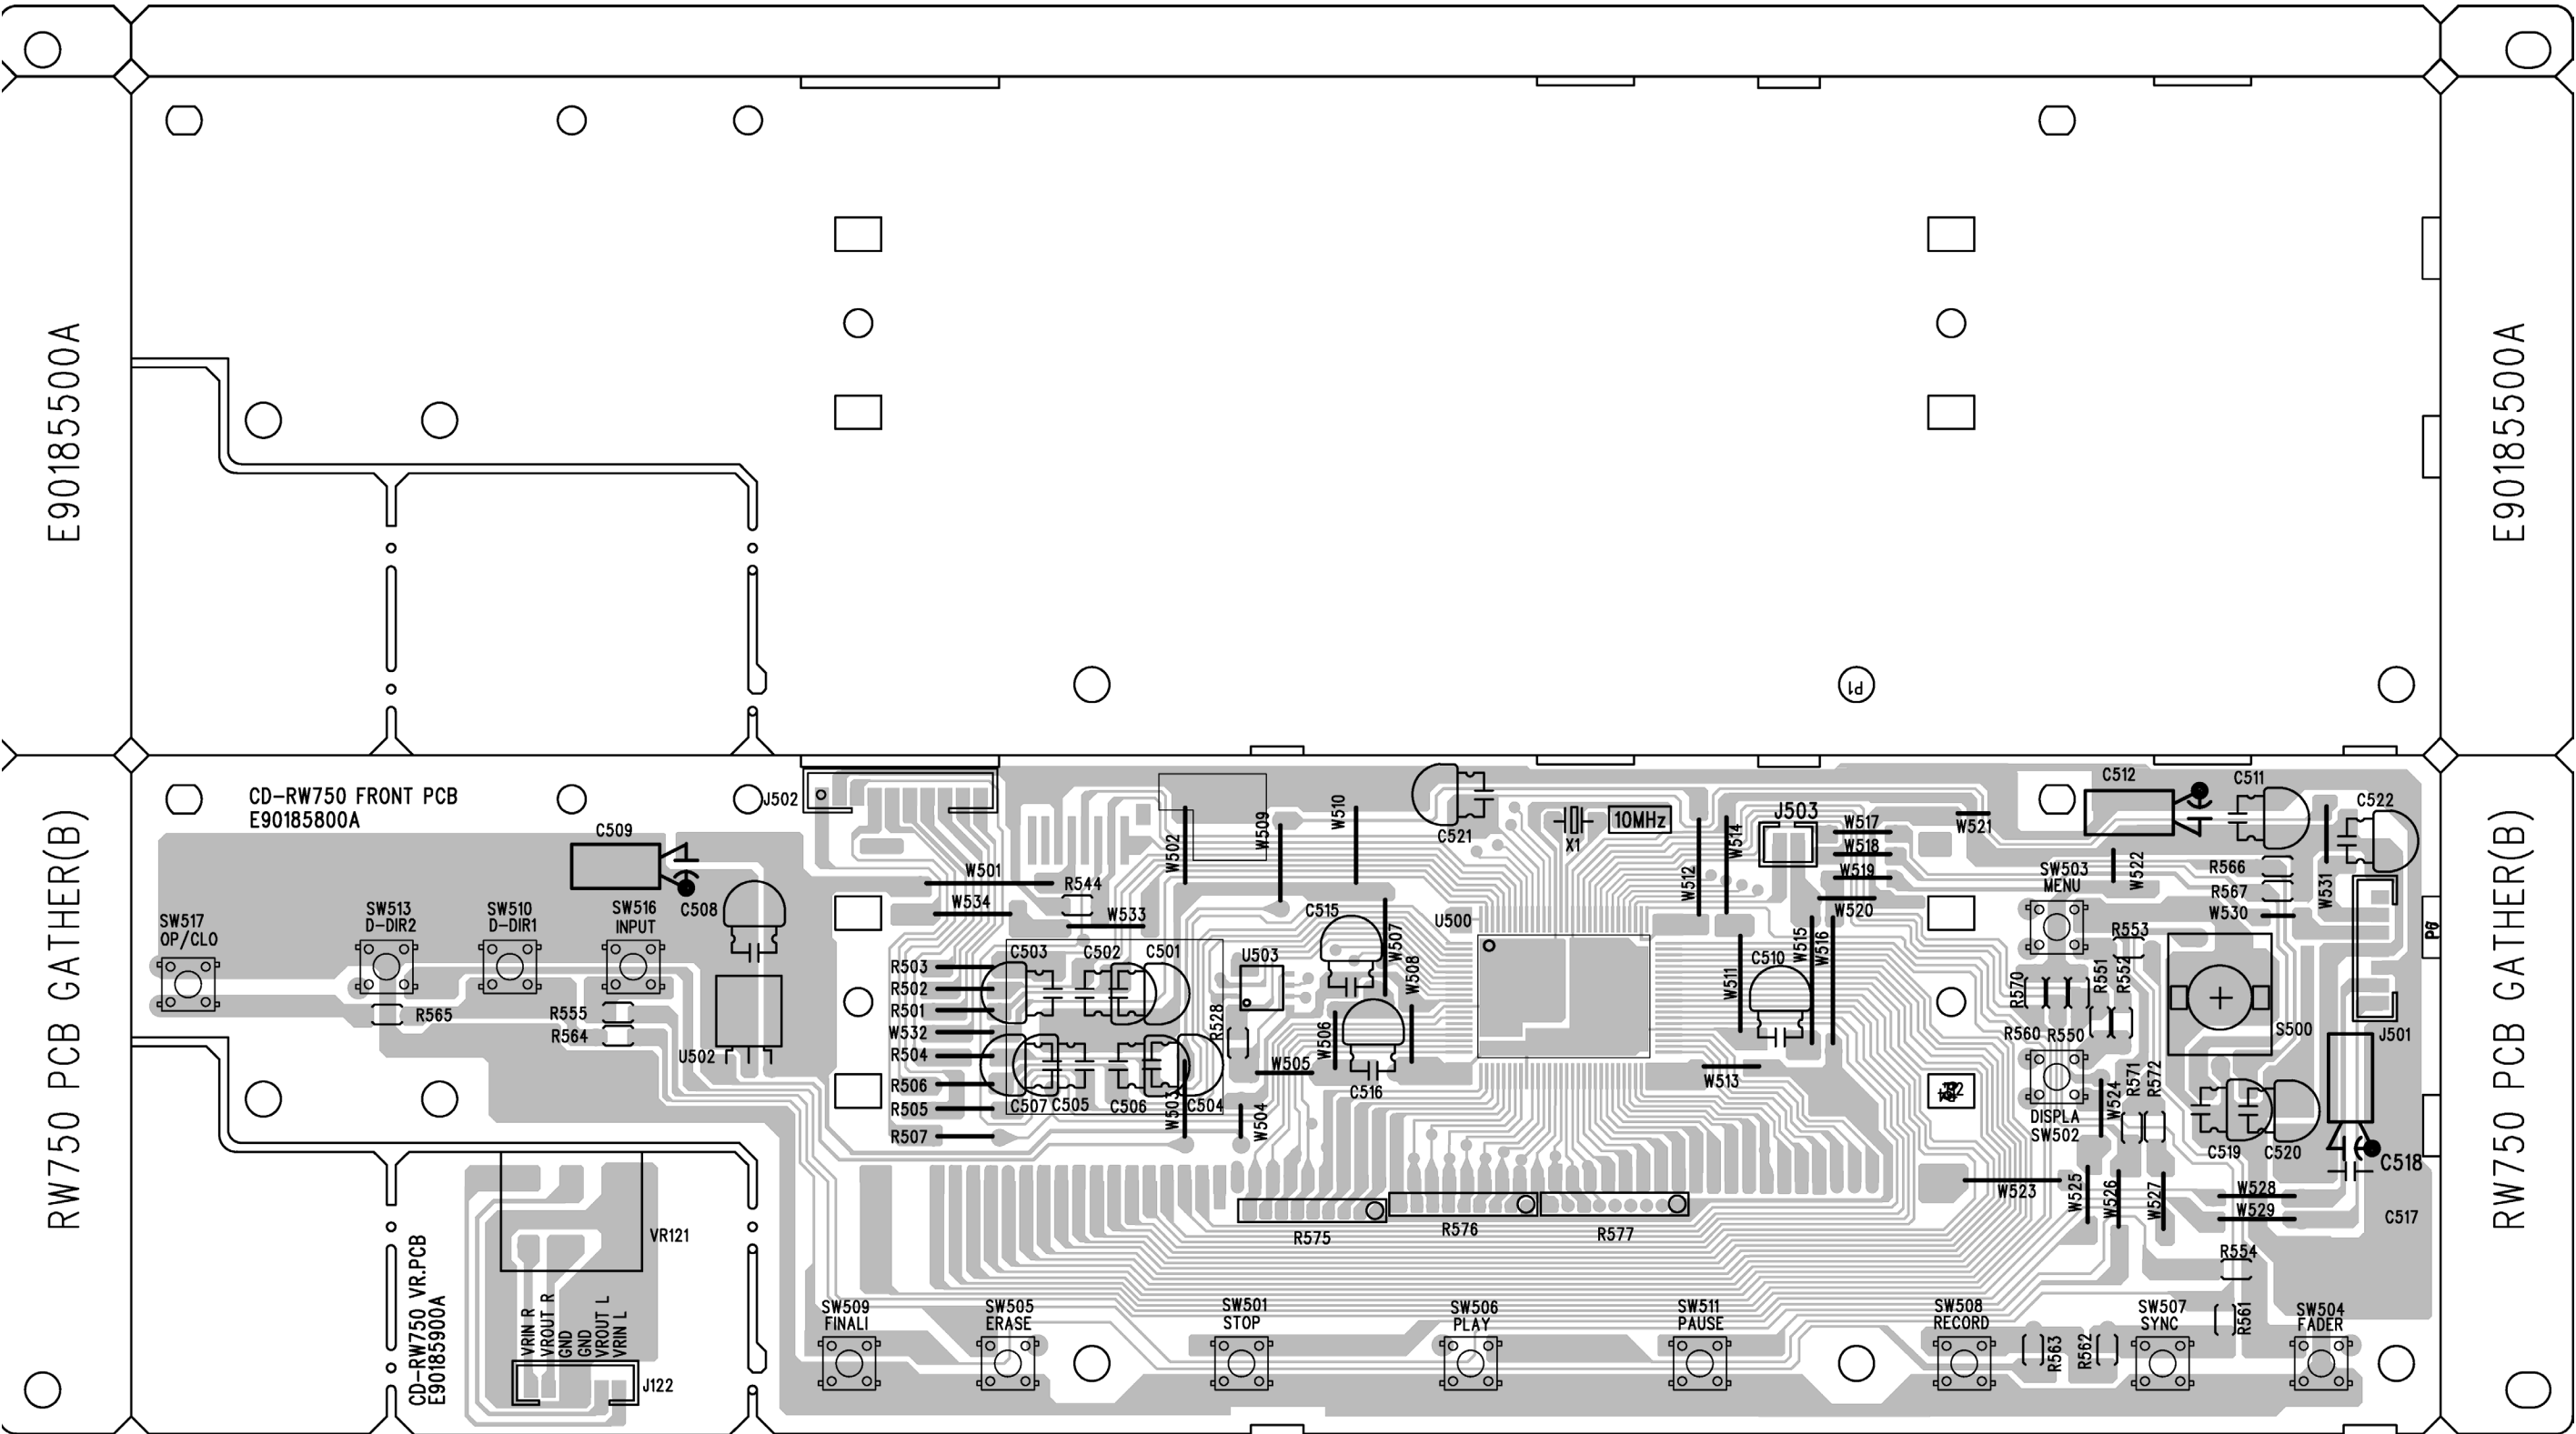

GAHTHR (C) PCB ASSY (CODEC PCB)

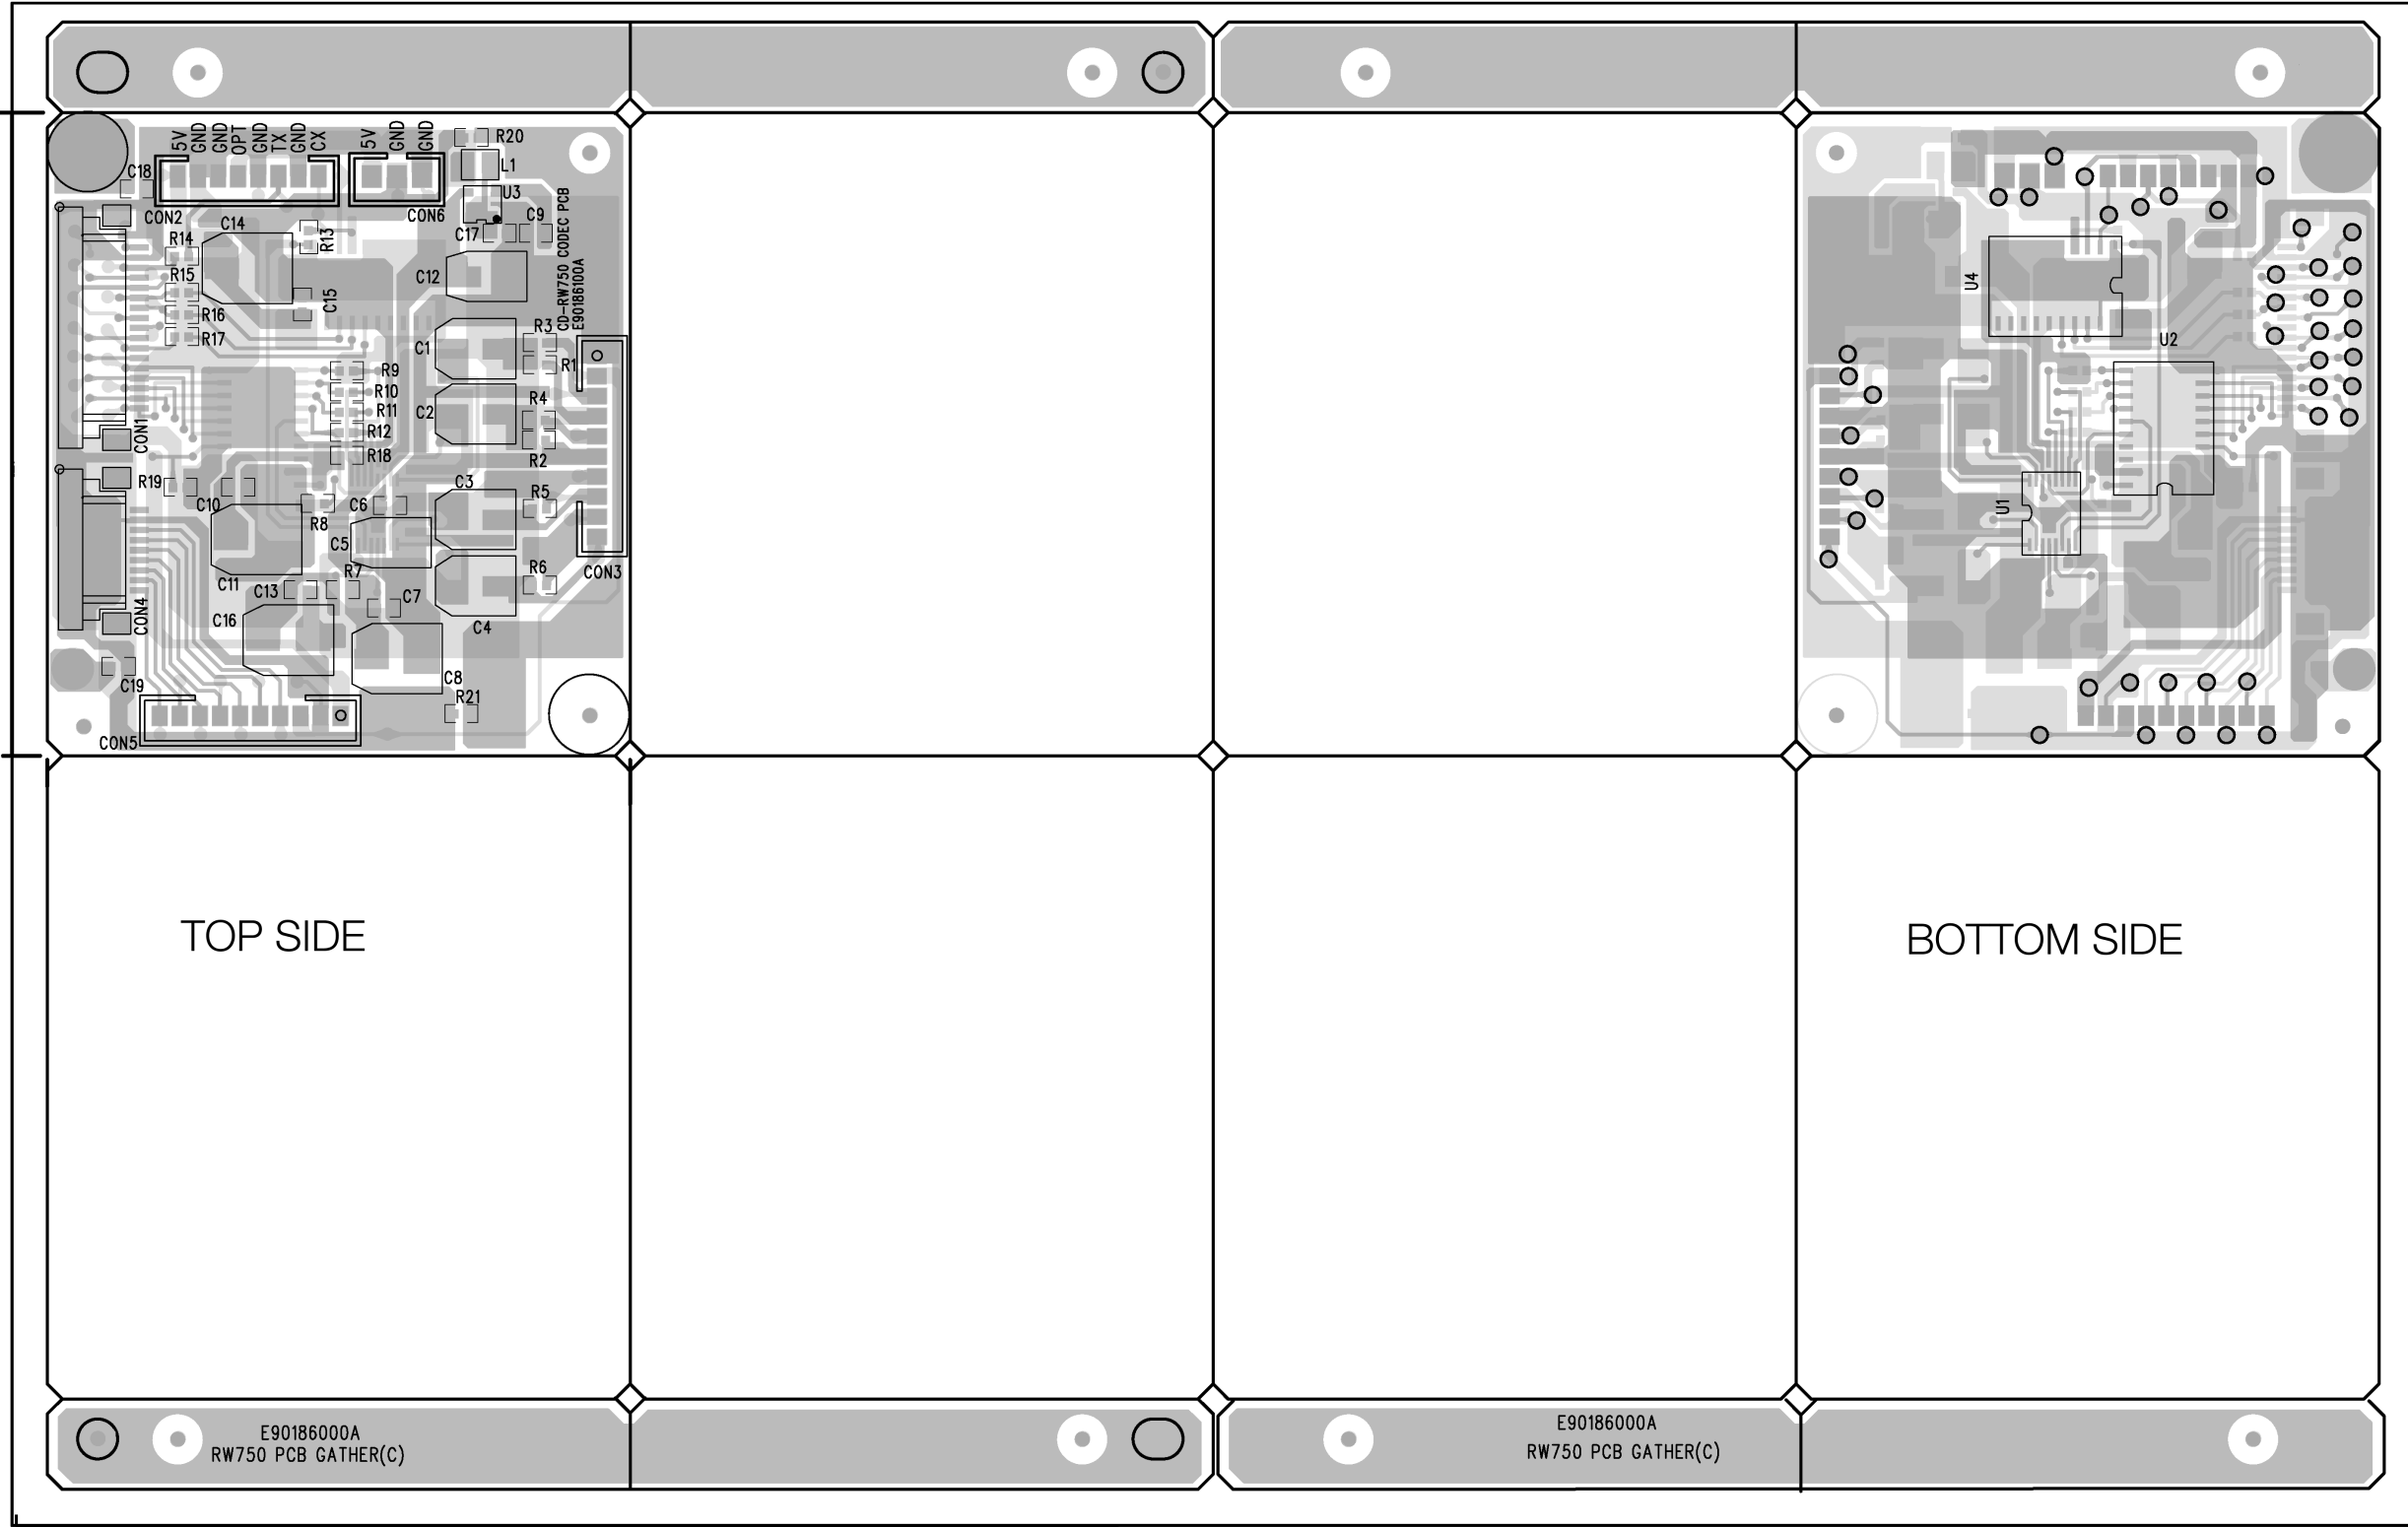

GATHER,(A) PCB ASSY

REF.NO.		PARTS NO.	DESCRIPTION
		* 3E901854-00A	PCB GATHER,(A) RW750
			PCB AUDIO/POWER RW750 PCB,MIC/HP RW750 PCB,DIGITAL I/O RW750
C1	△	3E004300	S.KILLER,CS12-F2GA472MYAS
C02	△	3C012790	CE,35V 4700 UF GS
C03 C04	△	3C011642	CC,YF 50V 0.1UF Z TP
C07	△	C0037740	CE,16V 10000UF M UVY
C08 C09	△	3C011642	CC,YF 50V 0.1UF Z TP
C15 C16	△	3C009820	CE,25V 470 UF GS
C17-C20	△	3C011642	CC,YF 50V 0.1UF Z TP
C23 C24	△	3C000800	CE, 63V 220UF M
C25	△	3C009642	CE,50V 22 UF GS TP
C33	△	3C009642	CE,50V 22 UF GS TP
C51 C52	△	3E004300	S.KILLER,CS12-F2GA472MYAS
D01-D04	△	3S000031	DI, 1N4003 TAPING W= 52MM
D05-D08	△	3S003540	DI,IN5404-M22
D09-D12	△	3S000031	DI, 1N4003 TAPING W= 52MM
D13-D16	△	3S000031	DI, 1N4003 TAPING W= 52MM
D17	△	3S001751	ZDI,MTZJ33B T-77
D18		3S000681	ZDI, MTZJ5.1B T-77
D31		3S000681	ZDI, MTZJ5.1B T-77
D32		3S000031	DI, 1N4003 TAPING W= 52MM
D33		3S000241	DI, 1SS133 T-77
D35		3S000031	DI, 1N4003 TAPING W= 52MM
D36		3S000241	DI, 1SS133 T-77
D37		3S000241	DI, 1SS133 T-77
D141 D142		3S000241	DI, 1SS133 T-77
F11	△	91500290-10	FUSE 2A 250V 0218002
FUSE HOLD		3E006220	FUSE HOLDER 5.0 FUSE
		3E00432-00A	TERMINAL, EARTH PLATE B
J02		E008739-00A	WIRE,AUDIO-CODEC 3P
J111		3E009030	JACK,RJ-1073B-09-0520A
J181		3E002140	JACK, JY-6313-01-030GD
J182		E008741-00A	WIRE,MIC/HP-AUDIO 7P
J401		3E011850	JACK,RJ-1060A-31-0541A
J402		E008743-00A	WIRE,DIGITAL-CODEC 5P-8P
L51	△	3E004290	COIL,1MH/1.5A FKOB160MH16
L121		3E011800	COIL,1.0 UH K
L181 L281		3E011800	COIL,1.0 UH K
L401		3E011820	FB,FBR07HA850SB-00
L403,L404		3E011820	FB,FBR07HA850SB-00
L405		3E011820	FB,FBR07HA850SB-00
L406		3E011810	COIL,47 UH K
L407		3E013130	FILTER,EMT103DT
P1	△	3E034200	CONNECT,2P STRAIGHT
P2		3E022020	CONNECT,6 P A2001WV WHT
P2(W)		E008738-00A	WIRE,POWER-DRIVE 6P
P04		3E022030	CONNECT,7 P A2001WV WHT
P11		3E001240	CONNECT PLUG12P B12B-EH-A
P51	△	3E002170	PIN,TERMINAL LAPPING 2P
P101(W)	△	E008740-00A	WIRE,POWER SW 2P

GATHER,(A) PCB ASSY

REF.NO.		PARTS NO.	DESCRIPTION
P121		3E022020	CONNECT,6 P A2001WV WHT
P124		3E022060	CONNECT,10P A2001WV WHT
P124(W)		E008734-00A	WIRE,CODEC-AUDIO 10P
P141		3E022030	CONNECT,7 P A2001WV WHT
P191		3E010340	CONNCT PLUG B 2B-PH-K-S
Q01		3S000022	TR, 2SA1015GR TP
Q31		3S000022	TR, 2SA1015GR TP
Q33		3S000002	TR, 2SC1815GR TP
Q141 Q241		3S000731	TR, 2SD2144S TP
Q142		3S000291	TR, DTC124ES TP
Q143		3S000301	TR, DTA124ES TP
S101	△	3E013970	SW,SDKLA1-BP1
S191		3E013980	SW,SSSS912N-4C2-1
T401		3E01323-00A	PULS TRANS S-701-001
U02	△	3S000650	IC, NJM7805FA
U03	△	3S000650	IC, NJM7805FA
U04	△	3S002170	IC,NJM7812FA
U05	△	3S003030	IC,NJM7912FA
U06	△	3S002180	IC,NJM7808FA
U101		3S000650	IC, NJM7805FA
U111		3S001700	IC,NJM4580D
U121 U221		3S003010	IC,NJM2100D
U141		3S001700	IC,NJM4580D
U181		3S000850	IC, NJM4560D
U401		3S001660	IC,TC74HCU04AP (DIP)
U402		3E011830	FILTER,EMT470BT
U403		3S007710	IC,GP1FA553RZ
U404		3S007720	IC,GP1FA553TZ
VR181		3R005560	VAR RES,RK09K12A-20KA

GATHER (B) PCB ASSY

REF.NO.	PARTS NO.	DESCRIPTION
	* 3E95824-00A	PCBA,GATHER(B) RW750
		PCB,FRONT RW750
		PCB,VR RW750
FL500	3E01175-10A	DISPLAY,HNAC16MM23 RW(L)
J122	E008742-00A	WIRE,VR-AVDIO 6P
J501	E008735-00A	WIRE,FRONT-AVDIO7P
J502	E008736-00A	WIRE,FRONT-CODEC 10P
J503	E008737-00A	WIRE,FRONT-MIC/HP 2P
R575	3R007510	RES,ARRAY 100KX8
S500	3E007320	SW,ENCODER EC11B15244
SW501	3E029700	SW,TACT SKHHAM2520
SW502	3E029700	SW,TACT SKHHAM2520
SW503	3E029700	SW,TACT SKHHAM2520
SW504	3E029700	SW,TACT SKHHAM2520
SW505	3E029700	SW,TACT SKHHAM2520
SW506	3E029700	SW,TACT SKHHAM2520
SW507	3E029700	SW,TACT SKHHAM2520
SW508	3E029700	SW,TACT SKHHAM2520
SW509	3E029700	SW,TACT SKHHAM2520
SW510	3E029700	SW,TACT SKHHAM2520
SW511	3E029700	SW,TACT SKHHAM2520
SW513	3E029700	SW,TACT SKHHAM2520
SW516	3E029700	SW,TACT SKHHAM2520
SW517	3E029700	SW,TACT SKHHAM2520
U500	S005538-00A	IC,LC876956C-53S4 RW750
U502	E0062220	RMCN RCVR RPM6938-V4
U503	3S033104	IC,BR93L46RF-W
VR121	3R005550	VAR RES,RK1612220-20KA
X1	3E011740	RESONATOR,CST10.00MTW
	M012703-00A	CUSHION,UP 8X8X11
	3M00900-00B	HOLDER FL

GATHER (C) PCB ASSY

REF.NO.	PARTS NO.	DESCRIPTION
	* 3E95825-00A	PCBA,GATHER(C) RW750
		PCB,CODEC RW750
CON1	3E034900	CONNECT,17P FFC SMD 52271
CON2	3E022040	CONNECT,8 P A2001WV WHT
CON3	3E022210	CONNECT,10P A2001WV RED
CON4	3E034820	CONNECT,9P FFC SMD 52271
CON5	3E022060	CONNECT,10P A2001WV WHT
CON6	3E023190	CONNECT,3P A2502WV WHT
L1	3E025724	COIL,10UHLQH3N100K34
U1	3S006594	IC,AK4552VT(16P)
U2	3S007484	IC,SN74LV541ANS
U3	3S007134	IC,NJM2870F33
U4	S0046844	IC,SN74HCT541ANSR

4. INCLUDED ACCESSORIES

付属品

INCLUDED ACCESSORIES

REF. NO.	PARTS NO.	DESCRIPTION	REMARKS
	D008082-00A	OWNERS MNL,JPN RW750 [J]	
	D008083-00A	OWNERS MNL,E RW750 [US/C,K,E,UK,A]	
	D008084-10A	OWNERS MNL,QSG F RW750 [US/C,E]	
	D008084-20A	OWNERS MNL,QSG G RW750 [E]	
	D008112-00A	SHEET,INSERTION RW750	
	D008084-30A	OWNERS MNL,QSG I RW750 [E]	
	D008084-40A	OWNERS MNL,QSG S RW750 [E]	
	D008084-00A	OWNERS MNL,QSG E RW750	
	3E03401-00B	REMOTE CONT UNIT RC-RW750	
	3M00283-00A	ASSY,RACK MOUNT SCREW KIT	