


## Adjustment and Change of Pitch

- Extend awning fully open.
- Loosen the set-screw **2** with a 2.5mm Allen hex key through the opening in the cover plate **1**.
- Take the load off of the adjusting element, carefully lift the articulated arm or front bar of the awning until the round screw **3** can be turned easily.
- Turning the screw to the right (clockwise) increases the pitch (the articulated arm moves downward). Turning to the left (counter-clockwise) reduces the pitch.

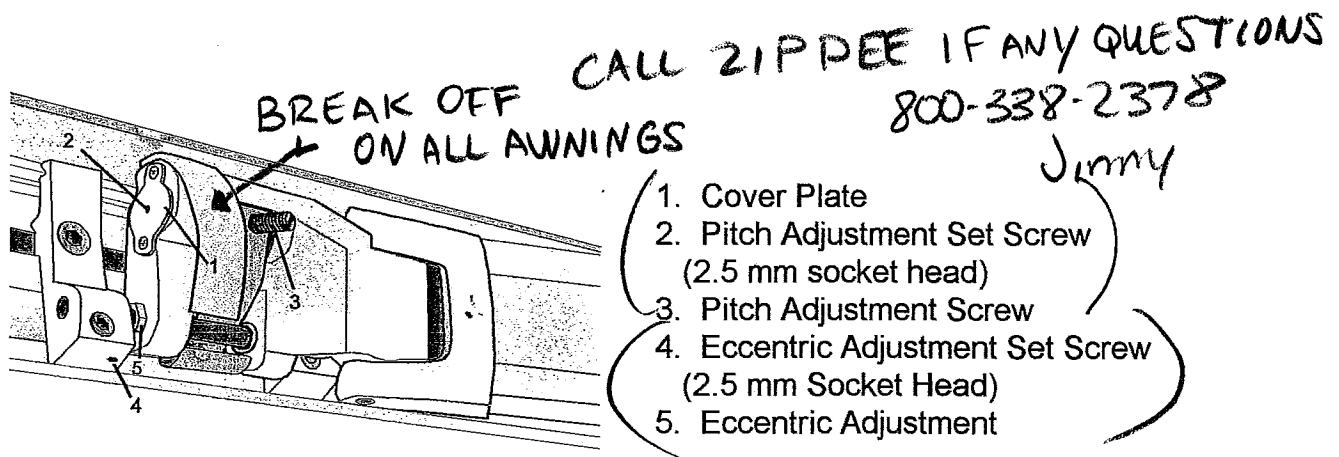

**Note: In order to avoid damage to the Front Cover mounting, the difference of the Pitch between the articulated arms shall not be larger than 10°.**

- Repeat the adjustment procedure on the other articulated arm.
- After the adjustments are completed, tighten the set screw **2** through the opening of the cover plate **1**.