


Speaker Phone

User Manual




1. Package Contents

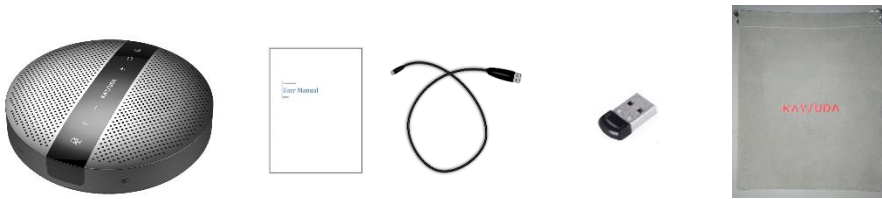


2. Product introduction

SP300 is a Smart Wireless Conference speakerphone. This product can connect with PC, tablet and smartphone via Wireless or USB. With omnidirectional microphone and high communication quality speaker, it receives voice of 360° in long distance. It is small and portable, convenient for both fixed and mobile office.

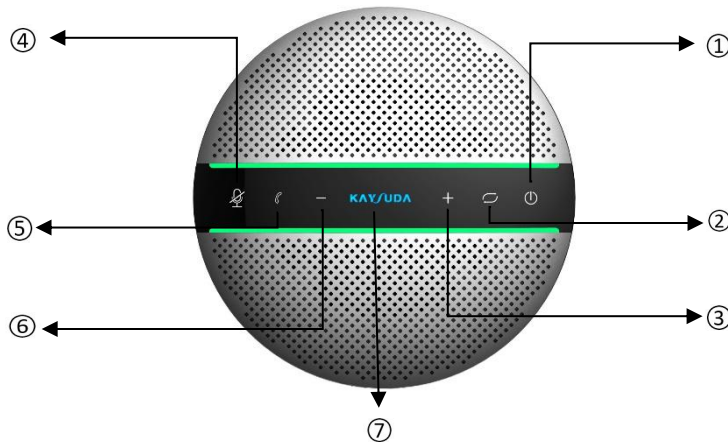

- ① Power on/off button
- ② Wireless pair mode button
- ③ Volume up button
- ④ Microphone mute button
- ⑤ Answering/hanging up/Rejecting call button
- ⑥ Volume down button
- ⑦ logo indicator

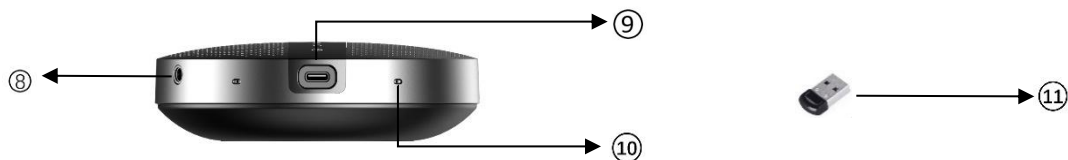

- ⑧ Daisy chain port
- ⑨ Type C port
- ⑩ Microphone
- ⑪ Wireless Connection Dongle

3. Indicator Status

Position	Color	Status
Indicator pipe	Green	Calling/volume+/volume-
Indicator pipe	White	Battery charge remaining
Indicator pipe	Red	Mute
Indicator pipe	Orange flashing	Battery low
Logo Indicator	Purple	Working
Logo Indicator	Blue	Wireless connected
Logo Indicator	Blue flashing	Wireless pairing
Logo Indicator	Red	Charging

4. How to power on/off

Press power button and hold on 3s, the logo indicator LED will be blue and flashing. Press power button and hold on 3s again, the device will power off and all LED will be off.



5. How to charge

Please insert USB cable in the micro USB port of SP300. Then connect USB type A interface with PC's USB port or 5V external charger.

When the device is charging, the logo indicator LED will light up and be red, the LED will be off when it is full charged.




*AC adapters are purchased separately

*only UL certified ITE power supply can be used. The electrical rated output is 5V DC, 1A current is minimum required.

6. How to connect

1. Connect with PC

- Please use USB cable to connect SP300 with target PC;
- The device will start automatically, the power indicator LED will light up and you can use it through the USB mode;
- Please set the Echo Cancelling Speakerphone SPEAKERPHONE SP300 as default output and input audio device.

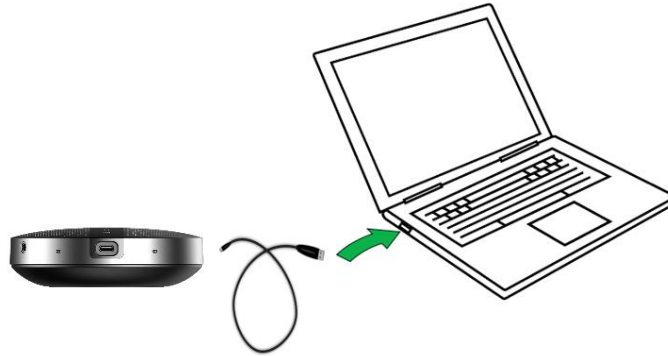

2. Connect to smartphone/PC with Bluetooth

- Press power button and hold on 3s to power on the device, the logo indicator LED will be blue and flashing , SP300 is in the Wireless pair mode, then open the Bluetooth in your smartphone or PC, search the device SPEAKERPHONE SP300, connect to use.


If you are using PC, please set the Speaker(SPEAKERPHONE SP300 Stereo) as default Device and set the Headset(SPEAKERPHONE SP300 Hand-Free AG Audio) as default Communication Device in Playback, set the Headphone microphone (SPEAKERPHONE SP300 Hand-Free AG Audio) as default Communication Device in Recording, make sure to choose Set as Default Device to other device, Don't choose the same device as the communications device.

- When host device has connected with SP300 before, press Wireless pair mode button and hold on 3s, the logo indicator LED will be blue and flahsing, your smartphone/PC will take the initiative to connect back. The logo indicator will keep lighting.



3. Connect to the PC with Wireless dongle

- If you have problem to connect the device with the Bluetooth attached in your PC, please plug Wireless dongle into any USB port of on your host PC and find “Generic Wireless Radio” in device manager under system. If your PC has internal Wireless module, please disable it firstly;
- Press the Wireless Pair mode button and hold on 3s, the logo indicator LED will be blue and flashing, SP300 is in the Wireless pair mode, then open the Bluetooth in your PC, search the device SPEAKERPHONE SP300, connect to use;
- When host device has connected with SP300 before, when power on the device, your smartphone/PC will take the initiative to connect back. The wireless indicator will keep lighting;

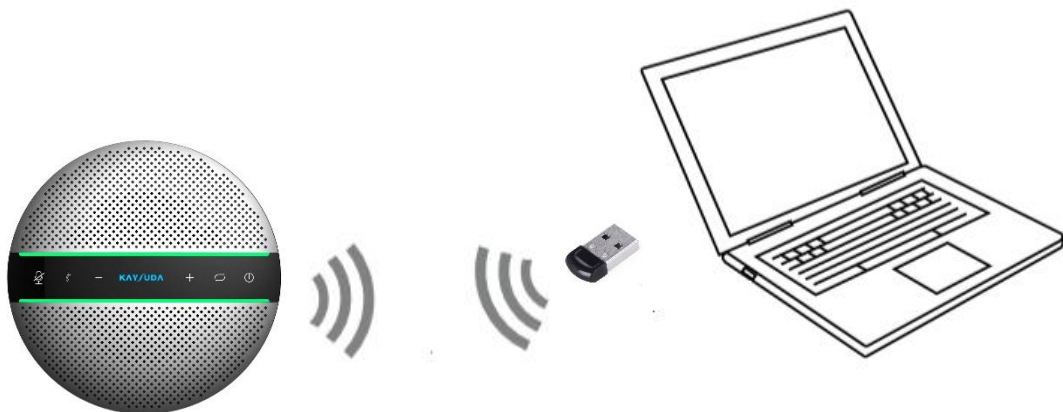

Note:

***How to use the Bluetooth dongle**

Before you use our Bluetooth dongle, please help to check the configuration of your host device

1, If your host device has one Bluetooth module by default, please disable the default Bluetooth module firstly, then insert our Bluetooth dongle into each USB type A port of your host device.



Pic 1.1 Disable default Bluetooth then insert Bluetooth dongle



Pic 1.2 Insert Bluetooth dongle into host device with default Bluetooth directly

2, If your host device has not any Bluetooth module, insert our Bluetooth dongle into each USB type A port of your host device, it will work directly.




Pic 2.1 Insert Bluetooth dongle into host device w/o default Bluetooth directly

* This dongle is compatible with windows 10 not Windows 7/8.1, Mac and Linux. If you still want to use this product, we strongly recommend that you could use USB mode as above mentioned.

*This dongle is optional.


4. Connect to 2 smartphones with Wireless and 1 PC with USB at the same time

- Press power button and hold on 3s, the logo indicator LED will be blue and flashing, use USB cable to connect SP300 with target PC, then Press Wireless Pair mode button and hold on 3s, the logo indicator LED will flash, then SP300 is in the Wireless pair mode, connect up to 2 smartphones to use.
- Among all connections, 2 Bluetooth and 1 USB, the speaker will sound the audio which is sent to the speaker first.

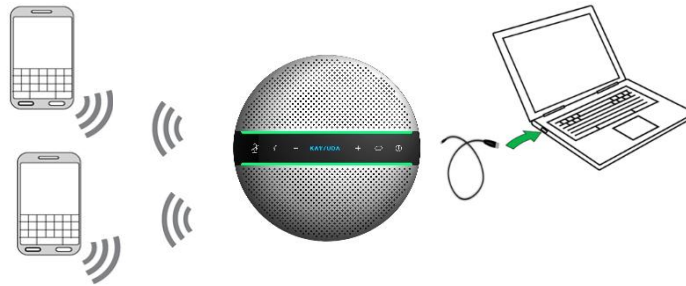

5. Daisy chain mode

- Power on 2 SP300s, then connect two devices with Daisy chain cable.
- connect one of 2 SP300s to your smartphones in wireless mode or connect to your PC in USB mode, Expand the pickup and playback distance to get more conference space.

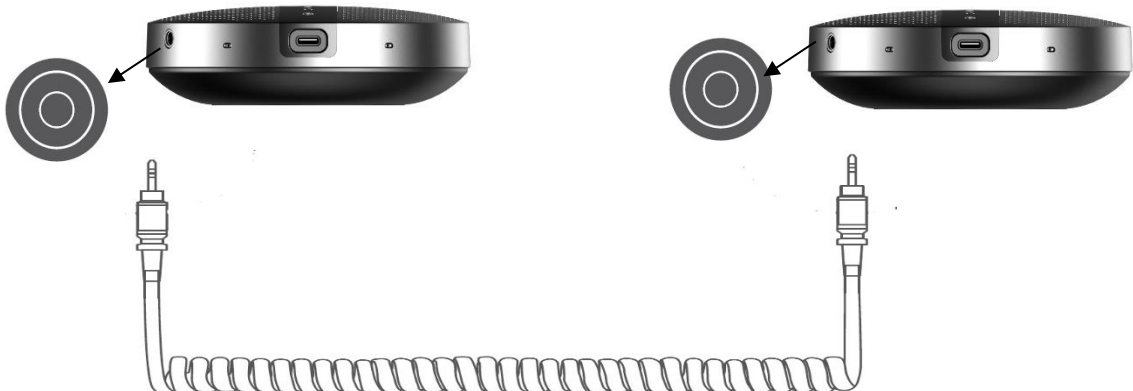

Note:

*When you use it in daisy chain mode,your phone or PC only needs to connect to one of two devices.

7. How to operate

ICON	FUNCTION	OPERATION
	Power on/off	Press and hold(3s) this button until the logo indicator LED will be blue and lighting
	Display battery level	Tap this button
	Mute/unmute	Tap this button
	Turn up the volume	Tap “+” button, you press it twice, the indicator light will increase by one space
	Turn down the volume	Tap “-” button,you press it twice, the indicator light will reduce by one space
	Answer call	Tap this button
	End call	Tap this button
	Reject call	Press and hold(3s) this button
	Connect new Wireless device	Press and hold(3s) this button to connect with a new Wireless device
	disconnect with trusted Wireless device	Press and hold(3s) this button to reconnect/disconnect with trusted Wireless device

8. Product Specification

SPEAKERPHONE SP300	SPECIFICATION
Microphones	6 Omni-directional mics
Speaker	3W, Dynamic, 40mm
SNR	65db
Wireless range	Up to 10m(30ft), Class2
Wireless version	5.0, compatible with 4.2/4.1/4.0/3.0/2.1
Paired devices	Up to 8 trusted devices
Talk time	Up to 18H
Operating temperature	5°C to 40°C (41°F to 104°F)
Storage temperature	-5°C to 60°C (23°F to 140°F)
Wireless audio bandwidth	A2DP, Wide band
Connectivity	USB 2.0 and Wireless connection
Micro USB port	Charging and data connection
Dimensions	D 130mm x H 38.2mm
Weight	290g

Warning

Only could be used in areas below 2000 meters above sea level;
Only applicable to non-tropical climate conditions.

9. Trouble Shooting

Problem or Phenomenon	Possible Reasons	Treatments
Can't power on	Low battery	Charge through adapter
No sound	Host system audio setting doesn't select the right output device; The speaker volume is very low	Selecting the correct output audio source; Turn up the speaker volume.
USB doesn't work	Doesn't use the right USB cable	Please use the original USB cable in the package box.
Can't be charged	Adapter issue or battery is full	Change a new adapter; Tap the power button to check the battery level
Can't connect with Wireless	The Wireless driver of host device doesn't support audio protocol	Update the latest Wireless driver of your host device.
Device not responding	Device crashed	please charge and press Power & Mute buttons at the same time.

10.Warranty

All our products come with one full year warranty from the date of purchase (accessories are out of warranty). It will be out of guarantee if damaged due to incorrectly use or force majeure.

THE FUNCTION DESCRIBED IN THIS MANUAL IS BASED ON TESTING MADE BY OUR FACTORY. SPECIFICATION AND DESIGN MAY BE CHANGED WITHOUT FUTURE NOTICE.

11.Customer support

If you have any problem, please feel free to contact us

Email: customersupport@kaysuda.com

ワイヤレススピーカーフォン ユーザマニュアル




1. パッケージ内容




2. 製品紹介

SP300 はワイヤレススピーカーフォンです。本製品は Wireless または USB ケーブルでパソコン、タブレット及びスマートフォンと接続できます。全指向性高音質マイクと多数人遠隔会話が支持できます。製品自体がコンパクトサイズで、軽くて携帯性に優れており、職場や出張先へ楽に使用することが可能です。

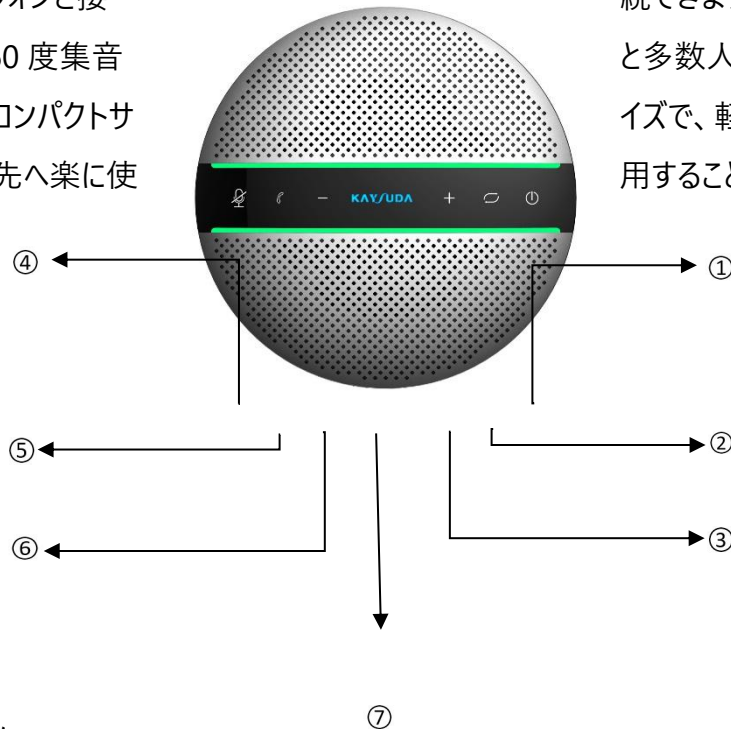

- ①電源ボタン
- ②モード切替ボタン
- ③ボリュームアップボタン
- ④ Microphone mute button
- ⑤ Answering/hanging up/Rejecting call button
- ⑥ Volume down button
- ⑦ logo indicator

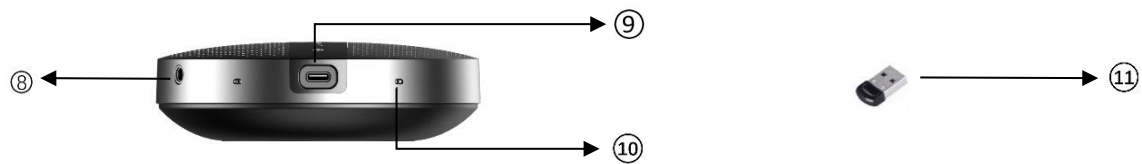

⑧Daisy chain port

⑨Type C port

⑩Microphone


⑪ Wireless Connection Dongle

3. 電源を入れる・切る

電源がオフの状態では本製品の電源ボタンを 3 秒長押しすると、the logo indicator LED will be blue and lighting.、モード切替 LED 指示ランプが青色で点滅し、電源がオンになります。

USB モードを使用する場合、「モード切替ボタン」を一回押します。Wireless モードを使用する場合、ペアリングしたい機器から本製品を検索します。検索方法はご使用の機器によって異なりますので、お手持ちの機器の取扱説明書をご参照ください。ご使用中のデバイスから本製品が見つかったら、デバイス名「SP200」が検索画面に表示されますので、選択して登録します。

電源がオンの状態で電源ボタンを 3 秒長押しすると、LED ランプが消灯し、電源がオフになります。

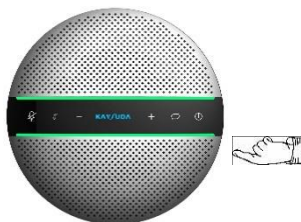

4. 充電方法

まず、付属の USB 充電ケーブルの micro USB コネクタを製品本体の充電用 micro USB コネクタに接続します。次に、USB 充電ケーブルのシリーズ A コネクタを、パソコンの USB ポートまたは、USB AC アダプターに接続します。充電中は LED ランプが赤色に点灯します。充電完了後、LED ランプが消灯します。




* AC アダプターは別途用意する必要があります。

*UL 認定の電源のみ使用可能です。最低限必要な規格は電源出力が DC 5 V、1A の電流となります。

5. 接続方法

1. パソコンと接続する

- 付属の USB ケーブルを使って、SP200 をパソコンと接続します。
- 電源がオフの状態ですべて電源ボタンを 3 秒長押しすると、電源をオンになります。Wireless LED ランプが点滅し、「モード切替ボタン」を一回押して、USB モードに切り替えます。
- パソコンのシステム上で、再生及び録音デバイスを SP200 に設定します。

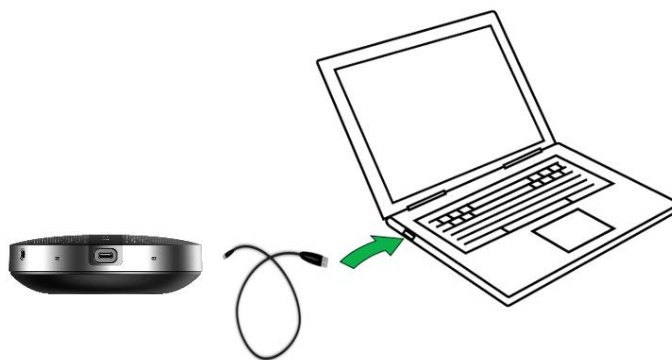

2. Wireless 機能でデバイスと接続する

- 電源がオフの状態では電源ボタンを 3 秒長押しすると、電源をオンになります。電源指示ランプが白色で点灯し、モード切替 LED 指示ランプが青色で点滅し、Wireless モードになります。
- **Wireless** モードで、デバイスと本製品と接続しているとき、モード切替指示ランプは点滅ではなく、青色で点灯している状態です。
- 再び電源ボタンを 3 秒長押しすると、電源はオフになります。モード切替指示ランプは消灯します。



3. Wireless 機能でパソコンと接続する

- まず Wireless USB アダプタをパソコンの USB ポートに差し込みます。差し込むと、システムのデバイスマネージャーで「Generic Wireless Radio」と表示されます。もしパソコンに Wireless が内蔵されている場合、まずそれを無効にしてください。
- 電源がオフの状態では電源ボタンを 3 秒長押しすると、電源をオンになります。電源指示ランプが白色で点灯し、モード切替 LED 指示ランプが青色で点滅し、Wireless モードになります。
- パソコンと本製品と接続されている場合、モード切替 LED 指示ランプは点滅の状態ではなく、点灯の状態となります。
- 再び電源ボタンを 3 秒長押しすると、電源はオフになります。モード切替指示ランプは消灯します。



注意:

* Wireless USB アダプタを使用する時は、Wireless USB アダプタが他のデバイスとの接続をされていることをオフになっていることをご確認ください。

* Wireless USB アダプタの使用は、Windows 10 の環境と互換性があり、Windows 7/8.1、 Mac および Linux OS 動作しない可能性があるため、本製品を引き続き利用したい場合、Windows 7/8.1、 Mac および Linux OS での使用は、USB モードを使用することを推奨します。

* Wireless USB アダプタはパッケージの中に付属しています。

アイコン	機能	操作方法
	電源を入れる/切る	電源指示ランプが白色で点灯するまで 3 秒以上長押しします
	電池残量を表示する	このボタンを押します
	ミュート/ミュート解除	このボタンを押します
	音量を上げる	"+" ボタンを押します
	音量を下げる	"-" ボタンを押します
	電話を受ける	このボタンを押します
	電話を切る	このボタンを押します
	着信拒否	このボタンを 3 秒長押しします

①	使用モードを切り替える	このボタンを押すと、3 秒待てばモードが切り替えられる
	新しい Wireless デバイスに接続する	このボタンを 3 秒以上長押しして新しい Wireless デバイスに接続します
	Wireless デバイスとの再接続/切断	このボタンを 3 秒以上長押しして Wireless デバイスに再接続/切断します

6. 操作方法

7. 製品仕様

製品型番	SPEAKERPHONE SP200
マイク	Omni-directional
スピーカー	3W, Dynamic, 40mm
伝送距離	最大半径約 10m(障害物がない場合), Class2
Wireless 仕様	4.2, compatible with 4.1/4.0/3.0/2.1
記憶可能なペアリング 機器台数	最大 8 台
連続通話時間	最大 6 時間



動作時温度	5°C to 40°C (41°F to 104°F)
保管時温度	-5°C to 60°C (23°F to 140°F)
対応プロファイル	A2DP, Wide band
接続性	USB 2.0 及び Wireless 接続
Micro USB ポート	充電及びデータ接続
外形寸法（幅×高さ）	約 121mm x 34.7mm
質量	約 200g（本体のみ）

注意

- ・海拔 2000 メートル以下の地域でのみ使用できます。
- ・熱帯以外の気候条件にのみ適用されます。
- ・本製品に対して、すべての Wireless 機器の動作を保証するものではありません。

8. よくある質問

問題または異常現象	エラーの理由	処置方法
電源が入らない	バッテリーの残量が少ないです。	バッテリーを充電してください。
音声がでない	システム上のオーディオでは、出力デバイスが正しく選択されていません。また、スピーカーの音量が小さいです。	出力デバイスが正しく設定してください。 製品本体のボリュームアップボタンを押して、音量を調整してください。
USB が機能しない	製品に適用できない USB ケーブルを使用しました。	付属品の USB ケーブルを使用してください。
バッテリーが充電できない	アダプターの問題またはバッテリーが充電完了です。	新しいアダプターを交換してください; 電源ボタンをタップし、電池残量を確認してください。
Wireless に接続できない	ご使用中のデバイスの Wireless はオーディオプロトコルをサポートしていません。	ご使用中のデバイスの Wireless バージョンをアップデートしてください。

9. 保証

製品は購入日より 1 年間の保証が付いています。保証対象は本製品の本体部分のみとさせていただきます、ソフトウェア、その他の添付物は保証の対象とはなりません。ただし、お買い上げ後の輸送、移動時の落下や衝撃等、お取り扱いが適当でないために生じた故障、損傷または、地震、火事、落雷、風水害、その他の天変地異、公害、異常電圧などの外的要因により故障した場合は保証対象外となります。

このマニュアルに記載されている機能は、当社の工場で行われたテストに基づいています。仕様およびデザインは将来予告なしに変更されることがございますので、ご理解ください。

10. カスタマーサポート

ご不明な点等がございましたら、お気軽にお問い合わせください。

Email: **customersupport@kaysuda.com**