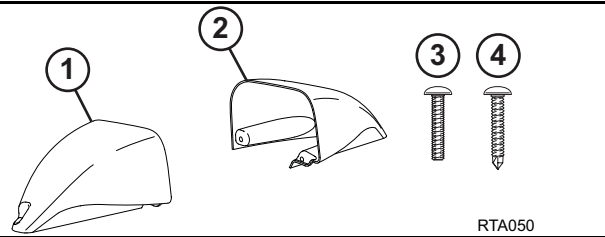


**APEX BULLET ENDCAPS**

The Apex Bullet Endcaps are designed to provide an aerodynamic contour to the ends of the Apex box awning.

**COMPONENT CHECK LIST**

		COMPONENT	QTY
	1	Endcap, LH	
	2	Endcap, RH	
	3	Screw, Phillips Truss Head	#10 x 1 4
	4	Screw, PPH, Self Drilling	#10 x 1 1/4 2

1. Inspect the endcaps. The mounting hole locations are marked with a dimple. Drill out the dimple using a 7/32" drill bit.
2. Position the endcap on the end of the awning. Align the mounting holes with the threaded holes in the endplate and attach using two (2) each #10 x 1 phillips truss head screws.
3. Attach the endcap to the coach roof using one (1) #10 x 1 1/4 self-drilling screw.

