

Adding a "Shim" to Fabric


New Century

1. Determine which side of the awning needs shim material. The end that is not closing all the way is the side the shim will be applied to.
2. Use the remote to open the awning completely.



Step 2

3. Use the hand crank to let fabric out completely. The fabric will hang loose on the arms of the awning. **Keep opening until the fabric begins to retract again.**

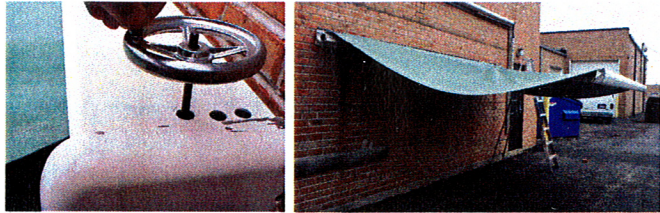

Step 3

4. Use about 6" of duct tape folded over to create your shim. Note: **Do NOT** fold the tape in half, leave part of the sticky side exposed to stick to the fabric.



Step 4

5. Stick your shim to the fabric on the end seam and as close to the housing as possible.
6. Use your hand to guide the shim inside the housing and press the close button on your remote.



Step 5