


Bulletin 1494G/GX/GY Fusible/Non-Fusible Enclosed Disconnect Switches Series 1 Repair Parts

Repair Parts for Enclosed Fusible Disconnect Switches

Disconnect Switches, Trailer Fuse Blocks, Lugs, and Fuse Clips

Fuse clip kits contain a set of six fuse clips and mounting hardware.

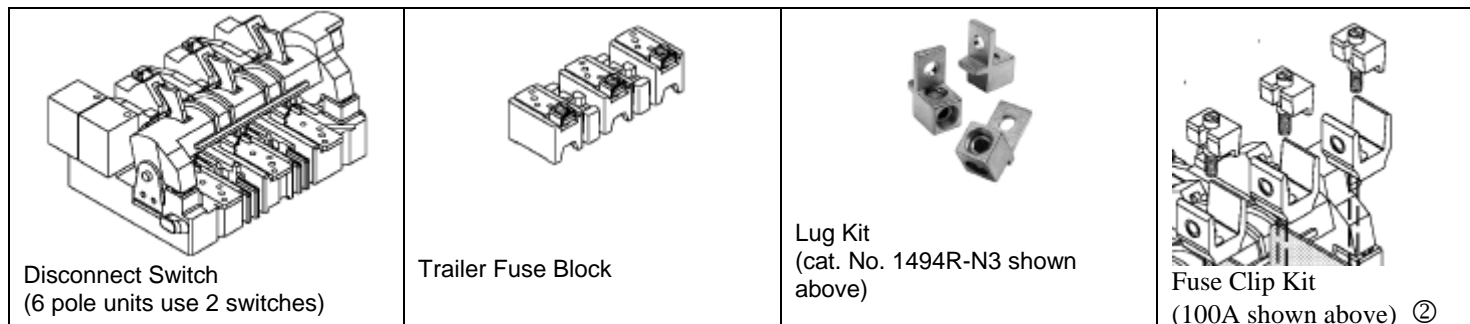


NEMA Size	Line Voltage	Fuse Clip Rating (A)	Catalog Number of Disconnect	Disconnect Switch less Lugs, Fuse Clips and Phase Barriers	Trailer Fuse Block less Lugs, Fuse Clips and Phase Barriers	Lug Kit (1 kit contains 3 lugs)	Fuse Clip Kit Class R (Option R)	Fuse Clip Kit Class H (Option H)	Fuse Clip Kit Class J (Option J)
30	208-240	30	1494G(X,Y)-BF 1494G(X,Y)-BC	Not Available	1494F-FS30	①	1401-N50	1401-N41	1401-N42
30	208-240	30	1494G(X,Y)-BS*	Not Available	1494F-FS30	①	1401-N50	1401-N41	1401-N42
30	480-600	30	1494G(X,Y)-BF 1494G(X,Y)-BC	Not Available	1494F-FS30	①	1401-N51	1401-N42	1401-N42
30	480-600	30	1494G(X,Y)-BS	Not Available	1494F-FS30	①	1401-N51	1401-N42	1401-N42
60	208-240	60	1494G(X,Y)-CF 1494G(X,Y)-CC	Not Available	1494F-FS60	1494R-N1	1401-N51	1401-N42	1401-N43
60	208-240	60	1494G(X,Y)-CS*	Not Available	1494F-FS60	1494R-N1	1401-N51	1401-N42	1401-N42
60	480-600	60	1494G(X,Y)-CF 1494G(X,Y)-CC	Not Available	1494F-FS60	1494R-N1	1401-N52	1401-N43	1401-N43
60	480-600	60	1494G(X,Y)-CS*	Not Available	1494F-FS60	1494R-N1	1401-N52	1401-N43	1401-N43
100	208-600	100	1494G(X,Y)-DF 1494G(X,Y)-DC	Not Available	1494F-FS100	1494R-N2	1401-N53	1401-N44	1401-N44
100	208-600	100	1494G(X,Y)-DS*	Not Available	1494F-FS100	1494R-N2	1401-N53	1401-N44	1401-N44
200	208-600	200	1494G-E*	1494F-D200	1494F-FS200	1494R-N3	1401-N54	1401-N45	1401-N45
400	All	400	1494G-F*	1494F-D400	1494F-FS400	1494R-N15	1401-N55	1401-N46	1401-N46
600	All	600	1494G-G*	1494V-DS600	1494V-FS600 ④	1494R-N10 ⑤	Not Available	40115-426-51 ③	40115-426-51 ③

- ① All terminals of the 30 A switches are furnished with self-lifting pressure plate connectors as standard. To replace one of these terminals, order part number WX225492.
- ② Each fuse clip kit contains six fuse clips and mounting hardware.
- ③ Class H fuse clip. Part number contains one fuse clip and mounting hardware. Class J fuses bolt directly to the disconnect switch (fuse clip is not required).
- ④ Cat. No. 1494V-FS600 is for Class J fuses. For class H fuses, order (3) of cat. no. 1491-N621. For Class R fuses, order (3) of cat. no. 1491-R621. Class H and R bulletin 1491 fuse blocks will require lug kit 1494R-N11 (qty of 2 kits required). Each lug kit contains 3 lugs (accommodates 2 of #1/0 AWG...350MCM wire).
- ⑤ Each lug kit contains 3 lugs (accommodates 2 of #1/0 AWG...350MCM wire).

Bulletin 1494G/GX/GY Fusible/Non-Fusible Enclosed Disconnect Switches Series 1 Repair Parts

Phase Barriers and Line Terminal Guard for Fusible Disconnect Switches and Trailer Fuse Block Assemblies

One phase barrier catalog number contains 2 barriers; one for the disconnect switch, one for the trailer fuse block.

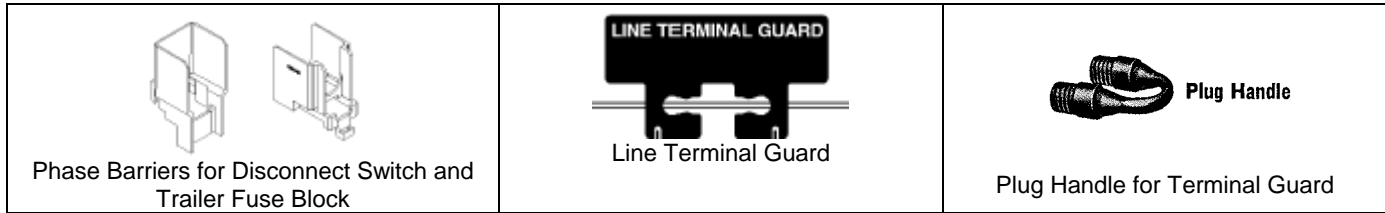

Size	Catalog Number of Disconnect Switch	Phase Barriers for Disconnect Switch and Trailer Fuse Block	Line Terminal Guard	Plug Handle for Terminal Guard
30	1494G(X,Y)-B*	1494F-PH2	W4039280151 ①	WF26083
60	1494G(X,Y)-C*	1494F-PH2	W4039280151 ①	WF26083
100	1494G(X,Y)-D*	1494F-PH3	W4039280151 ①	WF26083
200	1494G-E*	1494F-PH4	W4039280152 ①	WF26087
400	1494G-F*	1494F-PH4	W4039280153 ①	WF26088
600	1494G-G*	W4039845656	W4039930351	Not Used


① Part number includes both the line terminal guard and the plug handle.

Fuse Clip Kit Repair Parts (Class H, J fuse clips)

Fuse Clip Rating (A)	Fuse Clip Part No.	Clamp Screw (Item 1)	Clamp Block (Item 3)
100	1401-N44 ①	Not Available	W4002310802
200	1401-N45 ①	W4002311004	W4002310802
400	1401-N46 ①	W4002311102	W4002310902
600	40115-426-51 ②	W4002311102	W4002310902

① Contains six fuse clips and mounting hardware.

② Class H fuse clip. Part number contains one fuse clip and mounting hardware.

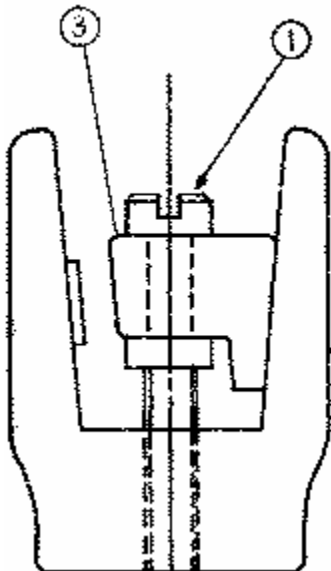

Bulletin 1494G/GX/GY Fusible/Non-Fusible Enclosed Disconnect Switches Series 1 Repair Parts

Renewal Parts for Enclosed Non-Fusible Disconnect Switches

Disconnect Switches, Line Terminal Guard, and Lugs



Size	Line Voltage	Disconnect Switch Catalog Number	Non-Fusible Disconnect Switch less Lugs	Lug Kit (1 kit contains 3 lugs)	Line Terminal Guard
30	All	1494G(X,Y)-BF* 1494G(X,Y)-BC*	Not Available	①	W4039280151 ③
30	All	1494G(X,Y)-BS*	Not Available	①	W4039280151 ③
60	All	1494G(X,Y)-CF* 1494G(X,Y)-CC*	Not Available	1494R-N1 (2 req'd)	W4039280151 ③
60	All	1494G(X,Y)-CS*	Not Available	1494R-N1 (2 req'd)	W4039280151 ③
100	All	1494G(X,Y)-DF* 1494G(X,Y)-DC*	Not Available	1494R-N2 (2 req'd)	W4039280151 ③
100	All	1494G(X,Y)-DS*	Not Available	1494R-N2 (2 req'd)	W4039280151 ③
200	All	1494G-EF* 1494G-EC*	1494F-D200	1494R-N3 (2 req'd)	W4039280152 ③
400	All	1494G-FF* 1494G-FC	1494V-DS400	1494R-N14 (2 req'd)	W4039280153 ③
600	All	1494G-GF* 1494G-GC	1494V-DS600	1494R-N10 ② (2 req'd)	W4039930351

① All terminals of the 30A switches are furnished with self-lifting pressure plate connectors as standard. To replace one of these terminals, order part number WX225492.

② Each lug kit contains 3 lugs (accommodates 2 of #1/0 AWG...350MCM wire).

③ Part number includes both the line terminal guard and the plug handle.

Bulletin 1494G/GX/GY Fusible/Non-Fusible Enclosed Disconnect Switches Series 1 Repair Parts




Renewal Parts for Enclosed Fusible and Non-Fusible Disconnect Switches

Handle and Mechanism Repair Parts

Operating Handle part numbers include two bags of hardware which include the defeater lever, door cover catch, and handle gasket.

A metal handle is available separately as catalog number 1494F-M1.

Operating mechanisms for six pole switches are not available.

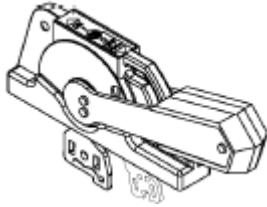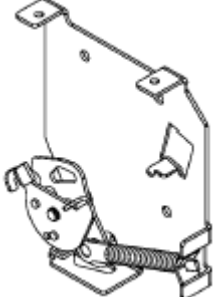		
Operating Handle	Mechanism for Operating Handle (for 3 pole units only)	Enclosure Conduit Hub

NEMA Sizes	Catalog Number of Disconnect	Enclosure NEMA Type	Operating Handle	Mechanism for Operating Handle	Enclosure Conduit Hubs
30 - 60	1494G(X,Y)-BF*, -CF 1494G(X,Y)-BC*, -CC 1494G(X,Y)-BS*, -CS	3R/4/12 4/4X (stainless steel) 4X (non-metallic)	1494F-P1 1494F-S1 Z-35588 ①	Not Available	(2) 1490-N10 (1) 1490-N9
100	1494G(X,Y)-DF* 1494G(X,Y)-DC* 1494G(X,Y)-DS*	3R/4/12 4/4X (stainless steel) 4X (non-metallic)	1494F-P1 1494F-S1 Not Available ②	Not Available	(2) 1490-N5; (1) 1490-N9
200	1494G-EF* 1494G-EC*	3R/4/12 4/4X (stainless steel)	1494F-P1 1494F-S1	1494F-MS200 1494F-MS200	(2) 1490-N6; (1) 1490-N7
400	1494G-FF* 1494G-FC	3R/4/12 4/4X (stainless steel)	1494F-M2 1494F-S2	1494F-MS400	(2) 1490-N8
600	1494G-GF* 1494G-GC	3R/4/12 4/4X (stainless steel)	1494V-H2 1494V-W2	1494V-RB1 1494V-RB1	(2) 1490-N8

① Handle only, less mechanism is not available as a repair part.

② Handle only, less mechanism is not available as a repair part.