
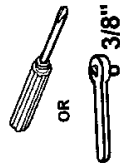


## 1 LEVELERS

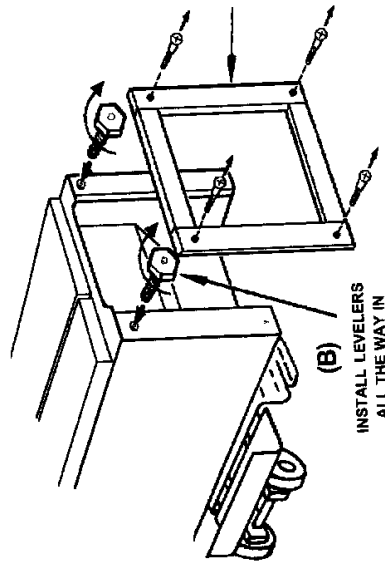


**NOTE: TO REMOVE DOORS, SEE OTHER SIDE.**


## 3 REFRIGERATOR LEVELING

**MOVE THE REFRIGERATOR TO ITS INSIDE LOCATION.**


- (1) Level the cabinet. Open and close the doors. Re-level the cabinet.
- (2) If the cabinet rolls, extend the levelers.
- (3) If the doors do not close easily, raise the front of the cabinet.
- (4) Plywood shims may be used to provide a level base.

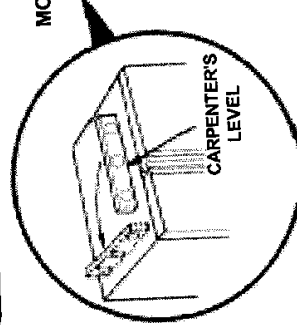

## WHEEL ADJUSTMENTS

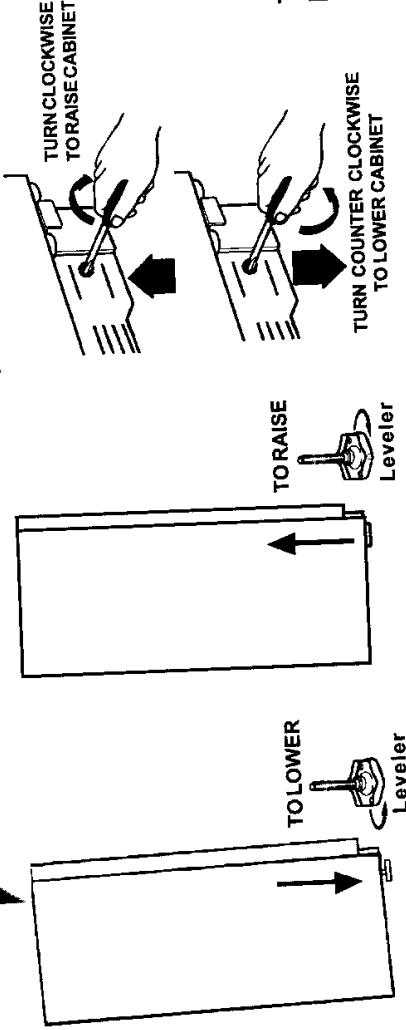


## 2 HANDLING

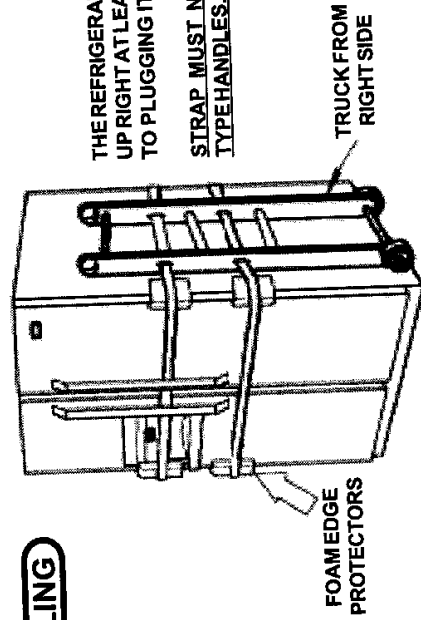

**THEREFRIERATOR SHOULD REMAIN UP RIGHT AT LEAST 30 MINUTES PRIOR TO PLUGGING IT IN.**


## 4 DOOR ADJUSTMENT (IF NEEDED)

**REMOVING THE HINGE COVERS IF EQUIPPED**

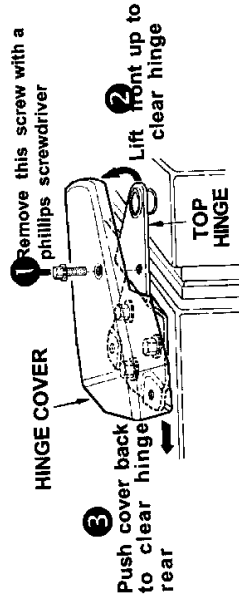

**(Reverse procedure when reattaching covers)**

**Loosen top hinge screws**

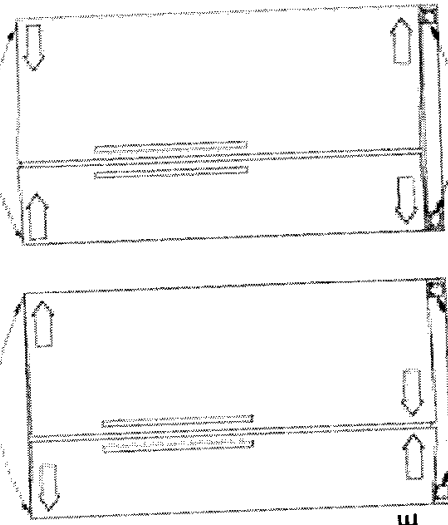


**Loosen bottom screws. Slide door(s) INWARD.**

**Loosen bottom screws. Slide door(s) OUTWARD.**

When hinge screws are installed, tighten them until they are just snug. Then turn another 1/4 turn.

Remove the bottom hinge covers by squeezing bottom and top and pulling them toward you.

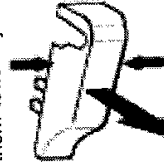


**TO LOWER DOOR(S)**

NOTE: DO NOT  
PULL ON WIRES

PULL APART


1

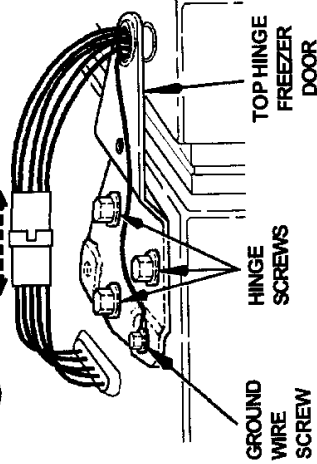


## DOOR REMOVAL (If required)

5/16"


5

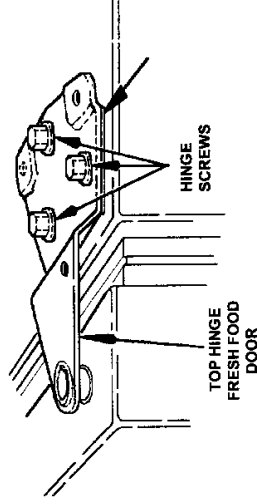

2

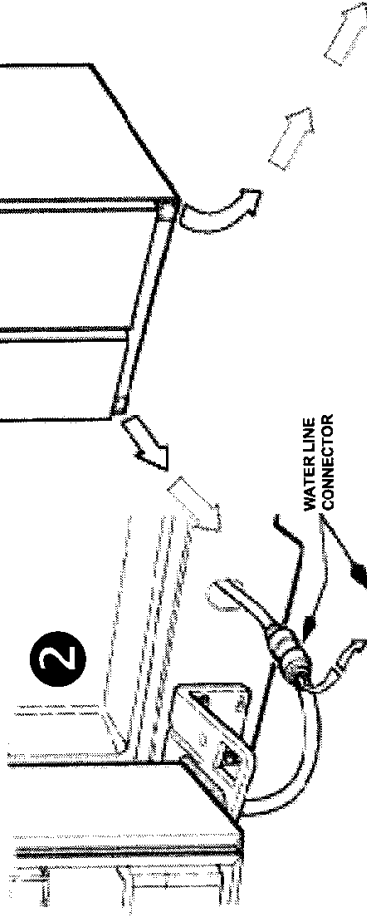

Lift the door up enough to allow  
another adult to guide the water line  
through the door hinge pin. Rest  
door on a non-scratching surface.

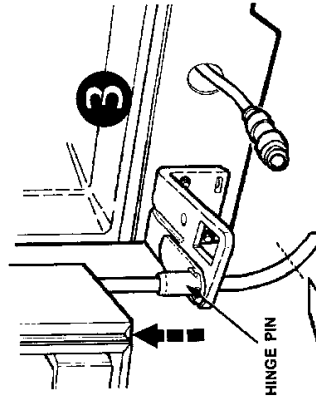

3

HINGE PIN


WHEN RECONNECTING THE WATER LINE,  
STRAIGHT CUT 1" OFF THE TUBING BEFORE  
REINSTALLING. Insert the tube into the  
connector until it is seated. This will insure  
a good seal and will prevent possible damage  
due to water leaks.

PUSH COLLET AGAINST  
CONNECTOR TO RELEASE THE  
DOOR WATER LINE

WATER LINE  
CONNECTOR

WATER LINE  
TO CABINET

4

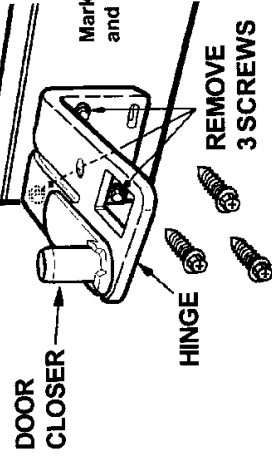

REMOVE  
3 SCREWS

HINGE

DOOR  
CLOSER

Mark the location of the bottom hinges with a lead pencil. Use a 5/16" socket  
and ratchet to remove the 3 screws from the bottom hinge.


5/16"



6

Lift the door up to remove.  
Rest door on a non-scratching surface.

7

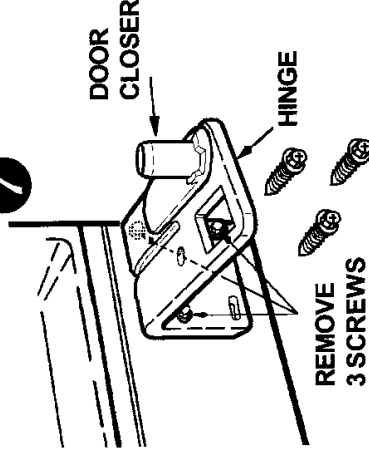

REMOVE  
3 SCREWS

HINGE

DOOR  
CLOSER