

Service Information



Model Nakamichi TX-1000 (Computing Turntable)
Serial No. from V10101171 – 1082.
Subject Addition of Controls, and Modification of Sensor Arm Descending Position Adjustment and Circuits

No. OOD-M-0202 (1/12)
Date 1 September 1982

1. General

1.1. Purpose

(1) Sensor Arm Position Screwdriver Controls have been mounted on the Display Panel on the left side of the TX-1000. Refer to Fig. 1.1.
Customer can calibrate the descending position (touch-down position) of the Sensor Arm Stylus with these controls. However, these controls are normally set to their center click positions.

(2) The permitted limit of descending position of the Sensor Arm Stylus has been changed, and as a result Stylus Positioning Gauge has been changed (grooves showing the permitted limit on the Gauge changed).
Permitted Limit:
From "within ± 1.0 mm on the 30/25 or 17 cm line" to "within 0 to -1.0 mm on the 30/25 or 17 cm line"
Stylus Positioning Gauge:
From OD04092A to OD09022A
Refer to 2-(4) "Sensor Arm Descending Position Adjustment".

1.2. Modification

(1) According to the modification stated in 1.1-(1), following have been changed.
Display House Ass'y:
From HA08048A to HA08064A

2. Sensor Arm Adjustment

Note: Before adjustment, set the Sensor Arm Position Screwdriver Controls (VR901 and VR902) located alongside the Display Panel to their center click positions.

(1) Removal of Display House Ass'y

(a) Take off the four Display Screws.

(b) Remove Display Cover.

(c) Peel off Display Name Plate which is stuck to Display House Ass'y with adhesive tape.

(d) Take out five screws to remove Display House Ass'y.

(2) Temperature-compensating Circuit Adjustment

Refer to Fig. 2.1.

(a) Connect a digital voltmeter to the test point LED CURRENT.

Lamp House P.C.B. Ass'y:
From BA04704A to BA04850A
Amp. P.C.B. Ass'y:
From BA04702A to BA04849A

(2) Circuit of the Control P.C.B. Ass'y (BA04672A) has been modified.

(3) Patterns of the CPU P.C.B. Ass'y (BA04748A) have been changed (circuit stays the same).

1.3. Compatibility (of new P.C.B. assemblies with current ones)
Not possible. However, if the Lamp House P.C.B. Ass'y and Amp. P.C.B. Ass'y are changed simultaneously, interchangeability is retained.

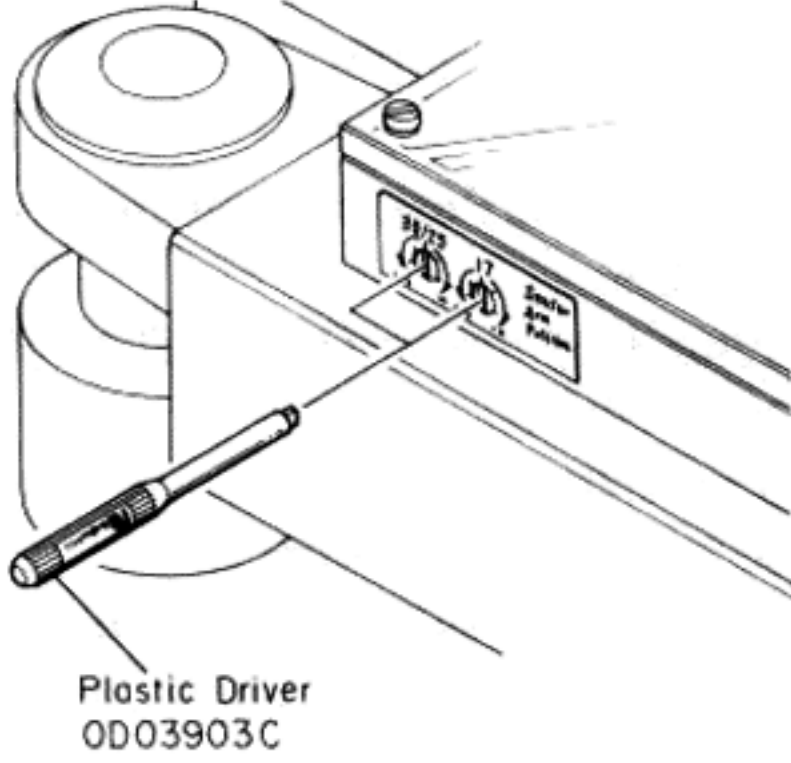


Fig. 1.1

(b) One minute or more after turning on the power, adjust VR602 to obtain $0\text{ V} \pm 40\text{ mV}$ on the voltmeter.

Note: During the adjustment the reading will slowly fluctuate. It is adjusted sufficiently if the reading is at least once within the above rating.


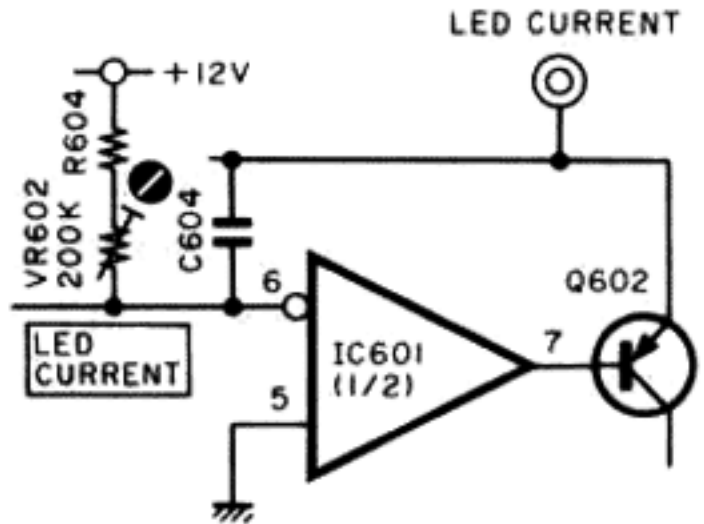


Fig. 2.1

Printed in Japan

7. New Schematic Diagrams



IC Chart (Cpu P.C.B.)	
Schematic Ref. No.	Description
IC 201	μPD8049C-231
IC 202	μPD8243C
IC 203	μPD7001C
IC 204, 205, 206	μPD4001BC
207, 208, 213	μPD4001BC
IC 209, 214, 218	μPD4011BC
IC 210	TC40H000P
IC 211, 212	TC40H074P
IC 219	μPD40248C

IC Chart (Amp. P.C.B.)	
Schematic Ref. No.	Description
IC 101	μPD4555C
IC 102, 107, 601, 602	TA75558P-R
IC 104	μPD4011BC
IC 105	μPD4001BC
IC 106	TL082CP
IC 603	TC4068BP

(3) Sensor Arm Gain and Arm Rest Position Adjustment

Refer to Figs. 2.2 and 2.3.

- Connect a digital voltmeter to the test point GAIN.
 - Place the Stylus Positioning Gauge (0D09022A) on the Center Search Platter.
 - Press the Disc Size Selector switch 17.
 - Press the Center Search switch, then Stop switch and Disc Size Selector switch 30/25 in quick succession. Pull the Sensor Arm back manually towards the center of Platter until it comes to the stopper. When in this position, adjust VR601 to obtain $-2.7\text{ V} \pm 0.01\text{ V}$ on the voltmeter.
 - Press the Stop switch to release the Center Search mode.
 - While repeatedly pressing the Sensor Stylus switch, adjust the mechanical pressure of the Sensor Arm using VR106 when the Sensor Arm comes to rest on the Arm Rest.
- Adjustment shall be made so that the Sensor Arm cannot bump against the Arm Rest.
- After completing the above adjustments, connect the digital voltmeter to TP8 to make sure that its reading is within a range of 0 to -2.5 V .

(4) Sensor Arm Descending Position Adjustment

Refer to Figs. 2.3 – 2.5.

- Place the Stylus Positioning Gauge (0D09022A) on the Center Search Platter.
 - Connect TP3 to GND.
 - Press the Disc Size Selector switch to 17.
- Press the Center Search switch, then the Stop switch and Disc Size Selector switch 30/25 in quick succession.
- The Motor will stop and the Sensor Arm Stylus will descend onto the Stylus Positioning Gauge.
- Connect a digital voltmeter to the test point GAIN.
 - Place the Sensor Arm Stylus manually onto the A/D FS line on the Stylus Positioning Gauge, and make sure that the voltmeter reads between 0 and -2.7 V .
 - Connect the digital voltmeter to the test point OFFSET.
- Adjust VR109 to obtain $2.45\text{ V} \pm 0.01\text{ V}$ on the voltmeter.
- Place the Sensor Arm Stylus manually onto the A/D 0 line on the Stylus Positioning Gauge, and make sure that the voltmeter reads 0.2 V or more.
 - Press the Disc Size Selector switch 30/25. Adjust VR105 so that descending position of Sensor Arm Stylus is within 0 to -1.0 mm on the 30/25 cm line. While pressing the Disc Size Selector 17 and 30/25 switches alternately, repeat the descending operation several times to make sure that the Stylus descending position is within the above range.
 - Press the Disc Size Selector switch 17. Adjust VR104 so that the descending position of the Sensor Arm Stylus is within 0 to -1.0 mm on the 17 cm line. While pressing the Disc Size Selector 30/25 and 17

switches alternately, repeat the descending operation several times to make sure that the Stylus descending position is within the above range.

- Press the Stop switch to release the Center Search operation.
- Disconnect TP3 from GND.

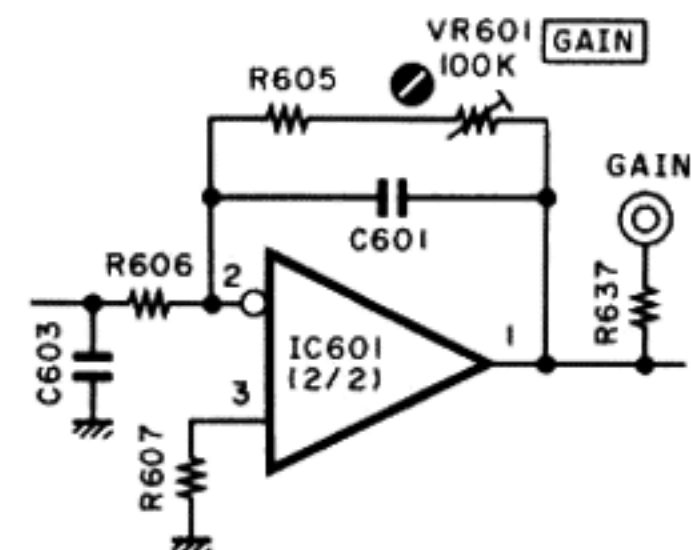


Fig. 2.2

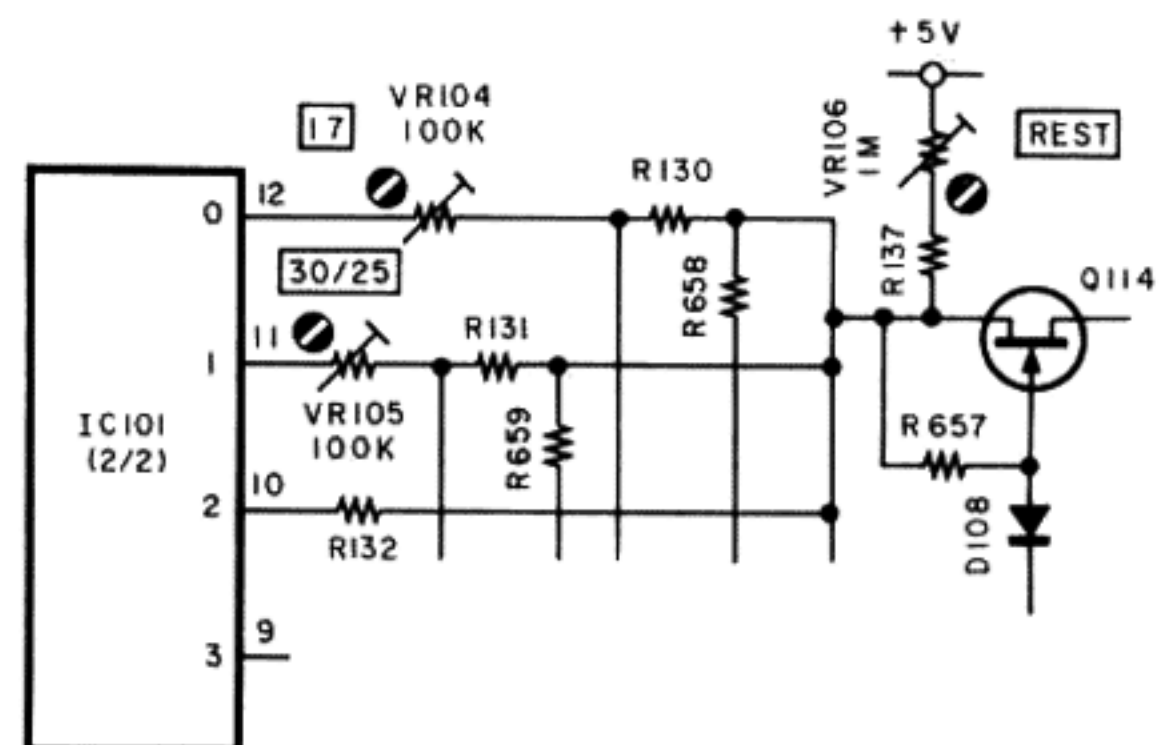


Fig. 2.3

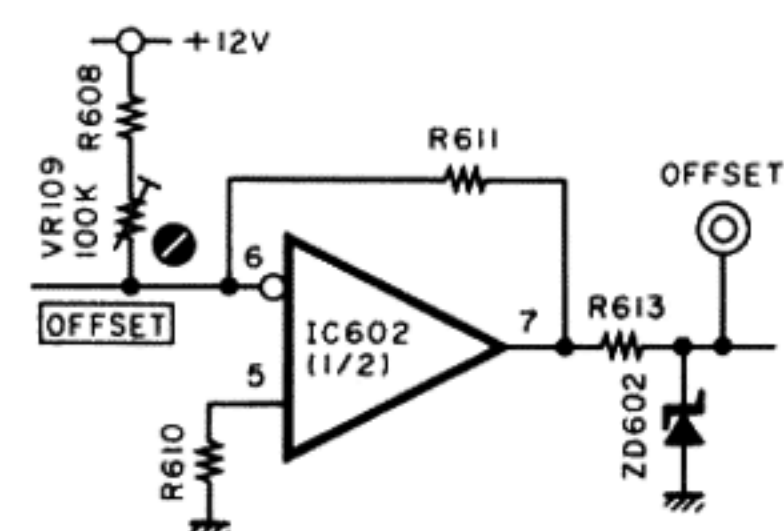


Fig. 2.4

Schematic Ref. No.	Part No.	Description	Schematic Ref. No.	Part No.	Description
	BA04748A	CPU P.C.B. Ass'y Serial No.: V10101171 -	CN30 CN35 CN37	0B08998A 0B02204B 0B02206B 0M04222A 0M04232A 0M04236A 0M04237A 0M04238A 0M04251A 0M04252A 0M04331A 0M04332A 0M04335A 0M04342A	6P-H Connector 9P-H Connector 9P-H Connector Label CN-15 (1) Label CN-21 (1) Label CN-24 (1) Label CN-25 (1) Label CN-26 (1) Label CN-35 (1) Label CN-37 (1) Label CN-22 (1) Label CN-23 (1) Label CN-7 (1) Battery Seal (1)
IC201	0B02531D	CPU P.C.B.			
IC202	0B06346A	IC μ PD8049C-231			
IC203	0B06347A	IC μ PD8243C			
IC204,205	0B06348A	IC μ PD7001C			
206,207	0B06143A	IC μ PD4001BC			
208,213					
IC209,214	0B06178A	IC μ PD4011BC			
218					
IC210	0B06349A	IC TC40H000P			
IC211,212	0B06350A	IC TC40H074P			
IC219	0B06364A	IC μ PD4024BC			
Q201,202	0B01872A	TR 2SC945 (L)			
203,207					
Q204,206	0B06013A	TR 2SA733			
D201	0B01909A	SiD 1S1555 (27)			
203-208					
210-229					
R200,208	0B09359A	RM 8.2M 1/4W J			
210,298					
R201-204	0B05627A	RK 330K 1/4W J			
217-222		(18)			
233,234					
247-251					
804					
R207	0B05509A	RK 33K 1/4W J			
R209,211	0B09785A	RK 4.7M 1/4W J			
R212,213	0B01889A	RK 100K 1/4W J			
223,224					
225,226					
227,228					
230,231					
232,284					
294,802					
803,806					
815,816					
817,818					
819					
R215,235	0B01888A	RK 10K 1/4W J			
236,237					
255,256					
257,258					
292,808					
809,810					
811,812					
R238,239	0B01857A	RK 1K 1/4W J			
242,243					
244,246					
813					
R240	0B05577A	RK 330 1/4W J			
R241,245	0B01846A	RK 4.7K 1/4W J			
259,260					
261,262					
R252,288	0B05776A	RK 1M 1/4W J			
801					
R253,293	0B09491A	RM 1K 1/4W F			
R254	0B05743A	RK 27K 1/4W J			
R287	0B01682A	RK 6.8K 1/4W J			
R290	0B01681A	RK 3.3K 1/4W J			
R805	0B05675A	RK 3.9K 1/4W J			
R814	0B01365A	RK 330 1/2W J			
VC201	0B09782A	C Variable 20P			
C201	0B01502A	CE 330 μ 16V			
C202,203	0B05682A	CM 0.068 μ 50V J			
C204,225	0B01412A	CE 10 μ 16V			
C205	0B09792A	CC 33P 50V J			
C206	0B09779A	CC 39P 50V J			
C207,208	0B05557A	CM 0.015 μ 50V J			
C209	0B00091A	CM 1000P 50V			
C210	0B09223A	CE 1 μ 50V (LN)			
C216,222	0B01405A	CE 1 μ 50V			
C221,227	0B05582A	CM 0.022 μ 50V J			
C223	0B09372A	CE 2.2 μ 50V			
C224	0B05653A	CM 1500P 50V J			
M201	0B08969A	Ni-CD Battery 3.6V			
M202	0B08984A	Crystal 4.9152MHz			
CN4	0B02215C	2P-H Connector			
CN7	0B02216B	8P-H Connector			
CN15	0B08990B	7P-H Connector			
CN21	0B08655A	11P-T Post			
CN22	0B08994B	12P-H Connector			
CN23	0B08724A	5P-T Post			
CN24	0B08646A	10P-T Post			
CN25	0B08644A	8P-T Post			
CN26	0B08681A	12P-T Post			




Fig. 6

Notes: 1. Table of wire colors

BLK - Black	BLU - Blue
ORN - Orange	GRY - Gray
GRN - Green	RED - Red
BRN - Brown	YEL - Yellow
WHT - White	VIO - Violet

2. Component side view of the P.C.B. is illustrated unless otherwise specified.




Fig. 7.3

Notes: 1. Diode is 1S553, 1S953, or 1S1555 unless otherwise specified.
2. Resistor and capacitor marked with * show typical value.