




Tuner ass'y AWE-012 (FSAW model)

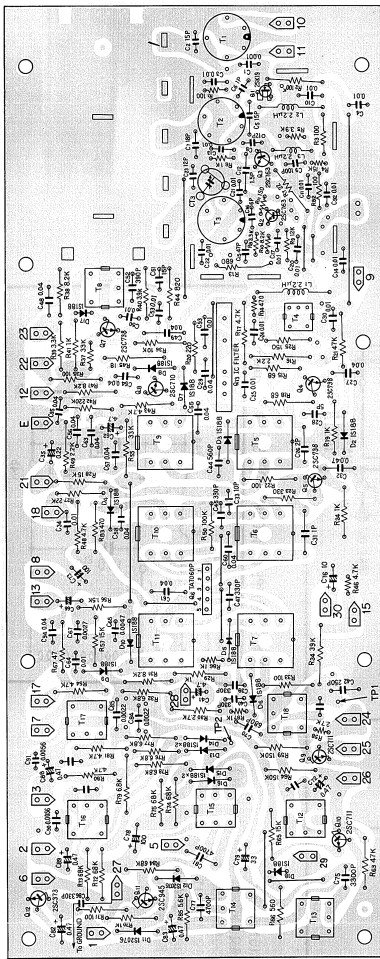


Control amp ass'y AWG-003

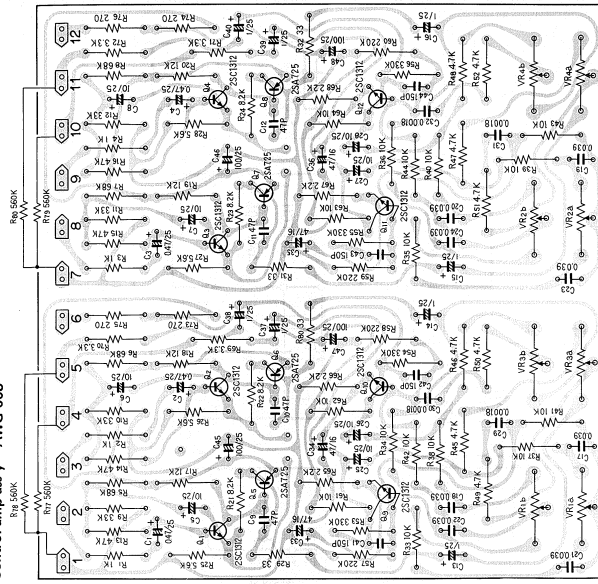


VR ass'y AWX-002

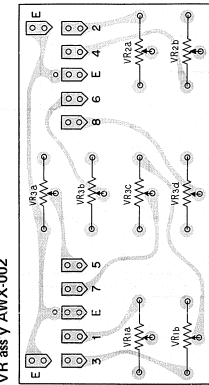


Field amp ass'y AWF-003

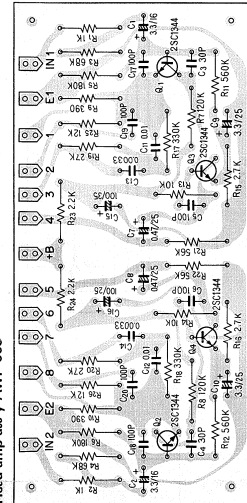


Tuner ass'y AWE-003 (FW, KW model)

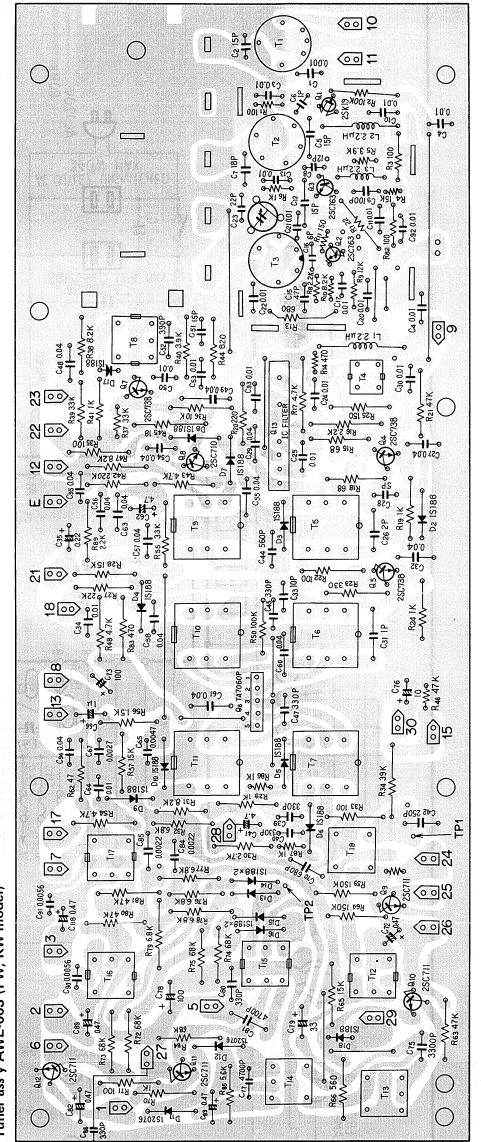

Power supply ass'y AWR-004

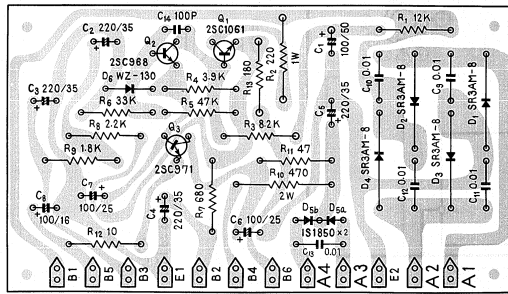

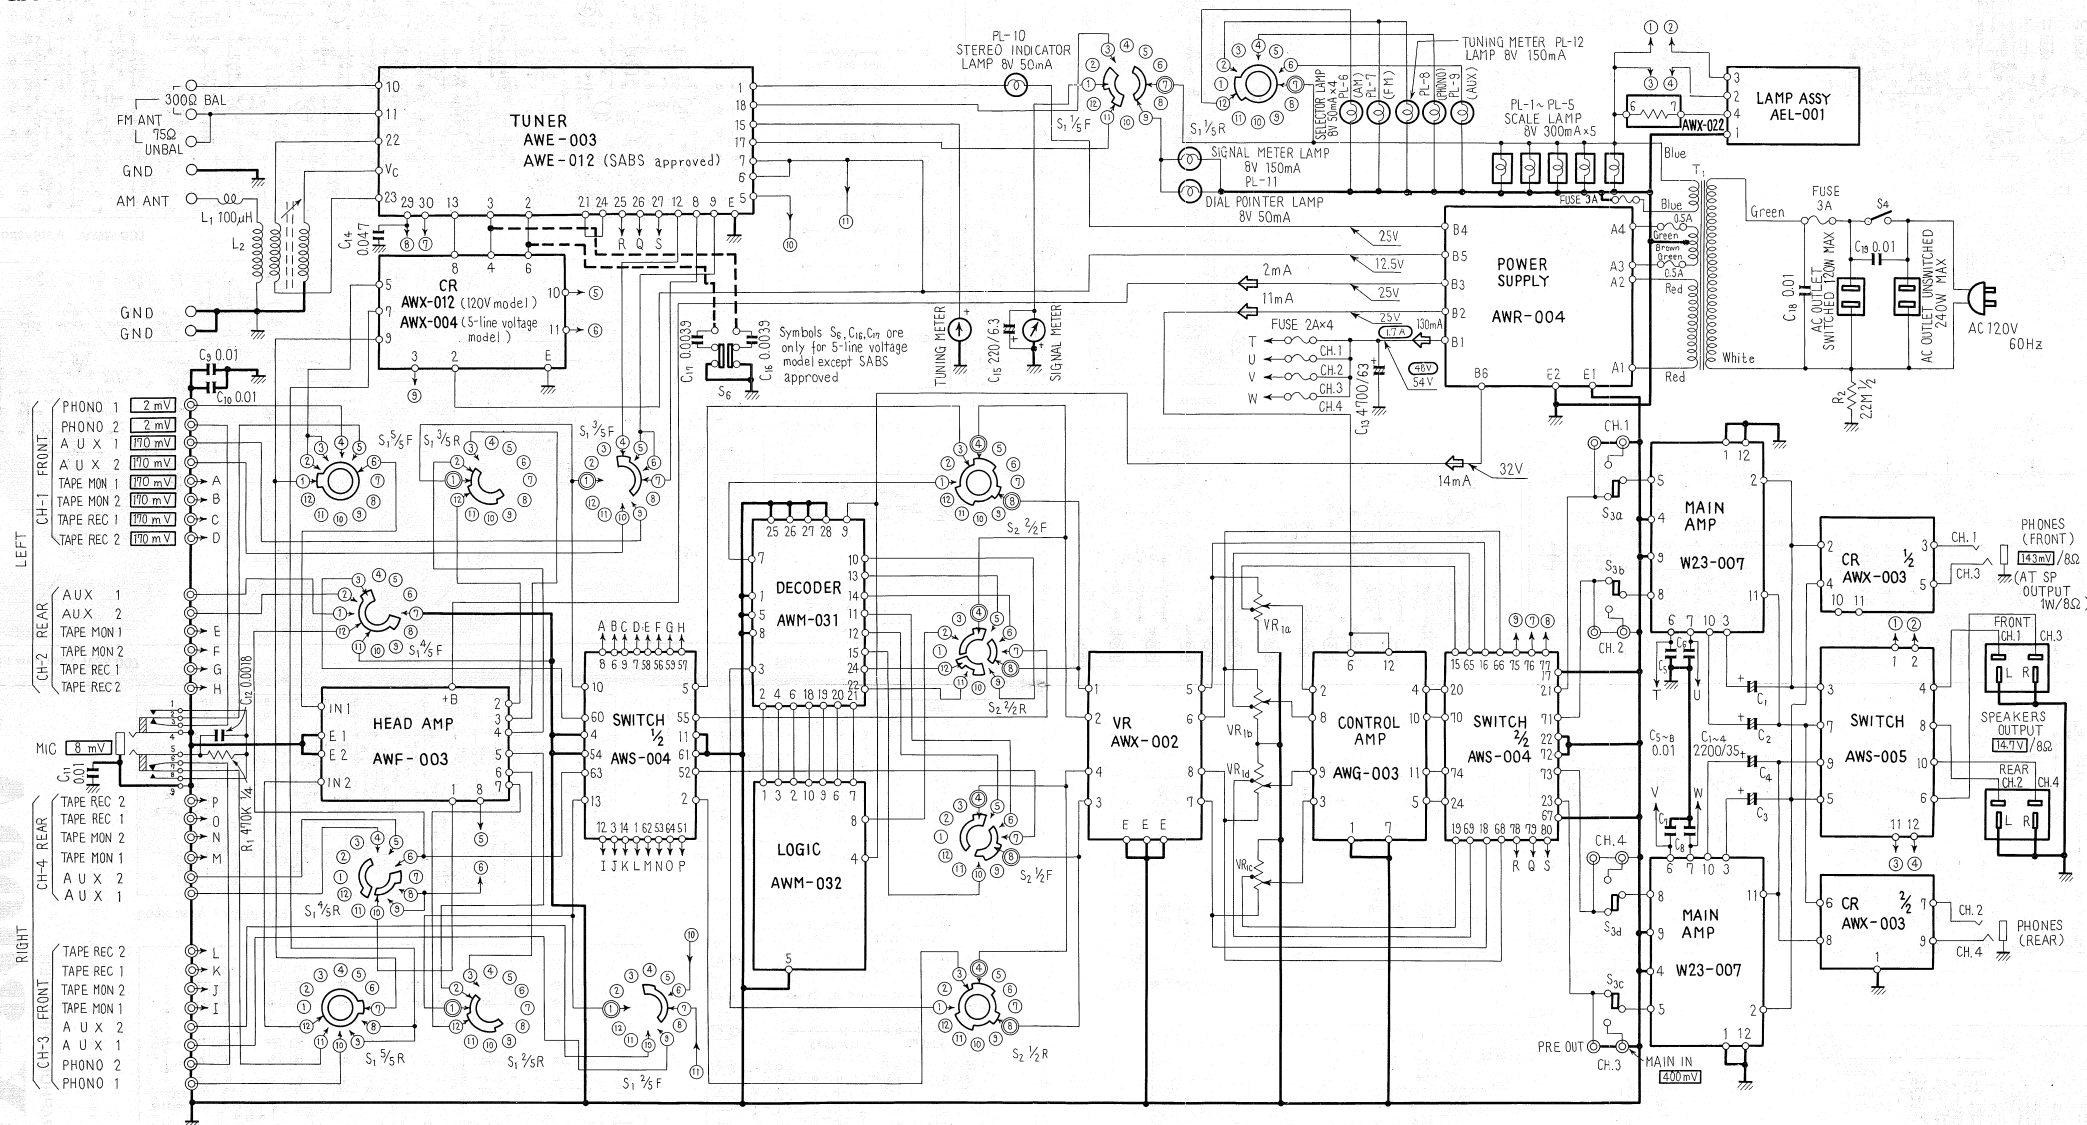

- S₁ SELECTOR SWITCH**
- 1 AM
 - 2 FM MONO
 - 3 FM AUTO
 - 4 PHONO 1
 - 5 PHONO 2
 - 6 A U X 1
 - 7 A U X 2
- S₂ MODE SWITCH**
- 1 2 CH STEREO
 - 2 REGULAR
 - 3 SQ - MATRIX
 - 4 DISCRETE

- S₃ PRE & MAIN SWITCH**
- INTERCOUPLED
 - SEPARATED
- S₄ POWER SWITCH**
- OFF → ON
- S₅ LINE VOLTAGE SELECTOR**
- 75μs → 50μs
- S₆ DE-EMPHASIS SWITCH**


VR₁ VOLUME

MIN → MAX


NOTES

- ⤴ DC CURRENT AT NO SIGNAL INPUT
- ⤴ DC CURRENT AT 27W/8Ω OUTPUT (2CH. DRIVEN)
- ⤴ DC VOLTAGE AT NO SIGNAL INPUT
- ⤴ DC VOLTAGE AT 27W/8Ω OUTPUT (2CH. DRIVEN)
- ⤴ SIGNAL VOLTAGE ACQUIRED 27W/8Ω OUTPUT AT 1kHz (RMS 2CH. DRIVEN)


POWER SUPPLY CIRCUIT FOR 5-LINE VOLTAGE MODEL

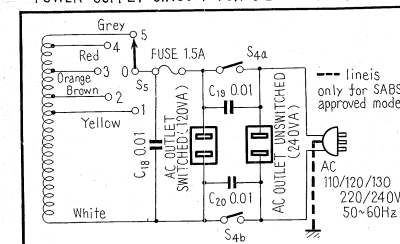


QX-8000A₂

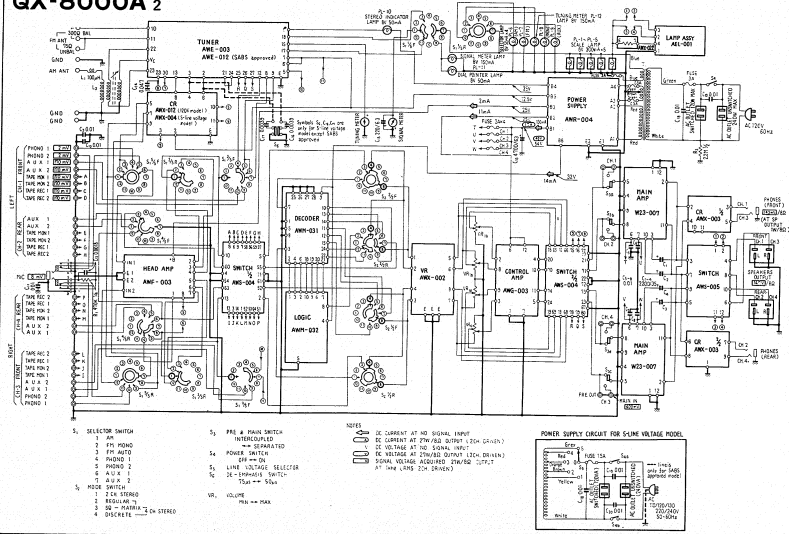


Tuner ass'y AWE-012 (FSAW model)

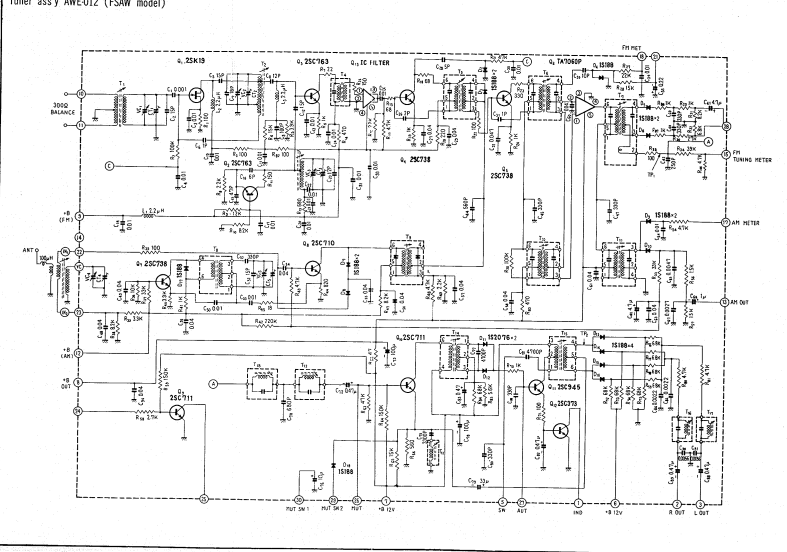


Head amp ass'y AWF-003

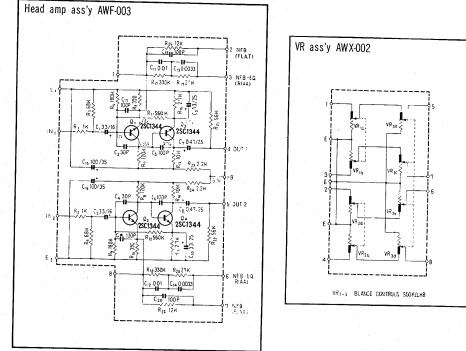


Main amp ass'y W23-007

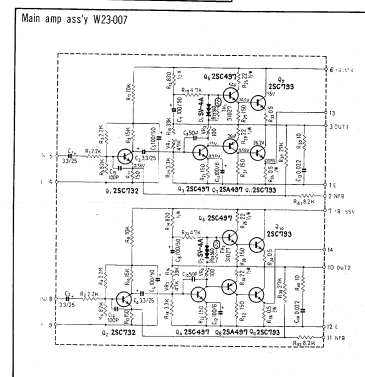


Control amp ass'y AWG-003

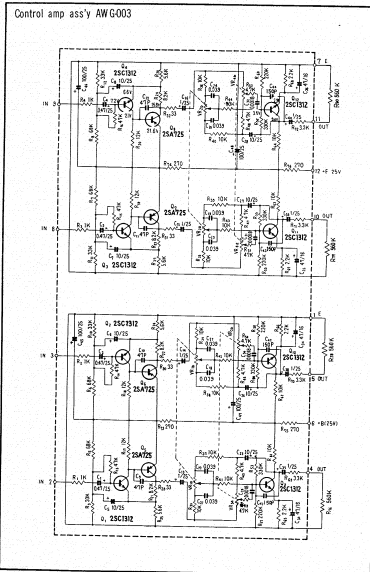


Switch ass'y AWS-004

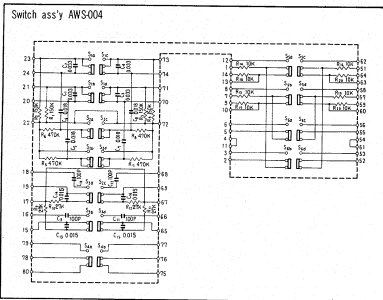


Logic ass'y AWM-032

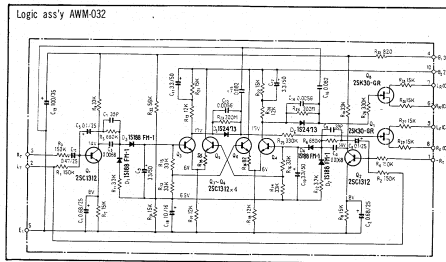


CR ass'y AWX-003 (FSAW, FW model)

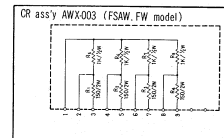


Tuner ass'y AWE-003 (FW, KW model)

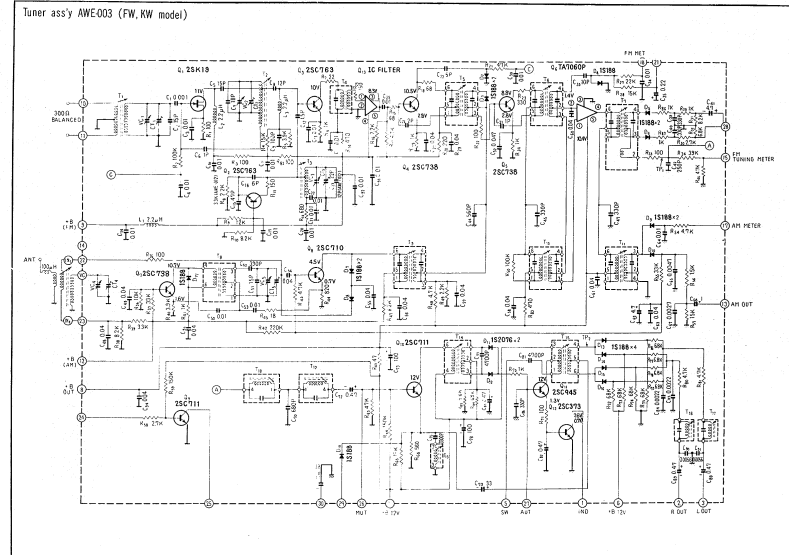


Switch ass'y AWS-005

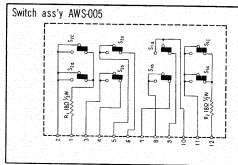

CR ass'y AWX-012 (KW model)

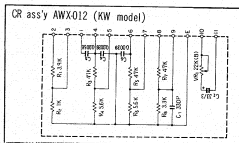

Power supply ass'y AWR-004

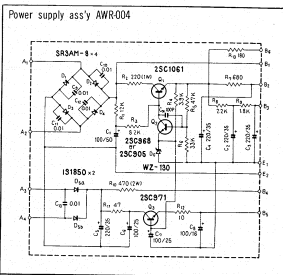

Decoder ass'y AWM-031

