

Service Manual



DIGITAL

Compact Disc Player

Compact Disc Player
SL-P1200



Color

(K) Black Type

Color	Areas
(K)	[M] U.S.A.
(K)	[MC] ... Canada.
(K)	[E] Switzerland and Scandinavia.
(K)	[EK] United Kingdom.
(K)	[XL] Australia.
(K)	[EG] ... F.R. Germany.
(K)	[EB] Belgium.
(K)	[EH] Holland.
(K)	[EF] France.
(K)	[Ei] Italy.
(K)	[XA] Asia, Latin America, Middle Near East, Africa and Oceania.
(K)	[XB] Saudi Arabia.
(K)	[PA] East PX.
(K)	[PE] European Military.
(K)	[PC] European Audio Club.

SPECIFICATIONS

[*Measured by EIAJ (CP-307)]

■ Audio

No. of channels: 2 (left and right, stereo)
Frequency response: 4—20,000 Hz ± 0.1 dB*
Dynamic range: More than 96 dB*
S/N ratio: More than 106 dB*
Harmonic distortion: 0.0012% (1 kHz, 0 dB)
Total harmonic distortion: 0.0025% (1 kHz, 0 dB)*
Channel separation: More than 106 dB (1 kHz)*
Channel phase balance: Less than 5°*
Wow and flutter: Below measurable limit*
Low-pass filter: High-resolution digital filter
 Digital: Double over sampling
 96th order FIR (Finite Impulse Response) type
 Analog: GIC (Generalized Impedance Converter) active type

■ Signal Format

Sampling frequency: 44.1 kHz
Correction system: Technics Super Decoding Algorithm
D-A conversion: 16-bit linear

■ Pickup

Type: Fine-focus, one beam



Light source: Semiconductor laser
Wavelength: 780 nm

■ Traverse system:

Type: High-speed linear access system

■ Spindle system:

Type: Brushless DD motor

■ Functions

Automatic play: • All tracks
Direct access play: • Direct access to any track, index, or time on disc
Program play: • Max. of 20 program selections
Skip play: • Forward and backward track skip
 • Forward and backward program track skip
Search play: • Forward and backward manual search
 • Button search (2-speed)
 • Dial search (2-speed)
Display functions: • Music Matrix (20 tracks)
 • Track number display
 • Index number display
 • Time display (min./sec./1/10th sec.)
 • Programmed order (No.) (when recall button is pressed)
 • Overflow mark (▶)
 • Overflow indicator (>)
 • Repeat indicator

Technics

Matsushita Services Company
 50 Meadowland Parkway,
 Secaucus, New Jersey 07094

Panasonic Sales Company,
Division of Matsushita Electric
of Puerto Rico, Inc.
 Ave. 65 De Infanteria, KM 9.7
 Victoria Industrial Park
 Carolina, Puerto Rico 00630

Panasonic Hawaii, Inc.
 91-238, Kauhū St. Ewa Beach
 P.O. Box 774
 Honolulu, Hawaii 96808-0774

Matsushita Electric
of Canada Limited
 5770 Ambler Drive, Mississauga,
 Ontario, L4W 2T3

Matsushita Electric Trading Co.,
Ltd.
 P.O. Box 288, Central Osaka Japan

Panasonic Tokyo Office
Matsushita Electric Trading Co.,
Ltd.
 6th Floor, World Trade Center
 Bldg.,
 No. 4-1, Hamamatsu-cho 2-Chome,
 Minato-ku, Tokyo 105, Japan

SL-P1200

- Standby indicator
 - Auto cue indicator
 - Time mode indicator
 - Emphasis indicator
- When using remote control unit:
- dB display
 - Level indicator
 - Music scan indicator
 - Remote control indicator

■ Headphones:

Output level: 100 mW max. (variable)
Impedance: 32 Ω
Plug: 1/4 inch stereo

■ General

Power supply: For U.S.A. and Canada:
AC 60Hz, 120V
For United Kingdom and
Australia: AC 240V, 50Hz
For Continental Europe:
AC 220V, 50Hz
For others:
AC 110~127/220~240V, 50/60Hz

Power consumption: 29 W
Output voltage: 2 V (at 0 dB)*
Output impedance: About 200 Ω
Load impedance: More than 10 k Ω

Dimensions (W×D×H): 43×38×16.8 cm
(16-15/16"×14-3/32"×6-5/8")
When disc compartment is open.
23 cm (9-1/16") height
14.5 kg (32 lbs)

Weight:

■ Infrared remote control unit

Remote control buttons: Basic buttons: 7
Program buttons: 12
Time mode select buttons: 2
Index button: 1
Music scan button: 1
Repeat button: 1
Asterisk button: 1
Digital volume attenuation
buttons: 2

Dimensions

(W×H×D):

Batteries: 6.4×15.5×1.8 cm
UM-3 "AA" batteries or IEC R6
or equivalent (1.5 V×2)
Weight: 140 g (0.3 lb.)
(including batteries)

Specifications are subject to change without notice for further improvement.

Weight and dimensions are approximate.


■ CONTENTS

	Page
BEFORE USING THIS UNIT	2
PRECAUTION OF LASER DIODE	3
SAFETY PRECAUTION	3
LOCATION OF CONTROLS	4
PLAYING A DISC	7
CLEANING OF LENS	15
HANDLING PRECAUTIONS FOR OPTICAL PICKUP	15
DISASSEMBLY INSTRUCTIONS	16
RESISTORS AND CAPACITORS	21
REPLACEMENT PARTS LIST	23
EXPLODED VIEWS	27

	Page
PACKING	32
HOW TO REPLACE IC'S (Small outline type)	33
MEASUREMENTS AND ADJUSTMENTS	34
TERMINAL FUNCTION OF LSI	41
TERMINAL GUIDE OF IC'S, TRANSISTORS AND DIODES	46
PRINTED CIRCUIT BOARD AND WIRING CONNECTION DIAGRAM	47
PRINTED CIRCUIT BOARDS	49
SCHEMATIC DIAGRAM	55
BLOCK DIAGRAM	67

■ BEFORE USING THIS UNIT

1. Place a soft cloth under the unit to protect it from scratches.
2. Press the lock shaft on the bottom panel to the in (FREE) position (■ → ■).

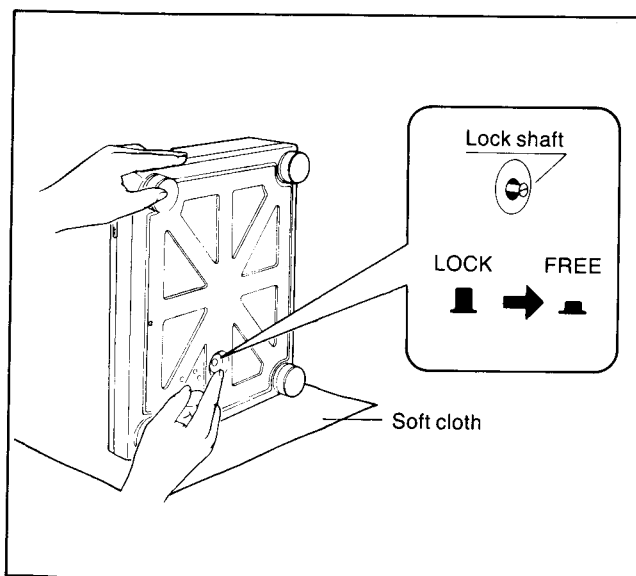

NOTE:

IF THE UNIT IS TRANSPORTED AGAIN, PERFORM THE FOLLOWING STEPS:

- 1) Remove the disc from the holder.
- 2) Pull the lock shaft to the out (LOCK) position (■ ← □).

CAUTION:

Do not transport the unit without locking the lock shaft.
SEVERE DAMAGE WILL RESULT.


■ PRECAUTION OF LASER DIODE

Caution: This product utilizes a laser diode.
ADVARSEL: I dette a apparat anvendes laser.

• Use of caution labels

Note: ○ Mark is used, × Mark is not used.

Areas	SRNZ010C01	SRNZ010S01	SRNZ010S02	SRNZ050S01
[MC]	○	×	×	×
[E], [EK], [XL], [EG], [EB], [EH], [EF], [Ei], [XA], [XB]	×	○	○	○

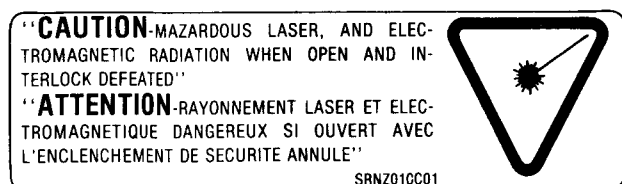


ADVARSEL-Der Vil udstråles osynlig laser når apparatet åbnes og aflåsningmekanismen frigøres. UNDGÅAT BLIVE UDSET FOR LASERBESTRÅLING.


DANGER-Invisible laser radiation when open and interlock defeated. AVOID DIREC EXPOSURE

SRNZ050S01

VAROITUS! Laite sisältää laserdiodin, joka lähettää näkymätöntä silmille vaarallista lasersäteilyä

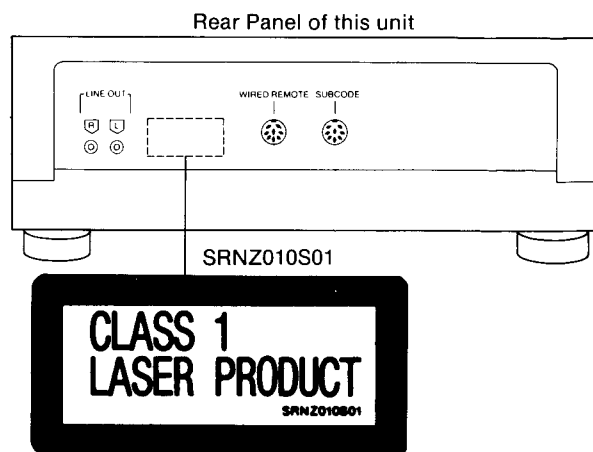

Obs:
 Apparaten innehåller laser Komponent av höger laserklass än klass 1.

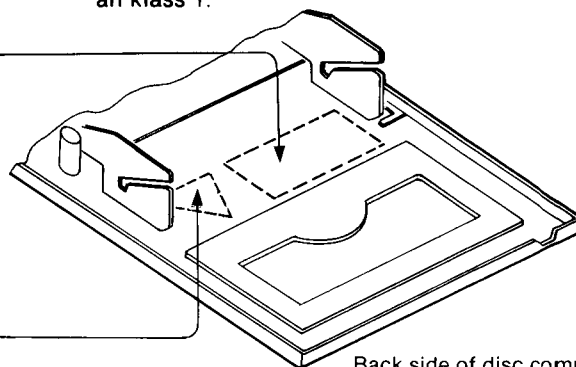

■ SAFETY PRECAUTION


(This "safety precaution" is applied only in U.S.A.)

1. Before servicing, unplug the power cord to prevent an electric shock.
2. When replacing parts, use only manufacturer's recommended components for safety.
3. Check the condition of the power cord. Replace if wear or damage is evident.
4. After servicing, be sure to restore the lead dress, insulation barriers, insulation papers, shields, etc.
5. Before returning the serviced equipment to the customer, be sure to make the following insulation resistance test to prevent the customer from being exposed to a shock hazard.

• INSULATION RESISTANCE TEST


1. Unplug the power cord and short the two prongs of the plug with a jumper wire.
2. Turn on the power switch.
3. Measure the resistance value with ohmmeter between the jumpered AC plug and each exposed metal cabinet part, such as screwheads antenna, control shafts, handle brackets, etc. Equipment with antenna terminals should read between $3M\Omega$ and $5.2M\Omega$ to all exposed parts. (Fig. A) Equipment without antenna terminals should read approximately infinity to all exposed parts. (Fig. B)

Note: Some exposed parts may be isolated from the chassis by design. These will read infinity.

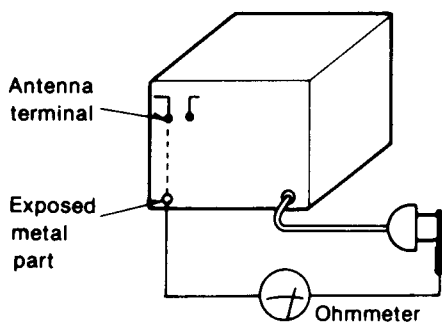

(Fig. A)

Resistance = $3M\Omega - 5.2M\Omega$

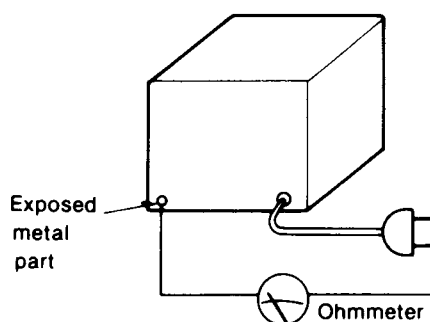


(Fig. B)

Resistance = Approx ∞


4. If the measurement is outside the specified limits, there is a possibility of a shock hazard. The equipment should be repaired and rechecked before it is returned to the customer.


■ LOCATION OF CONTROLS

Front panel

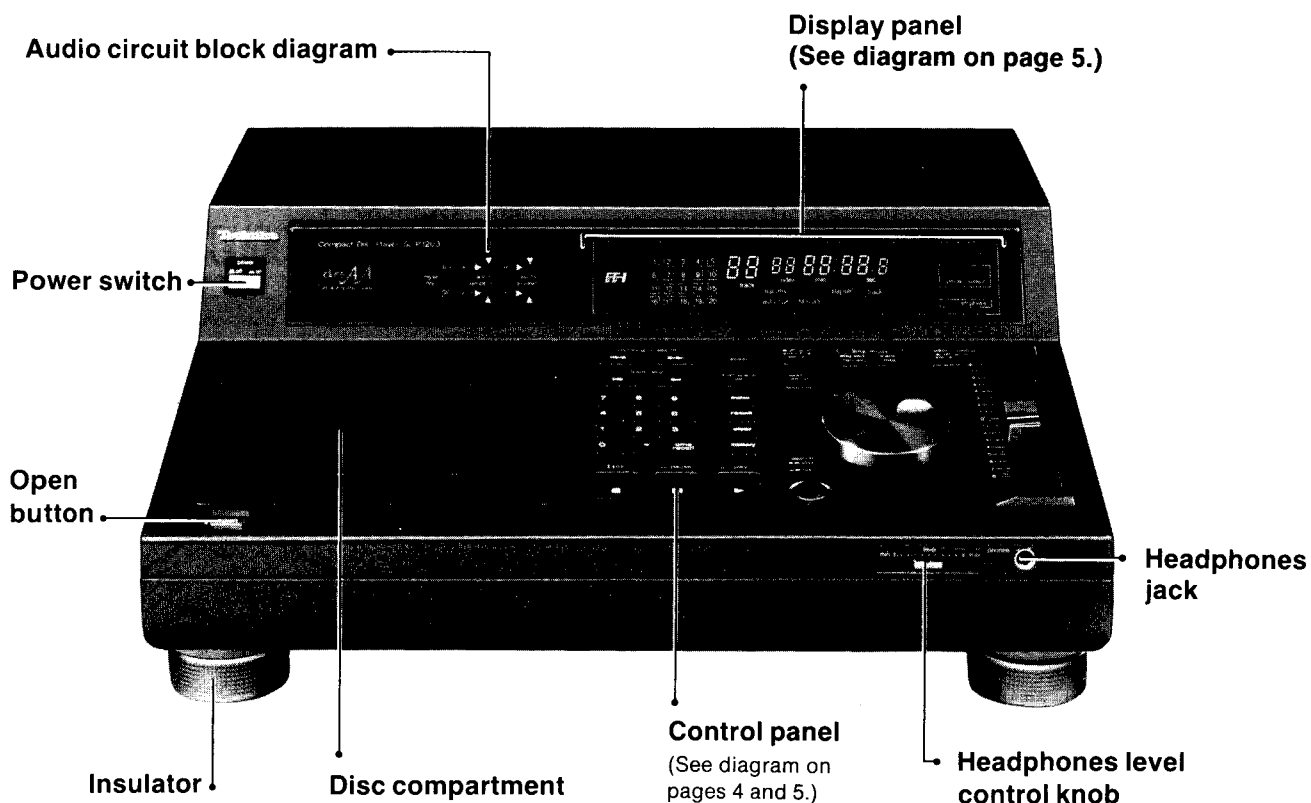


Control panel

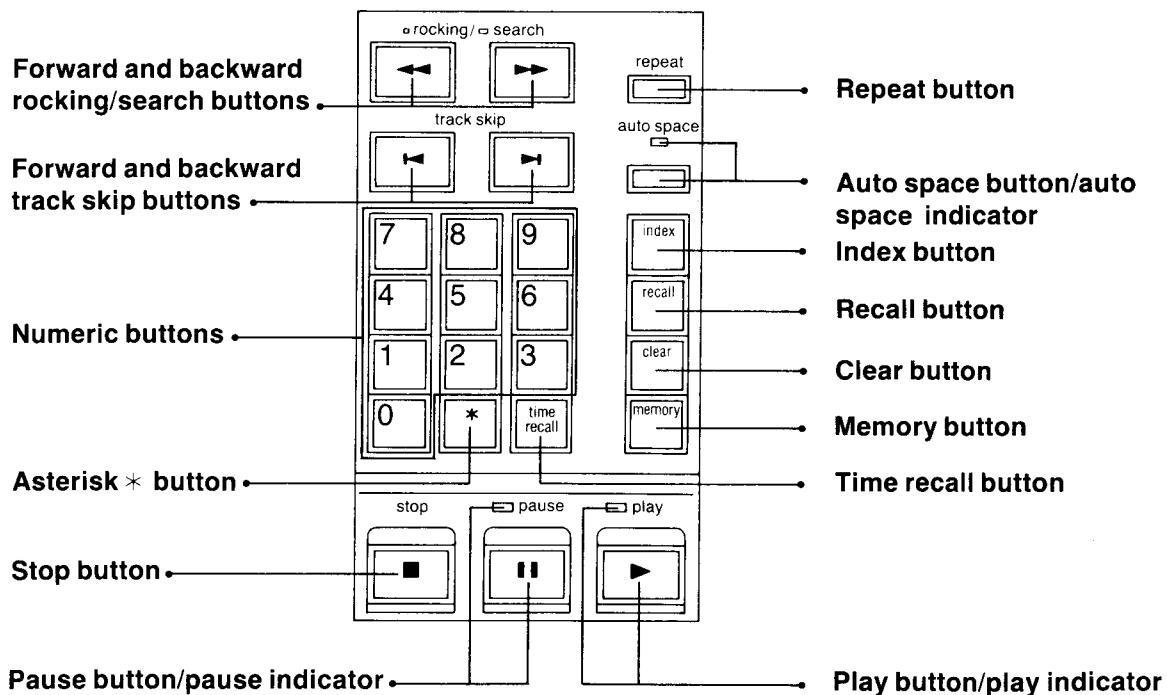

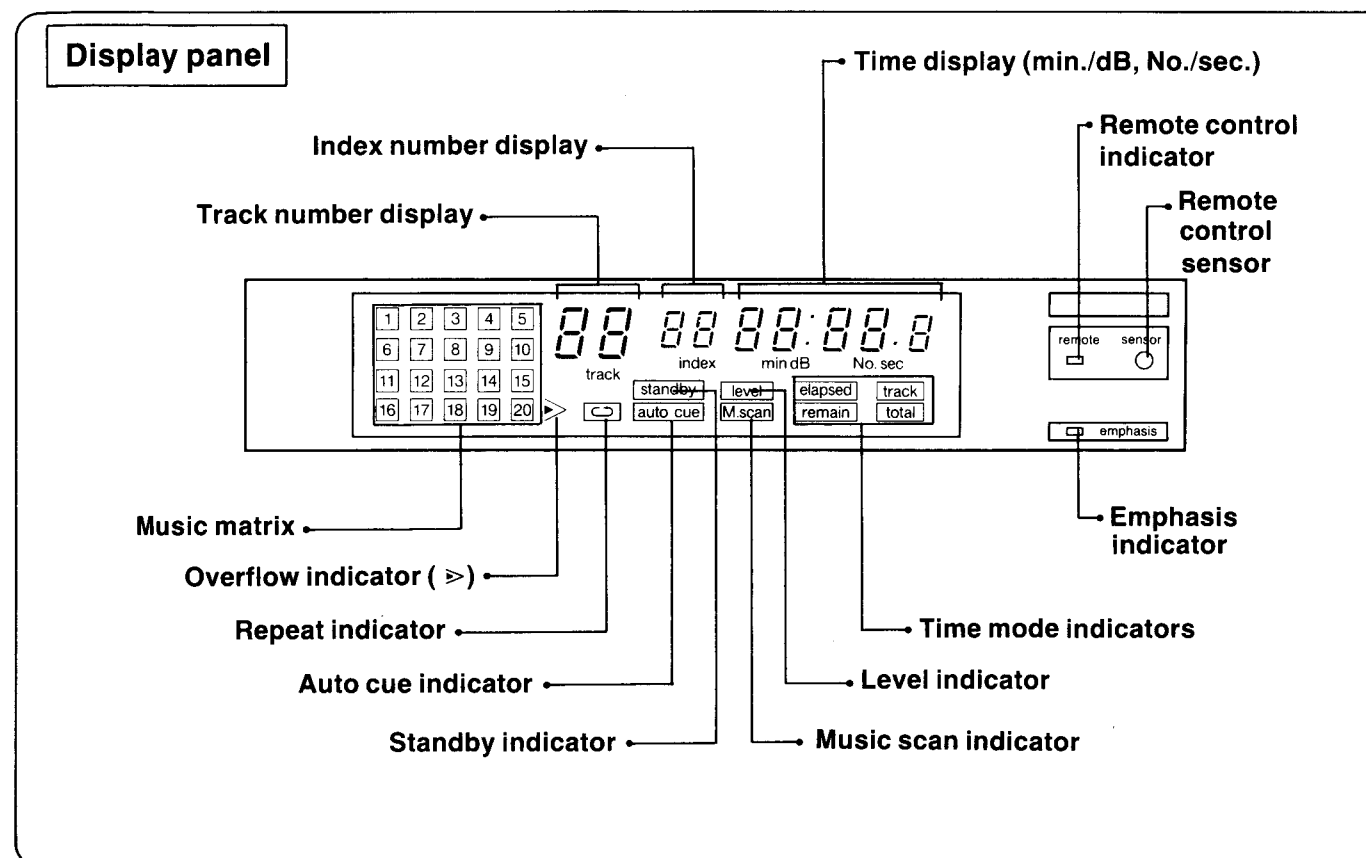


Rear panel

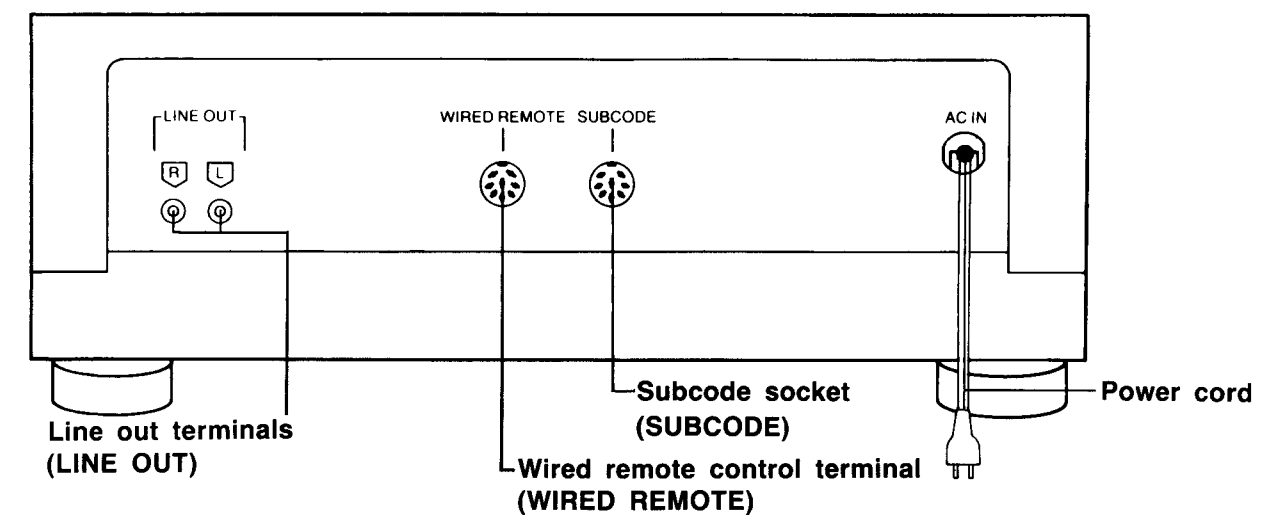


Remote control

EUR64185....U.S.A. and Canada
EUR64186....Others

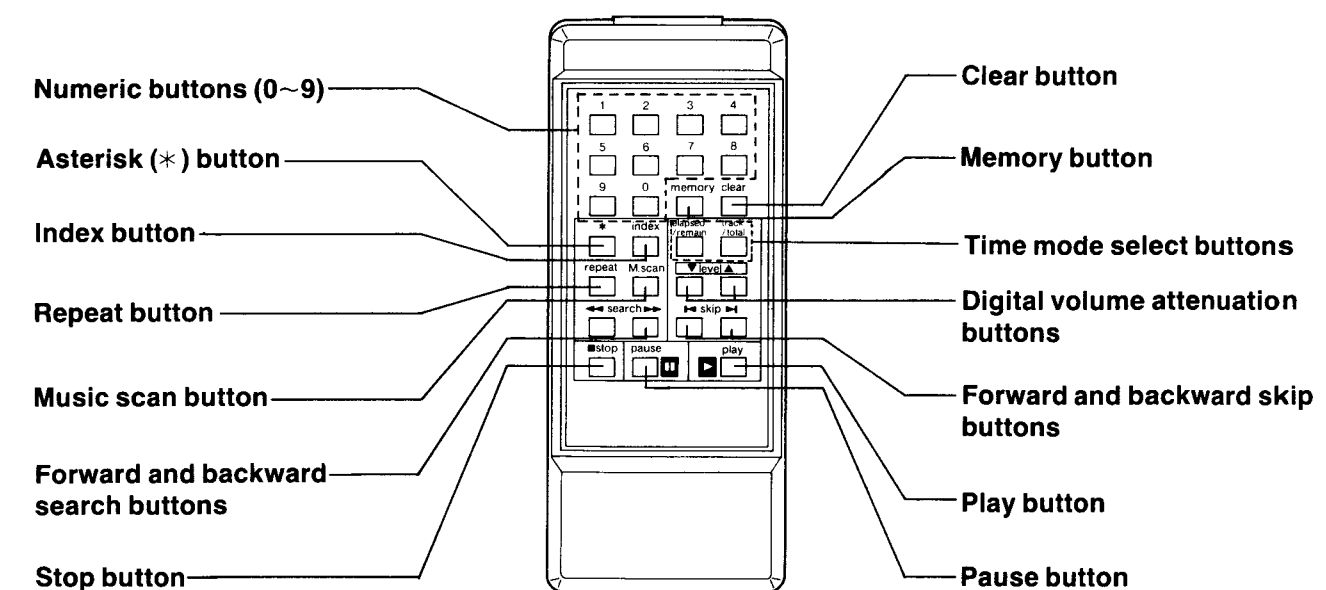

Control panel (continued)

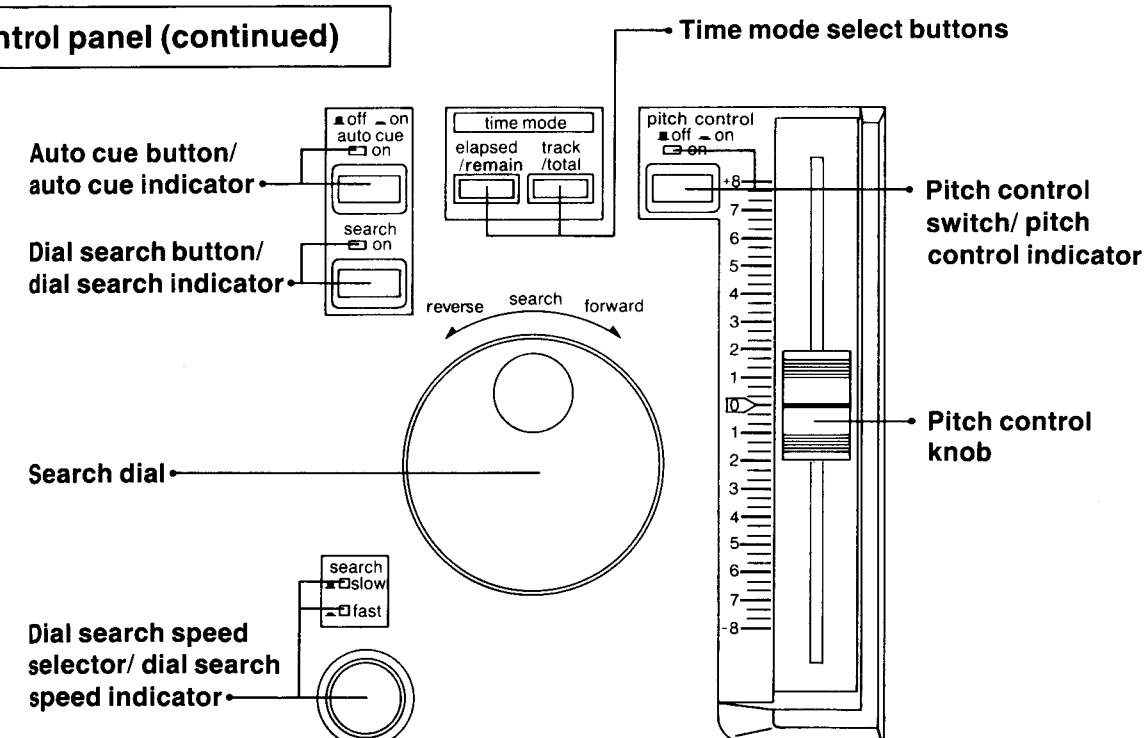

Playing a disc

1 Automatic play


- To play a disc from the first track to the end of the disc.

- 1 Press () to turn power on. (See 1 below.)
- 2 Press to open the disc compartment.
- 3 Insert a disc with the label side facing upward.
- 4 Push the cover down by hand to close it. (See 2 below.)
- 5 Press the play button. (See 3 below.) Play begins from the first track.
- 6 Press () to turn power off.


Emphasis indicator illuminates when a disc recorded with pre-emphasis is played.

- Press the stop button to stop disc play.
- Press the pause button to briefly interrupt play. (See 4 below.)


- 1 When power is turned on, the display panel illuminates as shown below:




After about 5 seconds or after the disc compartment has been opened the display panel shows the following:

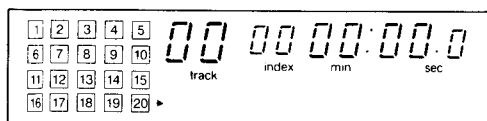

- 2 After inserting the disc and closing the cover the disc will begin to rotate. After the total number of tracks, and total playing time are displayed, the player switches to the stop mode.



If a disc has more than 20 tracks the overflow indicator illuminates, and when the 21st track is played the overflow indicator flashes on and off.



Illuminates / Flashes on and off during play

- Remove the disc from the disc holder and turn off the power if the player is not to be used again for a while.

2 Random access play


- Starting disc play from a specific place on the disc.

- From this page onward the following basic operations are omitted:
 - Power on/off
 - Disc compartment open/close
 - Interrupting play
 - Stopping play


- Press the buttons in the order shown by the arrows.

2-1. To start disc play from a specific track

- For example, to play from the beginning of track 3 to the end of the disc.




- The display below shows track 3 is specified.

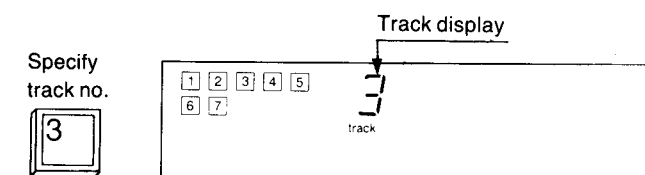

- When the play button is pressed, play begins from track 3.

- The border of the track being played flashes on and off.


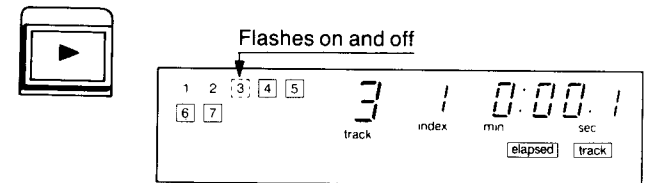


- The player switches to the stop mode when play has finished.



2-2. To play a disc from a specific index

(This is possible only on discs having indexes.)

- For example, to play from the beginning of index 2 of track 3 to the end of the disc.

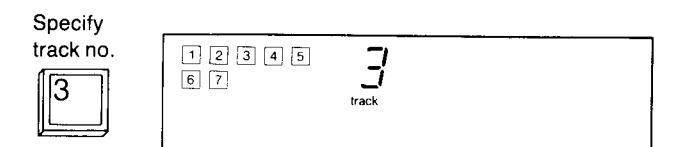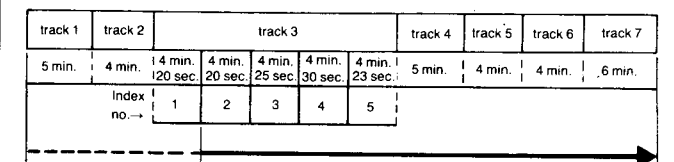


- When playing discs having only one track, remember to enter track number 1, then specify the index number.

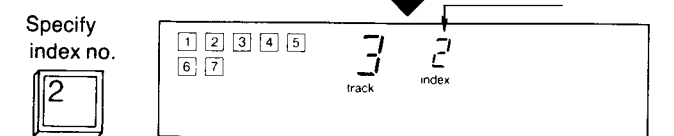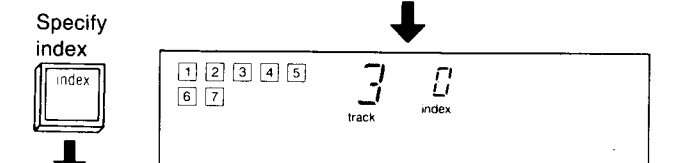

- Index numbers up to 99 can be specified.




- When the play button is pressed, disc play begins from index 2 of track 3.

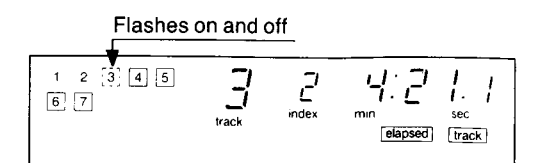


- When the end of the disc is reached, the player switches to the stop mode.

2-3. To play a disc from a specific starting time

■ For example, to play from the 2 min. 38.7 sec. point of track 5.

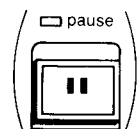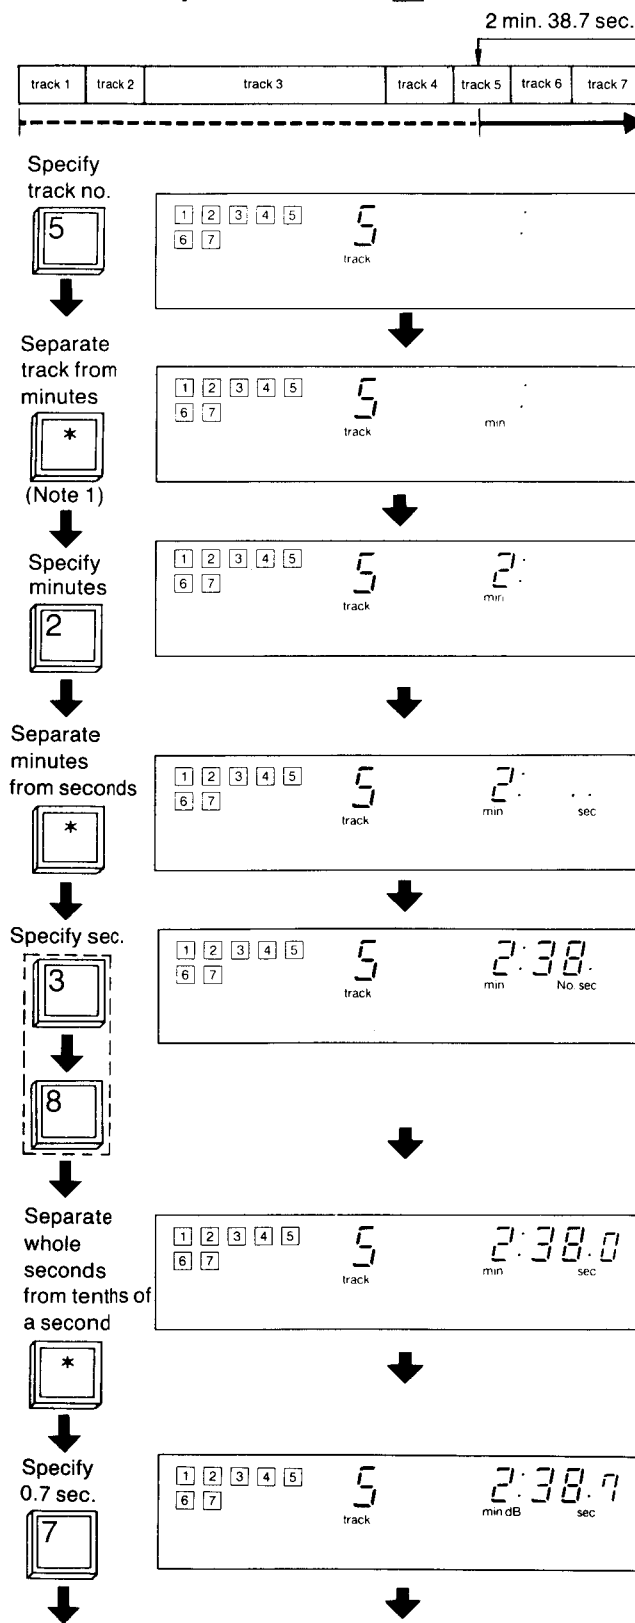


•When the play button is pressed, disc play begins from the 2 min. 38.7 sec. point of track 5.

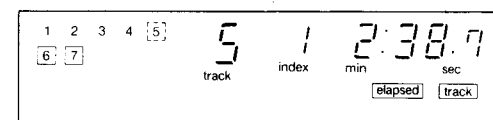

Note 1)

When no minutes are to be specified, for example, if play is to begin at the 38.7 sec. point of track 5, press the numeric button "0" or press the asterisk button twice in a row, as shown below.

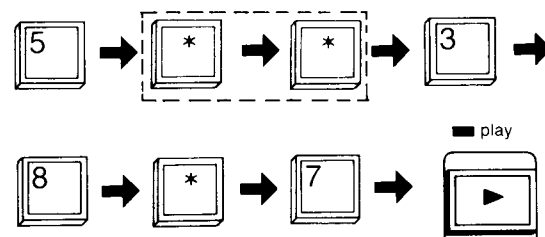


•An already specified time will be cancelled when a new time is entered or the clear button is pressed.

•If the starting time is specified while the unit is in the pause mode, press the pause button once and then press the play button to resume play. Not pressing the pause button will cause a short delay before sound is heard.

Restarting play from the same point of time (By means of starting time confirmation.)

- Press the time recall button during play.
- The starting time is shown for about 20 seconds on the display panel. During that time play continues.

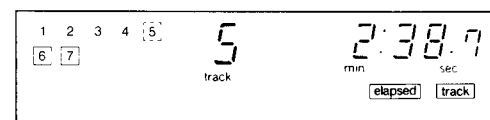

•If the play button is pressed during that time, play begins again from the location indicated on the display.


3 Program play

Using the program play function a maximum of 20 selections can be programmed in any sequence.



Index numbers can not be programmed.

3-1. Track program play (in any order)

■ For example, to play track 3, track 5 and track 1 in that order.

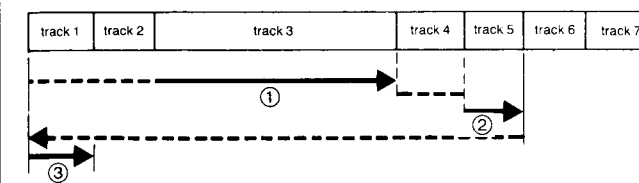


Specify track no.





(Note 1)

Specify track no.



Specify track no.



•When the play button is pressed, disc play begins from track 3.


Note 1) E (error) will be displayed momentarily if a track number not on the disc is specified. If more than 20 selections are entered "F" (full) is shown in the display panel and no further selections can be programmed.

•If an incorrect entry is made while the unit is in the stop mode, pressing the clear button will cancel the last program entry.

However, if the clear button is pressed during disc play or in the pause mode, all memory contents are cleared and disc play continues from the current point to the end of the disc (memory clear function).

•Programming two tracks in a row.

For example, if tracks 3-5-5-1 are programmed in that order, press the memory button twice, as shown below. The double numeric button operation may be abbreviated.

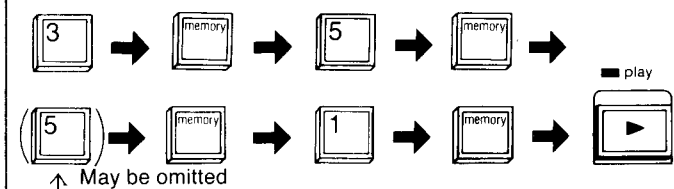

May be omitted

•After a track has been played its border goes out.

•The player switches to the stop mode when the last programmed track has been played.

4 Pitch control

This function allows fine adjustment of pitch (up to $\pm 8\%$).

1. Press the pitch control switch to "on".
The pitch control indicator illuminates.
2. Slide the pitch control knob upward or downward to the desired setting.

- When not using this function, press the pitch control switch again to release it (off).


Note:

In the center position (0) a "click" can be perceived. This position is the 0% standard pitch.

The +5.9% position is a half tone sharp ($\sharp$).

The -5.6% position is a half tone flat ($\flat$).

- When the pitch has been changed, the elapsed or remaining playing time readings will differ from the actual times by the amount of pitch adjustment.

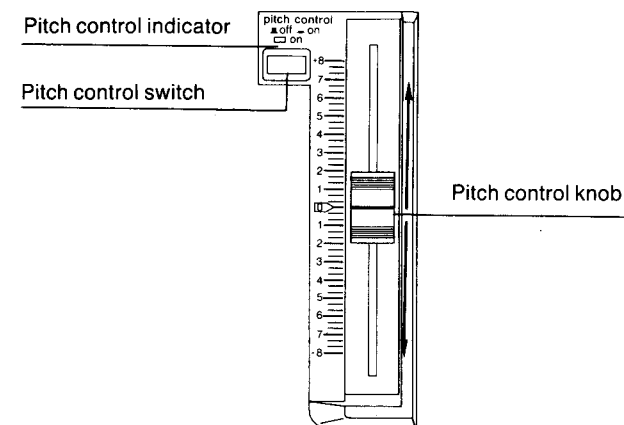

5 Skip play

(Skip play can be performed when the player is in the play or pause mode.)


This function allows quick access to the beginning of a track.

Note: Index skip play is not possible.

Forward skip


- The pickup skips the same number of tracks as the number of times the button is pressed.
- During automatic play, the pickup skips to the beginning of the next track each time the button is pressed.
- During program play or program repeat play, the pickup skips to the beginning of the next programmed track each time the button is pressed.
- While watching the track number display, press the forward skip button until the desired track has been located.

■ **Example:** To advance to the beginning of the fourth track and then to the beginning of the fifth track while listening to the third track.

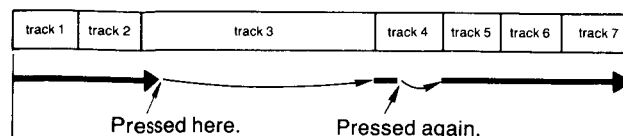

Forward skip

Press




Backward skip

- During automatic play, the pickup skips to the beginning of the current track. If pressed again quickly, the pickup skips to the beginning of the previous track.
- During program play (repeat function not activated), the pickup skips backward only to the beginning of the current track.
- During program repeat play, the pickup skips to the beginning of the current track. If pressed again quickly, the pickup skips to the beginning of the previous programmed track.
- The pickup skips the same number of tracks as the number of times the button is pressed.
- While watching the track number display, press the backward skip button until the desired track has been located.

Remember that for backward skip, the present track is included in the count.

■ **Example:** To return to the beginning of the third track and then to the beginning of the second track, while listening to the third track.

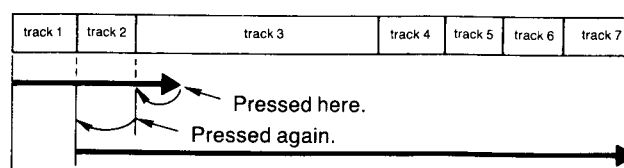

Backward skip

Press




6 Search play (forward/backward)

(Search play can be performed when the player is in the play or in the pause mode.)

This function allows search to any desired point on the disc.

A Search play using the forward and backward rocking/search buttons (Button search)


Forward and backward rocking/search buttons A

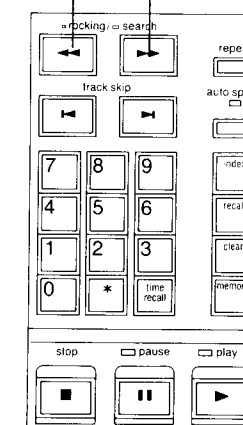

Depending on how these buttons are pressed, search with three different speeds is possible.



Forward button



Backward button

- 1 Press one of these buttons momentarily to move the pickup by one pit-track (one disc rotation). This allows very fine rocking search.
- 2 When one of these buttons is held down, the pickup will move slowly at first.
- 3 When one of these buttons is held down for more than about 3 seconds, the pickup will move rapidly.


- Release the button when the desired point has been reached (as shown by the display).

- If these buttons are pressed during play, sound can be heard during the search operation. During steps 2 and 3, the output level is decreased by -12 dB (1/4) compared with the normal level.

About rocking search

When two or more CD players are used at a time, as often happens in a studio for example, fade-in and fade-out of the units have to be timed exactly. The rocking search function is useful for this because it permits movement of the pickup across one pit-track (at inner diameter in about 0.13 second) each time either button is pressed momentarily.

B Search play using the search dial (Dial search)

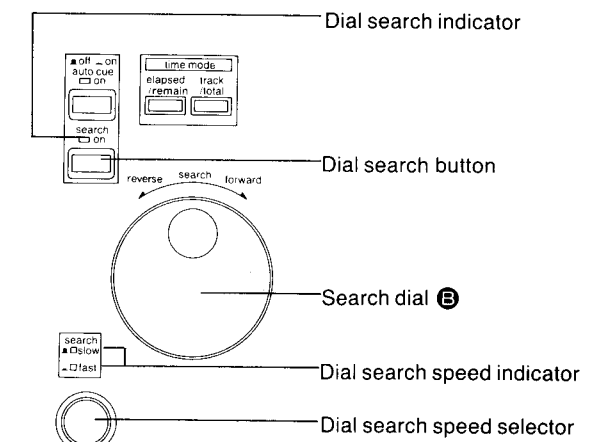

- Usually no sound can be heard while the unit is in the pause mode. However, if the dial search button is in the "on" position, sound can also be heard during the pause mode.

- Dial search can be performed at two different speeds depending upon the position (slow and fast).

- If the search dial is turned clockwise the pickup performs forward search, and if it is turned counterclockwise, the pickup performs backward search. However, when the dial search button is not in the "on" position and the dial search indicator (■) is not illuminated, dial search is not possible.

- 1 Press the dial search button "on".
The dial search indicator (■) illuminates.
The dial search speed indicator (■) for "slow" or "fast" illuminates also.
- 2 Press the dial search speed selector to change the selected search speed.


- Perform search while watching the display panel or listening to the sound from the disc. The sound level is not reduced during dial search.

Notes:


- The search speed changes according to the speed at which the search dial is turned. However, you can not force the pickup to search faster or slower than its predetermined limits.
- When dial search is performed with the unit in the play mode, the normal play speed of the pickup is added to (forward search) or subtracted from (backward search) the dial search speed.

7 Time mode display function (During play or in the pause mode.)

- The appropriate time mode indicators illuminate to show which time mode display has been selected.
- Pressing the elapsed/remain button will change the mode from elapsed time to remaining time or vice versa.
- Pressing the track/total button will change the mode from track time to total (disc or programmed) time or vice versa.
- When changing the time display mode, use the time mode indicators to confirm selection of the desired time display mode.

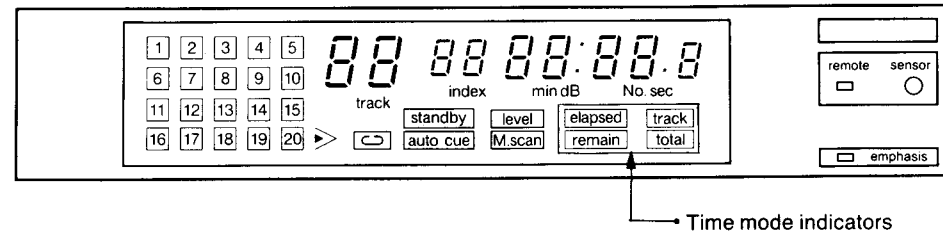

■ For example, if the time mode select button is pressed when playing a disc of 49 min. 58.3 sec. at a point 2 min. 10 sec. after the beginning of track 5:

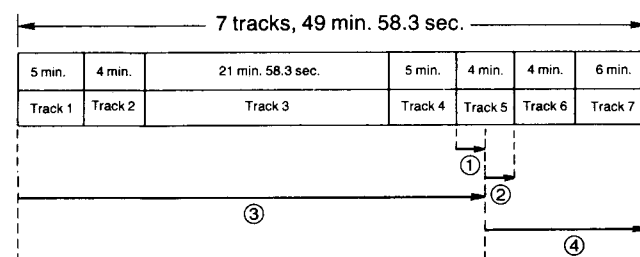

	Illuminated time mode indicators	Time display	Display panel
1	elapsed track	Elapsed playing time from the beginning of the current track.	
2	remain track	Remaining playing time of the current track.	
3	elapsed total	Playing time from the beginning of the first track. •During program play, the total remaining programmed playing time is displayed.	
4	remain total	Disc remaining playing time. •During program play, the total elapsed programmed playing time is displayed.	

Note:

- During random access play, skip play and search play, the total time from the beginning of the first track is displayed in mode 3.
(This is not an actual elapsed playing time.)
- Tracks skipped during program play are not included in the elapsed playing time.


8 Auto space function

Auto space function

When this function is activated, a silent interval of 3 seconds is created between all tracks.

This 3 seconds interval occurs instead of, not in addition to, any pause interval recorded on the disc.

- Press the auto space button.
Auto space indicator (■) on the display panel illuminates.
- The following diagram shows the silent interval between all songs is about 3 seconds.

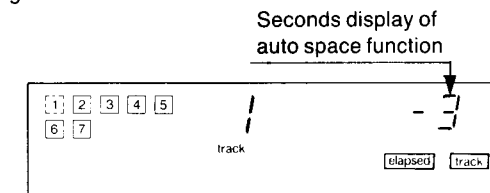

- At the beginning of each track -3, -2 and then -1 is displayed.
- Press this button again to cancel the auto space function.
The auto space indicator (■) goes out.

Note:

When the auto cue function is used together with auto space the auto space indicator illuminates, but only the auto cue function operates.

9 Auto cue function (automatic standby)


Auto cue function

At the beginning of each track on most discs, a silent interval of about one second is recorded. Therefore, when play is started from 0 min. 00 sec, music is not heard immediately. When the auto cue function is activated, the unit automatically detects the beginning of the music on each track and then switches to standby mode. When play is started from this point (by pressing the play button) music is heard immediately.

- 1 Press the auto cue button (■).
The auto cue indicator (■) above the button and the auto cue indicator on the display panel illuminate.
- 2 Press the play button.
The standby indicator on the display panel illuminates and the unit switches to the standby mode.
- 3 To start disc play, press the play button.
The next track will begin immediately.
The standby indicator will go out, but both auto cue indicators will remain illuminated.

Notes:

- In this mode, the unit will switch to standby at the beginning of each track. It is therefore necessary to press the play button to resume play at the beginning of every track.
- This function can also be used during program play. The unit will then switch to standby at the beginning of each programmed track.
- The illustration below shows that the unit is in the standby mode at the beginning of the music portion of track 1.

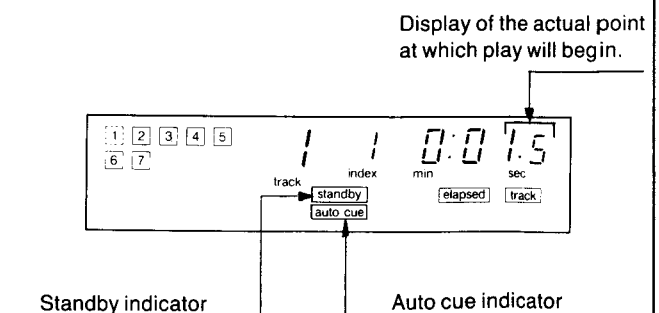


- If the auto cue button is pressed during play, this function is activated at the beginning of the next track.
- When not using this function, press the auto cue button again to release it (■). The standby and both auto cue indicators will go out.

■ CLEANING OF LENS

If the lens is stained causing sound skip or operation failure, open the top cover by pressing the open button, and clean the lens.

● To remove dust or dirt

Blow the lens with the blower provided in the cleaning kit to remove dust or dirt.

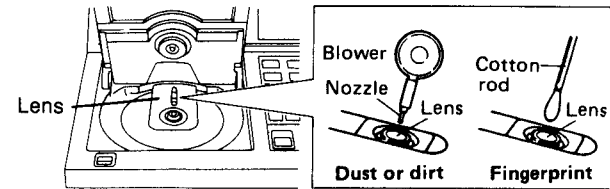


● To remove fingerprint

If the blower is not enough, moisten the cotton rod with the lens cleaner solution and wipe the lens with it from center of the lens to outside.

Cautions:

- Do not directly apply the cleaner solution to the lens. Do not apply too much solution to the cotton rod or otherwise the solution will flow into the player.
- Wipe the lens carefully. Do not give too much stress to the lens or otherwise it may scratch the lens or cause optical pickup trouble.
- If the solution should be too much applied, wipe the lens with a dry cotton rod.

Lens cleaning kit (Part No. : SZZP1038C)




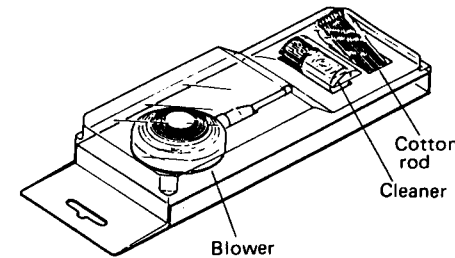


■ HANDLING PRECAUTIONS FOR OPTICAL PICKUP

The laser diode in the optical pickup may break down due to potential difference caused by static electricity of clothes or human body. So, be careful of electrostatic breakdown during repair of the optical pickup.

● Handling of optical pickup

1. Do not give excessive shock to the optical pickup because it is of extremely precise structure.
2. To prevent the breakdown of the laser diode, an anti-static shorting pin is inserted into the flexible board. (FPC board)
When removing or connecting the short pin, finish the job in as short time as possible.
3. Take care not to apply excessive stress to the flexible board. (FPC board)
4. Do not turn the variable resistor (laser power adjustment). It has already been adjusted.

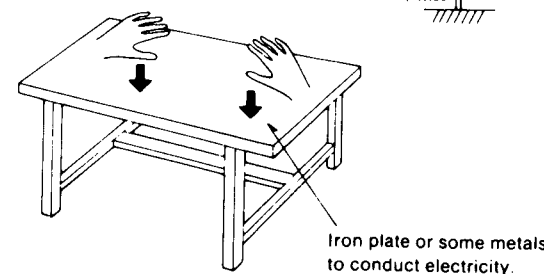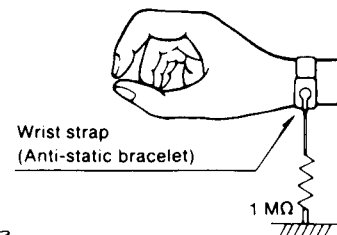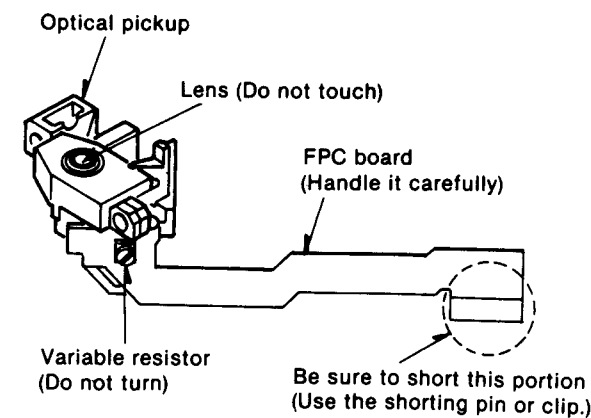

● Grounding for electrostatic breakdown prevention

1. Human body grounding
Use the anti-static wrist strap to relieve the static electricity from your body.
2. Work table grounding
Put a conductive material (sheet) or steel sheet on the area where the optical pickup is placed, and ground the sheet.

Caution:

The static electricity of your clothes will not be grounded through the wrist strap. So, take care not to let your clothes touch the optical pickup.

■ DISASSEMBLY INSTRUCTIONS

● Cautions for laser diode light emission

In this unit, the compact disc information is read by the laser beam diffused from the laser diode in the optical pickup. It is dangerous to directly look at the laser beam or to let it touch your body. During the normal operation of this unit, the laser diode will not emit light unless the disc holder is closed and S101 (laser ON/OFF switch) is turned ON. When servicing the unit, note that the laser diode emits lights if power switch is turned on with S101 ON.

● This unit uses FPC and care should be taken during assembly and disassembly.


Ref. No.	How to remove the front panel and check the main unit	
1		
Procedure 1	1. Remove the 5 setscrews.	2. Lift the front panel and pull out the power switch connector (CN1). 3. Remove the lead wire (headphone, pitch control VR) from its holder on the front panel. Cut off the lead wire clumper.

4. Check the main unit as shown in the figure below.

Note: When checking the main unit power on.
a. Pull out the connector CN451 on the laser switch control P.C.B. and short it with a clip.
b. Remove the disc clumper magnet. (See page 18, Ref. No. 6.)
c. Place a disc on the disc tray, and then, place the disc clumper magnet on it.
d. Connect CN1 on the power P.C.B. with the lead wire.

Caution regarding laser radiation
It is extremely dangerous to look at or touch laser radiation. Care must be taken when handling to prevent radiation exposure.


5. Otherwise, remove the main circuit P.C.B., and check as shown below.
(See page 18, Ref. No. 8.)

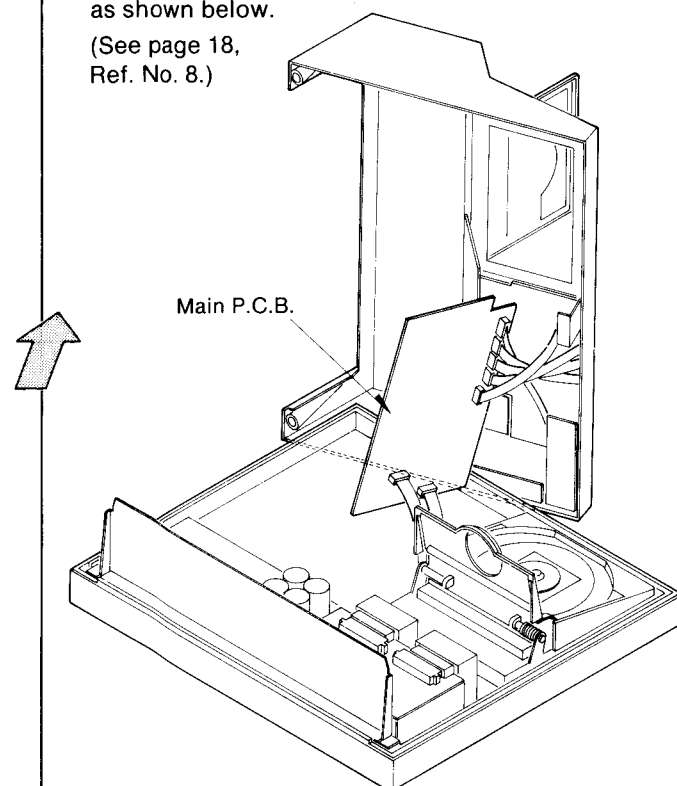


Ref. No. 3
How to remove the operation buttons

Procedure
1 → 2 → 3

1. Pull out the search dial and pitch control knob.

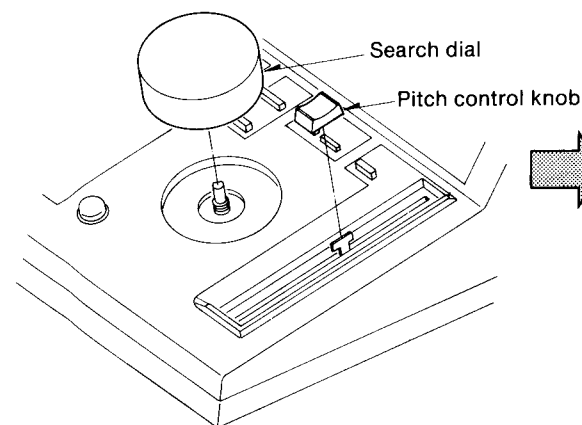


Note: When replacing the pitch control knob, it must be properly aligned.
(See figure below.)

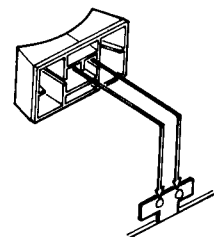


Ref. No. 2
How to remove the operation P.C.B. and FL P.C.B.

Procedure
1 → 2


• Remove the 20 setscrews.

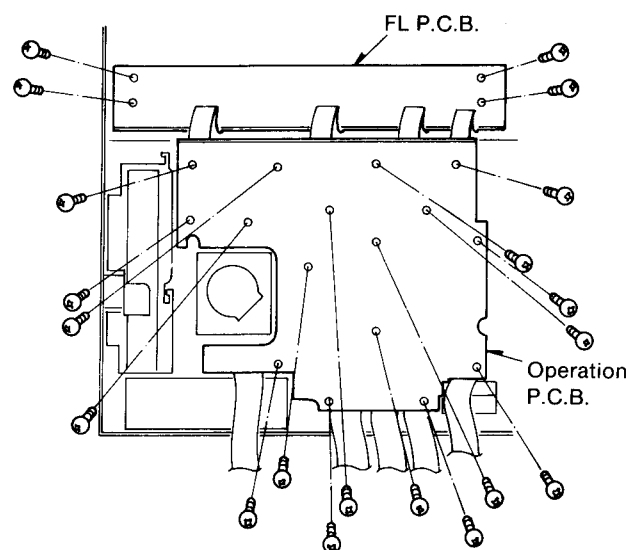

2. Remove the 13 setscrews. Remove the search volume, pitch control volume, headphone P.C.B. and the 2 metal pieces which hold the panel.

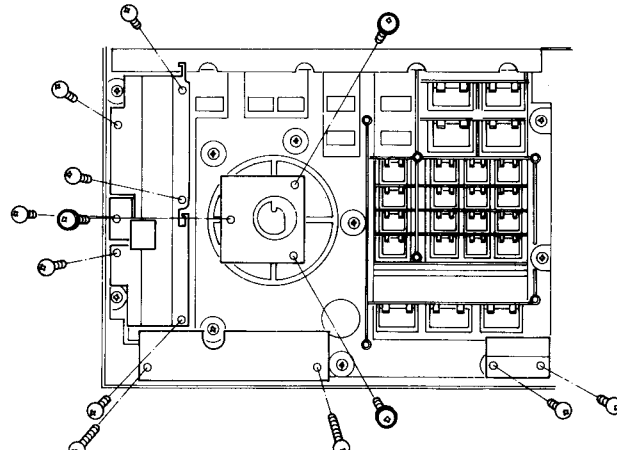


3. Remove the 12 setscrews.

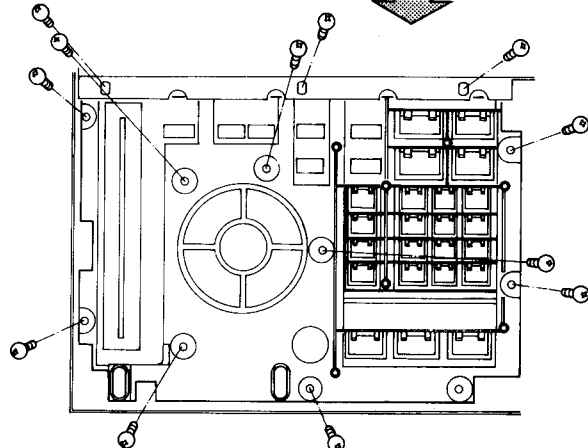

Ref. No. 4
How to remove the open button and plunger

Procedure
1 → 4


1. Remove the 4 setscrews **A**.
2. Remove the 2 setscrews **B**.

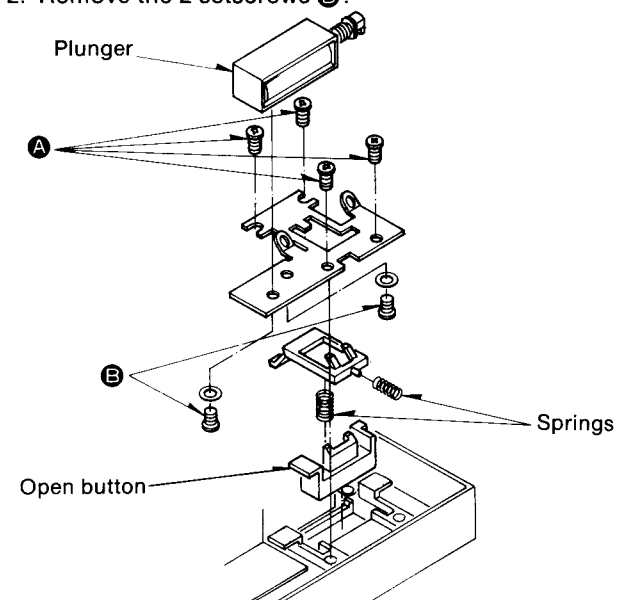

Ref. No. 5
How to remove the disc compartment panel

Procedure
1 → 5


1. Remove the spring from the damper fitting plate.
2. Remove the 3 setscrews (1~3). Remove the damper fitting plate.
3. Remove the 2 setscrews (4 and 5).

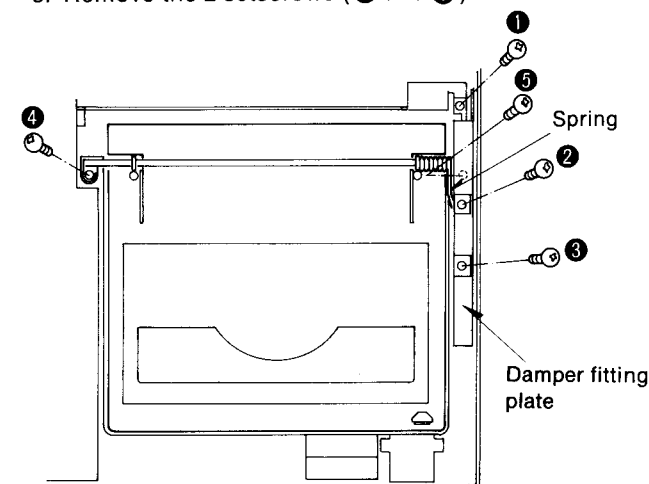

Ref. No. 6
How to remove the disc clamber magnet

Procedure
1 → 6


• Remove the 3 setscrews.

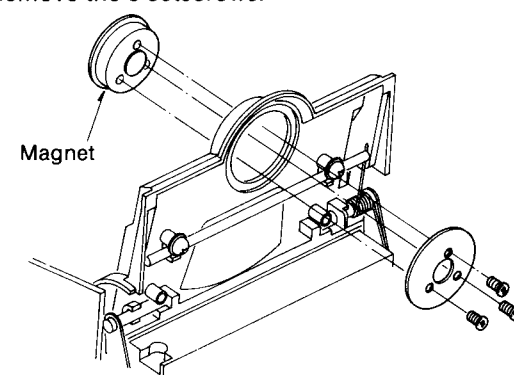

Ref. No. 7
How to remove the power switch

Procedure
1 → 7

• Remove the 2 setscrews.

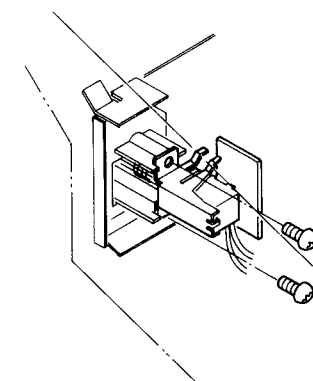

Ref. No. 8
How to remove the audio P.C.B. and main P.C.B.


Procedure
1 → 8




• **Audio P.C.B.**




1. Remove the 4 setscrews (1~4).
2. Remove the P.C.B. from its supports (arrows **A** → **B**).

• **Main P.C.B.**

1. Remove the 4 setscrews (5~8).
2. Remove the P.C.B. from its supports (arrows **A** → **B**).

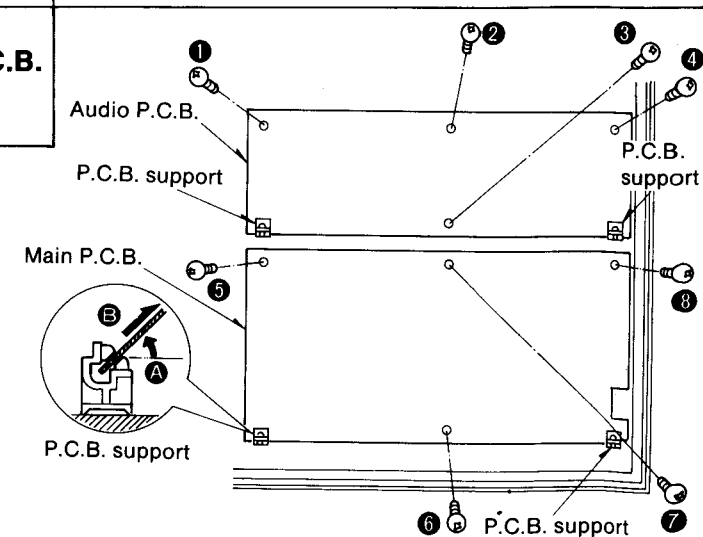

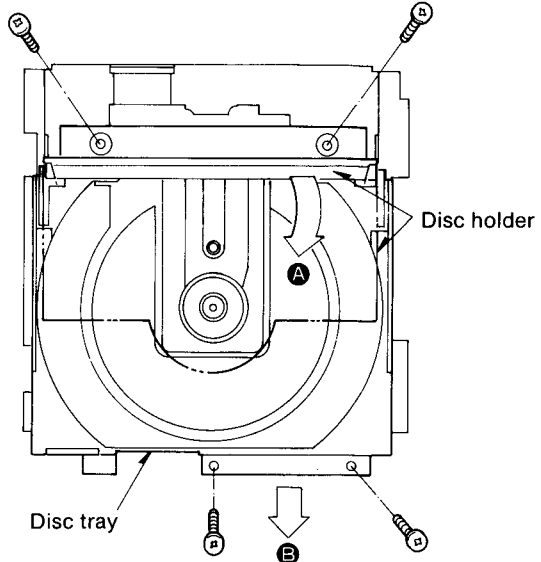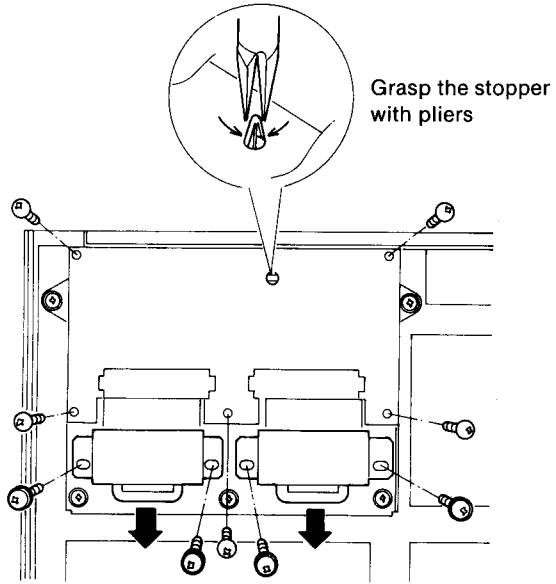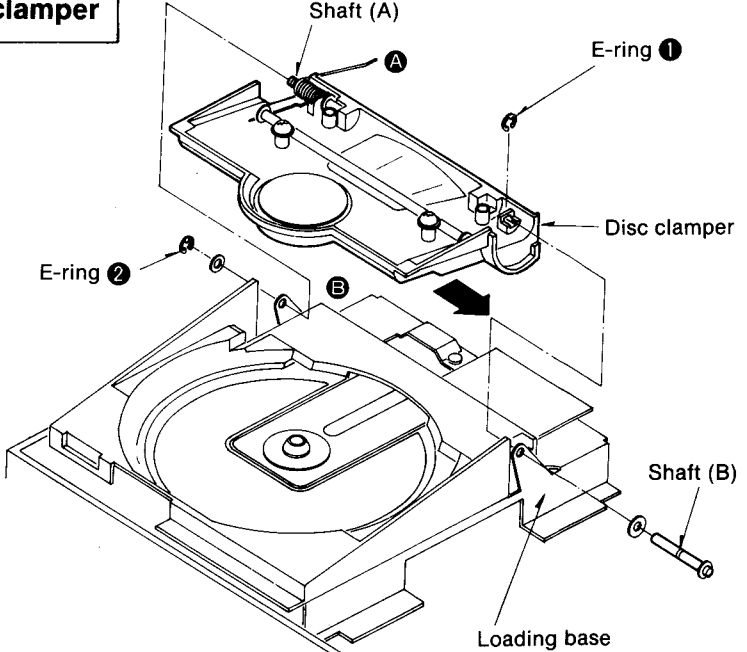Ref. No. 9	How to remove the disc tray	
Procedure 1 ⇨ 9	1. Remove the 4 setscrews. 2. Lower the disc holder as shown by arrow A. 3. Remove the disc tray in the direction indicated by arrow B.	
Ref. No. 10	How to remove the power transformer	
Procedure 1 ⇨ 10	1. Remove the 9 setscrews. 2. Remove the stopper on the power P.C.B. with pliers. 3. Pull off the power transformer in the direction indicated by the arrows.	
Ref. No. 11	How to remove the disc clammer	
Procedure 1 ⇨ 11	1. Remove the 2 E-rings (1 and 2). 2. Pull out the shaft (B). 3. Remove the disc clammer in the direction shown by the arrow. To install 1. Hook part A of the clamp spring on part B of the loading base. 2. Insert the shaft (A) into the hole of the loading base, and place E-ring 2. 3. Insert the shaft (B) into the hole of the loading base, and place E-ring 1.	

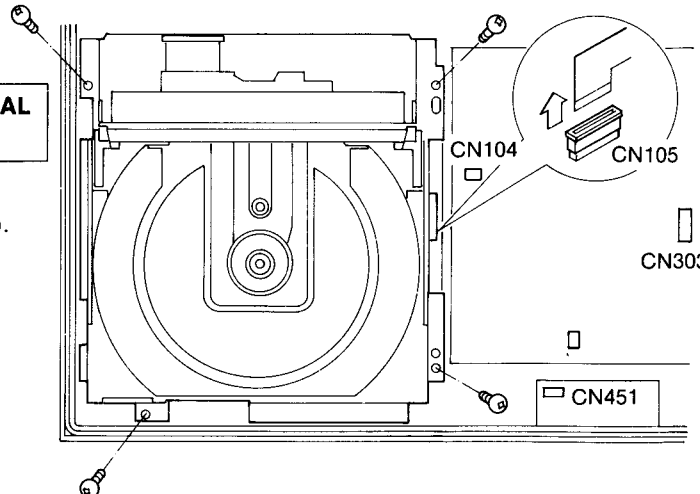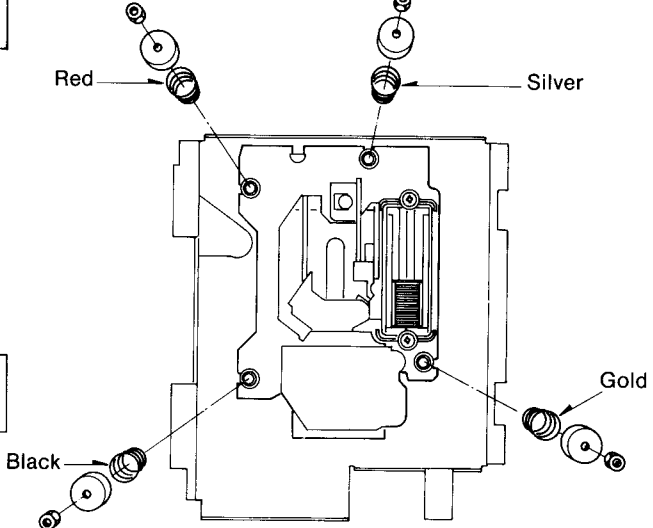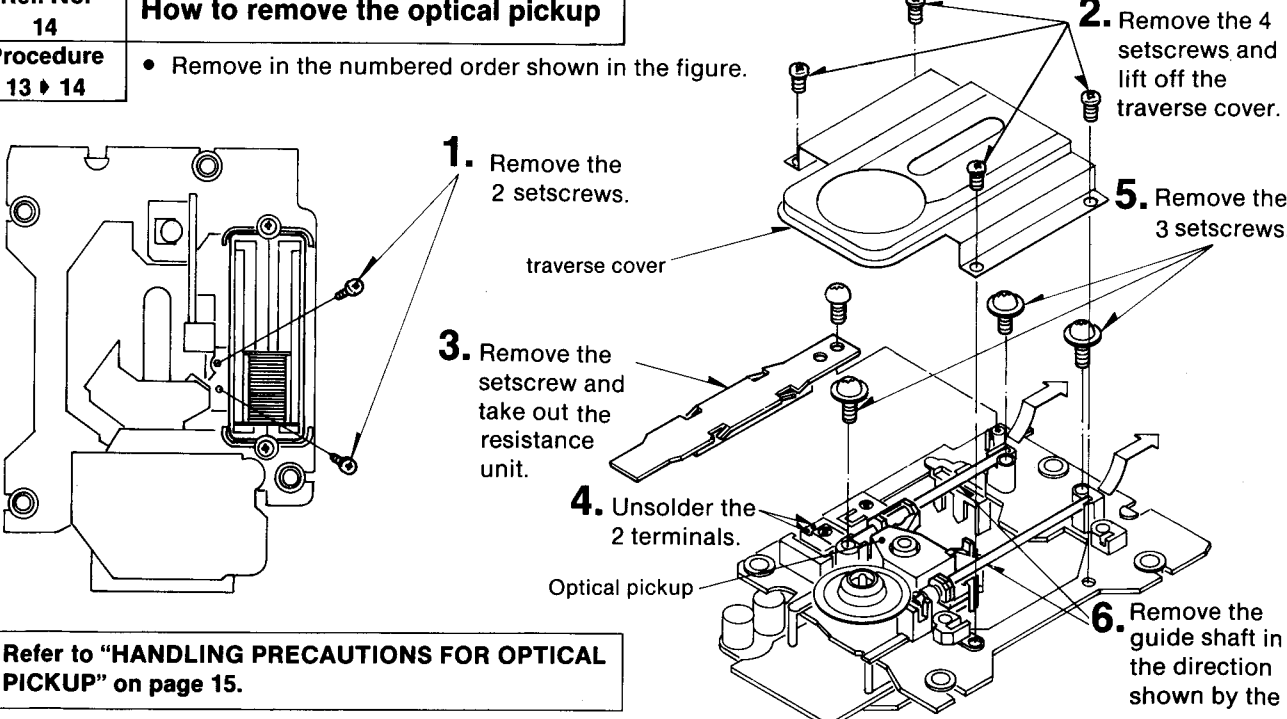Ref. No. 12	How to remove the traverse unit assembly	
Procedure 1 ⇨ 12	Refer to "HANDLING PRECAUTIONS FOR OPTICAL PICKUP" on page 15. 1. Remove the 4 setscrews. 2. Remove the 3 connectors (CN104, CN303, CN451). 3. Remove the flexible board (CN105). Note: To prevent damage to the laser diode, insert the shorting pin into the flexible board.	
Ref. No. 13	How to remove the traverse deck	
Procedure 12 ⇨ 13	Remove the 4 nuts. Note: The 4 springs are different colors and must be reinstalled in their original positions. Refer to "HANDLING PRECAUTIONS FOR OPTICAL PICKUP" on page 15.	
Ref. No. 14	How to remove the optical pickup	
Procedure 13 ⇨ 14	- Remove in the numbered order shown in the figure. 1. Remove the 2 setscrews. 2. Remove the 4 setscrews and lift off the traverse cover. 3. Remove the setscrew and take out the resistance unit. 4. Unsolder the 2 terminals. 5. Remove the 3 setscrews. 6. Remove the guide shaft in the direction shown by the arrows. Refer to "HANDLING PRECAUTIONS FOR OPTICAL PICKUP" on page 15.	

■ RESISTORS AND CAPACITORS

Notes: * Important safety notice:

Components identified by Δ mark have special characteristics important for safety. When replacing any of these components use only manufacturer's specified parts.

* Bracketed indications in Ref. No. columns specify the area.

Parts without these indications can be used for all areas.

Numbering System of Resistor

Example

ERD	25	F	J	102
Type	Wattage	Shape	Tolerance	Value
ERX	2	AN	J	471
Type	Wattage	Shape	Tolerance	Value
				47x10 ¹ (ohm)

Numbering System of Capacitor

Example

ECKD	1H	102	Z	F
Type	Voltage	Value	Tolerance	Peculiarity
ECEA	50		M	330
Type	Voltage		Peculiarity	Value
				(33x10 ⁰ microfarad)

Resistor Type	Wattage	Tolerance
ERD : Carbon	10 : 1/8W	J : ±5%
ERG : Metal Oxide	12 : 1/2W	F : ±1%
ERX : Metal Film	25 : 1/4W	G : ±2%
ERQ : Fuse Type Metal	1A : 1W	K : ±10%
ERD [] L : Carbon (chip)	18 : 1/8W	
ERD [] K : Metal Film (chip)	S2 : 1/4W	
ERC : Solid	S1 : 1/2W	
	2F : 1/4W	
	50 : 1/2W	
	2A : 2W	

Capacitor Type	Voltage	Tolerance
ECE : Electrolytic	0J : 6.3V	C : ±0.25pF
ECCD : Ceramic	1A : 10V	J : ±5%
ECKD : Ceramic	1C : 16V	K : ±10%
ECQM : Polyester	1E : 25V	Z : ±80%
	1H : 50V	-20%
ECQP : Polypropylene	1V : 35V	P : ±100%
	50 : 50V	-0%
ECG : Ceramic	05 : 50V	M : ±20%
ECEADDN : Non Polar Electrolytic	2H : 500V	
QCU [] : Ceramic (Chip Type)	2A : 100V	D : ±0.5pF
ECUX : Ceramic (Chip Type)	1 : 100V	G : ±2%
ECF : Semiconductor	KC : 400V AC	
	KC : 125VAC (UL)	
EECW : Liquid electrolyte double layer capcitor	1J : 63V	

Ref. No.	Part No.	Part Code	Ref. No.	Part No.	Part Code	Ref. No.	Part No.	Part Code
RESISTORS								
R11	ERDS2TJ822	001 152 2455 0	R143	ERDS2TJ474	001 152 2443 4	R334	ERDS2TJ684	001 152 2451 4
R12	ERDS2TJ472	001 152 2362 4	R144	ERDS2TJ223	001 152 2432 7	R335	ERDS2TJ472	001 152 2362 4
R13, R14	Δ ERDS2TJ151	001 152 2426 5	R145	ERDS2TJ224	001 152 2433 6	R336	ERDS2TJ272	001 152 2354 4
R15, R16	Δ ERDS2TJ151	001 152 2426 5	R146	ERDS2TJ473	001 152 2363 3	R351	ERDS2TJ102	001 152 2346 4
R101	ERDS2TJ392	001 152 2439 0	R147	ERDS2TJ223	001 152 2432 7	R352	ERDS2TJ474	001 152 2443 4
R102	ERDS2TJ222	001 152 2353 5	R148	ERDS2TJ473	001 152 2363 3	R353, R354	ERDS2TJ472	001 152 2362 4
R103	ERDS2TJ273	001 152 2436 3	R149, R150	ERDS2TJ222	001 152 2353 5	R355	ERDS2TJ332	001 152 2357 1
R104	ERDS2TJ223	001 152 2432 7	R151	ERDS2TJ392	001 152 2439 0	R356	ERDS2TJ272	001 152 2354 4
R105	ERDS2TJ182	001 152 2352 6	R152	ERDS2TJ101	001 152 2421 0	R357	ERDS2TJ183	001 152 2429 2
R106	ERDS2TJ473	001 152 2363 3	R153	ERDS2TJ103	001 152 2347 3	R358, R359	ERDS2TJ104	001 152 2348 2
R107	ERDS2TJ274	001 152 2437 2	R154	ERDS2TJ392	001 152 2439 0	R360, R361	ERDS2TJ222	001 152 2353 5
R109, R110	ERDS2TJ473	001 152 2363 3	R155	ERDS2TJ101	001 152 2421 0	R362, R363	ERDS2TJ103	001 152 2347 3
R111, R112	ERDS2TJ274	001 152 2437 2	R156	ERDS2TJ223	001 152 2432 7	R364, R365	ERDS2TJ103	001 152 2347 3
R113, R114	ERDS2TJ473	001 152 2363 3	R157	ERDS2TJ473	001 152 2363 3	R366	ERDS2TJ274	001 152 2437 2
R115	ERDS2TJ102	001 152 2346 4	R158	ERDS2TJ683	001 152 2450 5	R367	ERDS2TJ823	001 152 2456 9
R116	ERDS2TJ472	001 152 2362 4	R159	ERDS2TJ272	001 152 2354 4	R368	ERDS2TJ473	001 152 2363 3
R117	ERDS2TJ270	001 152 2434 5	R160, R161	ERDS2TJ102	001 152 2346 4	R369	ERDS2TJ121	001 152 2349 1
R118	ERDS2TJ3R3	001 152 3152 8	R162, R163	ERDS2TJ102	001 152 2346 4	R370	ERDS2TJ331	001 152 2356 2
R119	ERDS2TJ101	001 152 2421 0	R164	ERDS2TJ822	001 152 2455 0	R372	ERDS2TJ221	001 152 2431 8
R120	ERDS2TJ270	001 152 2434 5	R165	ERDS2TJ682	001 152 2365 1	R373	ERDS2TJ391	001 152 2360 6
R121	ERDS2TJ3R3	001 152 3152 8	R166, R167	ERDS2TJ222	001 152 2353 5	R374	ERDS2TJ681	001 152 2449 8
R122	ERDS2TJ153	001 152 2351 7	R168	ERDS2TJ682	001 152 2365 1	R375	ERDS2TJ220	001 152 2430 9
R123	ERDS2TJ101	001 152 2421 0	R169	ERDS2TJ822	001 152 2455 0	R376	ERDS2TJ101	001 152 2421 0
R124	ERDS2TJ103	001 152 2347 3	R170	ERDS2TJ334	001 152 2438 1	R401	ERDS2TJ104	001 152 2348 2
R125	ERDS2TJ104	001 152 2348 2	R171	ERDS2TJ223	001 152 2432 7	R402, R403	ERDS2TJ222	001 152 2353 5
R126	ERDS2TJ152	001 152 2350 8	R172, R173	ERDS2TJ472	001 152 2362 4	R404, R405	ERDS2TJ222	001 152 2353 5
R127	ERDS2TJ682	001 152 2365 1	R174	ERDS2TJ154	001 152 2427 4	R406	ERDS2TJ105	001 152 2422 9
R128	ERDS2TJ153	001 152 2351 7	R175	ERDS2TJ120	001 152 3146 6	R407, R408	ERDS2TJ474	001 152 2443 4
R129	ERDS2TJ224	001 152 2433 6	R176	ERDS2TJ471	001 152 2361 5	R409, R410	ERDS2TJ472	001 152 2362 4
R130	ERDS2TJ122	001 152 2423 8	R177	ERDS2TJ681	001 152 2449 8	R411, R412	ERDS2TJ103	001 152 2347 3
R131, R132	ERDS2TJ333	001 152 2358 0	R178	ERDS2TJ270	001 152 2434 5	R413, R414	ERDS2TJ103	001 152 2347 3
R133	ERDS2TJ102	001 152 2346 4	R179	ERDS2TJ472	001 152 2362 4	R415	ERDS2TJ472	001 152 2362 4
R134	ERDS2TJ392	001 152 2439 0	R301	ERDS2TJ822	001 152 2455 0	R419, R420	ERDS2TJ223	001 152 2432 7
R135	ERDS2TJ102	001 152 2346 4	R303	ERDS2TJ474	001 152 2443 4	R421, R422	ERDS2TJ223	001 152 2432 7
R136	ERDS2TJ182	001 152 2352 6	R304, R305	ERDS2TJ223	001 152 2432 7	R423, R424	ERDS2TJ223	001 152 2432 7
R137	ERDS2TJ681	001 152 2449 8	R306	ERDS2TJ152	001 152 2350 8	R425, R426	ERDS2TJ223	001 152 2432 7
R138	ERDS2TJ153	001 152 2351 7	R307	ERDS2TJ102	001 152 2346 4	R427	ERDS2TJ223	001 152 2432 7
R139	ERDS2TJ223	001 152 2432 7	R308	ERDS2TJ103	001 152 2347 3	R428	ERDS2TJ392	001 152 2439 0
R140	ERDS2TJ821	001 152 2454 1	R309	ERDS2TJ104	001 152 2348 2	R429, R430	ERDS2TJ472	001 152 2362 4
R141	ERDS2TJ333	001 152 2358 0	R311	ERDS2TJ103	001 152 2347 3	R431, R432	ERDS2TJ472	001 152 2362 4
R142	ERDS2TJ222	001 152 2353 5	R312	ERDS2TJ122	001 152 2423 8	R433	ERDS2TJ472	001 152 2362 4
			R331	ERDS2TJ102	001 152 2346 4	R434	ERDS2TJ332	001 152 2357 1
			R332, R333	ERDS2TJ101	001 152 2421 0	R435	ERDS2TJ103	001 152 2347 3

Ref. No.	Part No.	Part Code	Ref. No.	Part No.	Part Code	Ref. No.	Part No.	Part Code
R436, R437	ERDS2TJ101	001 152 2421 0	C105	ECQM1H224KVW	001 106 5164 6	C356	RCBS1C472MXY	
R438	ERDS2TJ683	001 152 2450 5	C107, C108	ECEA1HKNR22B		C357, C358	RCBS1H100JCY	001 103 5563 0
R439	ERDS2TJ333	001 152 2358 0	C109	ECEA1HN2R2SE		C359, C360	RCBS1C103MY	001 103 8060 6
R440	ERDS2TJ103	001 152 2347 3	C110	ECQM1H122KVW		C361, C362	RCBS1C103MY	001 103 8060 6
R444, R445	ERDS2TJ153	001 152 2351 7	C111	ECQM1H473JZ	001 106 0810 9	C363, C364	RCBS1C103MY	001 103 8060 6
R446	ERDS2TJ153	001 152 2351 7	C112	ECFR1H104ZFM	001 108 0794 2	C365	RCBS1C103MY	001 103 8060 6
R447, R451	ERDS2TJ103	001 152 2347 3	C113	ECQM1H153KV3	001 106	C366	ECEA1HN0101S	001 120 0354 0
R452	ERDS2TJ102	001 152 2346 4	C114	ECEA1HN3R3S	001 120 0358 6	C367	RCBS1H220JLY	001 103 5601 1
R454	ERDS2TJ472	001 152 2362 4	C115	ECFR1H104ZFM	001 108 0794 2	C368	RCBS1H101KBY	001 103 5569 4
R455	ERDS2TJ224	001 152 2433 6	C116	ECQM1H153KV3	001 106	C369	RCBS1H102KBY	001 103 5571 0
R456	ERDS2TJ101	001 152 2421 0	C117	ECQM1H104KV3		C370	RCBS1H271KBY	001 103 5611 9
R457	ERDS2TJ223	001 152 2432 7	C118	ECQM1H104JZ	001 106 0675 8			
R458	ERDS2TJ472	001 152 2362 4	C119	ECEA0JU471	001 120 2924 0	C401	ECFR1H104ZFM	001 108 0794 2
R460	ERDS2TJ101	001 152 2421 0	C120	ECEA1HKNR33	001 120 0337 1	C402	ECKD1H103PF	001 103 1449 7
R501	ERJ8GEXK1R5	001 151 6260 8	C121	ECKW1H182KB5		C403	ECFR1H104ZFM	001 108 0794 2
R502	ERJ8GEXK1R0		C122	ECKD1H682KB	001 103 1592 1	C404	ECEA0JU470	001 120 3125 9
R503	ERJ8GEYJ223	001 151 5630 6	C123	ECQM1H333KVW		C405, C406	ECKR1H103ZF5	
R601, R602	ERDS2TJ471	001 152 2361 5	C124	ECCD1H221K	001 103 0508 7	C407, C408	ECKR1H103ZF5	
R603, R604	ERDS2TJ471	001 152 2361 5	C125	ECEA1HU010	001 120 2842 1	C409	ECEA1CU100	001 120 2905 3
R605	ERDS2TJ471	001 152 2361 5	C126	ECEA0JU220	001 120 4670 5	C410	ECCD1H220KC	001 103 0494 6
R607	ERDS2TJ331	001 152 2356 2	C127	ECKD1H681K	001 103 1580 5	C412	ECEA1CU100	001 120 2905 3
R608	ERDS2TJ151	001 152 2426 5	C128	ECKD1H103PF	001 103 1449 7	C414	ECEA0JU101	001 120 2829 8
R609	ERDS2TJ181	001 152 2428 3	C129, C130	ECCD1H221K	001 103 0508 7	C415, C416	ECBS1H102KBY	001 103 3504 9
R610, R611	ERDS2TJ471	001 152 2361 5	C131, C132	ECKD1H102KB	001 103 1414 8	C417	ECBS1H102KBY	001 103 3504 9
R612	ERDS2TJ473	001 152 2363 3	C133	ECFR1H104ZFM	001 108 0794 2	C420	ECEA0JU220	001 120 4670 5
R801, R802	ERDS2TJ272	001 152 2354 4	C134	ECEA1HU010	001 120 2842 1	C451	ECKR1H103ZF5	
R803, R804	ERDS2TJ272	001 152 2354 4	C135	ECEA1HKNR01	001 120 0340 6	C452	ECEA1HN2R2S	001 120 0356 8
R821, R822	ERDS2TKG10R0	001 151 4827 9	C136	ECCD1H220KC	001 103 0494 6	C455	ECEA1CU100	001 120 2905 3
R823, R824	ERDS2TKG33R0	001 151 4828 8	C139	ECKD1H681K	001 103 1580 5	C501	ECEV1EV330	001 120 5624 7
R825, R826	ERDS2TKG1001	001 151 3320 5	C140, C141	ECKD1H102KB	001 103 1414 8	C502	ECEV1H010	001 120 5625 6
R827, R828	ERDS2TKG3301	001 151 3338 5	C142, C143	ECEA1CU100	001 120 2905 3	C504	GR426B273K25	001 103 7125 0
R829, R830	ERDS2TKG1004		C144	ECEA0JU470	001 120 3125 9	C506	GR426B152K50	001 120 5626 5
R831, R832	ERDS2TKG10R0	001 151 4827 9	C145	ECKR1H103ZF5		C507	GR426B104Z25	
R833, R834	ERDS2TKG33R0	001 151 4828 8	C146	ECEA0JS221	001 120 2925 9	C511, C512	ECEA1EN470S	001 120 2394 4
R835, R836	ERDS2TKG1001	001 151 3320 5	C148	ECKR1H103ZF5		C513	ECEA1EN470S	001 120 2394 4
R837, R838	ERDS2TKG3301	001 151 3338 5	C149, C150	ECQM1H333JZ	001 106 0779 1	C801, C802	△ ARP1V332M0	001 120 5666 7
R839, R840	FSR25TJ101T2	001 152 6552 4	C151	ECQM1H102JZ	001 106 0661 4	C805, C806	ARA1A470MOT	001 120 5663 0
R845, R846	ERDS2TJ104	001 152 2348 2	C152	ECQM1H153KV3	001 106	C807, C808	ARP1V332M0	001 120 5666 7
R851, R852	ERDS2TJ392	001 152 2439 0	C153	ECEA0JS221	001 120 2925 9	C811, C812	ARA1A470MOT	001 120 5663 0
R853, R854	ERDS2TJ273	001 152 2436 3	C154	ECKD1H681K	001 103 1580 5	C813, C814	REC1E471M0	001 120 5669 4
R855, R856	ERDS2TJ121	001 152 2349 1	C155	ECKD1H222KB	001 103 1494 2	C815, C816	ARA1H010MOT	001 120 5694 3
R857, R861	ERG1ANJ820	001 151 0091 1	C156	ECFF1H104ZF	001 108 0906 2	C817	△ ECKR1H103ZF5	
R891, R892	FSR25TJ470T2		C158	ECCR1H820K5		C821	ECEA0JU470	001 120 3125 9
R893, R894	FSR25TJ470T2		C159	ECFF1C104ZF	001 108 0983 9	C822	ECKR1H103ZF5	
R895, R896	ERDS2TJ103	001 152 2347 3	C301	ECEA1HN2R2S	001 120 0356 8	C823, C824	ARA1C331M0	001 120 5665 8
CAPACITORS			C302, C306	ECFR1H104ZFM	001 108 0794 2	C825, C826	ARA1C331M0	001 120 5665 8
C1	△ ECKDKC103PF2	001 103 3734 7	C307	ECFR1H104ZFM	001 108 0794 2	C827, C828	CQS2B391JCF	001 106 4821 0
C11	ECEA1HU010	001 120 3252 3	C308	ECKD1H471KB	001 103 1551 0	C829, C830	CQS2B103JCD	001 106 5208 1
C12, C13	ECEA1AU221	001 120 3131 1	C309, C310	ECFF1H104ZF	001 108 0906 2	C831, C832	ARA1C221M0	001 120 5664 9
C14, C15	ECEA1CU100	001 120 2905 3	C311	ECFR1H104ZFM	001 108 0794 2	C833, C834	ARA1C221M0	001 120 5664 9
C16, C17	ECEA0JS221	001 120 2925 9	C312	ECEA1HN2R2S	001 120 0356 8	C835, C836	ARA1CN101M0	001 120 5643 4
C18, C19	△ ECEA1CU222	001 120 3074 3	C331	ECQV1H474JZ3		C839	ECQP1102JZ	001 106 1069 0
C22	ECKR1H103ZF5		C332	ECEA0JU470	001 120 3125 9	C840, C841	RBP1CN220CT	001 120 5015 6
C23, C24	ECEA1EU471	001 120 2907 1	C333	ECKD1H103PF	001 103 1449 7	C851, C852	ECKD1H103PF	001 103 1449 7
C25, C26	ECEA1CU100	001 120 2905 3	C335, C336	ECEA0JU101	001 120 2829 8	C853	ECFD1H104ZF	001 108 0906 2
C101	ECQM1H104KV3		C351, C352	RCBS1C103MY	001 103 8060 6	C854	ECEA1CU331	001 120 3200 5
C103	ECEA1HN2R2S	001 120 0356 8	C353	RCBS1C472MXY		C855	ECFD1H104ZF	001 108 0906 2
C104	ECQM1H103JZ	001 106 0667 8	C354	ECCD1H220JU5		C856	ECEA1CU331	001 120 3200 5
			C355	ECCD1H330JU5		C891, C892	ECOP1102JZ	001 106 1069 0

■ REPLACEMENT PARTS LIST

Notes: * Important safety notice:

Components identified by Δ mark have special characteristics important for safety. When replacing any of these components use only manufacturer's specified parts.

* Bracketed indications in Ref. No. columns specify the area.

Parts without these indications can be used for all areas.

Ref. No.	Part No.	Part Code	Description	Ref. No.	Part No.	Part Code	Description
INTEGRATED CIRCUITS				Q412	2SD638	001 030 1798 3	TRANSISTOR
IC11	Δ AN78M05	001 060 4137 4	I.C.	Q413	2SD682	001 030 2415 7	TRANSISTOR
IC12	Δ AN79N05	001 060 8714 7	I.C.	Q414, Q452	UN4212	001 030 3019 1	TRANSISTOR
IC13	AN79N12	001 060 4721 4	I.C.	Q453	UN4112	001 030 3018 2	TRANSISTOR
IC14	AN79L12	001 060 9072 4	I.C.	Q454	UN4214	001 030 4835 3	TRANSISTOR
IC101	AN8370S	001 060 8399 8	I.C.	Q455	UN4212	001 030 3019 1	TRANSISTOR
IC102, IC103	AN6554NS	001 060 4860 4	I.C.	Q456	2SK301	001 030 2428 2	TRANSISTOR
IC104	AN6552S	001 060 7386 7	I.C.	Q457, Q458	UN4212	001 030 3019 1	TRANSISTOR
IC105	AN6914S	001 060 3298 2	I.C.	Q459, Q460	UN4112	001 030 3018 2	TRANSISTOR
IC106	SV1UPD4053BC	001 060 4885 5	I.C.	Q461, Q601	UN4112	001 030 3018 2	TRANSISTOR
IC301	EHDGA1243	001 061 3036 7	I.C.	Q602, Q603	UN4112	001 030 3018 2	TRANSISTOR
IC302	MN6617S	001 061 3042 9	I.C.	Q604, Q605	UN4212	001 030 3019 1	TRANSISTOR
IC303	MN6618A	001 061 3043 8	I.C.	Q606, Q607	UN4212	001 030 3019 1	TRANSISTOR
IC304	MN4416S-12	001 060 9746 5	I.C.	Q608, Q609	UN4212	001 030 3019 1	TRANSISTOR
IC331	AN6914	001 060 0297 5	I.C.	Q610, Q611	UN4212	001 030 3019 1	TRANSISTOR
IC351, IC352	MN74HC04S	001 061 3232 5	I.C.	Q612, Q613	UN4212	001 030 3019 1	TRANSISTOR
IC353	MN74HC74S	001 060 7634 0	I.C.	Q614, Q615	UN4212	001 030 3019 1	TRANSISTOR
IC354	MN74HC00S	001 060 7089 3	I.C.	Q616, Q617	UN4212	001 030 3019 1	TRANSISTOR
IC355	AN6564NS	001 060 7085 7	I.C.	Q618, Q619	UN4112	001 030 3018 2	TRANSISTOR
IC401	MN15261PDK	001 061 3159 7	I.C.	Q821, Q822, Q891	UN4114	001 030 4832 6	TRANSISTOR
IC402	MN1550PDM	001 061 3230 7	I.C.	DIODES			
IC403	MN1280-R	001 060 8669 5	I.C.	D11	Δ SVDS1WB40	001 032 7473 7	RECTIFIER
IC501	AN8290S	001 061 3034 9	I.C.	D12	Δ SVD1SR35200A	001 032 3951 4	RECTIFIER
IC601	SV1BX1439M	001 061 3235 2	I.C.	D13	MA4082M	001 032 4955 6	DIODE
(M, MC)				D14	MA4330L	001 032 7228 8	DIODE
IC601	SV1BX1439E	001 061 3671 6	I.C.	D15, D16	MA4082M	001 032 4955 6	DIODE
EXCEPT (M, MC)				D17, D18	Δ SVD1SR35200A	001 032 3951 4	RECTIFIER
IC801	Δ AN78M15	001 060 4532 7	I.C.	D101, D102	MA165	001 032 0494 0	DIODE
IC802	Δ AN79N15	001 060 8715 6	I.C.	D103, D104	MA165	001 032 0494 0	DIODE
IC803	AN78M15	001 060 4532 7	I.C.	D105, D106	MA4082M	001 032 4955 6	DIODE
IC804	AN79N15	001 060 8715 6	I.C.	D351	MA4051-H	001 032 5891 1	DIODE
IC805	AN78M12	001 060 4333 2	I.C.	D352	MA165	001 032 0494 0	DIODE
IC806	AN79N12	001 060 8663 1	I.C.	D353	SVDKV1230223	001 032 9299 5	DIODE
IC821	MN51005PDN	001 061 3231 6	I.C.	D354, D401	MA165	001 032 0494 0	DIODE
IC822, IC823	SV1PCMS4KP-M	001 061 3644 9	I.C.	D402, D403	MA165	001 032 0494 0	DIODE
IC824, IC825	SV1UPD4053BC	001 060 4885 5	I.C.	D404, D405	MA165	001 032 0494 0	DIODE
IC826, IC827	SV1MS238P	001 060 9725 0	I.C.	D406, D407	MA165	001 032 0494 0	DIODE
IC828, IC829	NJM5532DD	001 061 3161 3	I.C.	D408, D409	MA165	001 032 0494 0	DIODE
IC830, IC831	SV1AL079	001 061 3234 3	I.C.	D451	MA165	001 032 0494 0	DIODE
IC851	SV1NJM4556SA	001 061 0445 6	I.C.	D501	MA153	001 032 0489 7	DIODE
TRANSISTORS				D601, D602	MA165	001 032 0494 0	DIODE
Q11	Δ 2SA1309Q	001 030 4058 0	TRANSISTOR	D603, D604	MA165	001 032 0494 0	DIODE
Q12	Δ 2SD973	001 030 1944 1	TRANSISTOR	D605, D606	MA165	001 032 0494 0	DIODE
Q13	Δ 2SB793-QRS	001 030 2766 7	TRANSISTOR	D607, D608	MA165	001 032 0494 0	DIODE
Q101	Δ 2SD1055	001 030 4872 8	TRANSISTOR	D609, D610	MA165	001 032 0494 0	DIODE
Q102	Δ 2SB822	001 030 0781 6	TRANSISTOR	D611, D612	MA165	001 032 0494 0	DIODE
Q103	Δ 2SD1055	001 030 4872 8	TRANSISTOR	D613, D614	MA165	001 032 0494 0	DIODE
Q104	Δ 2SB822	001 030 0781 6	TRANSISTOR	D615	MA165	001 032 0494 0	DIODE
Q105	Δ 2SD1055	001 030 4872 8	TRANSISTOR	D616, D617	SVGLB74VR3HL	001 032 9300 9	LED
Q106	Δ 2SB822	001 030 0781 6	TRANSISTOR	D618, D619	SVGLB74VR3HL	001 032 9300 9	LED
Q107	2SK301	001 030 2428 2	TRANSISTOR	D620, D621	SVGLB74VR3HL	001 032 9300 9	LED
Q108	UN4212	001 030 3019 1	TRANSISTOR	D622	SVGLB74MG3HL	001 032 7888 8	LED
Q109	2SA1309Q	001 030 4058 0	TRANSISTOR	D623	SVGLB74DU3HL	001 032 7185 2	LED
Q110	2SC2021	001 030 4276 2	TRANSISTOR	D624, D625	SVGLB74VR3HL	001 032 9300 9	LED
Q111	UN4212	001 030 3019 1	TRANSISTOR	D626	MA165	001 032 0494 0	DIODE
Q301, Q331	UN4112	001 030 3018 2	TRANSISTOR	D801, D802	Δ SVDS1WB40	001 032 8766 3	RECTIFIER
Q351	2SK301	001 030 2428 2	TRANSISTOR	D803, D804	Δ SVD1SR35200A	001 032 3951 4	RECTIFIER
Q401	UN4214	001 030 4835 3	TRANSISTOR	D805, D806	MA4054-MTA	001 032 9513 8	DIODE
Q402	2SA1309Q	001 030 4058 0	TRANSISTOR	D807, D808	MA4054-MTA	001 032 9513 8	DIODE
Q403, Q404	UN4214	001 030 4835 3	TRANSISTOR	D821, D822	MA165	001 032 0494 0	DIODE
Q405, Q406	2SC3311-Q	001 030 2936 7	TRANSISTOR	D891	MA165	001 032 0494 0	DIODE
Q407	2SC3311-Q	001 030 2936 7	TRANSISTOR	HALL ELEMENTS			
Q408, Q409	2SA1309Q	001 030 4058 0	TRANSISTOR	H501, H502	0H-001	001 036 0010 2	HALL ELEMENT
Q410	2SA1309Q	001 030 4058 0	TRANSISTOR	VARIABLE RESISTORS			
Q411	UN4114	001 030 4832 6	TRANSISTOR	VR101	EVND3AA00B53	001 180 2644 9	5K Ω (B)

Ref. No.	Part No.	Part Code	Description	Ref. No.	Part No.	Part Code	Description
VR102, VR103	EVND3AA00B14	001 180 2642 1	10K Ω (B)	T2	Δ SLT54JU3A	001 202 8479 1	POWER TRANSFORMER
VR104	EVND3AA00B53	001 180 2644 9	5K Ω (B)	(M, MC)			
VR105	EVND3AA00B14	001 180 2642 1	10K Ω (B)	COMPONENT COMBINATIONS			
VR106	EVND3AA00B53	001 180 2644 9	5K Ω (B)	C20, C21	Δ RXAF103Z22EY	001 230 0547 0	0.01 μ F X 2
VR301	EVND3AA00B13	001 180 3053 2	1K Ω (B)	C803, C804	Δ RXAF103Z22EY	001 230 0547 0	0.01 μ F X 2
VR601	SVSD2	003 439 2047 2	20K Ω (B)	C809, C810	Δ RXAF103Z22EY	001 230 0547 0	0.01 μ F X 2
VR851	EWANA1X05A15	001 174 8134 8	100K Ω (A)	OSCILLATORS			
VR901	EWTXAR27025B	001 174 8859 8	SEARCH DIAL	X351	SVQ16CKSS	001 250 1471 7	16.9344MHZ
COILS AND TRANSFORMERS				DISPLAYS			
L1, L2	Δ SLQX400-D	001 210 7020 0	COIL	FL601	SADD4	001 080 0329 2	DISPLAY
EXCEPT (M, MC)				FUSES			
L101	ELEPH2R2MA	001 211 2463 2	COIL	F1	Δ XBA1F08NU14	002 380 0307 9	125V, 800mA
L201, L202	SLQDSP33R3K		COIL	(M, MC)			
(EG) ONLY				F1	Δ XBA2C04TB0S		250V, T400mA
L203, L204	SLQDSP33R3K		COIL	EXCEPT (M, MC)			
(EG) ONLY				F2	Δ XBA2C016TB0S	002 380 1470 5	250V, T160mA
L205, L206	SLQDSP33R3K		COIL	EXCEPT (M, MC)			
(EG) ONLY				SWITCHES			
L301	ELEPH3R3KA		COIL	S1	Δ ESB8249V	003 435 5877 0	POWER
L351	SLQD9B1-T	001 211 3312 2	COIL	S2	Δ SRDSHXW0251	003 438 1067 7	VOLTAGE SELECTOR
L352	ELEPK1R2MA	001 211 0621 4	COIL	EXCEPT (M, MC)			
L353	ELEPHR33MA		COIL	S101	Δ SSPD4-1	003 434 1042 6	OPEN/CLOSE DET.
L501	NL4532T100K2	001 211 3218 9	COIL	S601, S602	EVQQS405K	003 435 2832 5	OPERATION
L851	ELEPH1R2MA	001 210 8983 4	COIL	S603, S604	EVQQS405K	003 435 2832 5	OPERATION
(M, MC)				S605, S606	EVQQS405K	003 435 2832 5	OPERATION
EXCEPT (M, MC)				S607, S608	EVQQS405K	003 435 2832 5	OPERATION
L852	SLQDSP33R3K		COIL	S609, S610	EVQQS405K	003 435 2832 5	OPERATION
EXCEPT (M, MC)				S611, S612	EVQQS405K	003 435 2832 5	OPERATION
L853	ELEPH1R2MA	001 210 8983 4	COIL	S613, S614	EVQQS405K	003 435 2832 5	OPERATION
(M, MC)				S615, S616	EVQQS405K	003 435 2832 5	OPERATION
EXCEPT (M, MC)				S617, S618	EVQQS405K	003 435 2832 5	OPERATION
L853	SLQDSP33R3K		COIL	S619, S620	EVQQS405K	003 435 2832 5	OPERATION
EXCEPT (M, MC)				S621, S622	EVQQS405K	003 435 2832 5	OPERATION
T1	Δ SLT54JE47E	001 202 8478 2	POWER TRANSFORMER	S623, S624	EVQQS405K	003 435 2832 5	OPERATION
EXCEPT (M, MC)				S625, S626	EVQQS405K	003 435 2832 5	OPERATION
T1	Δ SLT54JU4A	001 202 8480 8	POWER TRANSFORMER	S627	EVQQS405K	003 435 2832 5	OPERATION
(M, MC)				S628, S629	ESB6471	003 435 4986 0	OPERATION
EXCEPT (M, MC)				S630, S631	ESB6471	003 435 4986 0	OPERATION
T2	Δ SLT54JE53E		POWER TRANSFORMER	RELAYS			
EXCEPT (M, MC)				RLY801, RLY802	SFDYG5A237P	003 450 2713 4	RELAY
				RLY891	SFDYG5A237P	003 450 2713 4	RELAY

Ref. No.	Part No.	Part Code	Description	Ref. No.	Part No.	Part Code	Description
FRONT PANEL				24	SBCD2320MB0A	016 702 6774 1	BUTTON
1	SGWLP1200-KM	016 840 7149 5	FRONT PANEL ASS'Y	25	SBCD2300MB0A	016 702 6783 0	BUTTON
1-1	SHRD58	016 652 0664 7	CORD CLAMPER	26	SBCD400	016 702 6812 2	BUTTON
2	SKKLP1200-KM	016 840 7215 2	PANEL ASS'Y	27	SUMD50-1	016 650 5276 5	PLATE
2-1	SGUD120	016 842 1506 8	PANEL	28	SUWLP1200-KM	016 650 5283 6	DISPLAY PANEL ASS'Y
2-2	SHGLP1200-KM	016 653 1130 3	RUBBER ASS'Y	30	SGXD1330ZK0A	016 846 3527 5	FRAME, POWER SWITCH
3	SUXD33	016 634 0134 0	SHAFT	31	SRKT015N26	017 702 0066 8	BUTTON, POWER SWITCH
4	SUSD37-1	016 726 0857 1	SPRING	32	SHWD11	016 643 0996 1	SPACER
5	SMND8	016 632 1831 8	FRAME, OPEN BUTTON	33	SGUD118	016 842 1507 7	FILTER
6	SHGD81	016 653 1098 6	RUBBER	36	SJQD1-2	003 455 0376 4	PLUNGER
7	SBCD2330MB0A	016 702 6772 3	OPEN BUTTON	SCREWS, WASHERS AND NUTS			
8	SUSD53-1	016 726 0863 3	SPRING	N1	XYN2+C5	005 500 1291 6	SCREW
9	SUSD36-1	016 726 0872 2	SPRING	N2	XTV3+6JFZ	005 501 0890 8	SCREW
10	SUMD37-1	016 650 5288 1	PLATE	N3	XQN2+AF4FZ	005 500 7761 3	SCREW
11	SDGD9-1	016 745 0209 0	HOOK	N4	XUC3FY	005 512 0137 3	E-RING
12	SSED8	003 439 2082 9	TERMINAL, OPEN/CLOSE DET.	N5	XYN3+E6	005 503 0595 2	SCREW
13	SUWLP1200KM1	016 650 5290 7	CLAMPING PLATE ASS'Y	N6	XTV3+8GFR	005 501 4635 5	SCREW
13-1	SHGD80	016 653 1099 5	RUBBER	N7	XQN23+CJ4FZ	005 500 7762 2	SCREW
14	SDGD26	016 745 0205 4	GEAR	N8	XSN2+3FZ	005 500 7763 1	SCREW
15	SUMD33	016 650 5270 1	BRACKET	N9	XWA2BFZ	005 513 1234 4	WASHER
16	SHRD36	016 652 0653 0	GEAR	N10	XTV3+8JFZ	005 501 0919 2	SCREW
17	SBZLP1200-KM	016 630 1774 0	OPERATION BASE ASS'Y	N11	XTW3+8QFZ	005 501 3305 4	SCREW
18	SRDJHLJ15401	003 400 6583 0	HEADPHONES JACK	N12	XTV3+8G	005 501 0913 8	SCREW
19	SGXD1341ZK0A	016 846 3604 9	PANEL	N13	SRXG016N01	005 500 5657 0	SCREW
20	SHRD25	016 652 0651 2	SPACER	N14	XTV3+14JFZ	005 501 4633 7	SCREW
21	SBD040MB0A	016 700 1927 2	KNOB, HEADPHONES VOLUME	N16	XTW3+8TFZ	005 501 2926 5	SCREW
22	SBD08-1	016 700 1934 3	KNOB, PITCH CONTROL	N20	SNE2125-1	005 500 5752 2	SCREW
23	SBDN10MB0A	016 700 1940 5	DIAL, SEARCH				

Ref. No.	Part No.	Part Code	Description	Ref. No.	Part No.	Part Code	Description
CABINET AND CHASSIS							
41	SKUD7	016 802 2056 3	BOTTOM BOARD	57	SHR127	016 645 0037 9	SPACER, AC CORD
42	SGXD1320ZY0A	016 846 3569 5	RUBBER	EXCEPT (XA)			
43	SGXD1310ZY0A	016 846 3570 2	RUBBER	(PA, PE, PC)			
44	SGXD1300ZY0A	016 846 3571 1	RUBBER	58	△	QFC1205M	003 490 0928 5 AC CORD
47	SKLD2-Z	016 828 0317 7	INSULATOR ASS'Y	(EK)			
48	SKUD8	016 802 2055 4	BOTTOM COVER	58	△	RJA52Y	003 490 3914 9 AC CORD
49	SMLD3-1	016 601 0579 8	CUSHION RUBBER	(XA, PA, PE)			
50	SHRD39	016 652 0660 1	SPACER	(PC)			
51	SHRD33	016 652 0652 1	SUPPORTER, P.C.BOARD	58	△	SJAG23	003 490 1056 4 AC CORD
52	SHE185	016 918 0330 9	SPACER	(XL)			
53	SGPD500KY1A	016 840 7181 5	REAR PANEL	58	△	SJA138-3	003 490 2575 2 AC CORD
(M)				(E, EG, EB, EH)			
53	SGPD500KY2A	016 840 7193 1	REAR PANEL	(EF, E1)			
(E)				58	△	SJA174	003 490 4312 5 AC CORD
53	SGPD500KY3A	016 840 7192 2	REAR PANEL	(M, MC)			
(XA)				58	△	SJA182	003 490 5035 3 AC CORD
53	SGPLP1200KEG	016 840 7234 9	REAR PANEL	(XB)			
(EG)				60	SHGD61	016 653 1107 2	SPACER
53	SGPLP1200KEK	016 840 7290 1	REAR PANEL ASS'Y	61	SHRD62	016 652 0704 6	CORD CLAMPER
(EK)				SCREWS, WASHERS AND NUTS			
53	SGPLP1200KMC	016 840 7289 4	REAR PANEL ASS'Y	N1	XTW4+14QFZ	005 501 4636 4	SCREW
(MC)				N2	XTV3+14GFZ	005 501 1144 1	SCREW
53	SGPLP1200KPA	016 840 7291 0	REAR PANEL ASS'Y	N3	XTBS3+8FFZ	005 501 3429 3	SCREW
(PA, PE, PC)				N4	SRXG016ND1	005 500 5657 0	SCREW
53	SGPLP1200KXL	016 840 7292 9	REAR PANEL ASS'Y	N5	XTV3+16JFR	005 501 4634 6	SCREW
(XL, EB, EH)				N6	SNSD17	016 643 0984 5	SCREW
(EF, E1, XB)				N7	XSB4+25FZ	005 500 7168 4	SCREW
54	SJS6805	003 400 1689 1	SOCKET (8 PIN)	N8	SNWD6-1	016 643 0982 7	WASHER
55	SJS6401	003 403 6359 1	SOCKET (5 PIN)	N9	XTW3+8TFZ	005 501 2326 5	SCREW
56	SJFD5	003 410 7771 8	LINE OUT TERMINAL	N10	XTW3+8TFR	005 501 2602 2	SCREW
57	RHR111	015 645 0221 9	SPACER, AC CORD				
(XA, PA, PE)							
(PC)							


Ref. No.	Part No.	Part Code	Description	Ref. No.	Part No.	Part Code	Description
TRAVERS DECK							
1	S1RLP1200-KM	016 632 1819 4	DISC TRAY ASS'Y	29	SHGD53	016 653 1090 4	CUSHION RUBBER
1-1	SHSD15	016 643 0985 4	SHEET	30	SHRD3	016 652 0559 7	SPRING HOLDER
2	SUWLP1200KM2	016 650 5291 6	BASE ASS'Y	31	SXPD830	003 483 1207 8	SPINDLE P.C.B
3	S1RLP1200KM1	016 652 0675 4	CLAMPER ASS'Y	32	SDWD2	016 846 3479 6	SPACER
3-1	SRGC007ND4	017 653 0358 1	RUBBER	33	SUSD39-1	016 726 0858 0	SPRING (GOLD)
4	SOMLP1200-KM	003 453 0338 0	MAGNET ASS'Y	34	SUSD54-1	016 726 0861 5	SPRING (SILVER)
5	SRUP050N46	017 745 0087 4	PLATE	35	SUSD55-1	016 726 0862 4	SPRING (BLACK)
6	SUXD30	016 641 0256 0	SHAFT	36	SUSD56-1	016 726 0865 1	SPRING (RED)
7	SUXD31	016 641 0255 1	SHAFT	SCREWS, WASHERS AND NUTS			
8	SUSD40	016 726 0874 0	SPRING	N1	XYN2+C4	005 503 0548 9	SCREW
9	SUWD45-1	016 650 5315 5	SPACER	N2	XTW3+8TFZ	005 501 2326 5	SCREW
10	SHWD13	016 643 0995 2	SPACER	N3	XTV3+12JFZ	005 501 0847 1	SCREW
11	△ SOALP1200-KM	001 271 0692 3	OPTICAL PICKUP ASS'Y	N4	XTN23+4GFZ	005 501 4631 9	SCREW
12	EW578KA00Q53	001 230 2544 5	RESISTANCE UNIT	N5	XTV3+8JFZ	005 501 0919 2	SCREW
13	SUXD25	016 634 0124 2	SHAFT	N6	XUC2FT	005 512 0126 6	E-RING
14	SUXD39	016 634 0137 7	SHAFT	N7	XUC3FY	005 512 0137 3	E-RING
15	SHRD40	016 652 0670 9	SPACER	N8	SFXGQ06ND1	005 500 4983 3	SCREW
16	SHGD47	016 653 1070 8	SPACER	N9	SNSD10	005 500 5675 8	SCREW
17	EW5L04A00000	016 631 0044 6	HOLDER	N10	XQN17+A6	005 500 4900 2	SCREW
18	SORD10E	001 211 3219 8	COIL	N11	XYN2+C4	005 503 0548 9	SCREW
19	SOYD9	016 634 0125 1	YOKE	N12	XTV3+10G	005 501 0826 6	SCREW
20	SOYD8E	016 634 0128 8	YOKE	N13	XTV3+6BFN	005 501 0888 2	SCREW
21	S1SD9	016 630 1778 6	TRAVERSE BASE	N14	XXE26D5	005 500 5095 2	SCREW
22	SOMLP1200-KM	016 740 0118 7	ROTOR ASS'Y	N15	XTN2+4G	005 501 2780 5	SCREW
23	SDOD14-E	016 766 0210 0	TURNTABLE	N16	SNSD9	016 726 0765 4	SCREW
24	SRQA010ND4	017 726 0412 8	SPRING	N17	XTV3+14G	005 501 0851 5	SCREW
25	SDOD15	016 745 0208 1	RING	N18	XNG26H	005 507 1598 5	NUT
26	SGXLP1200-KM	016 846 3556 0	TRAVERSE BASE COVER ASS'Y	N19	XWE3AB	005 513 4815 7	WASHER
27	SHRD41	016 652 0677 2	LOCK SHAFT	N20	XTN23+6G	005 501 4632 8	SCREW
28	SHRD42	016 652 0668 3	KNOB, LOCK SHAFT	N21	SHWD13	016 643 0995 2	SPACER

Ref. No.	Part No.	Part Code	Description	Ref. No.	Part No.	Part Code	Description
PACKINGS							
P1	SPND174	016 971 4879 0	CARTON BOX	A1	SQUD151-1	016 983 4975 5	INSTRUCTION BOOK
(EF)				(XL, EF, EG)			
P1	SPND89	016 971 4718 6	CARTON BOX	(XA)			
EXCEPT				A1	SQULP1200-KE	016 983 4877 6	INSTRUCTION BOOK
(MC, EF)				(E, EB, EH)			
P1	SPND90	016 971 4786 4	CARTON BOX	A1	SQULP1200KMC	016 983 4860 5	INSTRUCTION BOOK
(MC)				(MC)			
P2	SPSD57	016 977 3093 0	PAD	A1	SQULP1200KPA	016 983 4917 5	INSTRUCTION BOOK
P3	SPSD58	016 977 3094 9	PAD	(PA, PE, PC)			
P4	XZB60X65A01	016 978 0510 1	POLYETHYLENE BAG	A1	SQULP1200KXB	016 983 4916 6	INSTRUCTION BOOK
P5	SRHZJ02ND1	017 978 0097 5	PROTECTION COVER	(XB)			
P6	SFYFZ3A35	017 978 0084 0	POLYETHYLENE BAG	A2	SFDHMO3ND2	003 492 5453 9	LINE OUT CORD
P8	SPSD14	016 977 2843 0	PROTECTION SHEET	A3	RJP120ZBS-H	003 402 1437 9	PLUG
ACCESSORIES				(XA, PA, PE)			
A1	SQUD114	016 983 4879 4	INSTRUCTION BOOK	(PC, XB) ONLY			
(EK)				A4	UM-3NE		BATTERY
A1	SQUD115	016 983 4918 4	INSTRUCTION BOOK	EXCEPT			
(E1)				(M, MC)			
A1	SQUD149	016 983 4862 3	INSTRUCTION BOOK	A4	UM-3NEP		BATTERY
(M)				(M, MC)			


Ref. No.	Part No.	Part Code	Description	Ref. No.	Part No.	Part Code	Description
INTEGRATED CIRCUITS							
IC1001	MN6030B	001 060 6133 0	I.C.	EXCEPT			
EXCEPT				(M, MC)			
(M, MC)				C1002	ECKD1H101KB	001 103 1412 0	CERAMIC, 50V, 100PF
IC1001	MN6030CA	001 060 8758 5	I.C.	(M, MC)			
(M, MC)				C1002	ECKD1H121KB	001 103 1455 9	CERAMIC, 50V, 120PF
TRANSISTORS				EXCEPT			
Q1001	UN1231	001 030 5092 4	TRANSISTOR	(M, MC)			
DIODES				C1003	ECEA0JK101	001 120 0136 8	ELECTROLYTIC, 6.3V, 100µF
D1001	LN66-S	001 032 3730 5	LED	REMOTE CONTROL TRANSMITTER			
D1002, D1003	MA154WK	001 032 3491 1	DIODE	101	UR64PP259	016 840 7312 2	PANEL
D1004, D1005	MA154WK	001 032 3491 1	DIODE	102	UR64CS119C	016 802 2114 0	TOP COVER
D1006, D1007	MA154WA	001 032 3490 2	DIODE	103	UR64SB125	016 861 2468 6	PLATE
OSCILLATOR				104	UR64BT123A	016 702 6323 4	BUTTON
X1001	CSB420PB1	001 030 0013 9	420 KHZ	105	UR64CT122	016 653 1011 9	RUBBER, SWITCH
EXCEPT				106	UR64CS120C	016 802 2113 1	BOTTOM COVER
(M, MC)				107	URLJLB126BN	016 862 1069 6	LABEL
X1001	CSB455EB1	001 241 0002 7	455KHZ	(M, MC)			
(M, MC)				107	UR64LB126BP	016 862 1068 7	LABEL
RESISTORS				EXCEPT			
R1001	ERDS2TJ1R0	001 152 2419 4	CARBON, 1/4W, 1Ω	(M, MC)			
CAPACITORS				108	UR64EC121C	016 820 0589 5	BATTERY COVER
C1001	ECKD1H101KB	001 103 1412 0	CERAMIC, 50V, 100PF	109	UR64TD127	003 413 1407 4	TERMINAL ⊕
(M, MC)				110	UR64TD128	003 413 1408 3	TERMINAL ⊖
C1001	ECKD1H471KB	001 103 1551 0	CERAMIC, 50V, 470PF	111	UR52TD101	003 413 1406 5	TERMINAL
SCREWS, WASHERS AND NUTS				SCREWS, WASHERS AND NUTS			
				N100	XTS26+12GFZ	005 501 3122 9	SCREW

EXPLODED VIEWS


• Front panel parts

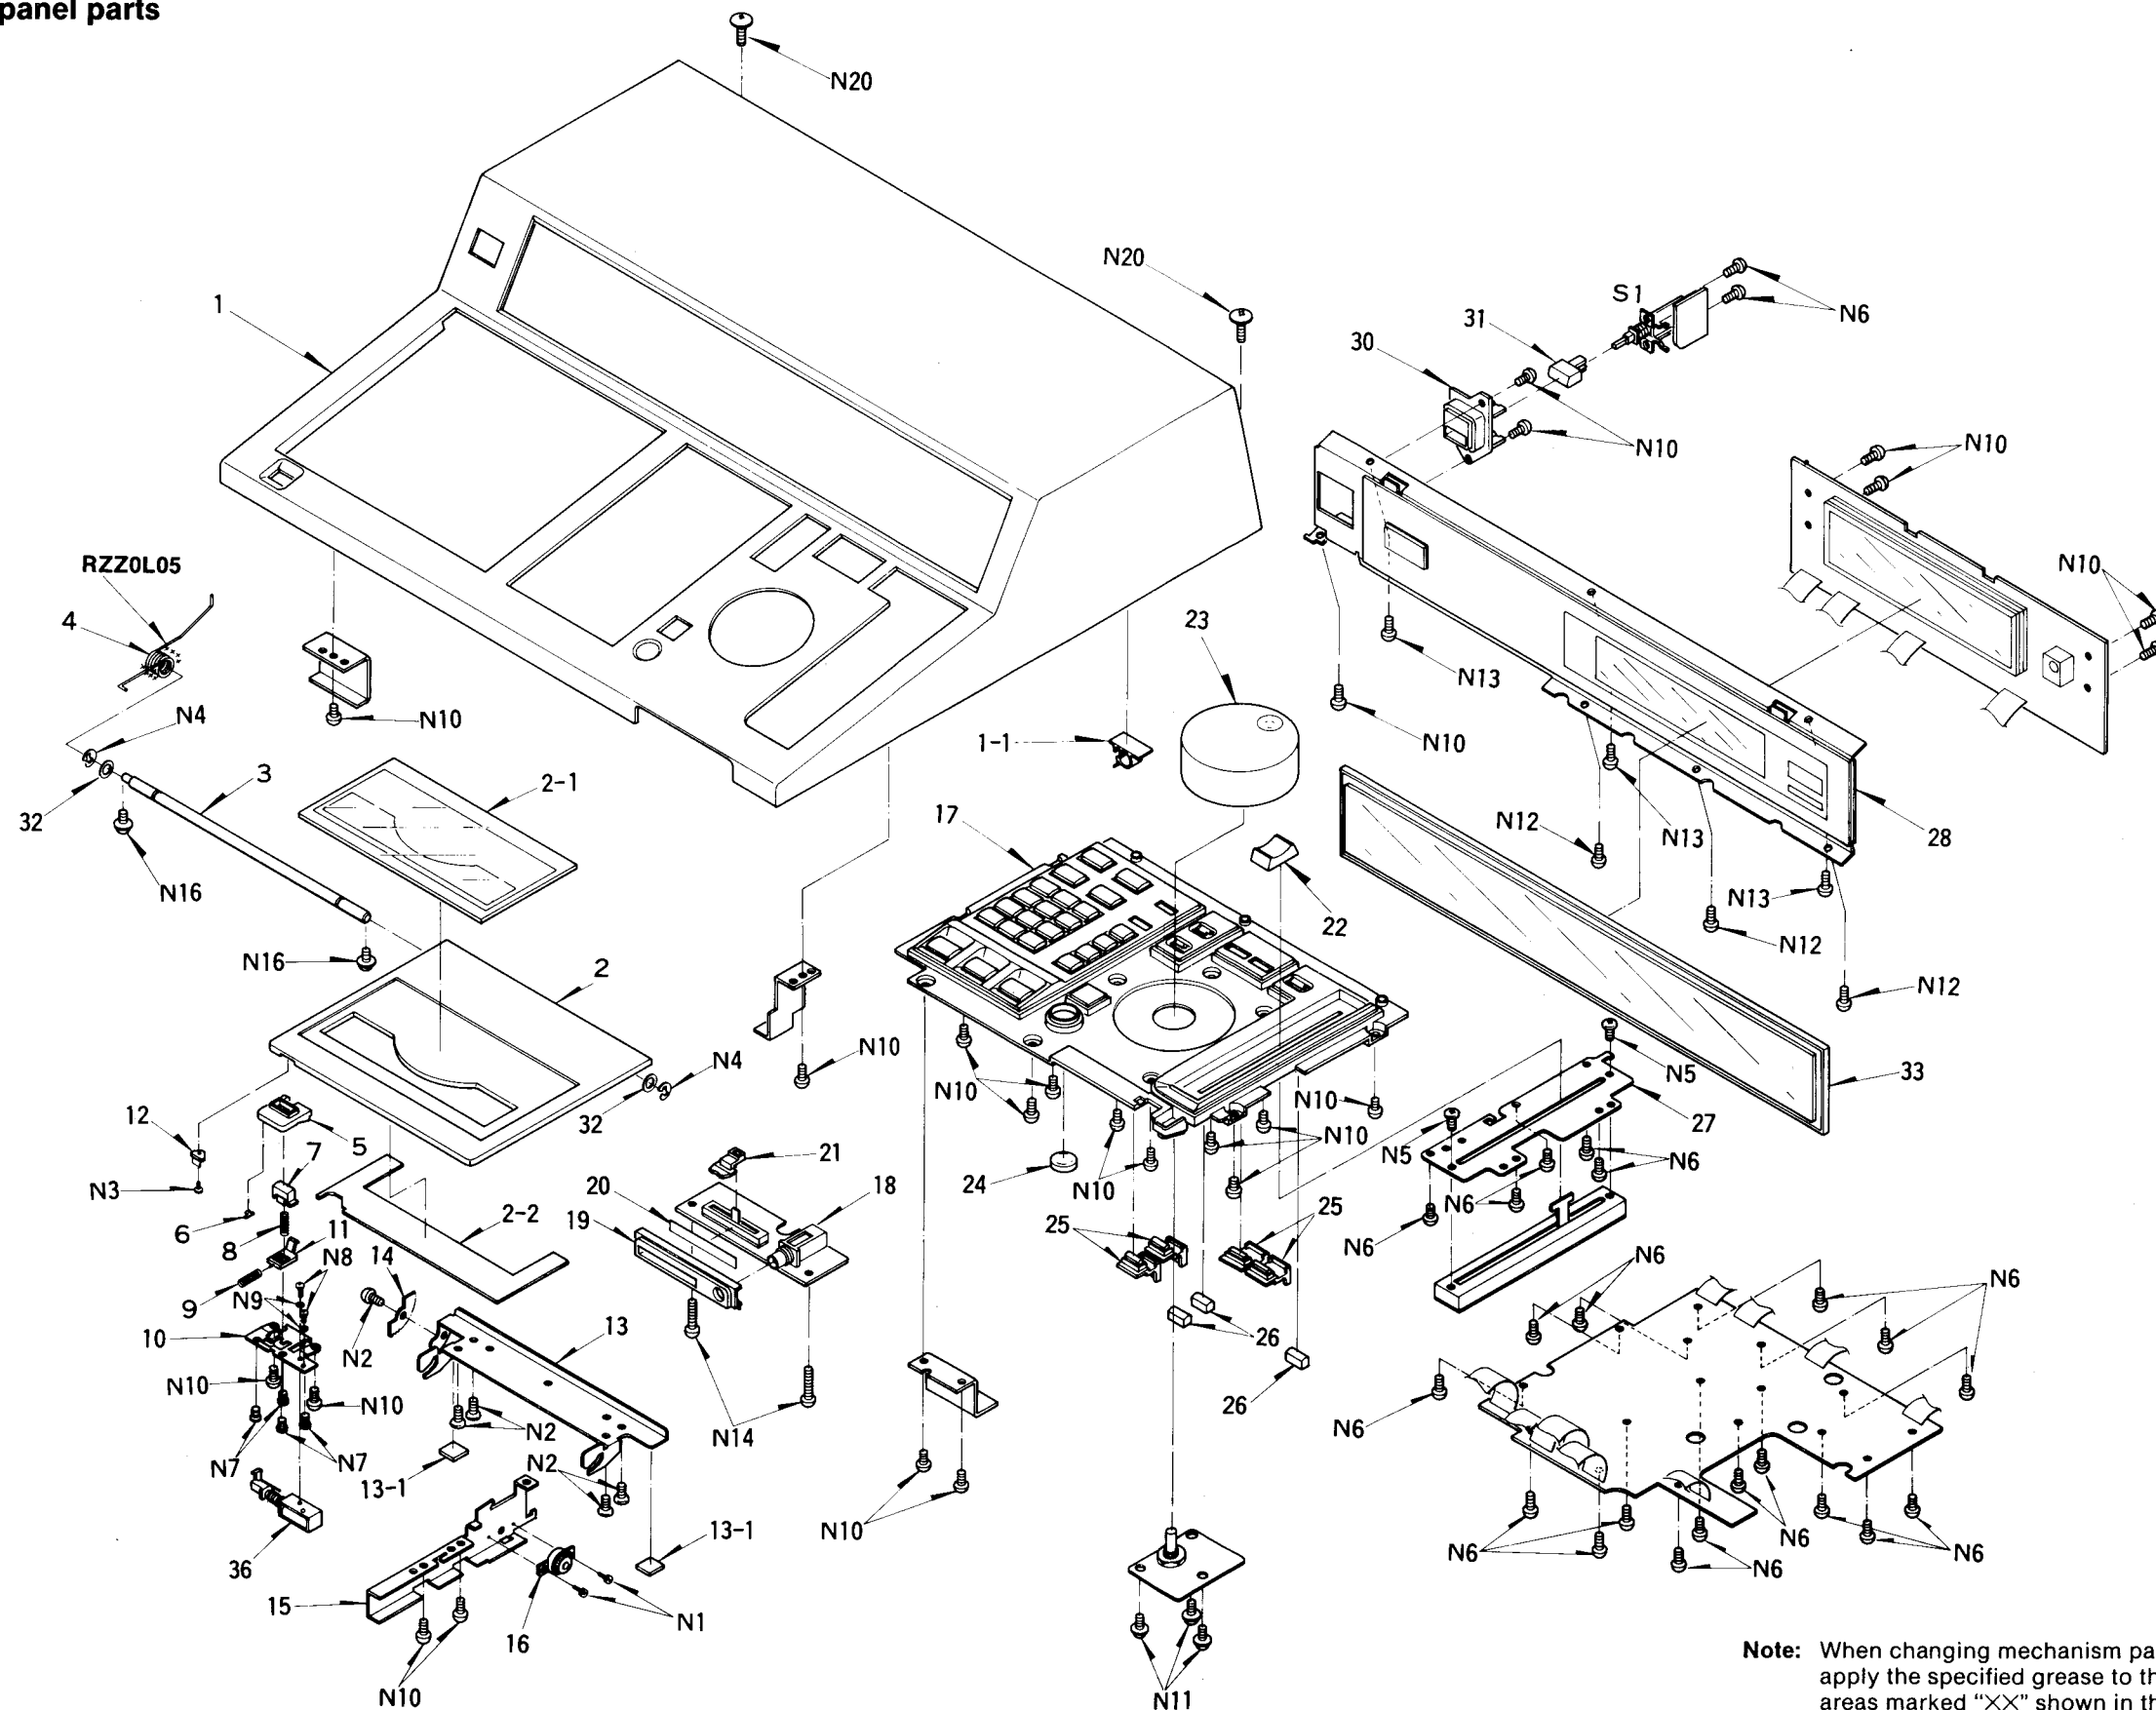

Note: When changing mechanism parts, apply the specified grease to the areas marked "XX" shown in the drawing.

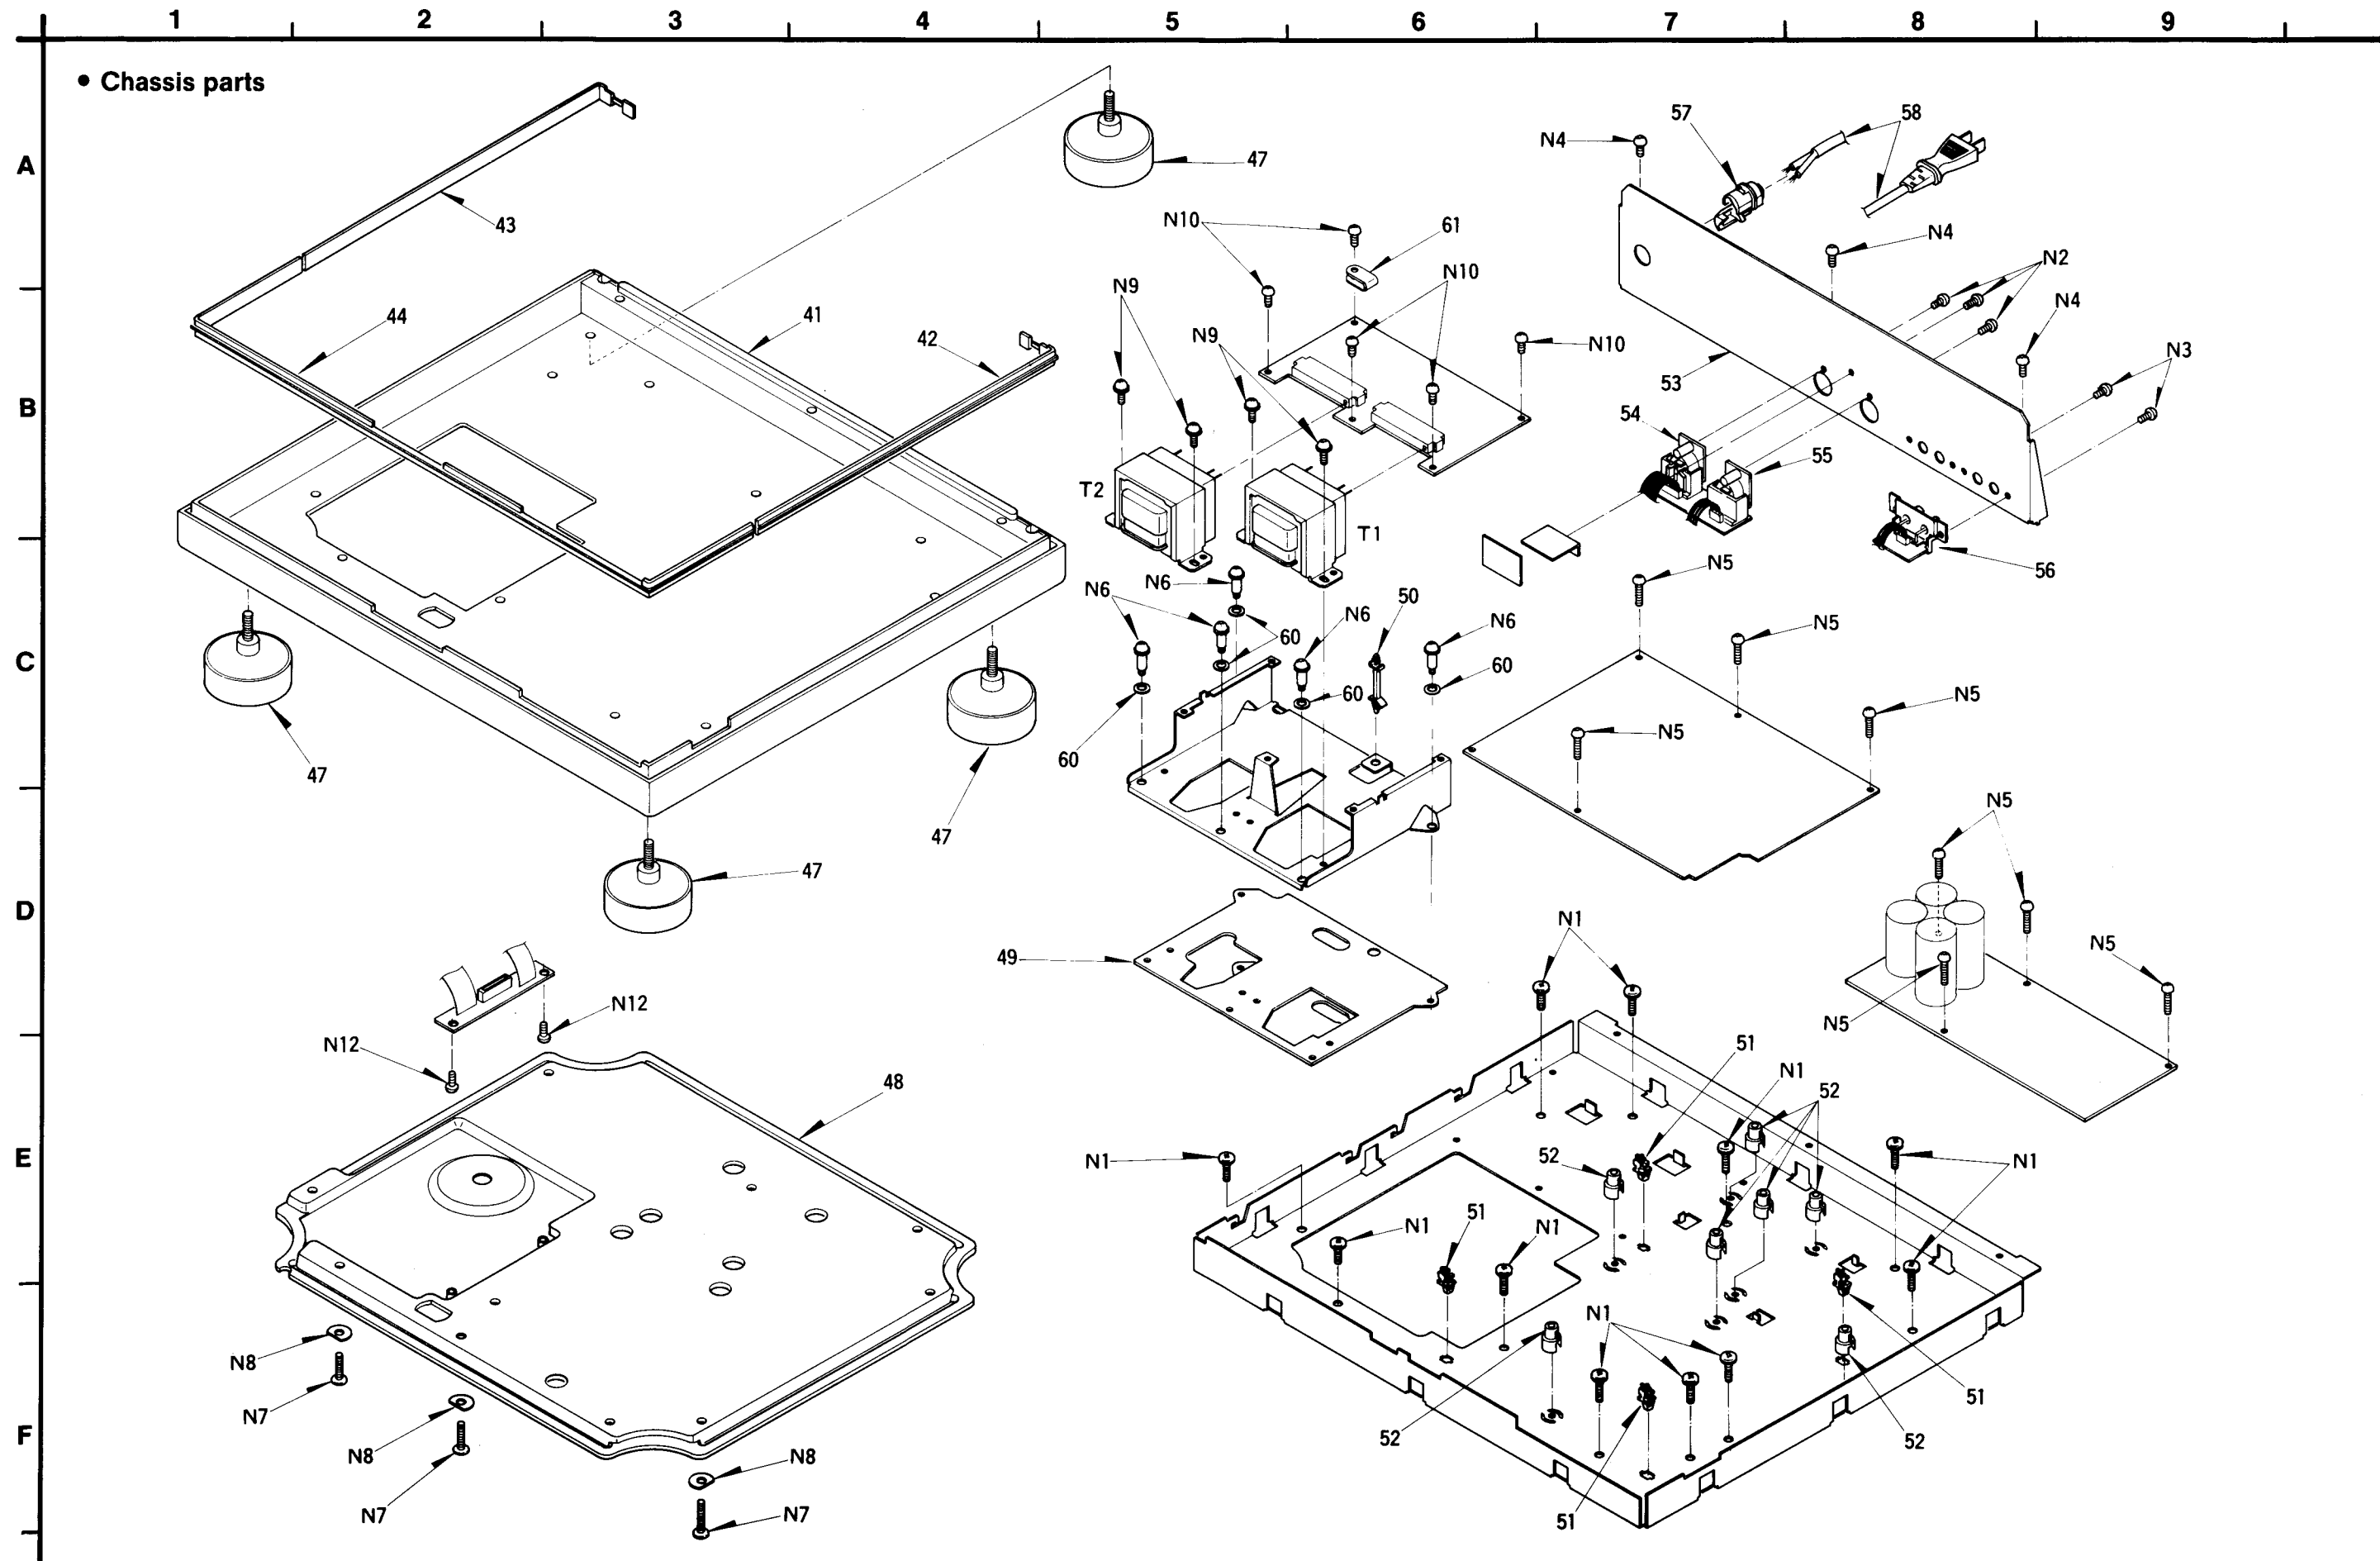


• Traverse deck parts

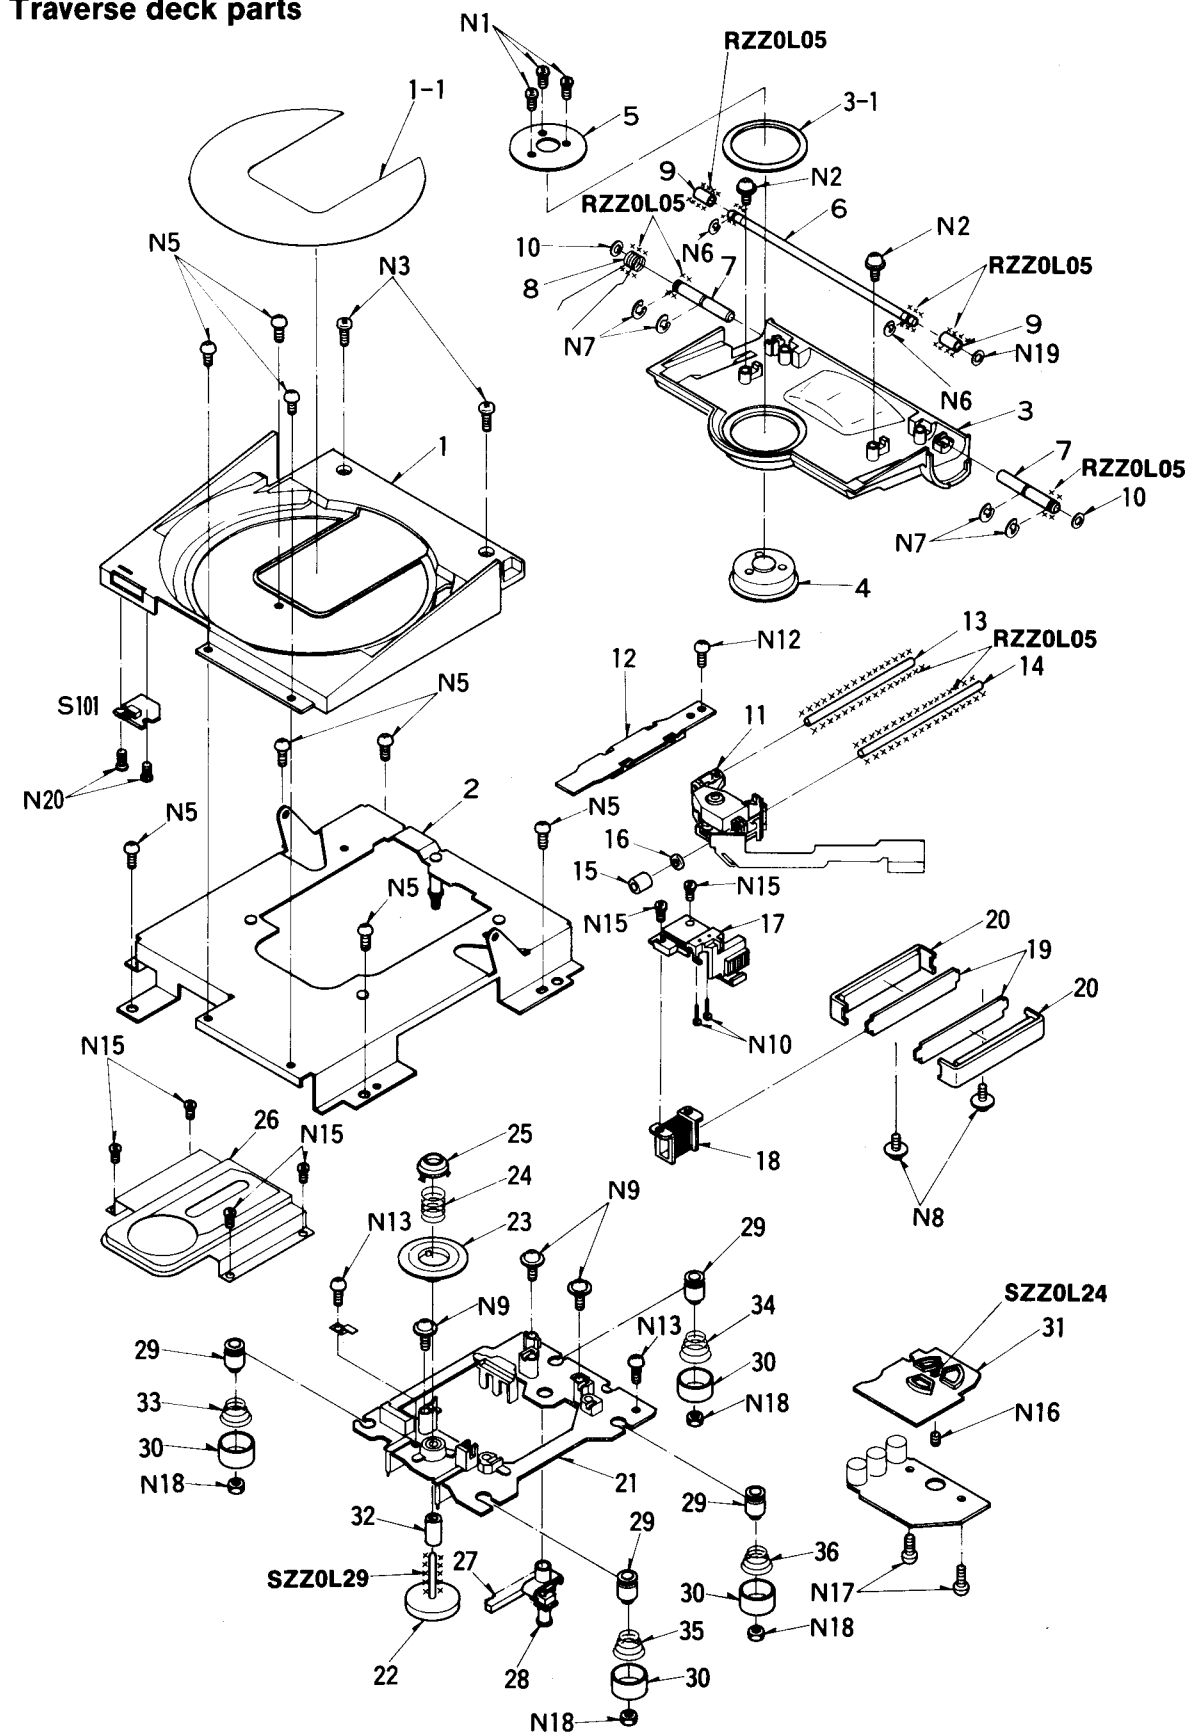


Note: When changing mechanism parts, apply the specified grease to the areas marked "XX" shown in the drawing.


• Remote control parts

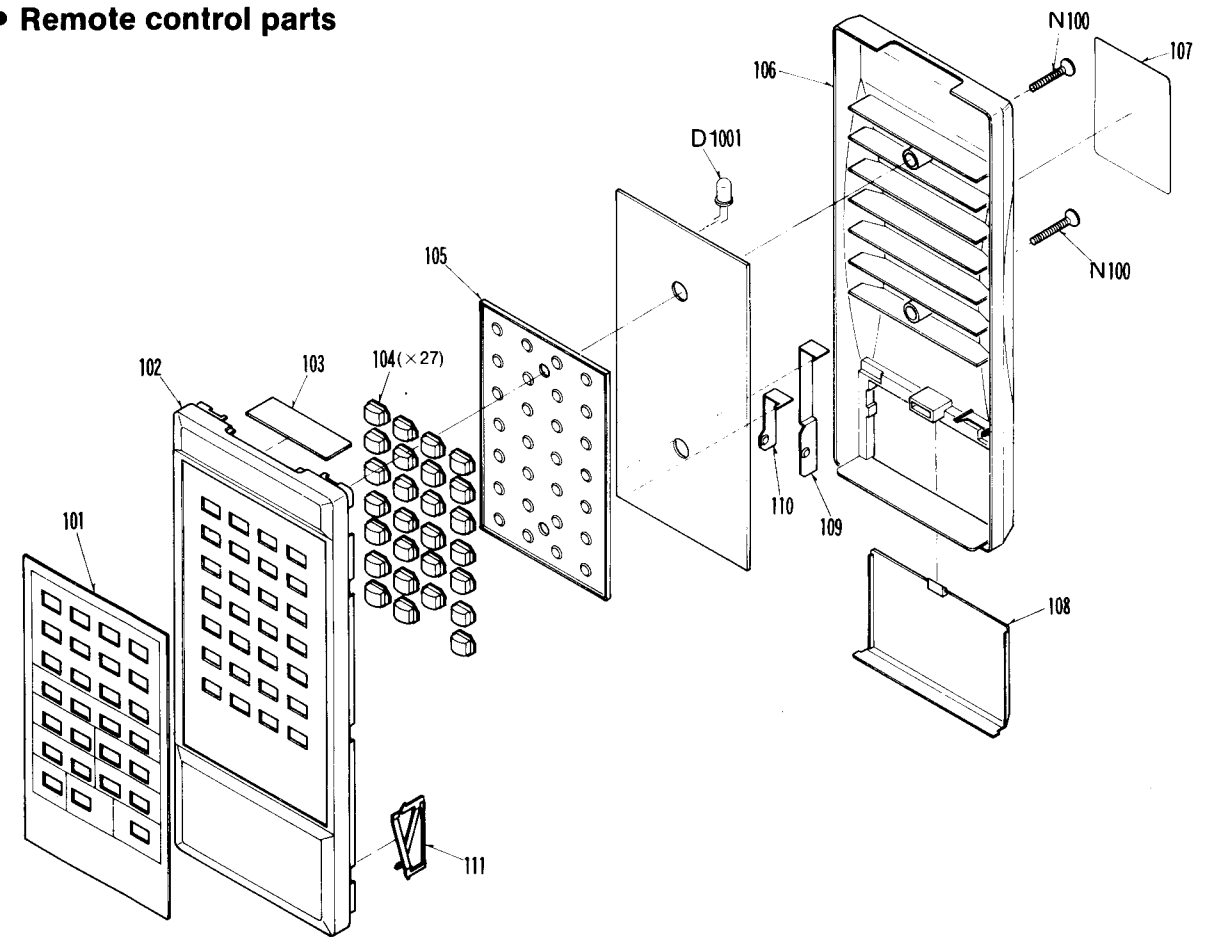

■ PACKING

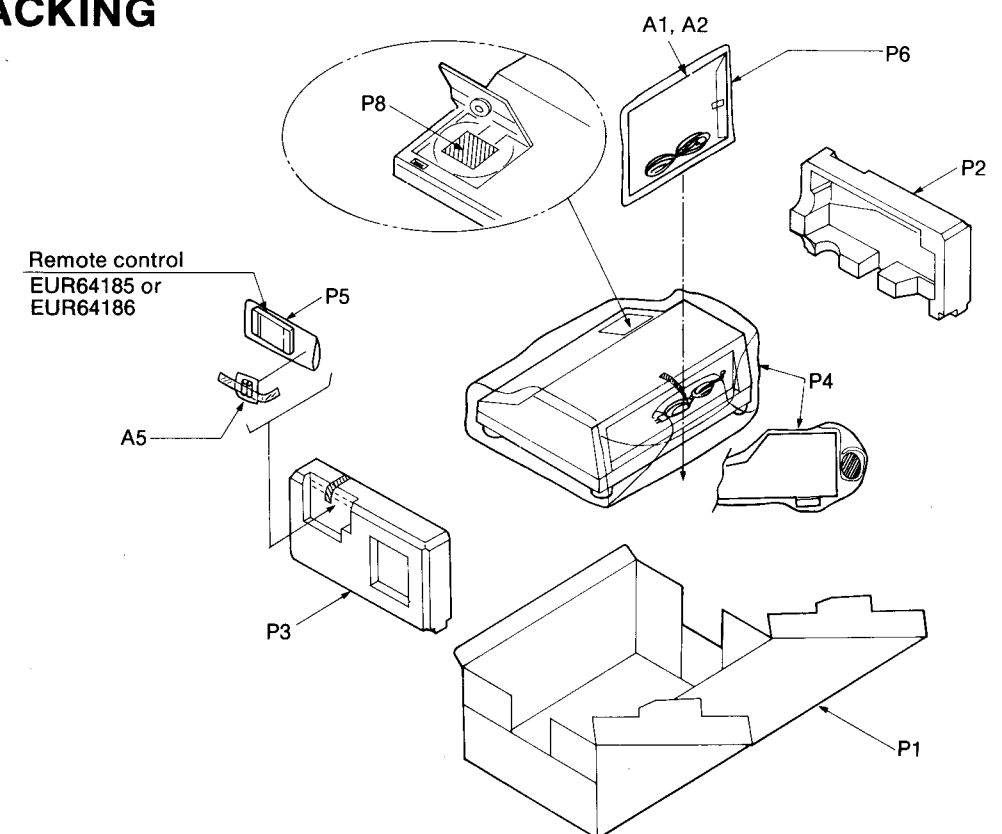

■ PRINTED CIRCUIT BOARD AND WIRING CONNECTION DIAGRAM

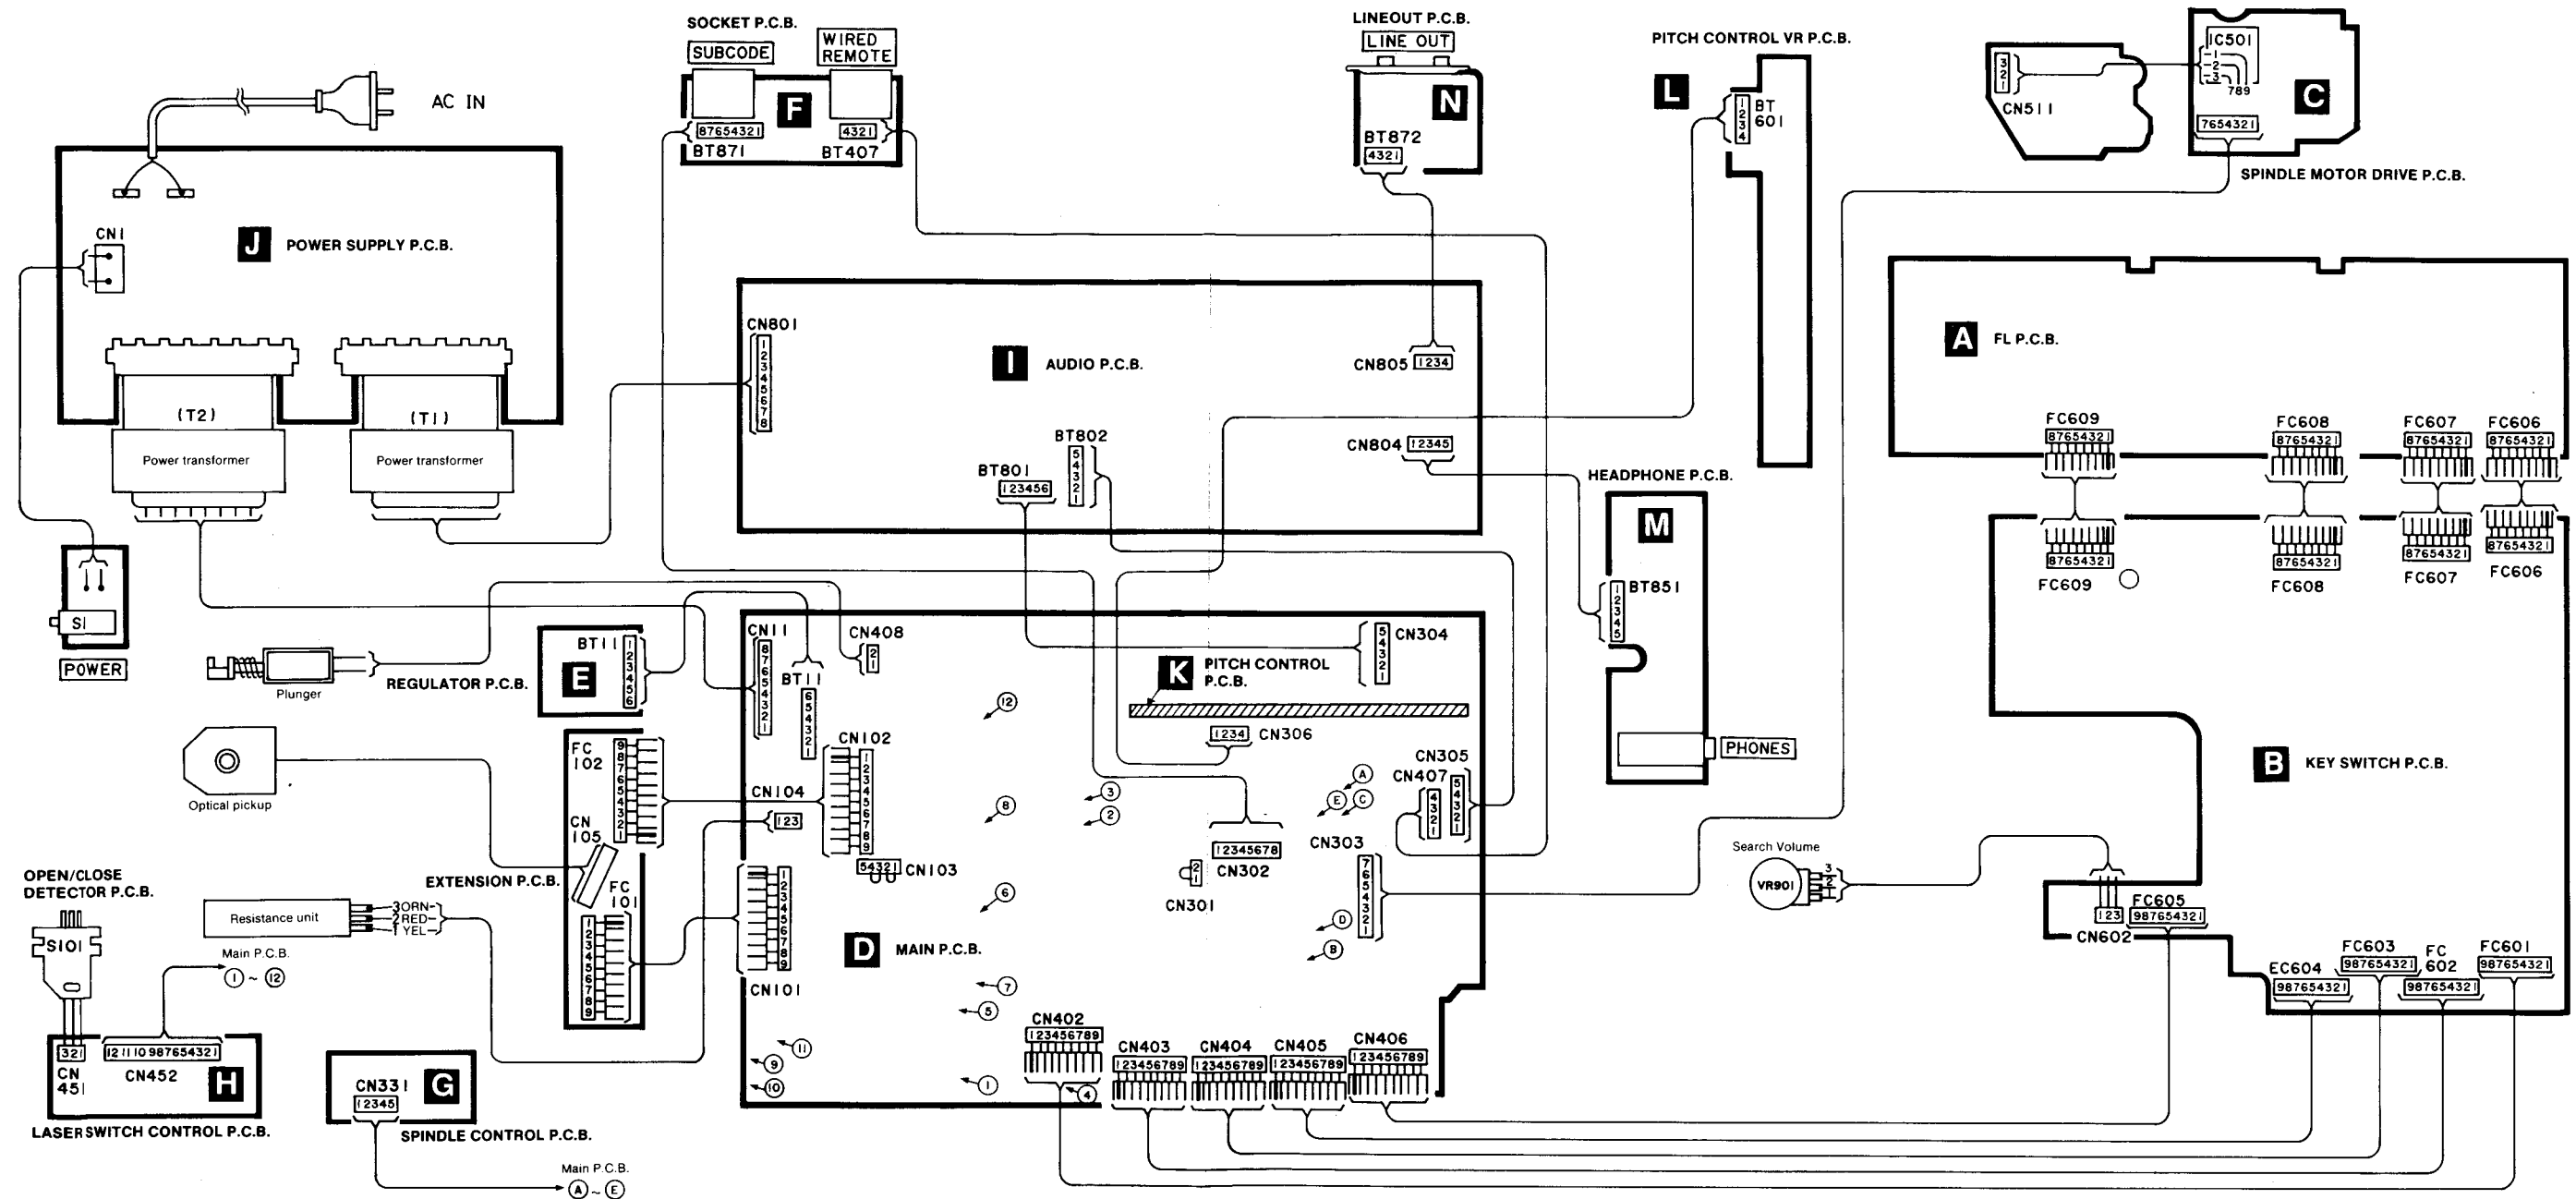

■ SCHEMATIC DIAGRAM

(This schematic diagram may be modified at any time with the development of new technology.)


- 1. **S1** : Power switch in "on" position.
- 2. **S2** : Voltage selector switch. (Except U.S.A. and Canada)
- 3. **S101** : Laser switch (Disc compartment open/close detection)
- 4. **S601** : Time mode (elapsed/remain) select switch
- 5. **S602** : Time mode (track/total) select switch
- 6. **S603-611, 614** : Numeric switch (0-9)
- 7. **S612** : Index switch
- 8. **S613** : Auto space switch
- 9. **S615** : Asterisk switch
- 10. **S616** : Recall switch
- 11. **S617** : Clear switch
- 12. **S618** : Memory switch
- 13. **S619, 620** : Backward and forward track skip switch
- 14. **S621** : Time recall switch
- 15. **S622, 623** : Backward and forward rocking/search switch
- 16. **S624** : Pause switch
- 17. **S625** : Repeat switch
- 18. **S626** : Play switch
- 19. **S627** : Stop switch
- 20. **S628** : Pitch control switch.
- 21. **S629** : Auto cue switch
- 22. **S630** : Dial search switch
- 23. **S631** : Dial search speed selector switch
- 24. The voltage value and waveform are the reference voltage of this unit measured by DC electronic voltmeter (high impedance) and oscilloscope on the basis of chassis. Accordingly, there may arise some error in voltage values and waveforms depending upon the internal impedance of the tester or the measuring unit.
* The parenthesized are the values of voltage generated during playing (Test disc 1kHz, L+R, 0dB), others are voltage values in stop mode.
- 25. Important safety notice:
Components identified by Δ mark have special characteristics important for safety. When replacing any of these components, use only manufacturer's specified parts.
- 26. : Positive voltage lines and negative voltage lines.
 : Audio signal lines.

Caution!

- IC and LSI are sensitive to static electricity.
Secondary trouble can be prevented by taking care during repair.
- Cover the parts boxes made of plastics with aluminum foil.
 - Ground the soldering iron.
 - Put a conductive mat on the work table.
 - Do not touch the legs of IC or LSI with the fingers directly.

■ Internal connection of FL601

• Grid connection diagram

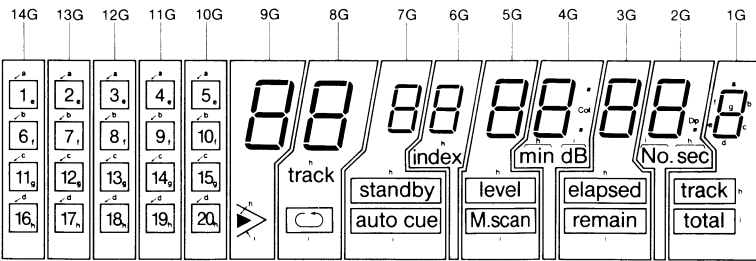


• Anode connection table


	14G	13G	12G	11G	10G	9G	8G	7G	6G	5G	4G	3G	2G	1G
a	1	2	3	4	5	a	a	a	a	a	a	a	a	a
b	6	7	8	9	10	b	b	b	b	b	b	b	b	b
c	11	12	13	14	15	c	c	c	c	c	c	c	c	c
d	16	17	18	19	20	d	d	d	d	d	d	d	d	d
e	1	2	3	4	5	e	e	e	e	e	e	e	e	e
f	6	7	8	9	10	f	f	f	f	f	f	f	f	f
g	11	12	13	14	15	g	g	g	g	g	g	g	g	g
h	16	17	18	19	20	▶ track	standby	index	level	min. col	elapsed	sec. DP	track	
i	-	-	-	-	-	>	auto cue	-	M scan	dB	remain	No.	total	

• Remote control unit

Key No.	Function
0	Stop
2	Skip ◀
3	Skip ▶
4	Search ◀◀
5	Search ▶▶
6	Pause
7	Repeat
10	Play
11	Clear
15	Music Scan
16	Numeric 1
17	Numeric 2
18	Numeric 3
19	Numeric 4
20	Numeric 5
21	Numeric 6
22	Numeric 7
23	Numeric 8
24	Numeric 9
25	Numeric 0
33	Asterisk *
36	Level Up ▲
37	Level Down ▼
40	Index
42	Memory
43	Elapsed/remain
44	Track/total

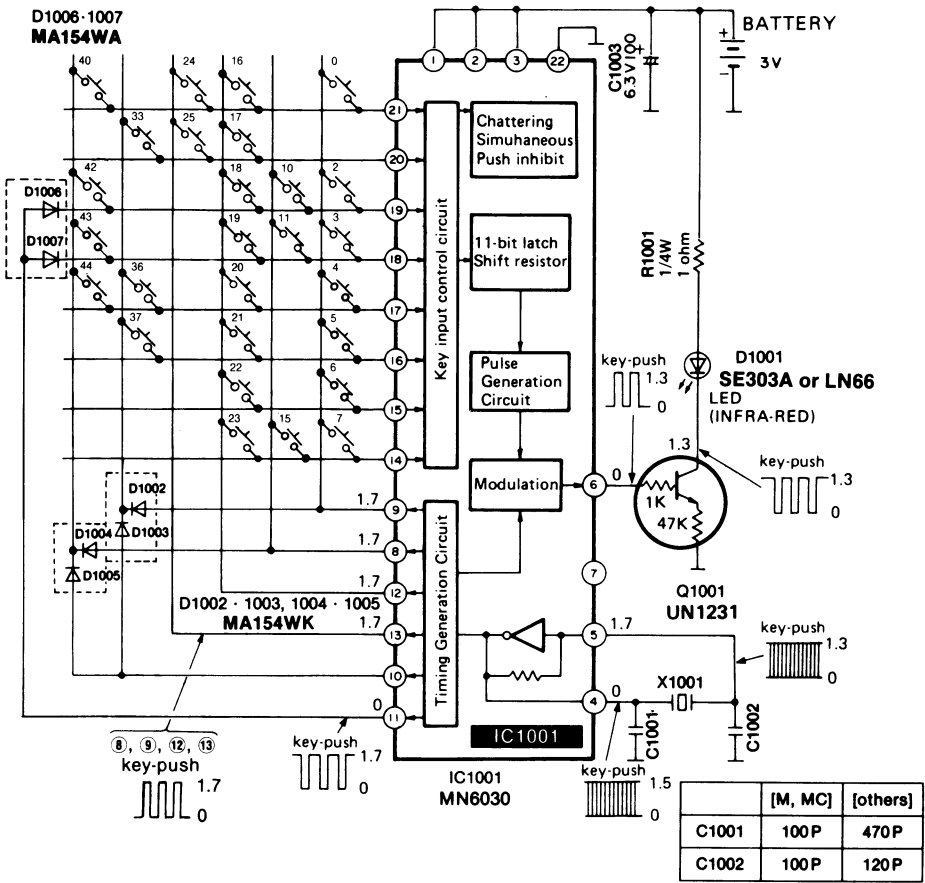



• Key number description and data code

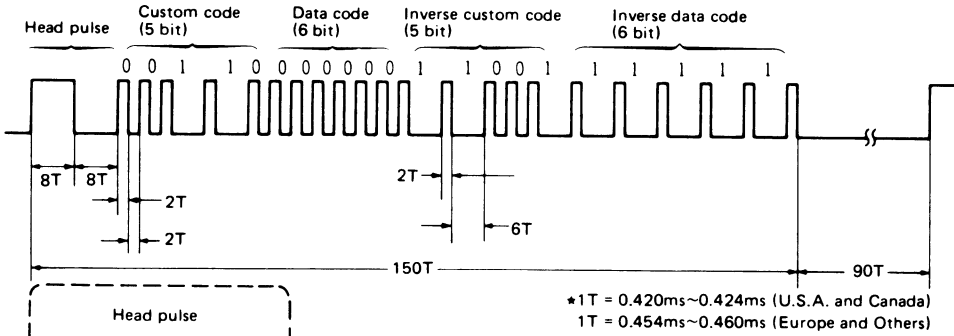


Key No.	Function	Data Code	Key No.	Function	Data Code
0	Stop	000000	20	Numeric 5	001010
2	Skip ◀	010000	21	Numeric 6	101010
3	Skip ▶	110000	22	Numeric 7	011010
4	Search ◀◀	001000	23	Numeric 8	111010
5	Search ▶▶	101000	24	Numeric 9	000110
6	Pause	011000	25	Numeric 0	100110
7	Repeat	111000	33	Asterisk *	100001
10	Play	010100	36	Level Up ▲	001001
11	Clear	110100	37	Level Down ▼	101001
15	Music Scan	111100	40	Index	000101
16	Numeric 1	000010	42	Memory	010101
17	Numeric 2	100010	43	Elapsed/remain	110101
18	Numeric 3	010010	44	Track/total	001101
19	Numeric 4	110010			

■ PITCH CONTROL P.C.B.

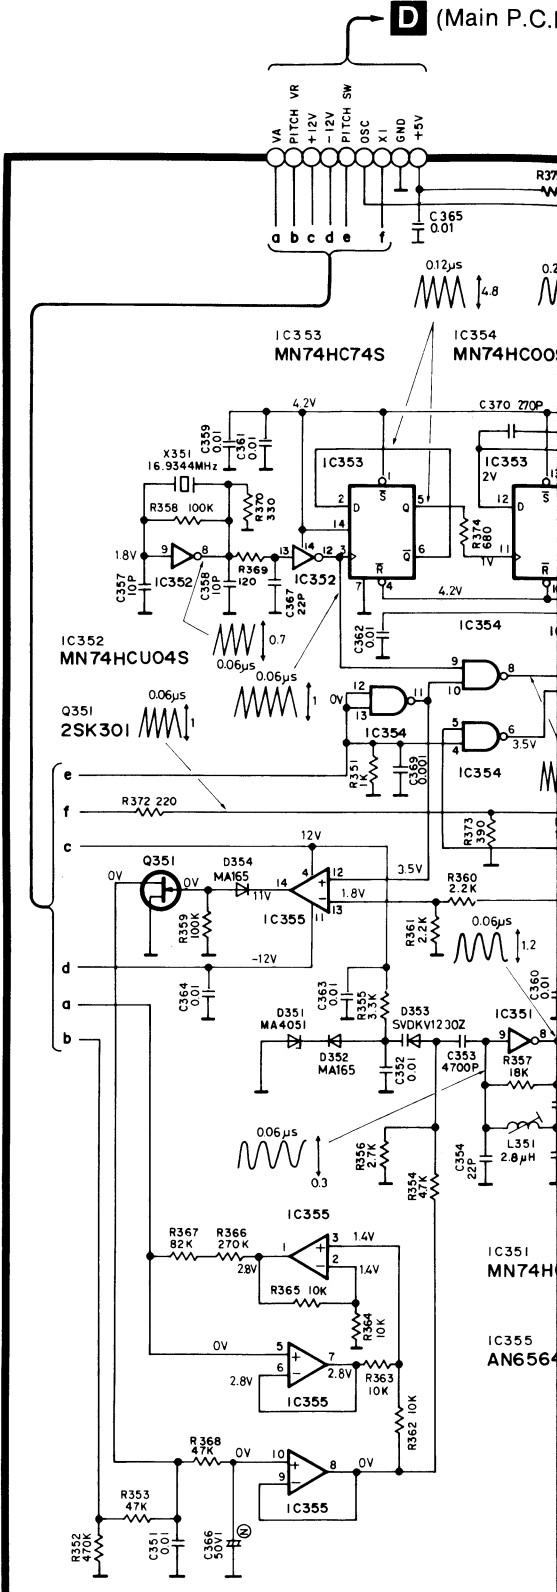


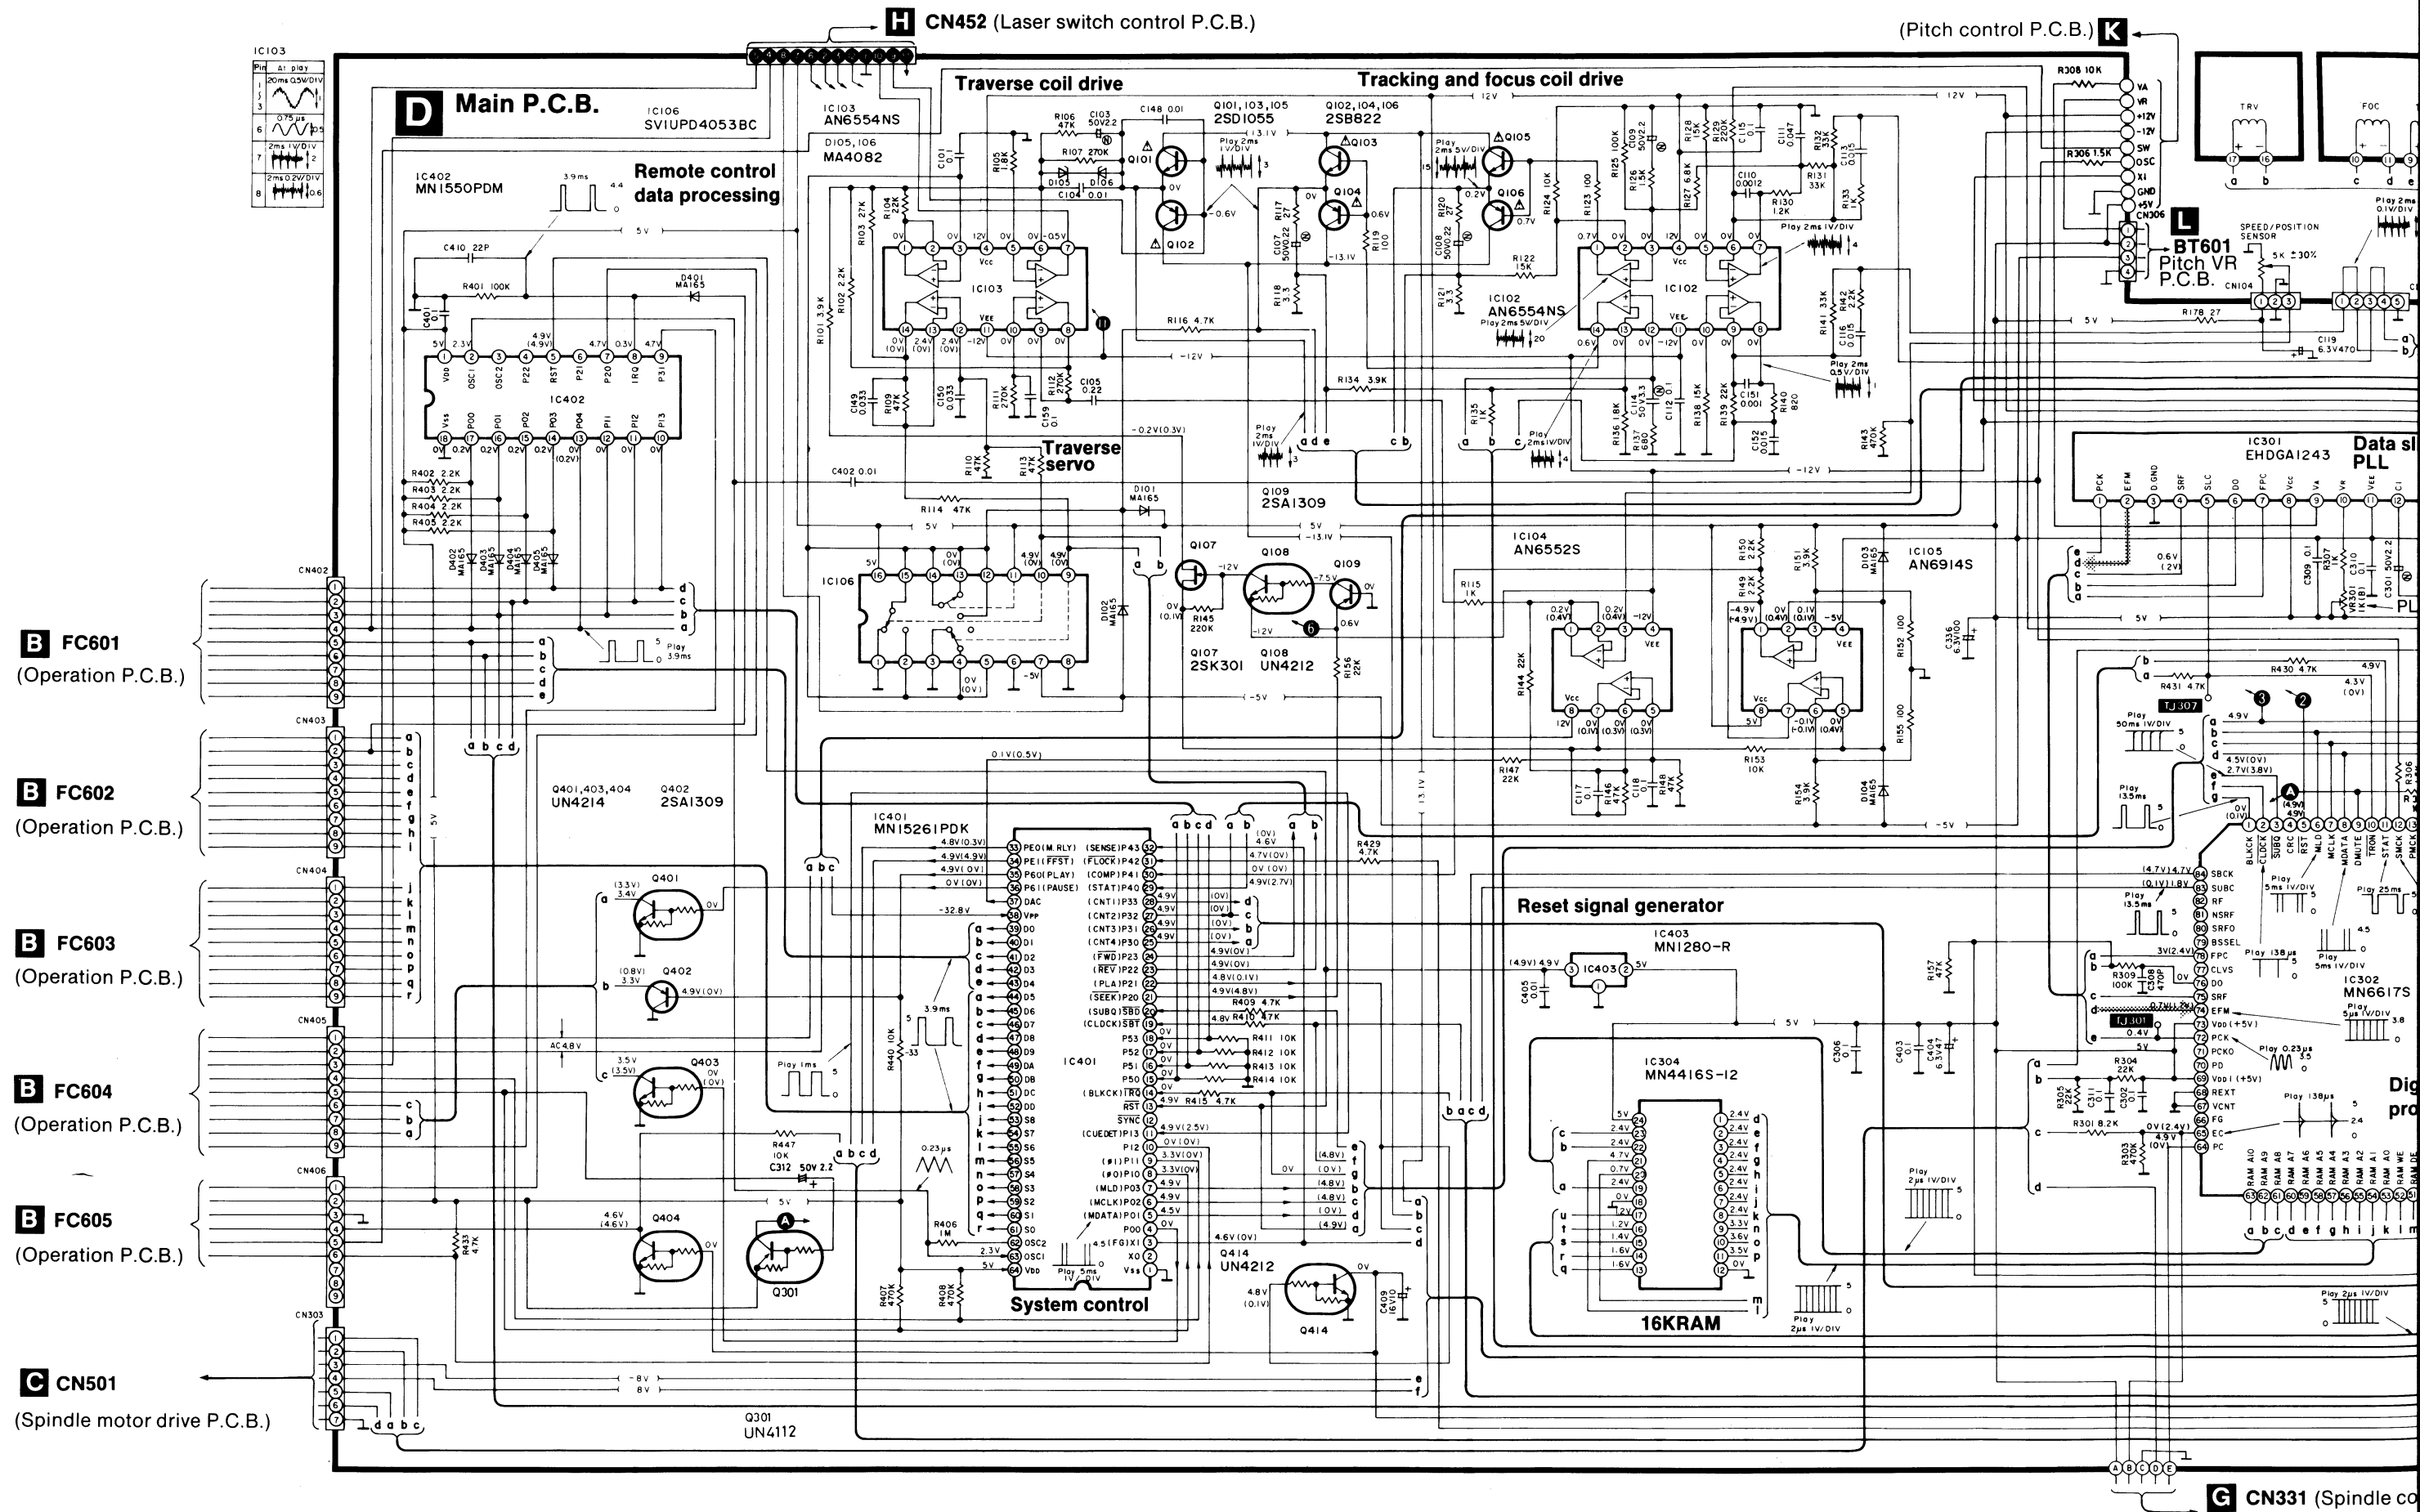

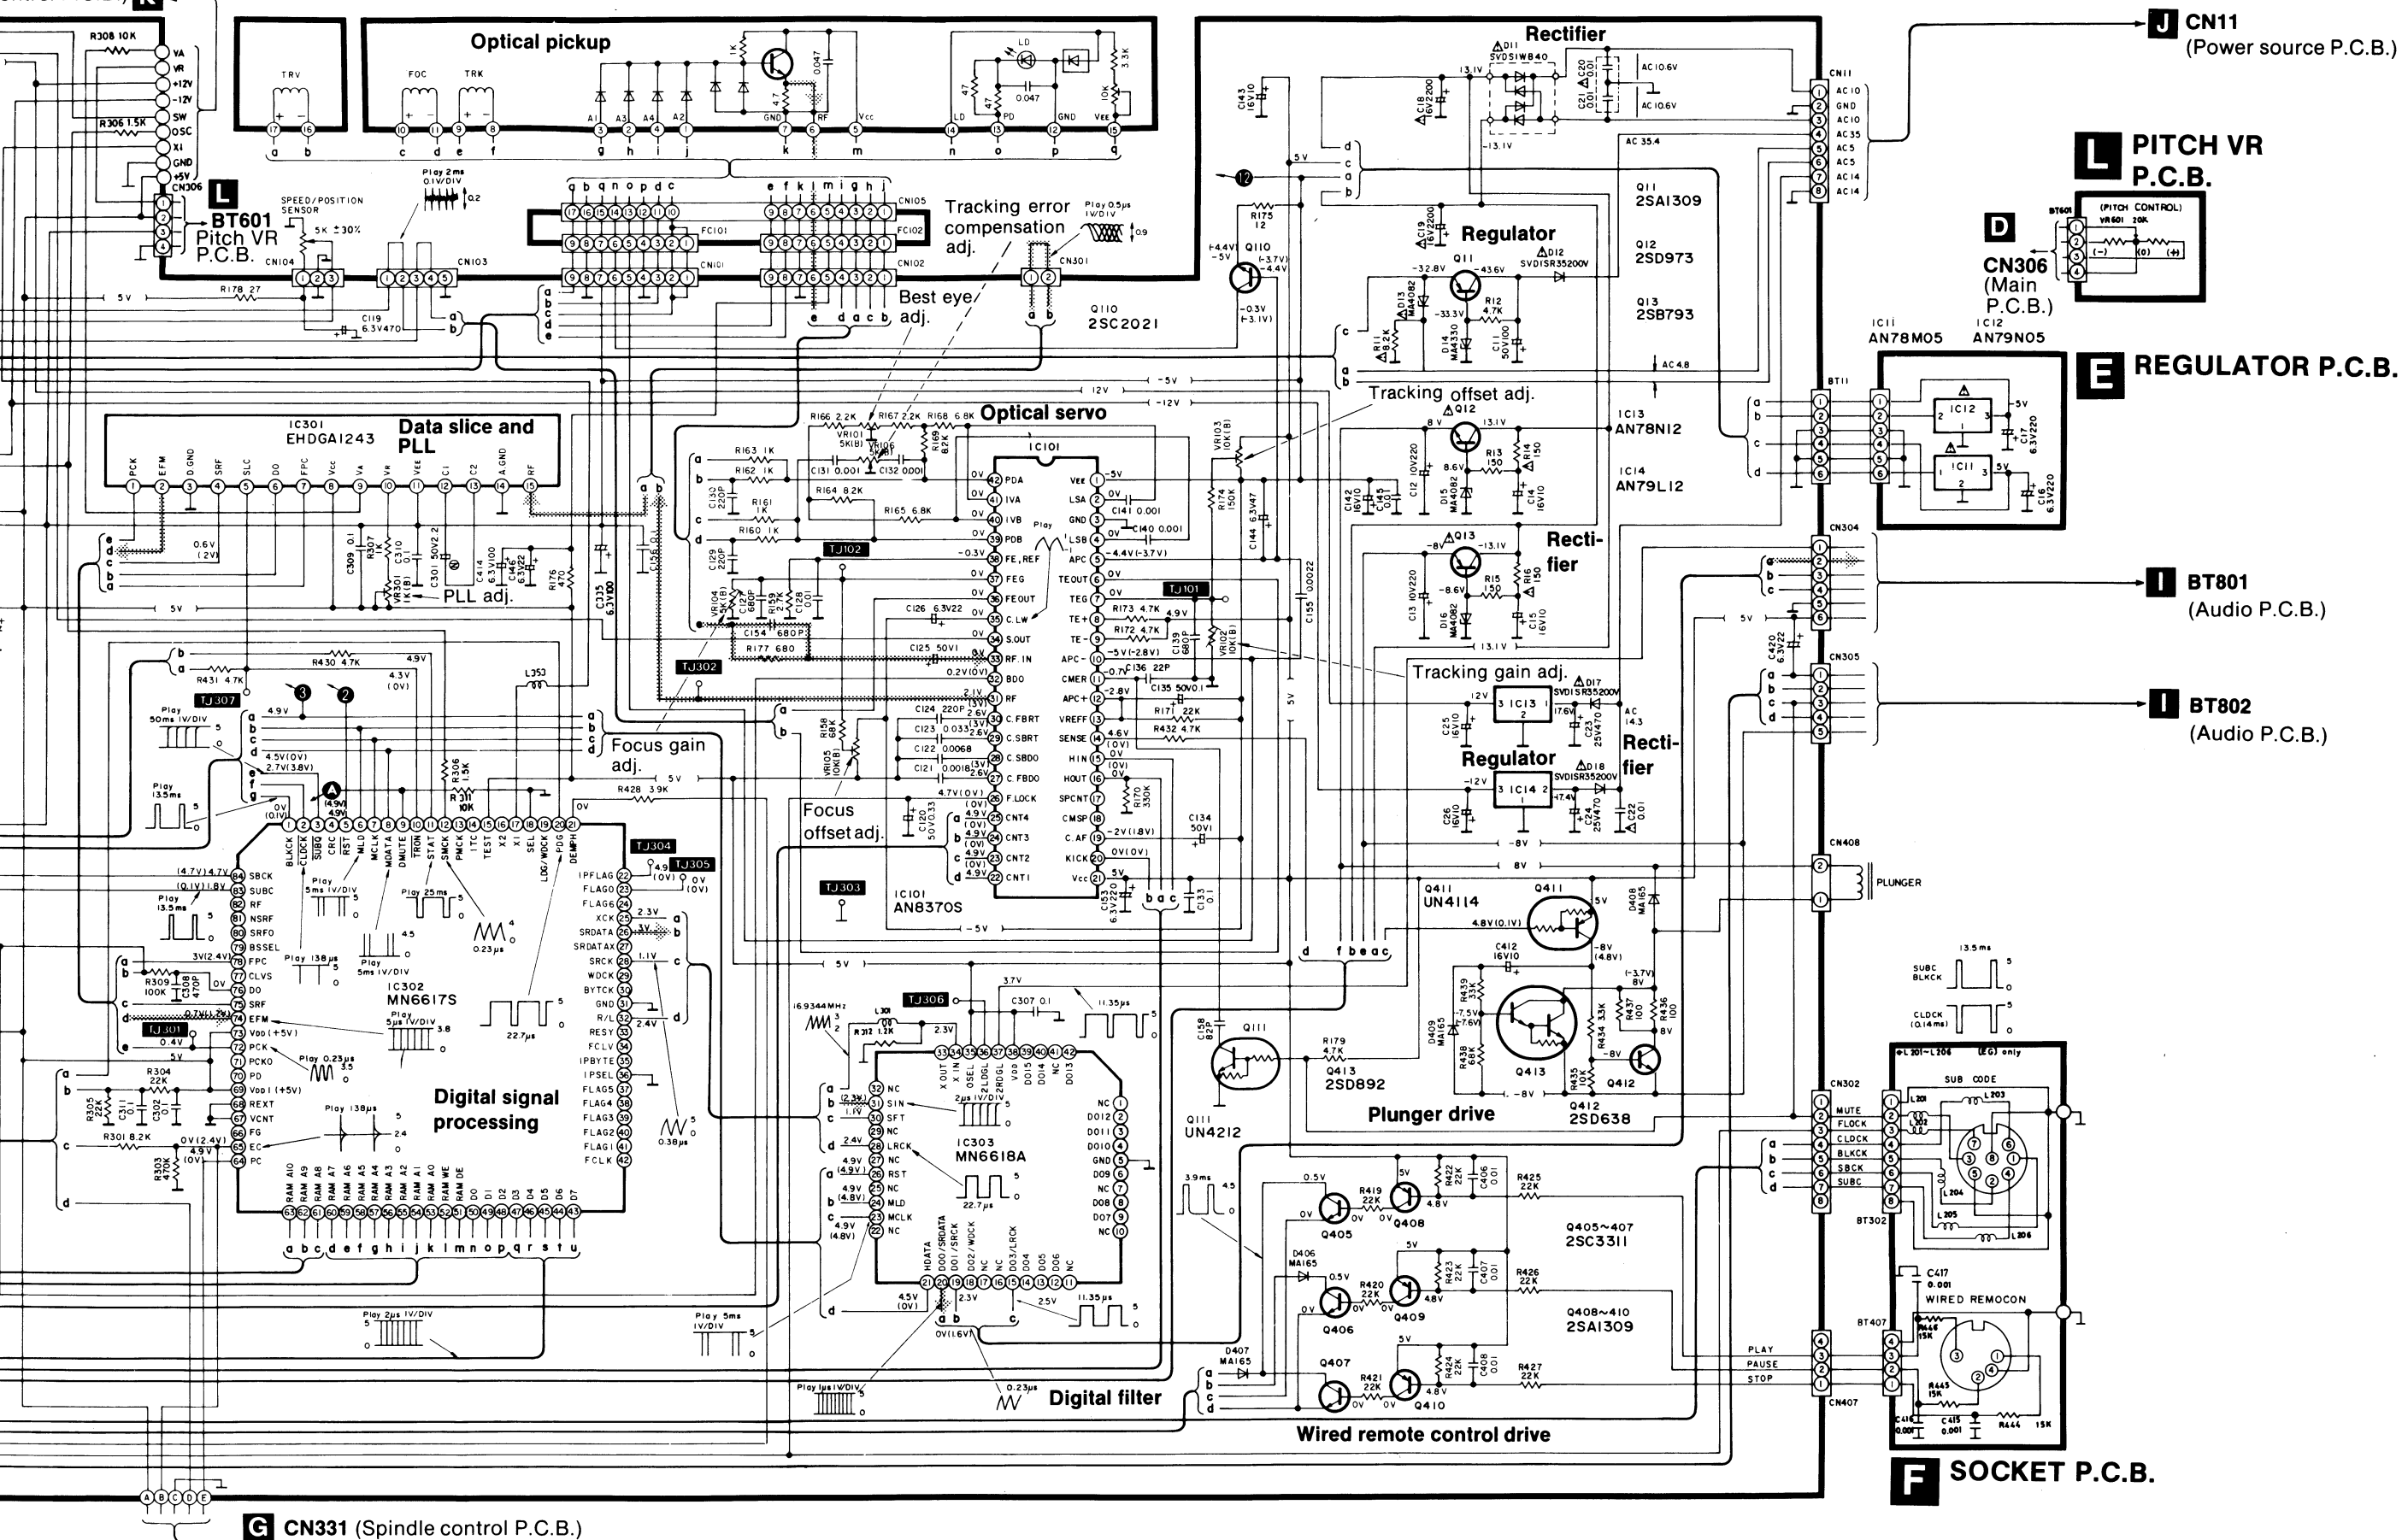
Control P.C.B.) **K**

G CN331 (Spindle control P.C.B.)

G SPINDLE CONTROL P.C.B.

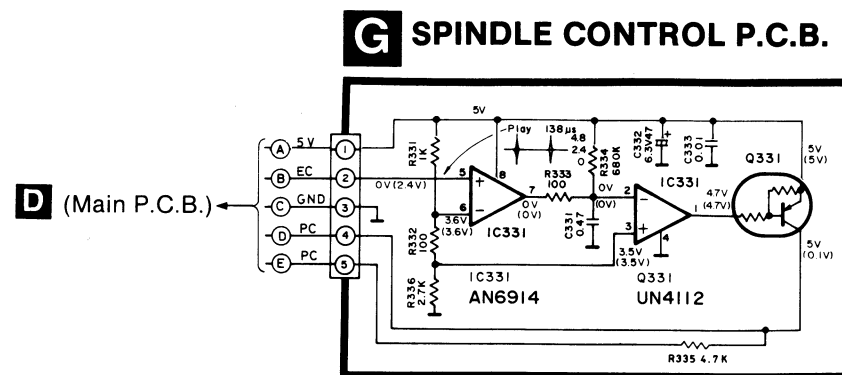

D (Main P.C.B.)

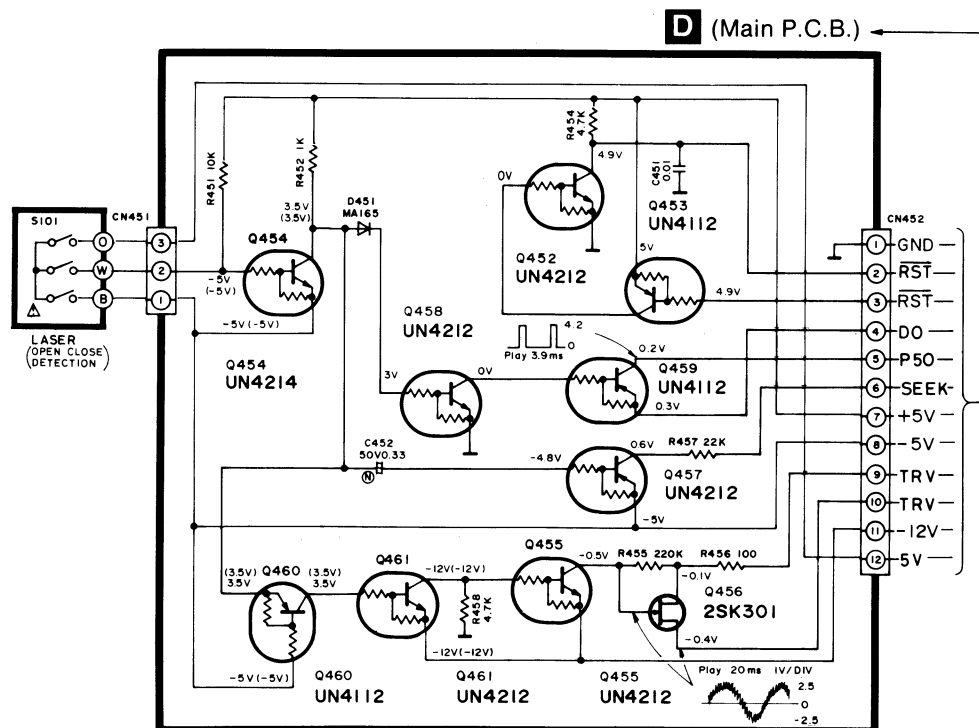


H LASER SWITCH CONTROL P.C.B.




D CN11
(Main P.C.B.)

I AUDIO P.C.B.


B CN304
(Main P.C.B.)

B CN305
(Main P.C.B.)

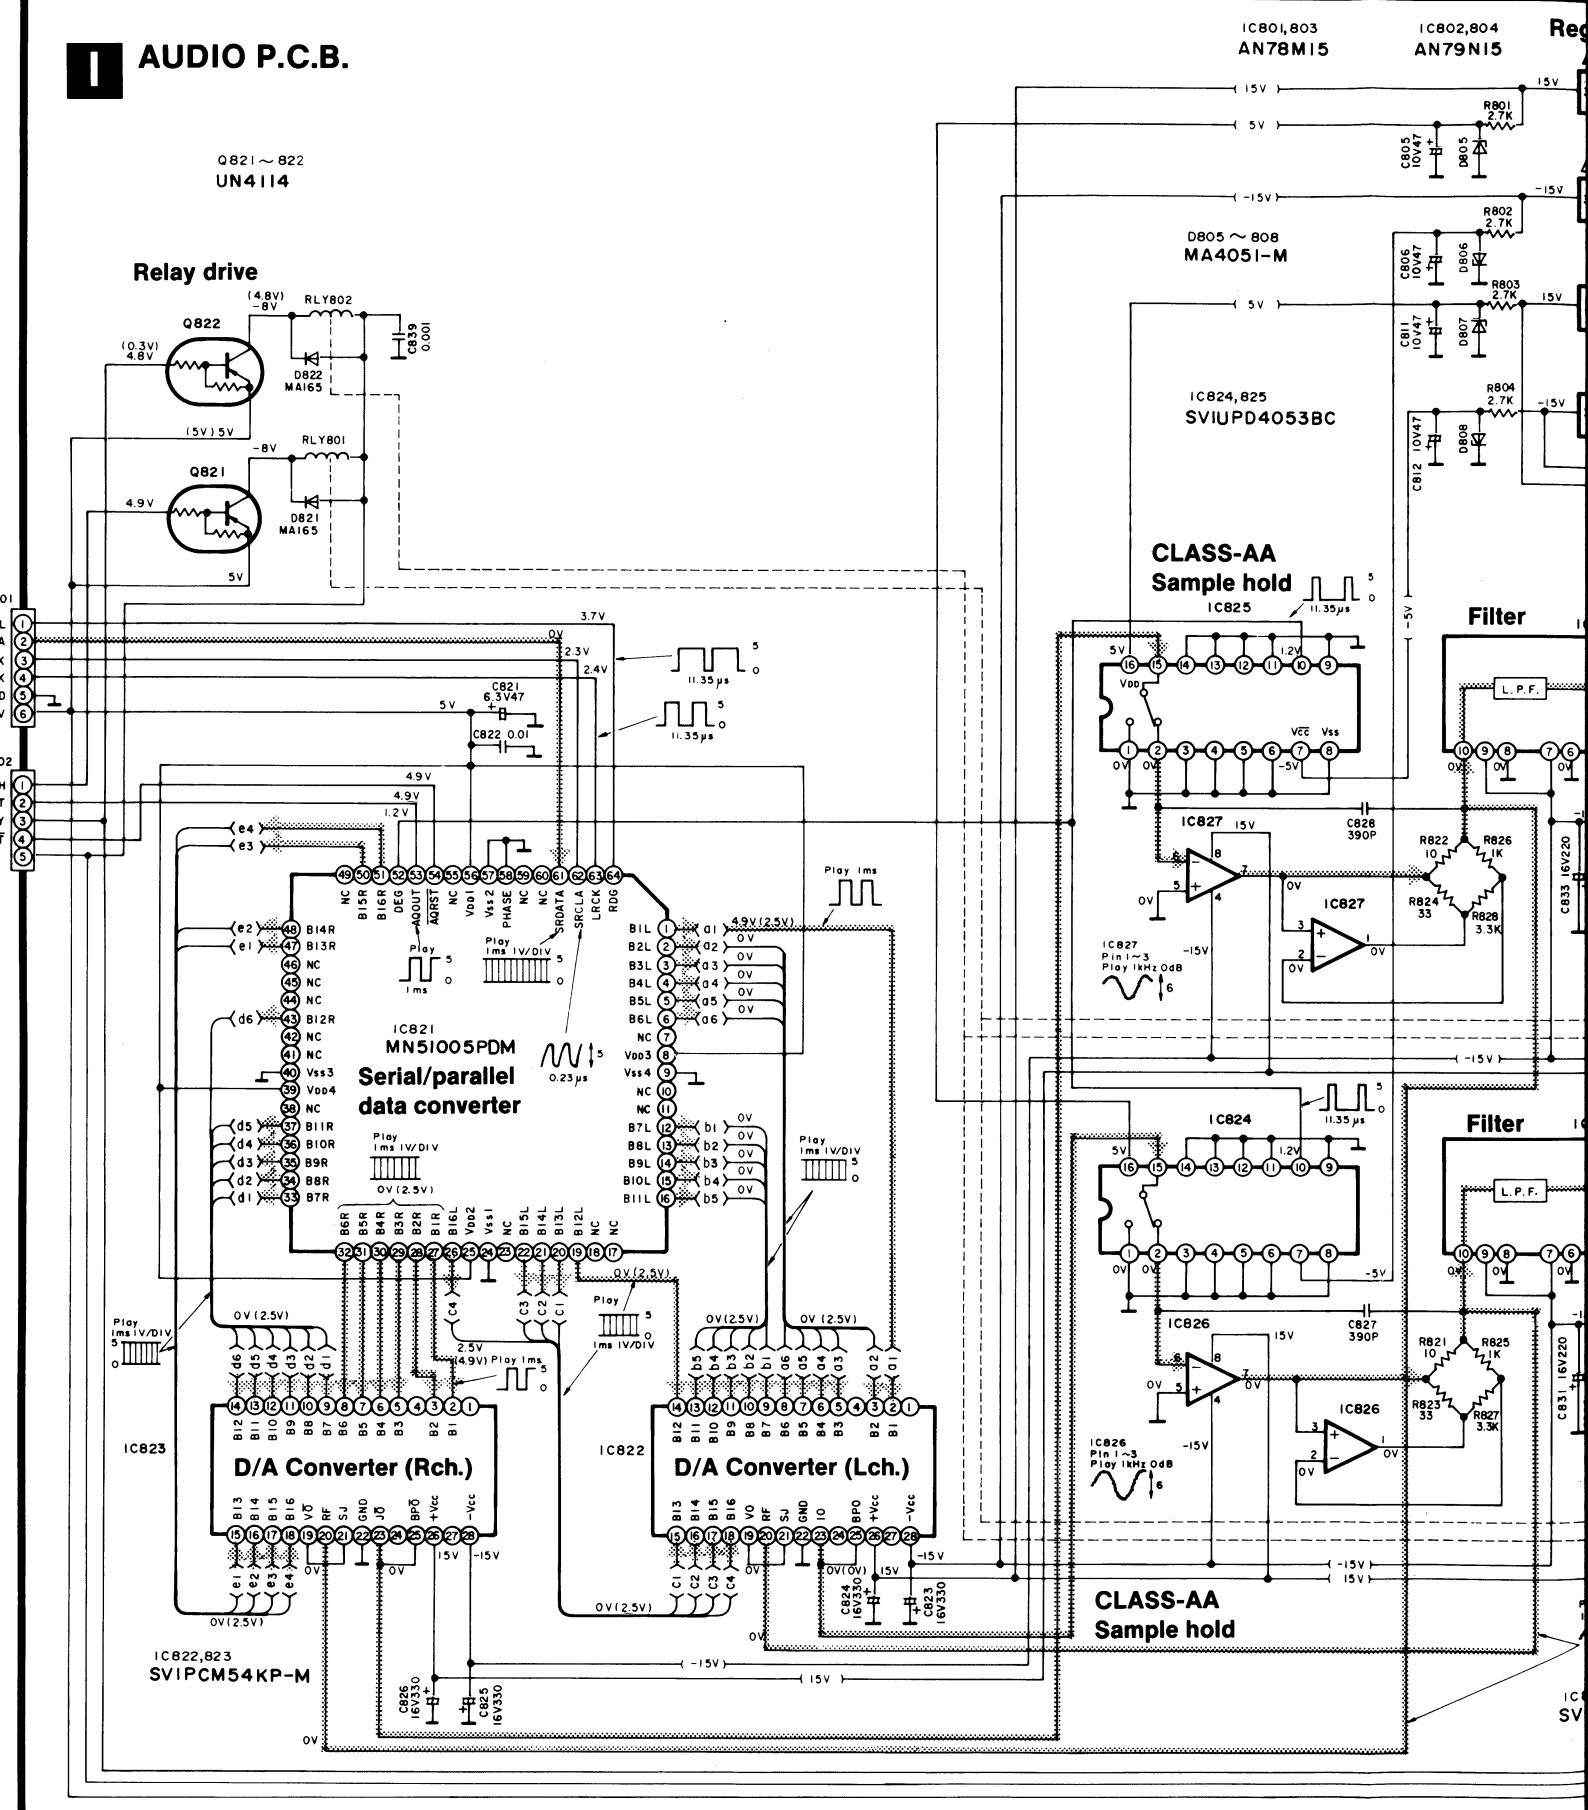

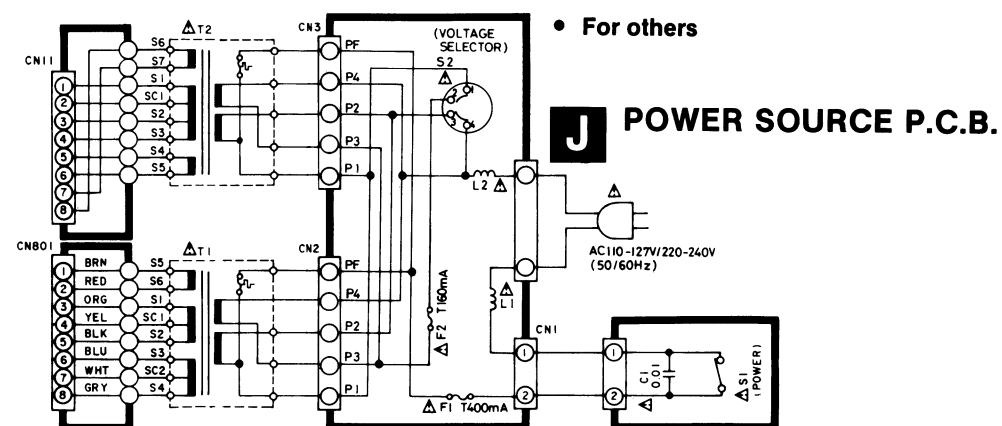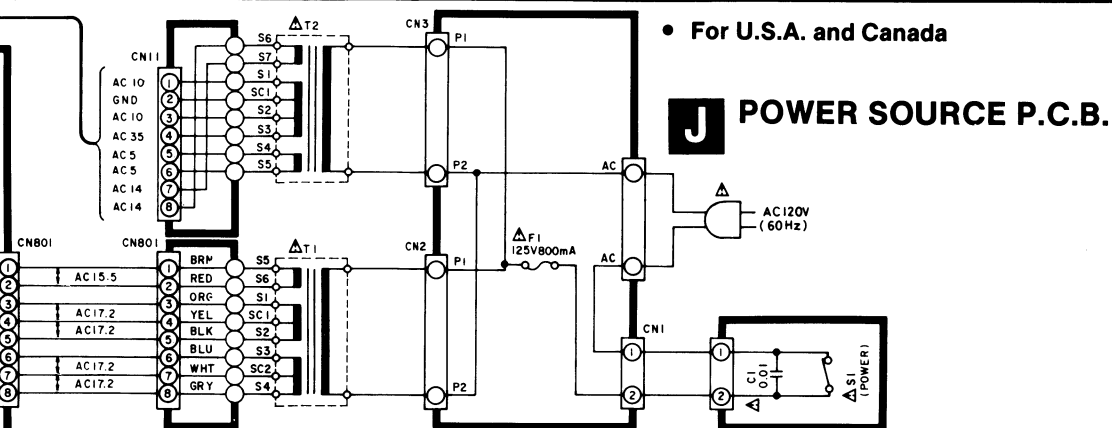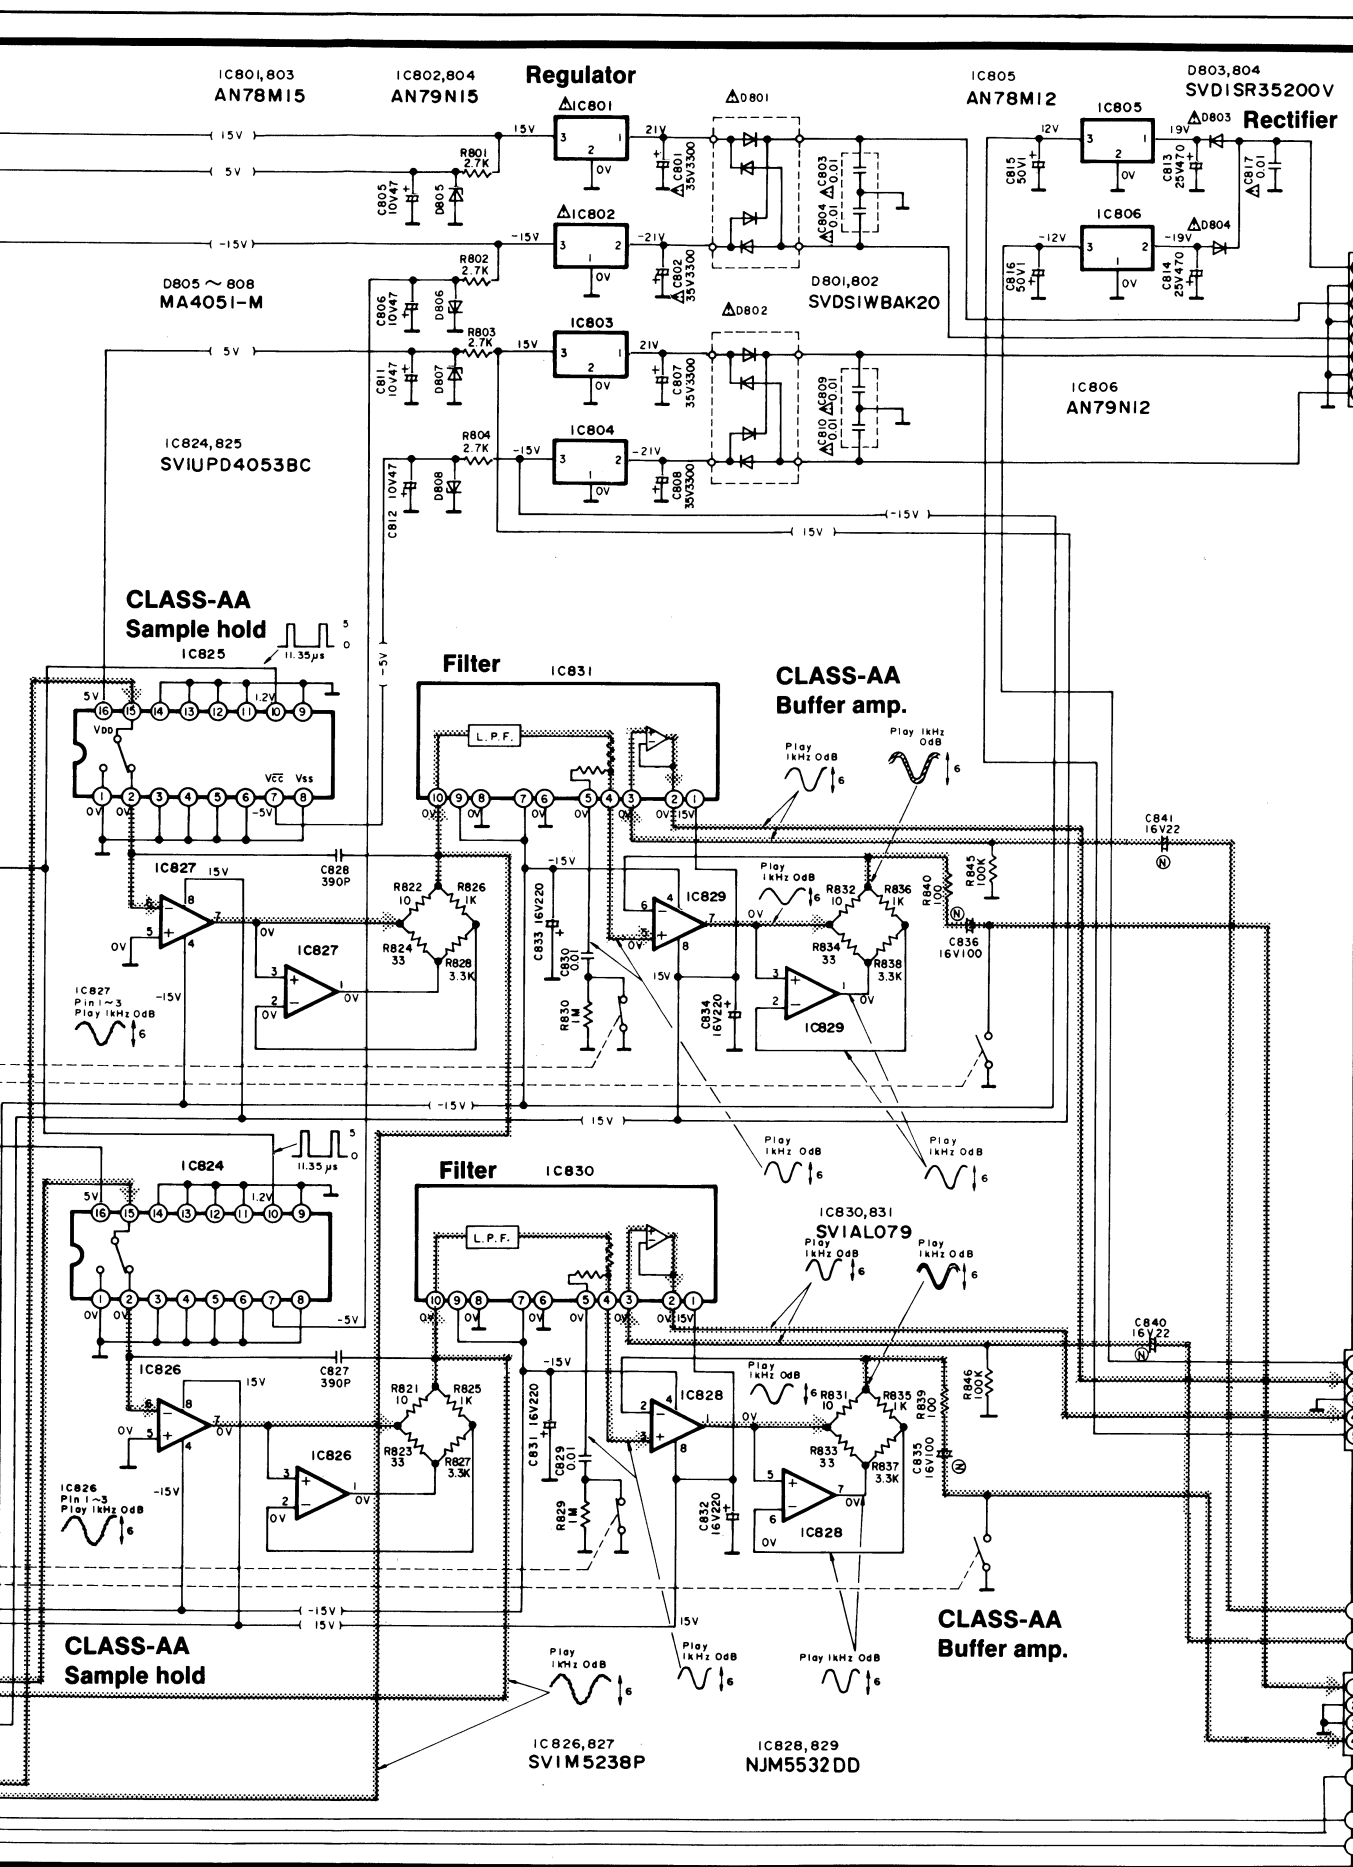

M HEADPHONE AMP. P.C.B.

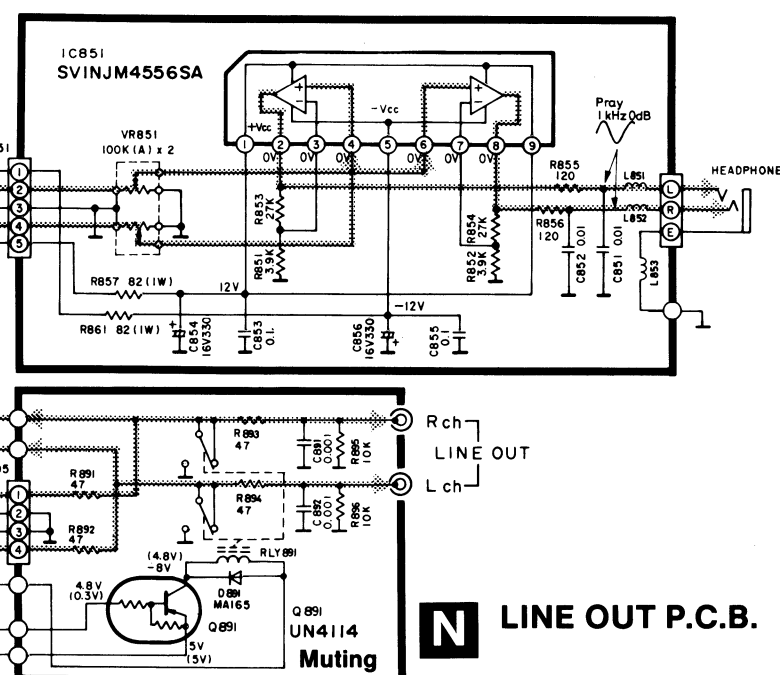

• Product for MC only

FUSE REPLACEMENT

Symbol located near the fuse indicates fast operating type. For continued protection against fire hazard, replace with same type fuse. Refer to the symbol for fuse rating.

FUSIBLE REMPLACEMENT

Le symbole qui se trouve près du fusible signifie un fusible à action rapide. Pour une protection continue contre les risques d'incendie, n'utiliser que des fusibles du même type. Se rapporter au symbole pour la valeur des fusibles.

■ BLOCK DIAGRAM

