

AR-V5403FL Installation Guide

Revision	Description	Date
1.0	Release	2010/08/07



Contents

1	Introduction to AR-V5403FL	3
	1.1 Specifications	3
	1.2 Packing List	
2	Procedure of Assembly/Disassembly	8
	2.1 2.5" Hard Disk Installation	8
	2.2 Accessory Installation	13
	2.3 GPS/3.5G/WiFi-Bluetooth Modules Insta	
3	Appendix	18
4	Introductions of AR-B5403	20
	4.1 Features	20
	4.3 Block Diagram	
5	Hardware's Information	24
	5.1 Locations	24
	5.2 Connector and Jumper Setting Table	27
6	BIOS Setting	36
	6.1 Main Setup	37
	6.2 Advanced Chipset Setup	
	6.3 PnP/PCI Setup	
	6.4 Peripherals Setup	
	6.5 PC Health Setup	
	6.6 Boot Setup	
	6.7 Exit Setup	



1 Introduction to AR-V5403FL

AR-V5403FL is a Fan-less system product mainly for vehicles industry PC applications. With powerful Intel CPU core & diverse memory card extension (according to CF card, SO-DIM), AR-V5403FL can satisfy the users requirements in any vehicles industry applications environment, especially in vehicles computer fields. AR-V5403FL has diverse physical interface in the front panel, such as GPIO's terminal, 2*(10/100/1000Base-T) LANs, VGA connectors, build-in LEDs, 4 USB Ports, 2 COM ports, SIM card functions and FUSE, ATX Power Switch &Remote Switch/ Microphone/Speaker, DC inlet. In addition, the system provides the capacity for extending I/O device by options adding GPS/3.5G/WiFi Bluetooth depends on users needs.

1.1 Specifications

Item	Description		
System	AR-V5403FL		
CPU Board	AR-B5403 series		
System Dimensions	205v100v67(mm)		
(uncluding bracket)	285x190x67(mm)		

1.2 Packing List

Description	Quantity
AR-V5403FL	1
Terminal block (Plug-DC connecter)	1
Terminal block (Plug-GPIO connecter)	1
Wall Mount Bracket(Including label for isolation)	2
Compact Disk	1
KB/MS Y Cable	1
Remote Switch Cable	1
2.5"HDD Bracket (Screws-4PCS)	1
Antenna for GPS external cable (Option)	1
Antenna for 3.5G external cable (Option)	1
Antenna for Wi-Fi + Bluetooth external cable (Option)	1
Fuse 7.5A for 24V vehicles	1






System Dissection

(1) Dimensions


AR-V5403FL's System assembly

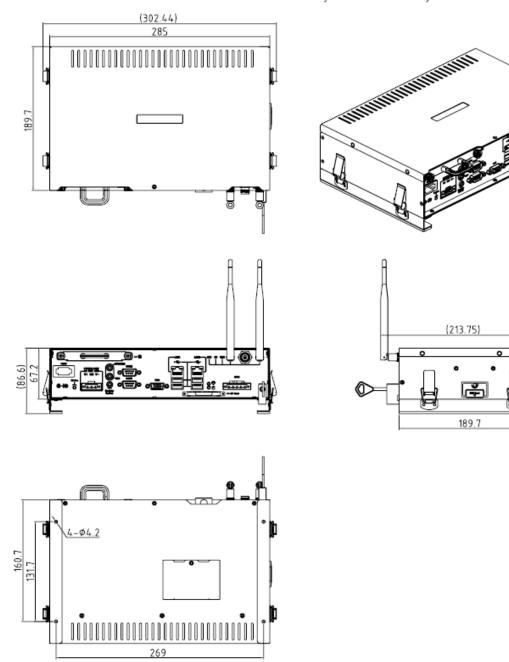






(2) Front Panel "I/O"

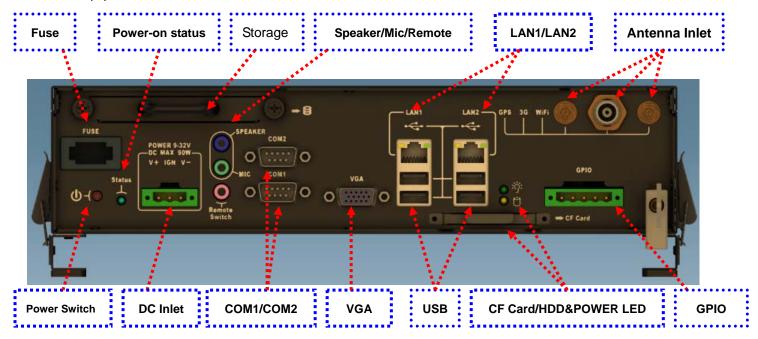


(3) System Configuration

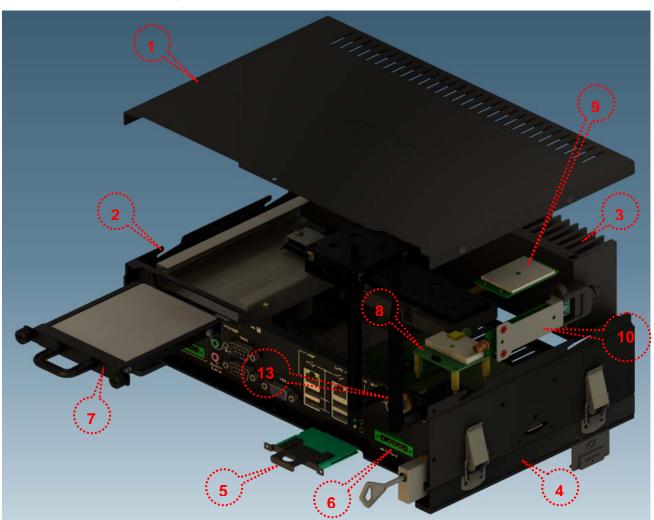





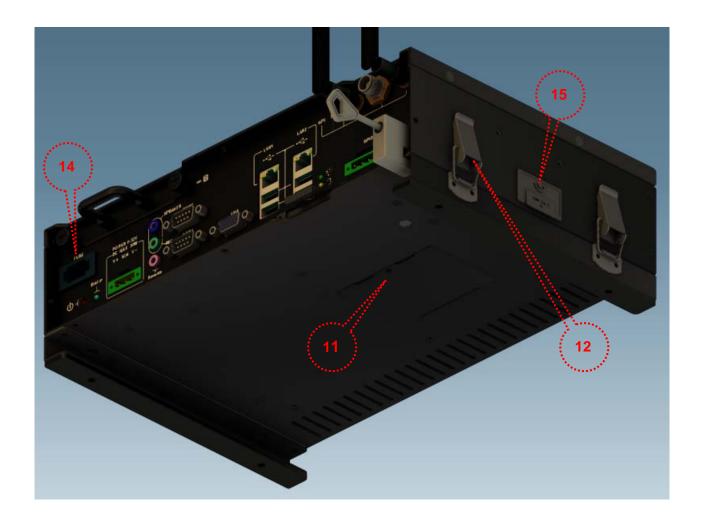





Item	Description	Quantity
1	Upper Cover	1
2	Bottom Case	1
3	Thermal Module	1
4	Mounting Bracket	2
5	CF Card Bracket	1
6	Mother board + GPIO board	1
7	HDD/SSD Module	1
8	GPS Module	1
9	3.5G Module	1
10	Wi-Fi Module	1
11	DDRII Lid	1
12	Hook modules of bracket	4
13	Antennas of GPS/3.5G/WiFi	1
14	Fuse 7A for 12V vehicles (default value)	1
15	SIM Card cover	1




2 Procedure of Assembly/Disassembly

2.1 2.5" Hard Disk Installation

The following instructions will guide you to install HDD step-by-step:

- 1. Remove the terminal plug from the AR-V5403FL.
- 2. Unfasten the screws from storage plate of AR-V5403FL.

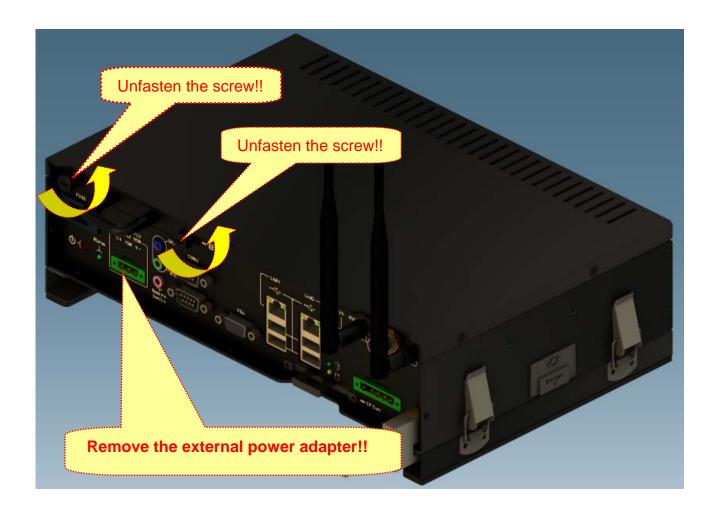






3. Pulled the storage plate by below photo direction.



4. Inserted the storage device into the HDD plater.

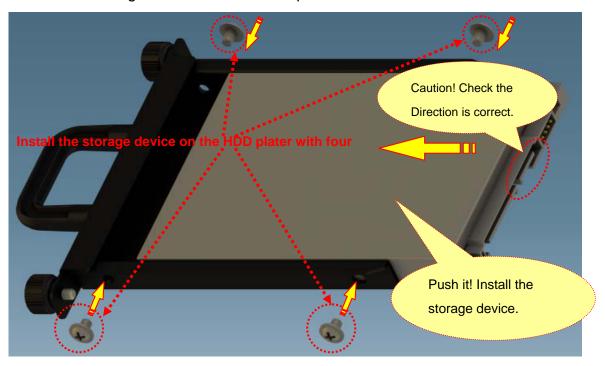





- 5. Place HDD module back into the case.
- 6. Fix HDD module to the chassis by two screws.










7. Slide the top cover into or take off the bottom chassis.



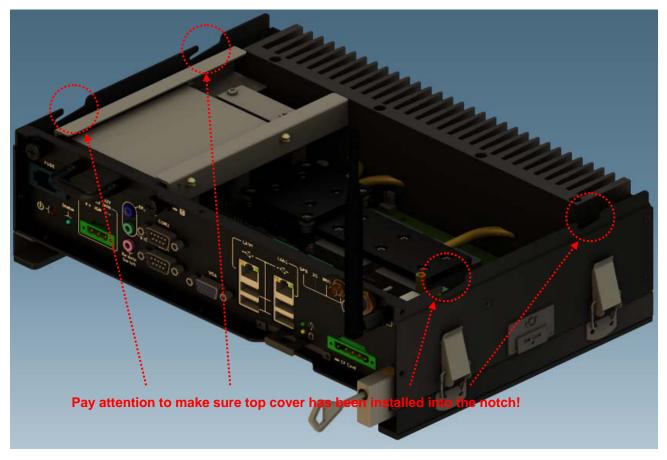





8. Finish the modules (3.5G/GPS/Wifi-Bluetooth) installation after fastening the screw.








2.2 Accessory (CF card, 3.5G, GPS, Wi-Fi Bluetooth, SIM Card, Outline bracket) Installation

Install CF Card

1. Remove the extending CF's bracket by unfastening the screws.




2. Install CF card into bracket.

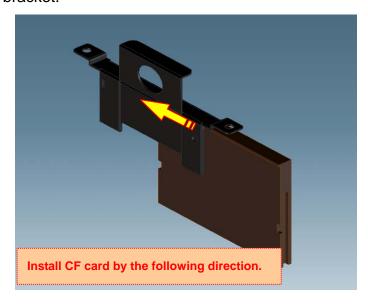



3. Install CF card module back to CF socket.

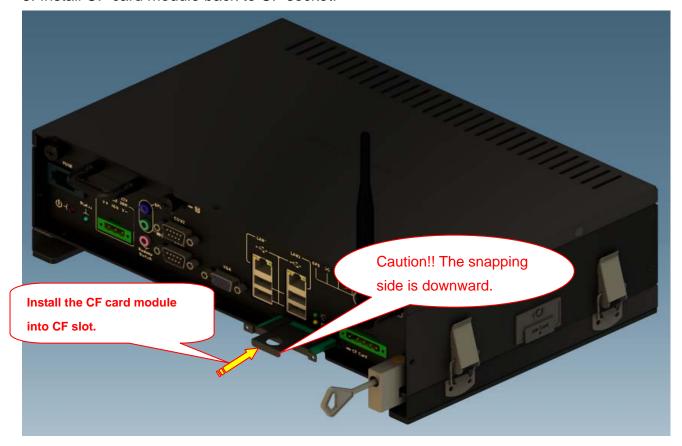

• Install SIM Card







• Install Outline Bracket

- 1. Install fasteners with case by 4 screws.
- 2. Install fasteners' another side with Outline bracket by 4 screws.
- 3. Lock the fasteners.








2.3 GPS/3.5G/WiFi-Bluetooth Modules Installation

1. Unfasten 2 screws to release Wi-Fi Bluetooth bracket.

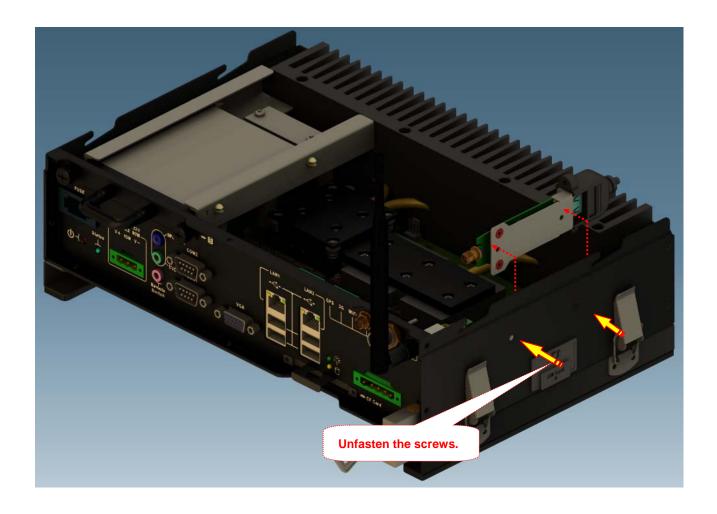





2. Install GPS/3.5G modules into chassis by fastening screws.






3 Appendix

Please do not change CPU by yourself. Any disassembly and assembly behavior for the CPU thermal module will causes unexpected damages.


Contact with Acrosser customer service center/FAE to change CPU.

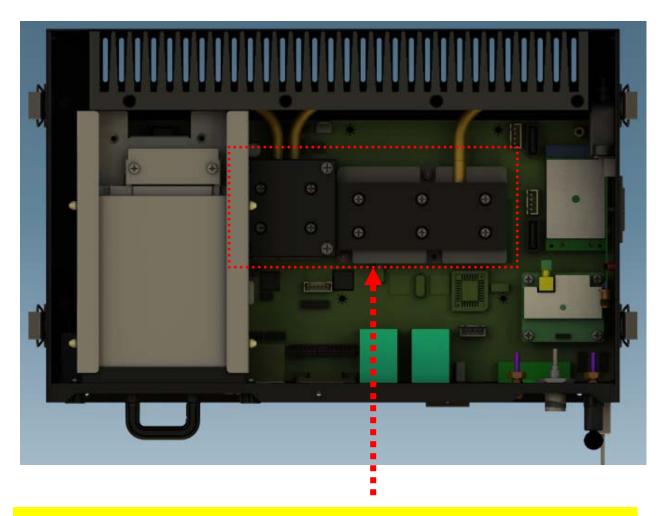

Please NOT disassemble and assemble the thermal module by yourself





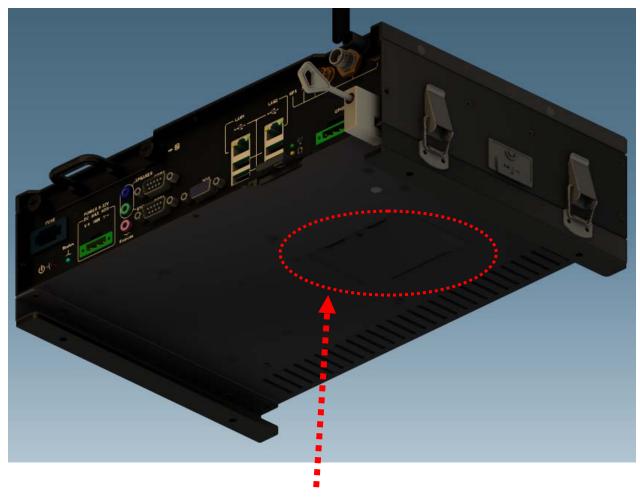

Please NOT disassemble and assemble the SO-DIMM module by yourself

Revision: 1.0



4 Introductions of AR-B5403

Welcome to the AR-B5403 Computer. The AR-B5403 is an Intel Core 2 Duo EPIC single board computer provides variety of display outputs. In addition to VGA, DVI and LVDS display outputs, AR-B5403 supports S-Video, BNC, and component TV outputs.

4.1 Features

Processor: Core 2 Duo, Core Duo and Celeron M

➤ Chipsets: 945GM + ICH7M

Memory: DDR2 533/667MHz SO-DIMM, Maximum 2GB

> Display: VGA, DVI, LVDS, TV Out

Storage: 1x CF, 2x SATA II,

> Audio: Line-out, Mic-in

Communication: 2x Gbps Ethernet, 7x USB 2.0, 3x RS-232, 1x RS-232/422/485

General: Watchdog timer, 8-bit GPIO, and PCI-104 expansion slot.

Specifications

System				
CPU Support Intel Core 2 Duo/Core Duo/Core Solo/Celeron M				
	CPU T7400 / T5500 / T2500 / CM440			
	CPU: L7400			
Chipset	Intel 945GME+ICH7M			
FSB	533/667MHz			
Memory	One SO-DIMM socket support 667/533 MHz DDR2 SDRAM up to 2GB			
	1G Bytes 667MHz DDRII pre-installed			
Video				
Graphic	Intel 945GME integrated GMA 950 graphic controller			
Controller				
Video Memory	deo Memory DVMT 3.0, Maximum 256MB shared			
Video Interface 1 x VGA port (DB15)				
Storage				





D-					
SATA	2 x SATA II port,				
CF	1 x External Compact Flash Type I/II socket				
Disk Bay	1 x Anti-shock 2.5" HDD bracket swappable without open case				
I/O					
Ethernet	2 x Gbps RJ45 with LED, Broadcom BCM5787				
Serial Port	4 x RS-232				
	(2 x DB9, 2 x pin header, COM3 for reserve for PIC on power circuit, COM4 for GPS				
USB	7 x USB2.0				
	(4 x external port, 3 x pin header)				
GPIO	4-bit GPIO (2 In, 2 Out) with 5 pin terminal block, 2-in/GND/2-out				
Audio	IC: Realtek ALC655				
	Interface : MIC-In, SPK-Out				
Remote control	1 x Remote control				
Fuse	7.5A				
Antenna Hole	1 x SMA for GPS, 1 x SMA for 3.5G, 1 x SMA for WiFi+Bluetooth				
miniPCle	1 x miniPCIe option for MC8790				
SIM slot x1, SIM card changeable without opening case, latch to					
	SIM uncertainly touch				
Expansion					
PCI-104 Keep design, remove PCI-104 slot					
Others					
GPS(option)	Globalsat ER-332				
3.5G(option)	Sierra MC 8790/8790V, through miniPCIe slot on AR-B5403				
WiFi(option)	(1)2 in 1 module (WLBT-Combo-E), (2)				
Bluetooth	2 in 1 module (WLBT-Combo-E)				
Software					
OS support	Windows XP/ XP embedded, Linux FC 6 /7				
Power	Power onboard design(AR-B5403)				
	■ Wide range input DC 9V~32V				
	Fuse Design				
	Smart ATX power function:				
	a. Power on/off retry				
	b. Adjustable delay time for system OFF by Switch on power module				
	(Mode2~Mode7)				
	c. System on/off by Vehicle ignition or Remote switch button				
	d. Low Power input monitoring, Auto shutdown				
	● S/W configurable by COM3				






	Remote switch(audio jack)				
	System status LED(blue)				
	Embedded power local switch				
	AR-PW0932V default is Mode 2				
Mechanical & Er	nvironment				
Thermal Design	Heat pipe solution				
Chassis	Metal steel				
Material					
Bracket	Bracket with anti-thief function (Locker option)				
Dimension	T.B.D.				
Vibration	IEC 60068-2-64 5~500Hz, 3GRMS for SSD/CF, 1GRMS for 2.5"HDD,				
	operating				
Shock	IEC 60068-2-27 50G-500m/s -11ms, operating				
Operating -15~50°C with Industrial Grade CF or SSD					
Temp.					
Storage Temp.	-40~80℃				
Certification	CE/FCC class B				





4.3 Block Diagram

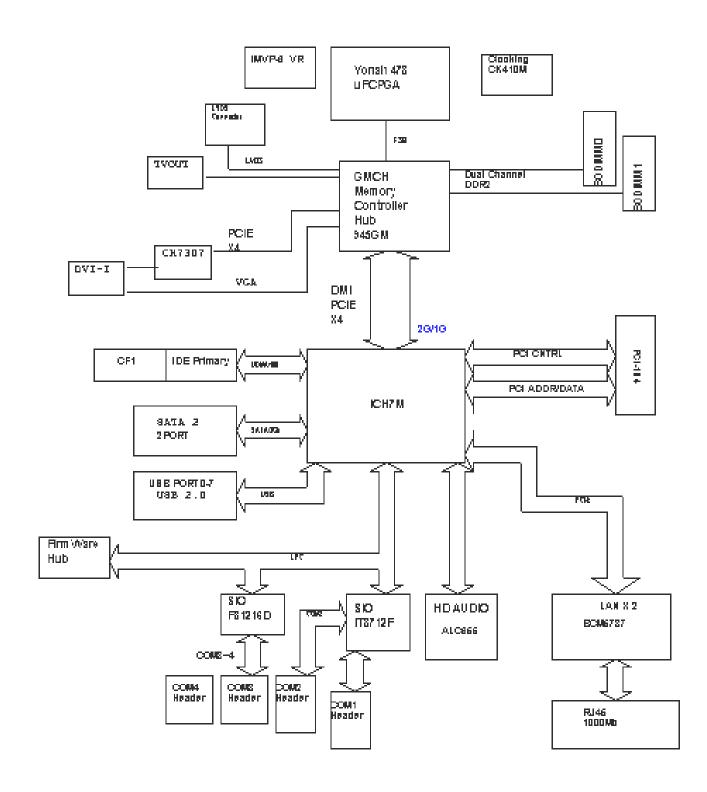




5 Hardware's Information

This chapter describes the installation of AR-B5403. At first, it shows the Function diagram and the layout of AR-B5403. It then describes the unpacking information which you should read carefully, as well as the jumper/switch settings for the AR-B5403 configuration.

5.1 Locations


5.1.1 Top Side

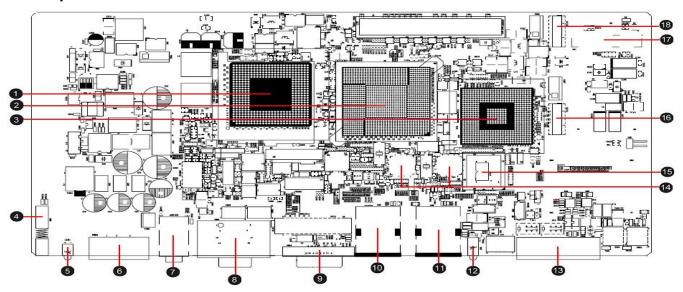

	СРИ		USB Port and LAN	
1		10	USB FOIL and LAN	
	PU Socket		2 USB and 1 RJ-45 for LAN	
2	GMCH	4	USB Port and LAN	
4	Graphic Memory Control Hub Intel 945GME	O	2 USB and 1 RJ-45 for LAN	
3	ICH7M	12	Power LED and HDD LED	
9	Graphic Memory Control Hub Intel GM45	U	Power LED and HDD LED	
	Local Switch	13	GPIO Port	
4	12V Power Switch	9	User Defined GPIO Port	
5	Status LED	14	LAN Chip	
•	Machine Status LED		Broadcom BCM5787 Gigabit Ethernet	
6	Power Connector	15	BIOS	
0	12V Power Connector	•	BIOS IC	
7	Remote Switch and Audio	16	SATA1	
U	Remote Power Control and Audio I/O	•	SATA Data Connector	
8	COM Port	17	Mini-PCIE for 3G module	
0	RS232 Serial Ports (COM1 & COM2)	W	3G Module slot with USB interface	
9	VGA	18	SATA2	
9	VGA Port	•	SATA Data Connector	




5.1.2 Bottom Side

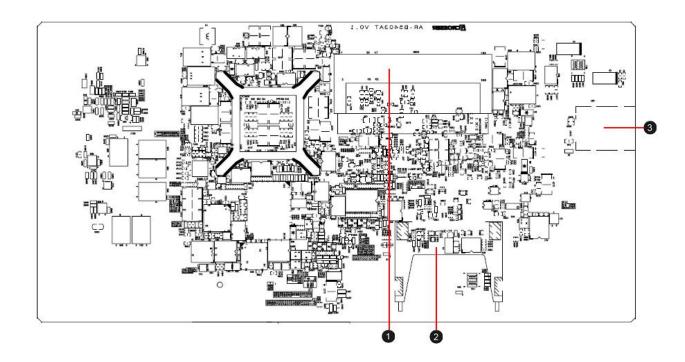

	SO-DIMM Socket SO-DIMM Socket for DDR2		SIMM Card Socket	
u			SIMM Card Socket for 3G Module	
	CF Slot			
2	CF Slot for CF Card support IDE Mode			



5.1.3 Connector and Jumper Setting

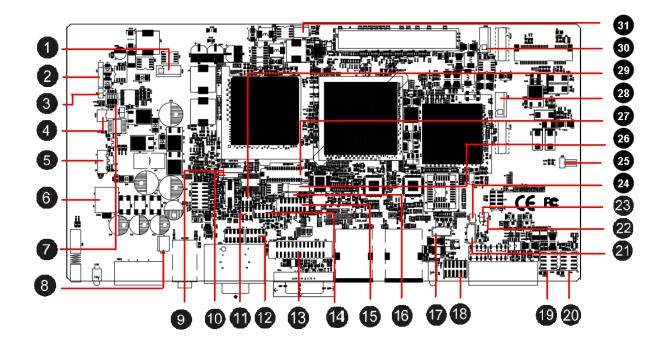

0	PWR1 12V, 5V Output	12	COM4 Pin Header for COM4 Port	23	J6 CF Card Master setting
2	J12 Connector for Programming PIC	13	DVI3 DVI Output Port	2	BAT1 Battery Input
3	JP4 Define KEY_SW, ENG_STS input type	14	GPIO1 Pin Header for User-Defined GPIOs	25	CN2 3.5G Carrier Board Status LED
4	CN10 Reserve Pin	1 5	TVCON1 TV Output Port	26	LCDPW1 Backlight Power and Control signal
5	J11 Front Panel Connector	16	J1 LVDS Panel Power Select	27	LCD1 LCD Signal Output
6	Fuse1 Fuse Connector	1	CN8 +5V, +12V for External Module	28	CON7 SATA Device Power
7	SW1 DIP Switch for Power Mode Select	18	J10 Jumper Select for GPIO Configuration	29	JP1 COM2 Transfer Protocal setting
8	FAN1 System Fan Connector	19	USB2 Pin Header for USB Ports	30	CON2 SATA Device Power
9	IR1 IR Port	20	USB3 Pin Header for USB Ports	3	FAN2 CPU FAN Connector
10	J5 COM2 RS-422,RS-485 Output	21	CN9 +5V, +12V for External Module		
•	J9 Power SW, Reset, Buzzer Connector	22	JBAT1 Pin Header for CMOS Clear		





5.2 Connector and Jumper Setting Table

1. PWR1 (12V,5V Output)		2. J12 (0	Connector for PIC	3. JP4 (Define Key_SW,	
		Program	nming)	ENG_STS Input Type)	
4	PIN DEFINE 1 +12V 2 GND 3 GND 4 +5V	1 2 3 4 5	PIN DEFINE 1 +5VSB 2 ISPDATA 3 ISPCLK 4 ISPVPP 5 GND	Status Open Active High Short Active Low	
4. CN10	(GPO reserve)	5. J11(F (Note1)	ront Panel Connector)	6. FUSE1 (Connect to Fuse)	
7 000	PIN SIGNAL 1 GPO 2 GND	~ O	PIN Signal PIN Signal 1 PWRBTN_IN 2 GND 3 LOC_SW 4 GND 5 KEY_SW 6 GND 7 ENG_STS 8 GND 9 STS_LED 10 GND	PIN Signal 1,2 Fuse Out 3,4 Fuse In	
	(DIP switch for node select)(Note2)	8. FAN1 (System FAN)		9. IR1 (IR Pin Header)	
Mode			PIN SIGNAL 1 GND 2 12V 3 FAN Speed Detect	PIN DEFINE 1 +5V 2 NC 3 IR_RX 4 GND 5 IR_TX	





10. J5 (COM2 RS-422,RS-485		11. J9 (Power Button & Reset &		12. COM4 (Pin Header for			
Output)		Buzzer)		COM4)			
Q 1 Q 4	PIN SIGNAL 1 TX+ 2 TX- 3 RX+ 4 RX-	6 5 5 2 1 1	PIN SIGNAL PIN SIGNAL 1 5V 2 PCBEEP 3 GND 4 RESET 5 GND 6 PWRBTN **PWRBTN for ATX mode only	2	PIN SIGI 1 DC 3 R 5 T. 7 DT 9 GN	CD 2 X 4 X 6 R 8	SIGNAL DSR RTS CTS RI NC
13. DVI3	(DVI Port)		01(Pin Header for fined GPIOs)	15. TVC	ON1 (TV	Output	Port)
2 26 ())))))))))))))))))))))))))))))))))))	PIN SIGNAL PIN SIGNAL 1 GND 2 TD0 3 TD0- 4 GND 5 TD1 6 TD1- 7 GND 8 TD2 9 TD2- 10 GND 11 TCK 12 TCK- 13 HPD 14 DDCCLK 15 VCC 16 DDCDATA 17 RED 18 GND 19 GREEN 20 GND 21 BLUE 22 GND 23 VSYNC 24 CRT 25 HSYNC 26 CRT	PIN SIGNAL PIN SIGNAL 1 GPIO0 2 5V 3 GPIO1 4 GPIO7 5 GPIO2 6 GPIO6 7 GPIO3 8 GPIO5 9 GND 10 GPIO4		1 2 2 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3	PIN Signal S-Vide Lumina GND CVBS GND S-Vide Chrom GND GND NC	2 ance 2 6 8 0 10 inance 12	Reserve NC Reserve GND NC NC
16 J1 (L0	CD Panel Power	17 CN8 (Power Connect for		18 J10 (Jumper Select for GPIO			
Select)		+12V and +5V)		configuration)			
1 2 3 3	STATUS SETTING 1-2 close +5V 2-3 close +3.3V	4 0 - 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	PIN DEFINE 1 +12V 2 GND 3 GND 4 +5V	2 12 988889 1 11	PIN 1-2 3-4 5-6 7-8 9-10 11-12	DEFI NC(DEF NC GND(DEI +5\ +12	AULT) FAULT) V





19. USE	32 (USB Output Port)	20. USB3 (USB Output Port)	21. CN9 (Power Connect for +12V and +5V)
	PIN SIGNAL PIN SIGNAL 1 +5V 2 +5V 3 DATA3- 4 DATA2- 5 DATA3+ 6 DATA2+ 7 GND 8 GND 9 GND 10 GND	PIN SIGNAL PIN SIGNAL 1 +5V 2 NC 3 DATA7- 4 NC 5 DATA7+ 6 NC 7 GND 8 NC 9 GND 10 NC	PIN DEFINE 1 +12V 2 GND 3 GND 4 +5V
22. JBA	T1 (Pin Header for Clear)	23. J6 (CF Card status)	24. BAT1 (Battery Connector)
1 2 2 3	STATUS SETTING 1-2 Normal 2-3 Clear CMOS	STATUS SETTING SHORT Master OPEN Slave	PIN SIGNAL 1 VBAT 2 GND





25. CN2 Status)	(3.5G Module	26. LCD	DPW1 (Backlight Output)	27. LCD1 (LCD Signal Output)			
. 8	PIN SIGNAL 1 +3.3V 2 Status Signal	123456	PIN DEFINE 1 +12V 2 +12V 3 GND 4 Backlight Enable 5 GND 6 Backlight Control	2 UTUTUTUTUTUTUTUTUT 30	PIN SIGNAI 1 LCDVCI 3 B CLK- 5 GND 7 B DATA2 9 B DATA4 11 NC 13 B DATA4 15 GND 17 A CLK- 19 A DATA2 21 I2C CLI 23 A DATA4 25 A DATA4 27 NC 29 LCDVCI	2 2 4 6 + 8 - 10 12 + 14 16 18 + 20 2 22 - 24 + 26 28	SIGNAL GND B CLK+ B DATA2- GND B DATA1+ NC BDATA0- A CLK+ GND A DATA2- A DATA1+ I2C DATA A DATA0- NC LCDVCC
28. CON	N7	29. JP1	(COM2 Type Setting)	30. CON2	2 (+12V,+5V	+3.3	V for
(+12V,+	(+12V,+5V,+3.3V for SATA HDD Power)				A HDD Powe		
4 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	PIN DEFINE 1 +12V 2 GND 3 +3.3V 4 +5V	STATUS SETTING		4	PIN 1 2 3 4	+* G +3	FINE 12V ND 3.3V 5V





31 FAN2 (CPU Fan Connector)				
	PIN	SIGNAL		
1 2	1	GND		
³ ॑□ ₹	2	12V		
	3	FAN Speed Detect		

Note1, 2 Power smart functions

Definition

1. Soft off cycle:

A period when received power off signal to generate a off signal (A 500mS pulse, High- Low –High or Low-High-Low depends on SIO configuration, to mother board's Power Button Pin)

2. Hard Off cycle:

A period when system off (S5) to stand by removed (G3). In another word, the A period of 5VSB on to off (when system already off)

Notes: S5 and G3 is follow by ACPI

Mode description

The main power-in is controlled by the switch on chassis.

Maximum 16 Modes adjusted by 4 switches. (Mode 8 to mode 15 are reserved for future use).

Mode 0: ATX mode.

- A. 5V Standby is always on.
- B. Input voltage is not monitored.
- C. Power on/off is controlled by remote switch
- D. Local Switch priority is higher than remote switch. This is controlled by hardware.

Mode 1: AT mode

- A. Power output immediately after input is present.
- B. Power can only be turned off by turning off local switch. The remote switch will be ignored by Power smart function. In this mode the BIOS shall be set to AT mode.



Smart Mode (Mode 2 to Mode 7)

Mode 2: See Figure 1

- A. Power on is controlled by **ignition (remote switch does not make any action to power on)**.
- B. **Power on retry:** If the motherboard cannot be turned on normally (/PSON does not go to low), the Power smart function will turn off 5VSB, and then turn on 5VSB and retry. Send "on" pulse to motherboard again. The power board will re-try this procedure until successfully turn on motherboard.
- C. Power smart function sends "ON" pulse to motherboard when ignition is on for more than 2 seconds.
- D. Power smart function will ignore the status change of ignition after ON pulse is send to motherboard for 3 minutes. After this period, the Power smart function will start to check its status. This can avoid an improper "OFF" process before the OS is complete booted.
- E. Power off is controlled by **remote switch or ignition. Remote switch** has higher priority than ignition. (Remote switch is optional).
- F. Power smart function sends "off" pulse to motherboard **5 seconds** after ignition is turned off or remote switch is pressed. (Soft delay)
- G. Power smart function will ignore the status change of ignition and remote switch during the "OFF" pulse is sent out and the /PSON return to high. This will avoid an improper ON process before the motherboard is completely shot off.
- H. The **digital output (optional)** will go from high to low at the moment that "OFF" pulse is sent to motherboard. The low state will be kept until /PSON back to high. If the /PSON does not back to high within 3 minutes, the Power smart function will enter a retry cycle (described in next section).
- I. Power off retry: If the motherboard cannot be shouted down normally (/PSON does not go to high) within 3 minutes after "OFF" pulse is sent, the Power smart function will send off pulse to motherboard again. If the motherboard still cannot be shouted down normally, the power output will be turned off directly. (Figure 3)
- J. Hard off delay: **1 minutes**, During this period system can be turned on again if the off procedure already finished and power button is pushed again(or ignition on again)

Mode 3:

A. Same as mode 2 except for soft/hard off delay time

B. Soft off delay: 1 minute





C. Hard off delay: 5 minutes

Mode 4:

A. Same as mode 2 except for soft/hard off delay time

B. Soft off delay: 30 minute

C. Hard off delay: 2 Hours

Mode 5: See Figure 2

Same as mode 2 except that the power on is controlled by **remote switch**.

- A. Power on is controlled by **remote switch (ignition must be turned on 2 seconds before remote switch is pressed)**.
- B.AR-PW0932V sends off pulse to motherboard **5 seconds** after ignition is turned off or remote switch is pressed. (Soft delay)
- C. Hard off delay: 1 minutes

Mode 6:

A. Same as mode 5 except for soft/hard off and delay

B. Soft off delay: 1 minute

C. Hard off delay: 5 minutes

Mode 7:

A. Same as mode 5 except for soft/hard off and delay

B. Soft off delay: 30 minute

C. Hard off delay: 2 Hours

Mode15(Software control mode):

- A. Setting by AP
- B. Software mode default as Hardware mode 2
- C. Soft off delay time can be set
- D. Hard off delay time can be set
- E. In-Vehicle system power on by ignition or Remote button can be set

F. Show Ignition status / Voltage(for AP only)

G. Create a button "Set default"

Plan AP screen→

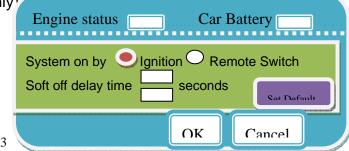






Table1. Control Mode

Mode	Soft OFF Delay	Hard OFF delay	Power ON Control	Power OFF Control
0 (ATX)	No	No	Remote Switch	Remote Switch
1(AT)	No	No	Local Switch	Local Switch
2	5 seconds	1 minute	Ignition	Ignition / Remote Switch
3	1 minute	5 minutes	Ignition	Ignition / Remote Switch
4	30 minutes	2 hours	Ignition	Ignition / Remote Switch
5	5 seconds	1 minute	Remote Switch	Ignition / Remote Switch
6	1 minute	5 minutes	Remote Switch	Ignition / Remote Switch
7	30 minutes	2 hours	Remote Switch	Ignition / Remote Switch
15 (Software control)	By user setting	By user setting	By user setting	Ignition / Remote Switch



Another function of Smart Mode

- If ignition turns back "ON" during "Off" Delay, Power smart function will stay in operation.
 "Off" signal will not be send to motherboard. The "Off" Delay will re-start after next ignition off.
- 2. Power input monitoring(before system boot on, during runtime, during soft off delay): The Power smart function will constantly monitor the input voltage. If the input voltage is below X Voltage (the standard might have 5% tolerance), the AR-PW0932V will not start the power on procedure. When Power smart function has ran in operation and the battery drops below Y Voltage (with 5% tolerance) more than 10 seconds the Power smart function will shut down the motherboard following the standard shut down procedure. If the input voltage recovers in 10 seconds over Y Voltage (with 5% tolerance) again, the Power smart function will continue to run. (Figure 4)if this happens, ignition shall be off and on again (Mode 2, 3, 4) or press the remote switch(Mode 5,6,7) if you want to turn on system again.

	For 12V car battery	For 24V car battery
X value	11.2	23
Y value	10.8	22.5

Revision: 1.0



6 BIOS Setting

This chapter describes the BIOS menu displays and explains how to perform common tasks needed to get the system up and running. It also gives detailed explanation of the elements found in each of the BIOS menus. The following topics are covered:

- Main Setup
- Advanced Chipset Setup
- PnP/PCI Setup
- Peripherals Setup
- PC Health Setup
- Boot Setup
- Exit Setup

Once you enter the Award BIOS[™] CMOS Setup Utility, the Main Menu will appear on the screen. Use the arrow keys to highlight the item and then use the <Pg Up> <Pg Dn> keys to select the value you want in each item.





6.1 Main Setup

The <Main Setup> choice allows you to record some basic hardware configuration in your computer system and set the system clock and error handling. If the motherboard is already installed in a working system, you will not need to select this option. You will need to run this Setup option, however, if you change your system hardware configuration, the onboard battery fails, or the configuration stored in the COMS memory was lost or damaged.

Phoeni: Main Advanced Power P	x - AwardBIOS CMOS Setup U nP/PCI Peripheral PC Hea	tility Ith Boot Exit
Date (mm:dd:yy) Time (hh:mm:ss)	Mon, Mun 9 2008	Item Help
→ IDE Channel Ø Master → IDE Channel Ø Slave	[None]	Menu Level → Change the day, month,
Halt On	[All , But Keyboard]	year and century
Base Memory Extended Memory Total Memory	1K 1K 512K	
↑↓→←:Move Enter:Select F5:Previous Values	+/-/PU/PD:Value F10:Save F6:Fail-Safe Defaults	ESC:Exit F1:General Help F7:Optimized Defaults

Note: Listed at the bottom of the menu are the control keys. If you need any help with the item fields, you can press the <F1> key, and it will display the relevant information.

Option	Choice	Description
Date Setup	N/A	Set the system date. Note that the 'Day' automatically changes when you set the date
Time Setup	N/A	Set the system time
IDE Channel 0 Master/Slave	N/A	The onboard PCI IDE connectors provide 1 channel for connecting up to 2 IDE hard disks or other devices. The first is the "Master" and the second is "Slave", BIOS will auto-detect the IDE type.



Revision: 1.0


Halt On	All Errors, No Errors, All but keyboard.	Select the situation in which you want the BIOS to stop the POST process and notify you.
---------	--	--





6.2 Advanced Chipset Setup

This section allows you to configure and improve your system and follows you to set up some system features according to your preference.

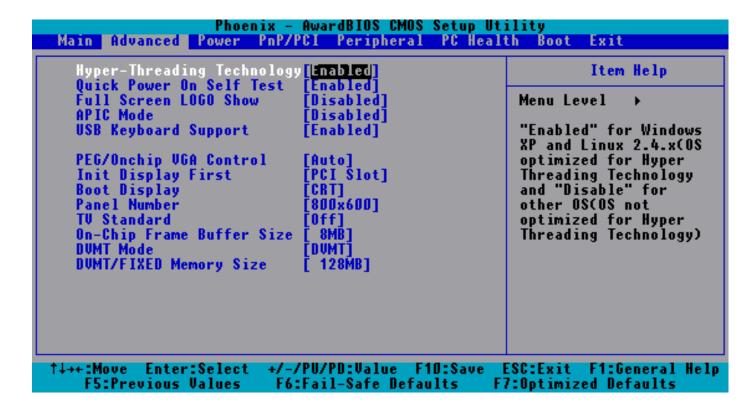

Option	Choice	Description
Quick Power On Self Test	Enabled Disabled	This category speeds up Power On Self Test (POST) after you have powered up the computer. If it is set to Enable, BIOS will shorten or skip some check items during POST.
Full Screen Logo	Enabled	Select Edabled to show the OEM full screen logo if you have
Show	Disabled	add-in BIOS.
USB Keyboard	Enabled	Select Enabled if you system contains a Universal Serial Bus
Support	Disabled	(USB)controller and you have a USB keyboard.
On-Chip Frame	1Mb	This Item is for setting the Frame Buffer (Share system memory
Buffer Size	8Mb	as display memory).
	CRT	
Poot Display	LCD	This Item is to set display device
Boot Display	CRT+LCD	TV function only support on AR-B5230SD
	TV	





	800x600,		
Panel Type	1024x768,	This Item cab Set the LVDS panel resolution that you want	
	1280x1024		
DVWT mode	FIXED	This item gets the mode for dynamic video memory theshology	
	DVMT	This item sets the mode for dynamic video memory thechology	
	Both	(DVMT).	
DVWT/FIXED	64Mb	This item cote the DVMT size	
Memory Size	128Mb	This item sets the DVMT size	





6.3 PnP/PCI Setup

The option configures the PCI bus system. All PCI bus system on the system use INT#, thus all installed PCI cards must be set to this value.

Phoenix - AwardBIOS (Main Advanced Power PnP/PCI Peripho	CMOS Setup Utility eral PC Health Boot Exit
Reset Configuration Data [Disabled]	Item Help
Resources Controlled By [Auto(ESCD) x IRQ Resources	Menu Level > Default is Disabled. Select Enabled to reset Extended System Configuration Data ESCD) when you exit Setup if you have installed a new add-on and the system reconfiguration has caused such a serious conflict that the OS cannot boot
↑↓→+:Move Enter:Select +/-/PU/PD:Value F5:Previous Values F6:Fail-Safe V	


Option	Choice	Description
Reset Configuration Data	Enabled Disabled	Normally, you leave this field Disabled. Select Enabled to reset Extended System Configuration Data (ESCD) when you exit Setup. If you have installed a new add-on and the system reconfiguration has caused such a serious conflict, then the operating system cannot boot.
Resources Controlled By	Auto(ESCD) Manual	The Award Plug and Play BIOS has the capacity to automatically configure all of the boot and Plug and Play compatible devices. However, this capability means absolutely nothing unless you are using a Plug and Play operating system such as Windows 95. If you set this field to "manual," then you may choose specific resources by going into each of the submenus.
IRQ Resources	N/A	When resources are controlled manually, assign a type to each system interrupt, depending on the type of the device that uses the interrupt





6.4 Peripherals Setup

This option controls the configuration of the board's chipset. Control keys for this screen are the same as for the previous screen.

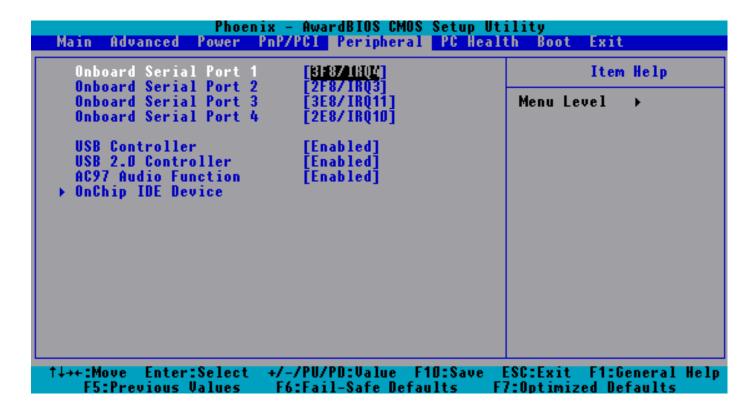

Option	Choice	Description
Onboard Serial Port 1	Serial Port 1: 3F8 / IRQ4	
Onboard Serial Port 2	Serial Port 2: 2F8 / IRQ3	Select an address and the corresponding
Onboard Serial Port 3	Serial Port 3: 3E8 / IRQ11	interrupt for each serial port.
Onboard Serial Port 4	Serial Port 4: 2E8 / IRQ10	
USB Controller	Enabled Disabled	Select Enabled if your system contains a Universal Serial Bue (USB)controller and you have USB peripherals
USB 2.0 Controller	Enabled Disabled	Select Enabled if your system contains a Universal Serial Bue (USB) 2.0 controller and you have USB peripherals






AC97 Auido Function	Enabled Disabled Audio/Modem	This item allows you to decide to enable/disable AC97 Audio
On chip IDE DEVICE	Enabled Disabled	The integrated peripheral controller contains an IDE interface with support for two IDE channels. Select Enabled to activate each channel separately.





6.5 PC Health Setup

This section shows the parameters in determining the PC Health Status. These parameters include temperatures, fan speeds, and voltages.

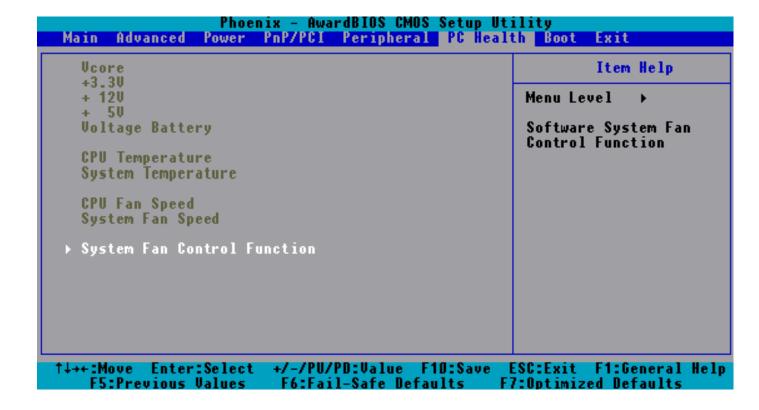






6.6 Boot Setup

This section is used to exit the BIOS main menu. After making your changes, you can either save them or exit the BIOS menu and without saving the new values.

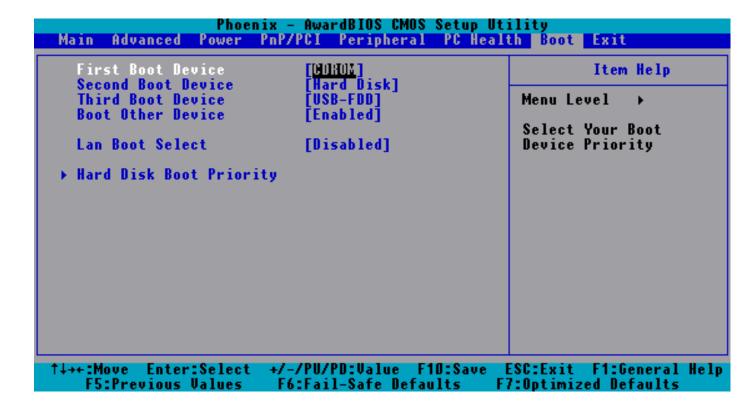

Option	Choice	Description
First / Second / Third Boot Device/Other Boot Device	Hard Disk CDROM USB-FDD USB-CDROM LAN Disabled	The BIOS attempts to load the operating system from the devices in the sequence selected in these items.
LAN Boot Select	Enabled Disabled	These fields allow the system to search for an OS from LAN
Hard Disk Boot Priority	N/A	These fields set the Boot Priority for each Hard Disk





6.7 Exit Setup

This section is used to configure exit mode.

Phoenix - AwardBIOS CMOS Setup Utility		
Main Advanced Power PnP/PCI Peripheral PC Heal	th Boot Exit	
Save & Exit Setup Load Optimized Defaults	Item Help	
Exit Without Saving Set Password	Menu Level →	
	Save Data to CMOS	
	ESC:Exit F1:General Help 7:Optimized Defaults	

Option	Choice	Description
Save & Exit Setup	Pressing <enter> on this item for confirmation: Save to CMOS and EXIT (Y/N)? Y</enter>	Press "Y" to store the selections made in the menus in CMOS – a special section of memory that stays on after you turn your system off. The next time you boot your computer, the BIOS configures your system according to the Setup selections stored in CMOS. After saving the values the system is restarted again
Load Optimized Defaults	When you press <enter> on this item you get a confirmation dialog box with a message like this: Load Optimized Defaults (Y/N)? N</enter>	Press 'Y' to load the default values that are factory-set for optimal-performance system operations.





Exit Without Saving	Pressing <enter> on this item</enter>	This allows you to exit Setup without storing
	for confirmation:	any changes in CMOS. The previous
		selections remain in effect. This shall exit
	Quit without saving (Y/N)? Y	the Setup utility and restart your computer.
		When a password has been enabled, you
		will be prompted to enter your password
		every time you try to enter Setup. This
		prevents unauthorized persons from
		changing any part of your system
		configuration.
		Type the password, up to eight characters
		in length, and press <enter>. The password</enter>
	Pressing <enter> on this item</enter>	typed now will clear any previous password
Set Password	for confirmation:	from the CMOS memory. You will be asked
Set Password		to confirm the password. Type the
	ENTER PASSWORD:	password again and press <enter>. You</enter>
		may also press <esc> to abort the selection</esc>
		and not enter a password.
		To disable a password, just press <enter></enter>
		when you are prompted to enter the
		password. A message will confirm that the
		password will be disabled. Once the
		password is disabled, the system will boot
		and you can enter Setup freely.