

How to Use Your Cobra® 29 NW

Features	1
The CB Story	A1
FCC Regulations	
FCC Warnings	
Included Accessories	
Controls & Indicators	A2
Our Thanks to You	A3
Customer Support	
Installation	
Location	2
Mounting and Connection	2
Antennas	
CB Antenna	6
Marine Installation	6
Ignition Noise Interference	7
Operating Your 29 NW	
Turning On Your CB	8
Setting Channel Selector	9
Calibrate For SWR (Standing Wave Ratio)	10
To Receive	12
Selecting a Channel	13
S-Meter	13
NB-ANL/ANL/Off (Noise Blanker/Automatic Noise Limiter Switch)	14
Tone Hi/Nor	15
RF Gain Control	15
Dimmer Switch	16
Setting Squelch	16
To Transmit	18
Setting Dynamike	18
Transmit	19
RF Meter	20
External Speaker	21
PA (Public Address)	22
Home And Office Set-Up	24
Temporary Mobile Set-Up	25
How Your CB Can Serve You	26
A Few Rules You Should Know	26
Channel 9 Emergency Messages	26
CB 10 Codes	28
Frequency Ranges	30
29 NW Specifications	31
Warranty Information	32
Optional Accessories	33-34
Order Form	35
If You Think You Need Service	Back Cover

Features of This Product

- 40 CB Radio Channels
- Heavy-Duty Dynamic Microphone
- Full 4 Watts AM RF Power Output
- SWR Calibration Meter
- Instant Channel 19 and 9
- Front Panel 4-Pin Microphone Connector
- Antenna Warning LED
- Switchable Automatic Noise Limiter & Noise Blanker
- Adjustable Dynamike Boost
- Tactile Controls
- Illuminated Front Panel
- Dim Control
- RF Gain
- 9 ft. Mic Cord

Location

Location

Plan location of transceiver and microphone bracket before starting the installation.

Select a location that is convenient for operation, yet does not interfere with the driver or passenger.

The transceiver is usually mounted to the underside of the dash with the microphone bracket beside it.

Mounting and Connection


Note

The transceiver is held in the universal mounting bracket by two thumbscrews which allow for adjustment at a convenient angle.


The bracket includes two self-tapping screws and star washers. The mounting must be mechanically strong, conveniently located.

Mounting and Connection

- 1 Hold the radio with the mounting bracket in the exact desired location. If there is no interference, remove the bracket and use it as a template to mark the location for the mounting screws.

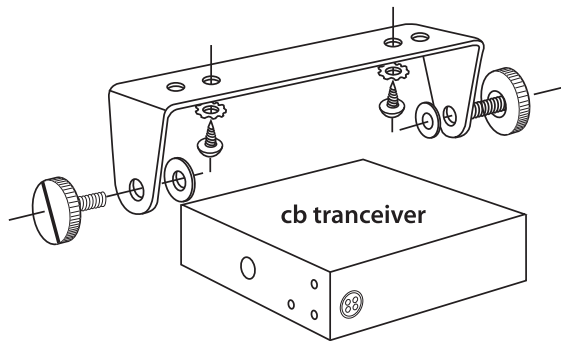

- 2 Drill the holes and secure the bracket.

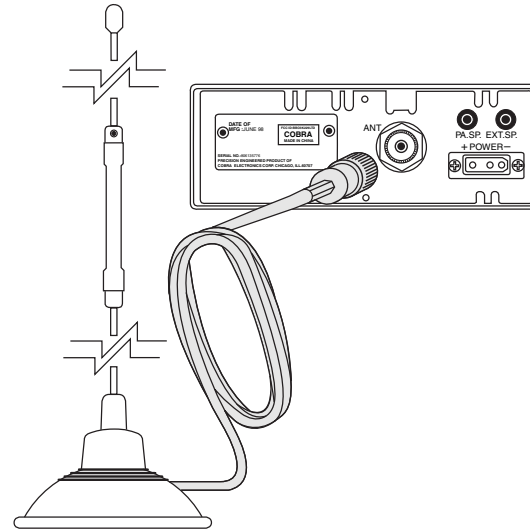

- 3 Connect the antenna cable plug to the receptacle marked "ANT" on the back of the unit.

continued

Installation

Note

Connecting to an accessory fuse prevents the unit from being left on accidentally, and also permits operating the unit without running the engine.


Note

In positive ground vehicles the red wire goes to the chassis and the black wire is connected to the ignition switch.

Note


Before installing the CB radio, visually check the vehicle's battery connection to determine which terminal, positive or negative, is grounded (positive is the larger of the two) to the engine block (or chassis).

A negatively grounded vehicle has its negative lead grounded to the chassis.

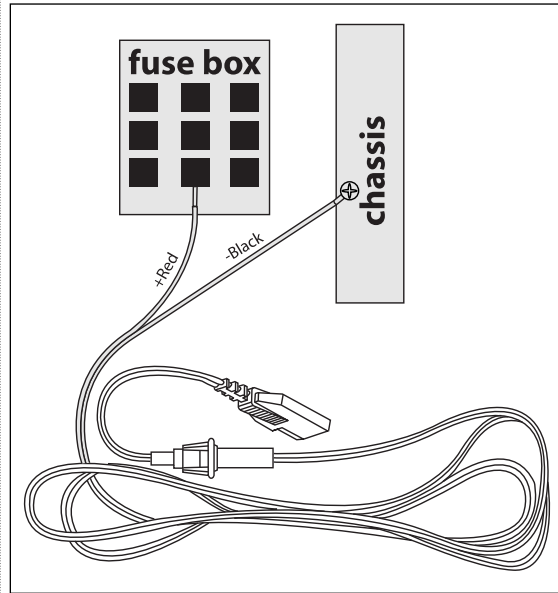



- 4 In a negative grounded vehicle, connect the red lead of the DC power cord to an accessory 12 volt fuse.
- 5 Connect the black lead to the negative side of the vehicle. This is usually the chassis. Any convenient location with a good electrical contact (remove paint) may be used.

Installation

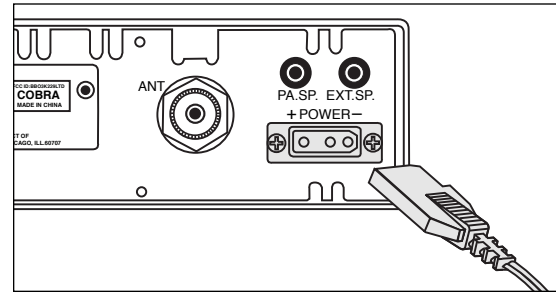


- 6 Plug power cable into back of unit marked "Power". Be sure to observe polarity markings.

- 7 Mount the microphone bracket on either side of the unit (driver's left) using two screws supplied. Bracket should be placed under the dash so microphone is readily accessible.

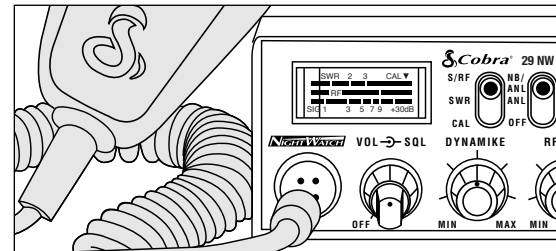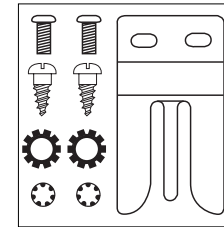

- 8 Attach the 4-pin microphone cable to receptacle on front of unit and install unit in bracket securely.

Microphone Connector



Antennas

CB Antenna

Note

For optimum performance in passenger cars the ideal antenna location is on the center of the roof. Second choice is on the center of the trunk.

Note


Because many newer trucks feature fiberglass door skins, the outside mirror must be grounded to the chassis via ground strap, if the antenna is mounted on the mirror bracket.

Note

3-way Combination Antennas are also available which allow operation of all three bands (AM-FM & CB), using a single antenna. However, this type of antenna usually results in less than normal transmit and receive range when compared to a standard-type "Single Band" CB antenna. Call 773-889-3087 for further information.

CB Antenna

Since the maximum allowable power output of the transmitter is limited by the FCC, the antenna is critical in affecting transmission distance. Only a properly matched antenna system will allow maximum power output. Cobra® loaded type antenna models are highly recommended for most installations. Consult your Cobra® dealer for further details, or call 773.889.3087 and speak to a Cobra® representative.

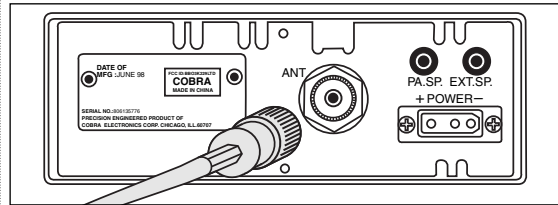

- 1 A standard antenna connector is provided on the transceiver for easy connection.

Marine Installation

The transceiver will not operate at maximum efficiency in a boat without a ground plate, (unless it has a steel hull). Before attempting installation, consult your dealer for information regarding an adequate grounding system and prevention of electrolysis between fittings in the hull and water.

Ignition Noise Interference

Use of a mobile receiver at low signal levels is normally limited by the presence of electrical noise. The primary source of noise in automobiles is from the alternator and ignition system. Typically, when signal level is adequate, the background noise does not present a serious problem. Also, when extremely low level signals are being received, the transceiver may be operated with the vehicle's engine turned off. The unit requires very little current and therefore will not significantly discharge the vehicle's battery.


Even though the Cobra® 29 NW has an automatic noise limiter, in some installations ignition interference may be high enough to make good communications impossible. Many possibilities exist and variations between vehicles require different solutions. Consult your COBRA® dealer or a 2-way radio technician for help in locating the source of a severe noise.


Operation


Turning On


Turning On

Make sure the power cord, antenna and microphone are connected to their proper connectors before starting.

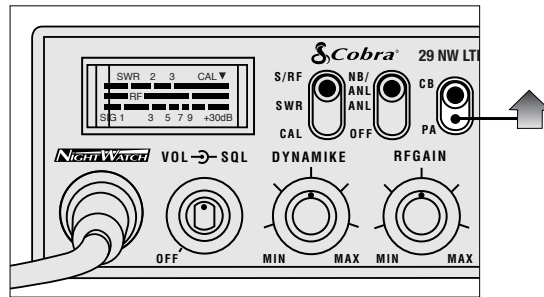

- 1 The  button should be in the CB position.

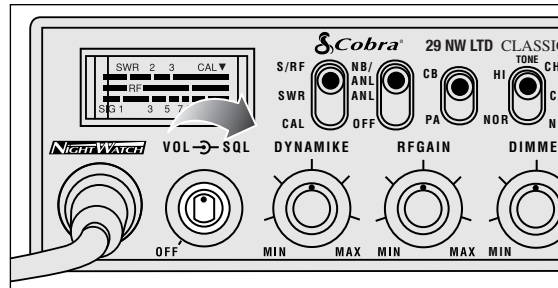



- 2 Rotate the On/Off Volume knob  clockwise to a normal listening level.

Operation

Setting Channel Selector

Setting Channel Selector

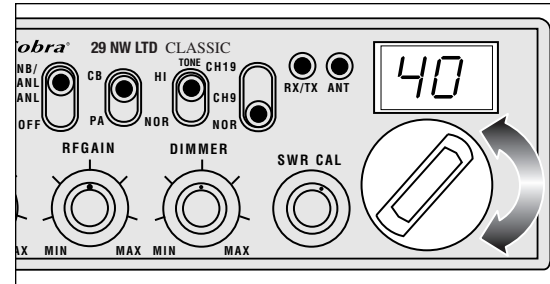


- 1 Select  one of forty channels and adjust volume. The selected channel is indicated by the LED readout directly above the channel selector knob


Calibrate For SWR (Standing Wave Ratio)

Calibrate for SWR (Standing Wave Ratio)

SWR calibration is done to properly adjust the length of the antenna and to monitor the quality of the coaxial cable and all RF connections. This calibration is critical in order to achieve optimum performance.

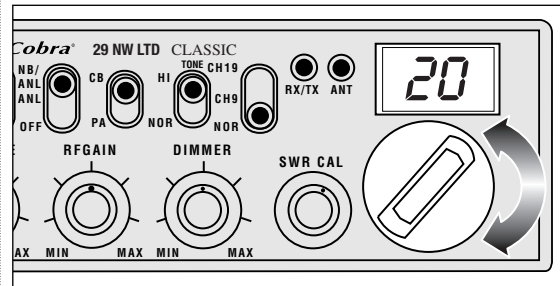


- 1 Select channel 20.

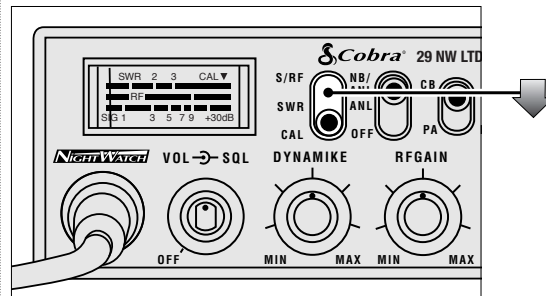


- 2 Switch to the CAL position.


PUSH & HOLD

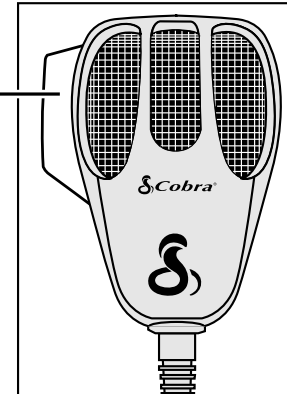

- 3 Push and hold mic button.

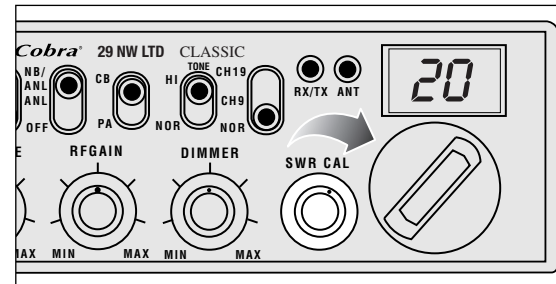

- 4 While holding mic button adjust the SWR CAL knob so the meter needle swings to the CAL ▼ mark on the meter (located on the right).

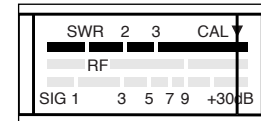

Note

Calibration must be made in an open area (never in a garage). Vehicle doors must be closed. No one should be standing near the antenna. (See your antenna directions for more complete information).

Note

The reading will be slightly higher on Channels 1 and 40 compared to Channel 20.

Note


ANT Warning indicator will illuminate when SWR is above 3 on the scale (Check antenna system).

continued

Operation

Note


When switched to SWR position the meter needle should ideally be as far to the left as possible. Anything over 3 is not acceptable. A slight antenna height adjustment (higher or lower) may be required. Repeat recalibration steps.

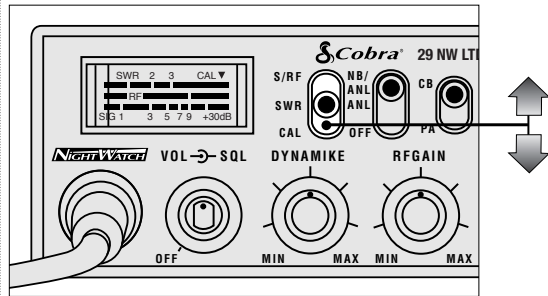

- 5 While still holding down the mic button, set the S/R/F SWR CAL switch to the SWR position, to read the SWR reading.
- 6 Repeat the same steps two through five on Channel 1 and 40. This will check SWR for all channels.

To Receive


To Receive

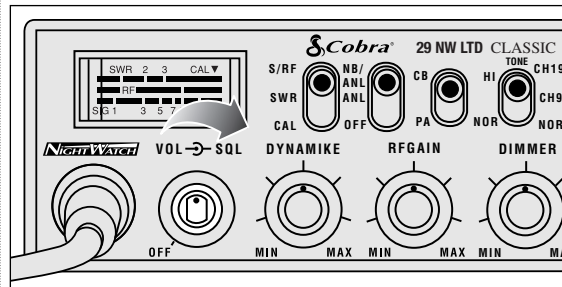

- 1 Rotate the On/Off Volume knob clockwise the green RX/TX LED will be illuminated.

Operation

Selecting A Channel

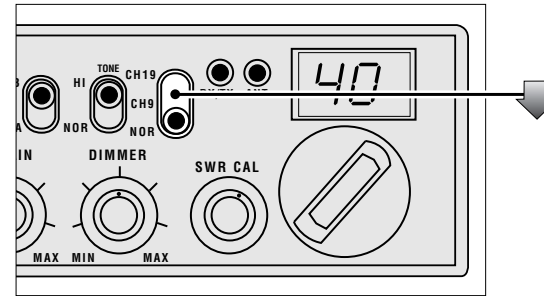

- 1 Switch to NOR to select desired channel.

S-Meter


Swings proportionately to strength of incoming signal when receiving.

Selecting A Channel

Note

Switch to 9 (Emergency) or 19 (Information) for instant access to these channels.

S-Meter

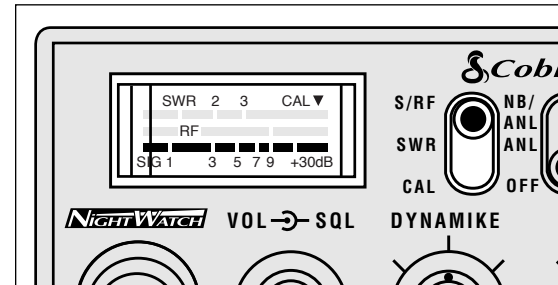

- 1 The S/R-F-SWR-CAL switch must be in the S/R/F position to read the meter.


Operation

NB-ANL/ANL/OFF (Noise Blanker/Automatic Noise Limiter) Switch

Note

The RF noise blanker is very effective in reducing repetitive noises such as ignition interference.

NB-ANL/ANL/OFF (Noise Blanker/Automatic Noise Limiter) Switch

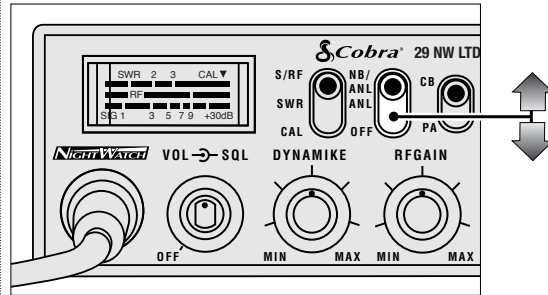

- 1 When switched to ANL the Automatic Noise Limiter is activated. This helps reduce noise created by the vehicle's electronics.

When switched to NB/ANL position the RF Noise Blanker is also activated, providing increased noise filtration.


When switched to OFF position all noise filtration will be turned off.

Operation

Tone Hi/Nor

This switch is used to shape the Audio Response to the operators preference.

Tone Hi/Nor

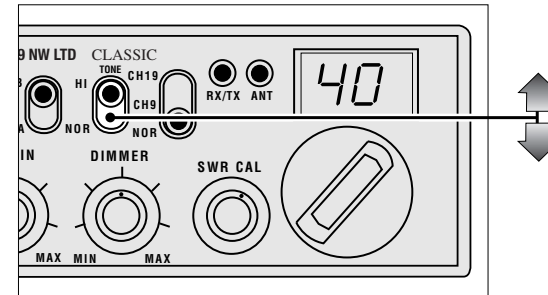


- 1 When set in HI the treble is increased.

RF Gain Control

The RF Gain is used to optimize reception in strong or weak signal areas.

RF Gain Control

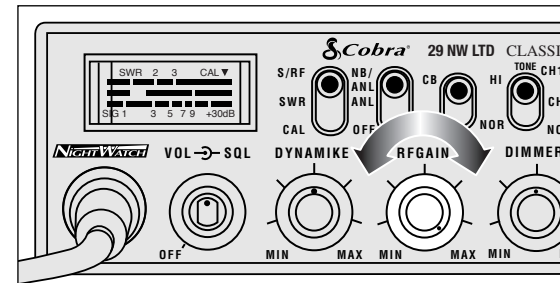

- 1 Rotate the RF Gain knob *counterclockwise* to reduce gain in strong signal areas. In weak signal areas turn *clockwise* to increase gain.

Note

The RF Gain is used to optimize reception in weak signal areas.


Operation

Dimmer Switch

Note

The Dimmer controls the brightness of the front panel, signal strength meter and channel display.


Dimmer Switch

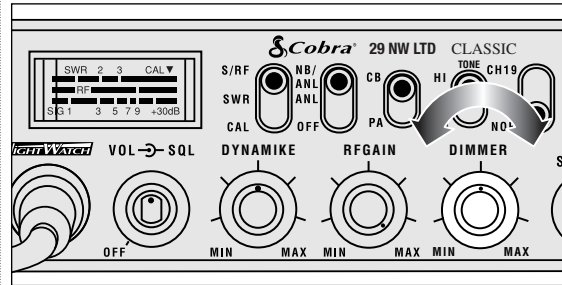

- 1 Rotate the Dimmer knob clockwise for maximum brightness; counter-clockwise for minimum.


Setting Squelch

Gate closed

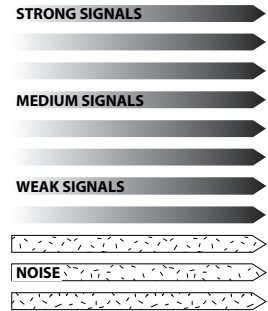


Setting Squelch

Squelch is the "control gate" for incoming signals.

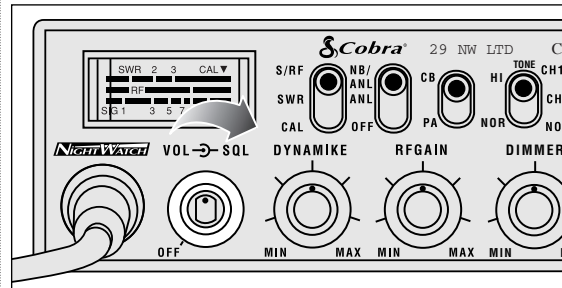


- 1 Full rotation closes the gate allowing only very strong signals to enter.

Operation

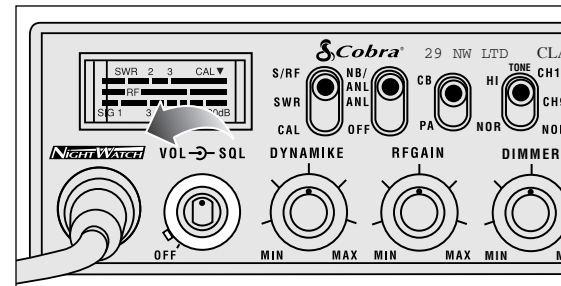


- 2 Full rotation opens the "gate" allowing all signals in.

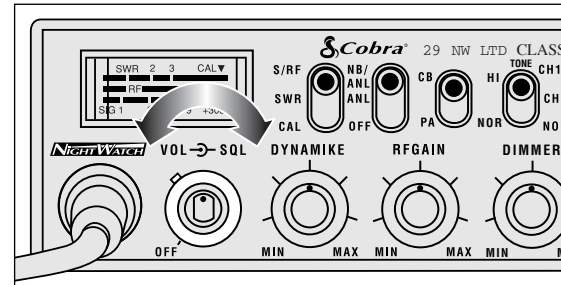


- 3 To achieve the Desired Squelch Setting (DSS), turn the Squelch control until you hear noise. Now turn the control just until the noise stops. This is the DSS setting.

Gate open

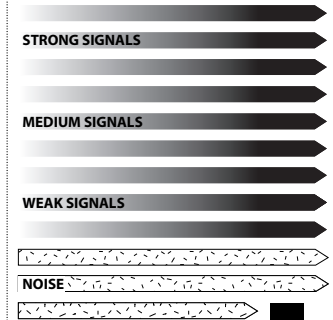

Gate set to Desired Squelch Setting (DSS)

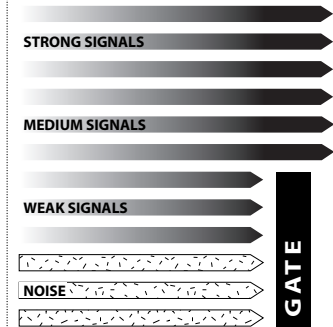

To Transmit




Caution!

Be sure the antenna is properly connected to the radio before transmitting. Prolonged transmitting without an antenna, or a poorly matched antenna, could cause damage to the transmitter.

Be sure to read the F.C.C. Rules and Regulations included with this unit before transmitting.

Setting Dynamike


To Transmit

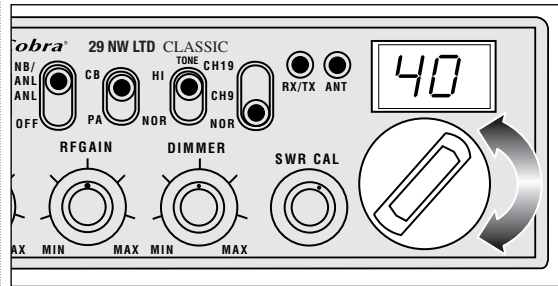

- 1 Select desired channel.


Setting Dynamike

This controls the microphone sensitivity (outgoing audio level).

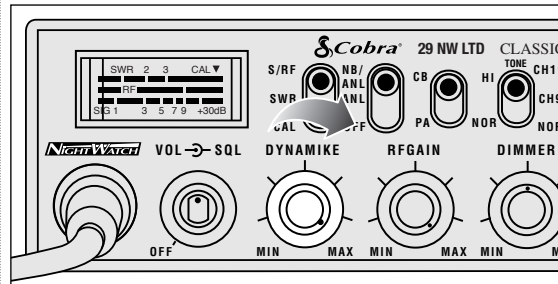

- 1 Initially, set fully clockwise so that maximum voice volume is available. Dynamike may have to be reduced in some conditions.

Transmit

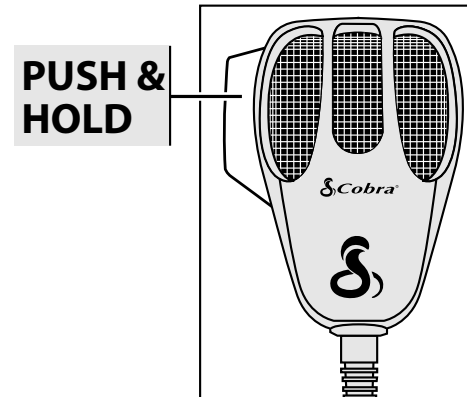


- 1 Push and hold mic button to transmit. Transmitter is now activated. When transmitting, hold the microphone two inches from your mouth and speak in a clear, normal voice. Release to receive.

Transmit

RF Meter

RF Meter


This meter swings proportionately to the RF output (outgoing signal) while transmitting.

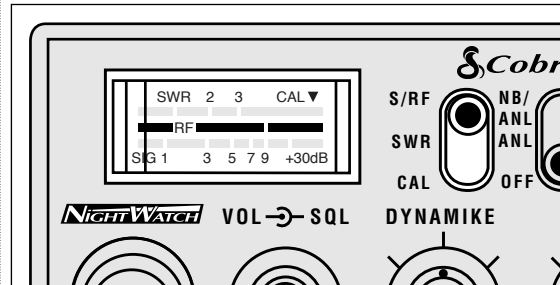

- 1 The S/R/F-SWR-CAL switch must be in the S/R/F position.

External Speaker

The external speaker jack is used for remote receiver monitoring.

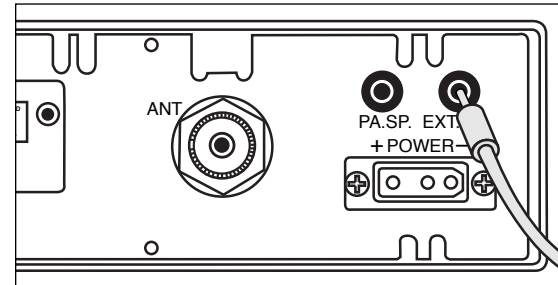

- 1 Connect an external speaker to the external speaker jack on the rear panel.

External Speaker

Note

The external speaker should have 8-ohm impedance and be rated to handle at least 4.0 watts. When the external speaker is plugged in, the internal speaker is automatically disconnected.

Note

Cobra® external speakers are rated at 15 watts. See accessories page 34.

PA (Public Address)

Note

Speaker should have 8-ohm impedance and be rated to handle at least 4.0 watts.


Note

The speaker should be directed away from the microphone to prevent acoustic feedback.


Note


Activity on the CB channel will be heard through the PA speaker. Adjust Volume Control for normal listening level.

PA (Public Address)

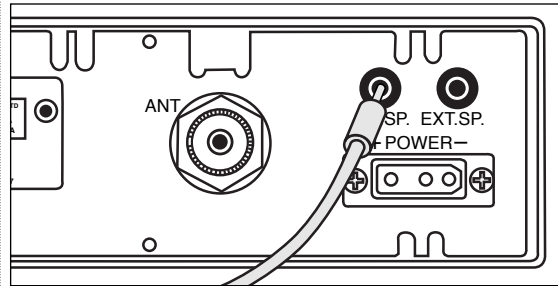


- 1 Connect an external PA speaker to the PA jack on the rear panel.

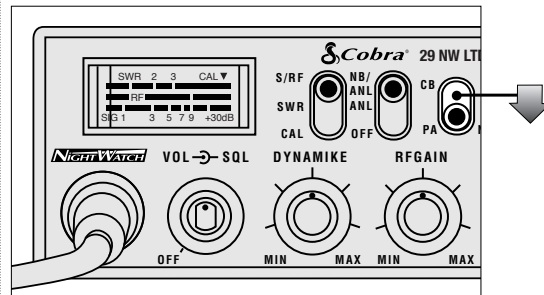



- 2 Set  CB/PA switch to PA position.

PUSH & HOLD

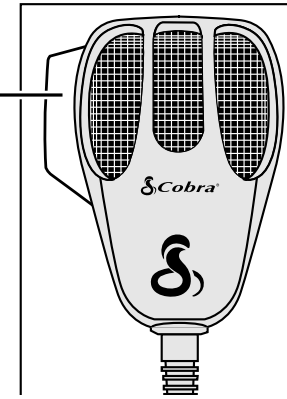

- 3 Push and hold microphone button and speak in a normal voice. Your voice will now transmit

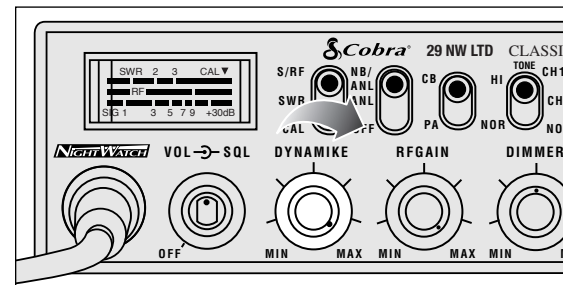

- 4 Adjust PA speaker volume with the  Dynamike control.

Home And Office Set-Up

Base Station Operation (From 120V AC House Current)




Warning!
Do not attempt to operate this transceiver by connecting it directly to 120 vac.

Note
For further information call
Cobra® Customer Service
773.889.3087.


Base Station Operation (From 120V AC House Current)

To operate your transceiver from home or office you will need a 13.8 volt DC Power Pack rated at a minimum of 2 amps, and a properly installed base station antenna.

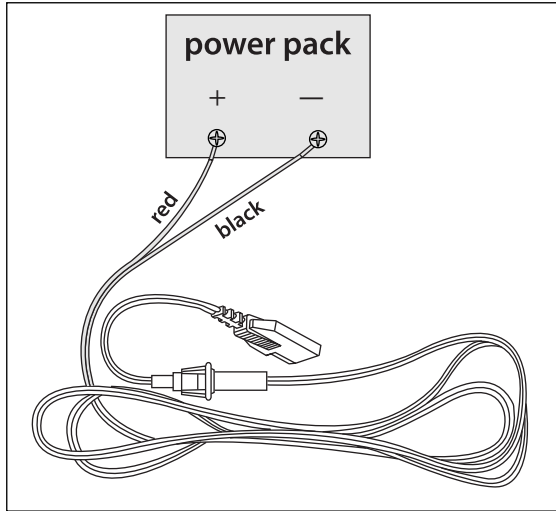

- 1 Simply connect the red (+) and black (-) leads of the transceiver to the corresponding terminals of the power pack.


Temporary Mobile Set-Up

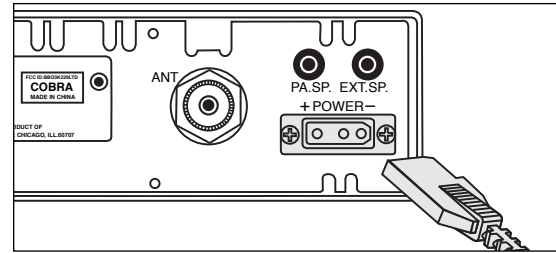

- 2 Plug power cable into back of unit marked "Power". Be sure to observe polarity markings.
- 3 Connect properly installed and matched base station antenna.

Temporary Mobile Operation

For temporary mobile operation you may want to purchase an optional cigarette lighter adapter from your COBRA® dealer. This adapter and a magnetic mount antenna allow you to quickly "install" your transceiver for temporary use.

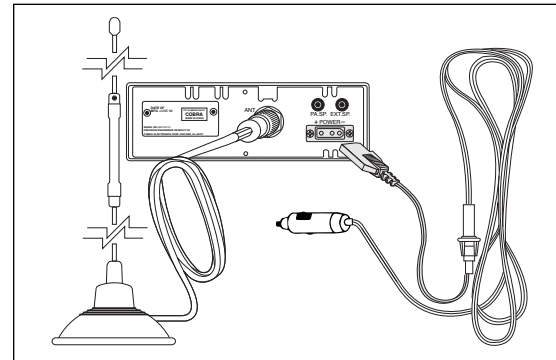

Temporary Mobile Set-Up

How Your CB Can Serve You

How Your CB Can Serve You

A Few Rules You Should Know

- Warn of traffic problems
- Provide weather and road data
- Provide help in event of an emergency
- Provide direct contact with home or office
- Assist police by reporting erratic drivers
- Get "local information" to find destination
- Communicate with family and friends
- Suggest spots to eat and sleep
- Keep you alert while traveling

A Few Rules You Should Know

- A. Conversations cannot last more than 5 minutes with another station. A one minute break is required to let others use the channel.
- B. You cannot blast others off the air by use of illegally amplified transmitters or illegally high antennas.
- C. You cannot use CB to promote illegal activities.
- D. Profanity is not allowed.
- E. You may not transmit music with a CB.
- F. Selling of merchandise and/or services is prohibited.

Channel 9 Emergency Messages

Note

If no response on channel 9, try channels 19 or 14.

1. Set to channel 9 for emergencies

Be sure antenna is properly connected.

2. CB Distress Data

When transmitting an emergency, you should request a "REACT BASE" and provide the CB distress data (called **CLIP**):

- | | |
|-------------------|--------------------------------------|
| C all Sign | <i>Identify yourself.</i> |
| L ocation | <i>Be exact.</i> |
| I njuries | <i>Number. Type. Trapped?</i> |
| P roblem | <i>Give details and help needed.</i> |

Transmit **CLIP** repeatedly so any monitor can assist.

The FCC gives these examples of permitted and prohibited messages for channel 9. These are only guidelines and not all-inclusive:

Permitted	Example Message
Yes	"Tornado sighted six miles north of town."
No	"Post number 10. No tornado sighted."
Yes	"Out of gas on I-95 at mile marker 211."
No	"Out of gas in my driveway."
Yes	"Four car accident on I-94 at Exit 11. Send police and ambulance."
No	"Traffic moving smoothly on I-94."
Yes	"Weather Bureau has issued thunderstorm warning. Bring sailboat into port."
No	"Attention motorists. Weather Bureau advises snow tomorrow will accumulate 4 to 6 inches."
Yes	"Fire in building at 539 Main, Evanston."
No	"Halloween patrol number 3. All quiet."

How Your CB Can Serve You

How Your CB Can Serve You

CB 10-Codes

CB 10-Codes

Citizen Bands have adopted the "10-CODES" for standard questions and answers. These codes provide quick and easy communication, especially in noisy areas. Following are some of the more common codes and meanings:

Code	Meaning
10-1	Receiving poorly
10-2	Receiving well
10-3	Stop transmitting
10-4	OK, message received
10-5	Relay message
10-6	Busy, stand by
10-7	Out of service, leaving
10-8	In service, subject to call
10-9	Repeat message
10-10	Transmission completed standing by
10-11	Talking too rapidly
10-12	Visitors present
10-13	Advise weather/roads
10-16	Make pick up at
10-17	Urgent business
10-18	Anything for us?
10-19	Return to base
10-20	My location is
10-21	Call by phone
10-22	Report in person to
10-23	Stand by
10-24	Completed last assignment
10-25	Can you contact
10-26	Disregard last info
10-27	Moving to channel
10-28	Identify your station

Code	Meaning
10-29	Time is up for contact
10-30	Does not conform to FCC rules
10-33	Emergency traffic
10-34	Trouble at this station
10-35	Confidential information
10-36	Correct time is
10-37	Wrecker needed at
10-38	Ambulance needed
10-39	Message delivered
10-41	Turn to channel
10-42	Traffic accident at
10-43	Traffic tie up at
10-44	Have a message for
10-45	All units within range please report
10-50	Break channel
10-60	What is next message number?
10-62	Unable to copy. Use phone
10-63	Net directed to
10-64	Net clear
10-65	Awaiting your next message/assignment
10-67	All units comply
10-70	Fire at
10-71	Proceed, transmission in sequence
10-77	Negative contact
10-81	Reserve hotel room for
10-82	Reserve room for
10-85	My address is
10-91	Talk closer to mic
10-93	Check my frequency on this channel
10-94	Give me a long count
10-99	Mission completed, all units secure
10-200	Police needed at

Limited Two Year Warranty

Cobra® Electronics Corporation

6500 West Cortland Street
Chicago, Illinois 60707 USA

COBRA® ELECTRONICS CORPORATION warrants that its COBRA® CB Radios, and the component parts thereof, will be free of defects in workmanship and materials for period of two (2) years from the date of first consumer purchase. This warranty may be enforced by the first consumer purchaser, provided that the product is utilized within the U.S.A.

COBRA® will, without charge, repair or replace, at its option, defective CB radios, products or component parts upon delivery to the COBRA® factory Service Department, accompanied by proof of the date of first consumer purchase, such as a duplicated copy of a sales receipt.

You must pay any initial shipping charges required to ship the product for warranty service, but the return charges will be at Cobra®'s expense, if the product is repaired or replaced under warranty.


This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Exclusions: This limited warranty does not apply; 1) to any product damaged by accident; 2) in the event of misuse or abuse of the product or as a result of unauthorized alterations or repairs; 3) if the serial number has been altered, defaced or removed; 4) if the owner of the product resides outside the U.S.A.

All implied warranties, including warranties of merchantability and fitness for a particular purpose are limited in duration to the length of this warranty. COBRA® shall not be liable for any incidental, consequential or other damages; including, without limitation, damages resulting from loss of use or cost of installation.


Some states do not allow limitations on how long an implied warranty lasts and/or do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you.

Optional Accessories

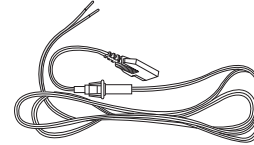


Replacement DC Power Cord

For in vehicle use
426-002-N-001

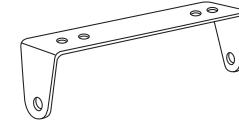


Replacement Mounting Bracket

For in vehicle use
251-199-9-001



Replacement Thumb Screws

For in vehicle use
634-081-9-001

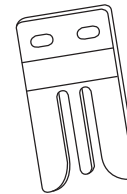


Replacement Microphone Bracket

For in vehicle use
741-080-9-001



21" Base Loaded Magnet Mount Antenna

HG A1000

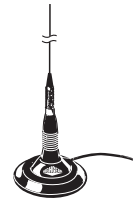

38" Base Loaded Magnet Mount Antenna

HG A1500



Replacement Dynamic Microphone

For in vehicle use
CA 73

Optional Accessories



4 Pin Replacement Dynamic Microphone
HG M73



Power Microphone
HG M75



4 Pin Noise Canceling Microphone
HG M77



Dynamic External Speaker
HG S100



Noise Canceling External Speaker
HG S300



Noise Canceling With Talk Back External Speaker
HG S500

Optional Accessories

You can find quality Cobra products and accessories at your local Cobra dealer, or in the U.S.A., you can order directly from Cobra. See ordering info on page 35.

Accessory Order Info

Ordering From U.S.A.

Call 773-889-3087 for pricing or visit www.cobra.com.

For Credit Card Orders

Call 773-889-3087 [Press one from the main menu] 8:00 a.m. to 5:30 p.m. Central Time, Monday through Friday.

Make Check or Money Order Payable To

Cobra Electronics, Attn: Accessories Dept., 6500 West Cortland Street, Chicago, IL 60707 U.S.A.

To Order Online

Please visit our website: www.cobra.com

Item #	Description
426-002-N-001	Replacement DC Power Cord
251-353-9-001	Replacement Mounting Bracket
634-081-9-001	Replacement Thumb Screws
741-080-9-001	Replacement Microphone Bracket
HG A1000	21" Base Loaded, Magnetic Mount Antenna
HG A1500	38" Base Loaded, Magnetic Mount Antenna
HG M84	4 Pin Premium Noise-Cancelling Microphone
HG M84W	4 Pin Premium Noise-Cancelling Microphone (Wood Grain)
HG M73	4 Pin Replacement Dynamic Microphone
HG M77	4 Pin Noise-Cancelling Microphone
HG M75	Power Microphone
HG S100	Dynamic External Speaker
HG S300	Noise-Cancelling External Speaker
HG S500	Noise-Cancelling with Talk Back External Speaker



Cobra® 29 NW LTD CLASSIC

The CB Story

Cobra® Electronics Corporation
6500 West Cortland Street
Chicago, IL 60707 USA

If You Think You Need Service

For technical assistance, please call our Automated Help Desk which can assist you by answering the most frequently asked questions about Cobra® products.

(773) 889-3087

24 hours a day, 7 days a week.

A Consumer Service Representative can be reached at 773.889.3087
8:00 am - 5:30 pm, Monday through Friday, Central Time.

Technical assistance is also available on-line in the Frequently Asked Questions (FAQ) section at www.cobra.com or by e-mail to productinfo@cobra.com




If you think you need service call 773.889.3087

"If your product should require factory service please call Cobra® first before sending your unit in. This will ensure the fastest turn-around time on your repair."

You may be asked to send your unit to the Cobra® factory. It will be necessary to furnish the following in order to have the product serviced and returned.

1. For Warranty Repair include some form of proof-of-purchase, such as a mechanical reproduction or carbon or a sales receipt. If you send the original receipt it cannot be returned.
2. Send the entire product.
3. Enclose a description of what is happening with the unit. Include a typed or clearly print name and address of where the unit is to be returned.
4. Pack unit securely to prevent damage in transit. If possible, use the original packing material.
5. Ship prepaid and insured by way of a traceable carrier such as United Parcel Service (UPS) or First Class Mail: to avoid loss in transit to: Cobra® Factory Service, Cobra® Electronics Corporation, 6500 West Cortland Street, Chicago, IL 60707 USA.
6. If the unit is in warranty, upon receipt of your unit it will either be repaired or exchanged depending on the model. Please allow approximately 3 to 4 weeks before contacting us for status. If the unit is out of warranty a letter will automatically be sent informing you of the repair charge or replacement charge. If you have any questions, please call 773.889.3087 for assistance.

Operating Instructions for your Cobra® 29 NW LTD CLASSIC CB Radio

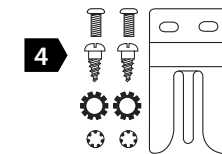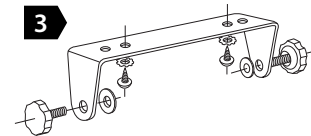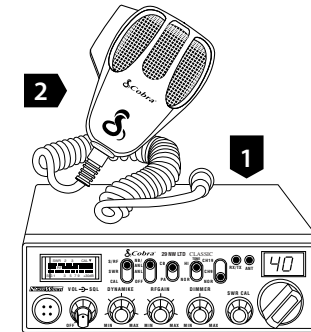

The Citizens Band lies between the shortwave broadcast and 10-meter Amateur radio bands, and was established by law in 1949. The Class D two-way communications service was opened in 1959. (CB also includes a Class A citizens band and Class C remote control frequencies.)

FCC Regulations

FCC regulations permit only "transmissions" (one party to another) rather than "broadcasts" (to a wide audience). Thus, advertising is not allowed on CB Channels because that is "broadcasting."

FCC Warnings

All transmitter adjustments other than those supplied by the manufacturer as front panel operating controls, must be made by, or under the supervision of, the holder of an FCC-issued General Radio-Telephone Operator's License.

Replacement or substitution of transistors, regular diodes or other parts of a unique nature, with parts other than those recommended by Cobra®, may cause violation of the technical regulations of Part 95 of the FCC Rules, or violation of Type Acceptance requirements of Part 2 of the Rules.


You should read and understand Part 95 (included with this unit) of the FCC Rules and Regulations, before operating your Cobra® radio, even though the FCC no longer requires you to obtain an operator's license.

What's Included with Your 29 NW

- | | |
|------------------------|------------------|
| 1. CB transceiver | 6. DC power cord |
| 2. Microphone | 7. FCC rules |
| 3. Transceiver bracket | (not shown) |
| 4. Microphone bracket | |
| 5. Operating Manual | |

Controls and Indicators

1. 4-Pin Microphone Connector
 2. Power On/Off, Volume
 3. Squelch
 4. Dynamike
 5. RF Gain
 6. Dimmer
 7. SWR CAL
 8. Channel Selector
 9. LED Channel Display
 10. ANT Warning LED
 11. RX (Receive)/ TX (Transmit) LED Indicator
 12. Channel 19/Channel 9/ Normal Switch
 13. Tone Hi/Nor
 14. CB/PA Switch
 15. NB/ANL ANL Off Switch
 16. S/RF SWR CAL Switch
 17. Signal Strength Meter
 18. Microphone
- Back Side**
19. Public Address Speaker Jack
 20. External Speaker Jack
 21. Antenna Connector
 22. Power Jack

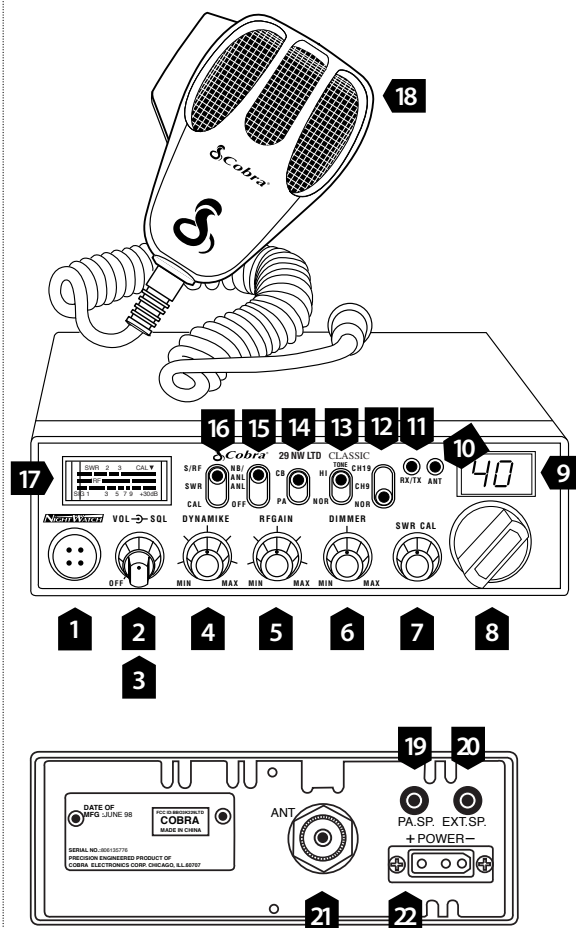

Our Thanks to You



Thank you for purchasing the Cobra® 29 NW CB Radio. Properly used, this Cobra® product will give you many years of reliable service.

Customer Support

Should you encounter any problems with the product or not understand its many features, please refer to this owner's manual. If, after referring to the manual, you still need help, call Cobra® Customer Service at 773.889.3087.

Cobra® Customer Service

Live operators are available
M-F 8:00 am - 5:30 pm Central
Time at: 773.889.3087

Automated Technical
Assistance available 24 hours a
day, seven days a week. E-mail
questions to:
productinfo@cobra.com

Cobra® on the Web:
Frequently Asked Questions
(FAQ) can be found on-line at:
www.cobra.com

The Cobra Electronics Corporation™ line of quality products includes:

- CB Radios
- microTALK® Radios
- Radar/Laser Detectors
- Safety Alert® Traffic Warning Systems
- HighGear® Accessories
- CobraMarine® VHF Radios
- Jumpstarters
- LED Lights
- Power Inverters
- Accessories

For more information or to order any of our products, please visit our website:
www.cobra.com

Cobra Electronics Corporation
6500 West Cortland Street
Chicago, IL 60707