

ONKYO® SERVICE MANUAL

COMPACT DISC PLAYER MODEL DX-7500

Black model

BUDN, BUD	120V AC, 60 Hz
BUG	220V AC, 50Hz
BW, BWX	120/220V AC, 50/60 Hz
BUQA, BUQB	240V AC, 50 Hz

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK  ON THE SCHEMATIC DIAGRAM AND IN THE PARTS LIST ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE THESE COMPONENTS WITH ONKYO PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL.

MAKE LEAKAGE-CURRENT OR RESISTANCE MEASUREMENTS TO DETERMINE THAT EXPOSED PARTS ARE ACCEPTABLY INSULATED FROM THE SUPPLY CIRCUIT BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

SPECIFICATIONS

Signal readout system:	Optical non-contact
Reading rotation:	About 500~200 r.p.m. (constant linear velocity)
Linear velocity:	1.2~1.4m/s
Error correction system:	Cross interleave readsolomon code
Decoded bits:	18 bits linear
Sampling frequency:	352.8kHz (eight-times oversampling)
Number of channels:	2 (stereo)
Frequency response:	5Hz~20kHz
Total harmonic distortion:	0.0015% (at 1kHz)
Dynamic range:	103dB
Signal to noise ratio:	110dB
Channel separation:	103dB (at 1kHz)
Wow and Flutter:	Below threshold of measurability
Power consumption:	23 watts
Output level:	2 volts r.m.s.
Dimensions (W×H×D):	435×131×365 mm 17-1/8"×5-1/8"×14-7/16"
Weight:	8.8kg, 19.4 lbs.

Specifications are subject to change without notice.

ONKYO
AUDIO COMPONENTS


TABLE OF CONTENTS

Specifications	1
Service procedures	2
Note on compact disc	3
Protection of eyes from laser beam during servicing ..	4
Laser warning label	4
Caution on replacement of pickup	6
Packing view	7
Chassis-explored view	8
Parts list	9
Mechanism-explored view	10
Parts list	11
Disassembling procedures	11
Lubrication	12
IC block diagram and descriptions	13
Adjustment procedures	22
Printed circuit board view from bottom side	
Main circuit	25
Other pc boards	29
Printed circuit board-parts list	27
Block diagram	31

SERVICE PROCEDURES

1. How to Release the Transport Lock

To protect the optical assembly including the laser pickup from vibration related damage during shipping, this unit is equipped with a transport lock lever located on the base.

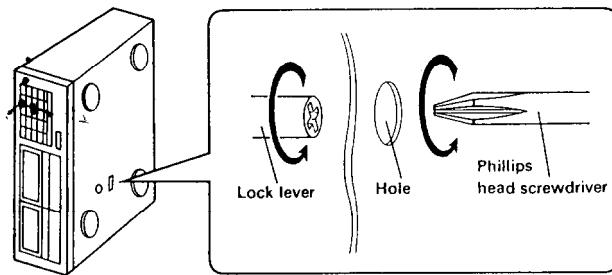

- Use a screwdriver to turn the lock lever (about 90°) in the direction of arrow (C).
- Before transporting the unit again, stand it with its left side facing down, and turn on the power. Wait 2-3 seconds and then turn the lock lever in the opposite direction of the arrow.

Fig. 1

2. Safety-check out

After correcting the original service problem, perform the following safety check before releasing the set to the customer:

Connect the insulating-resistance tester between the plug of power supply cable and chassis.

Specifications: more than 10Mohm at 500V.

3. Procedures for replacement of flat packaged ICs

1. Tools to be used:

(1) **Soldering iron** Grounded soldering iron or soldering iron with leak resistance of 10 Mohms or more.

Form of soldering iron's tip:

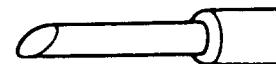


Fig. 2

(2) **Magnifying glass** ... for checking of finished works

(3) **Tweezers** for handling of IC and forming of leads

(4) **Grounding ring** Countermeasure for electrostatic breakdown

(5) **Nipper** for removing defective IC

(6) **Small brush** for application of flux

2. Work Procedures:

(1) Remove the defective IC

Cut all leads of the defective IC one by one using a nipper and remove the IC.

(2) Clean the pattern surface of the PC board.

Get rid of the remaining leads and solder.

(3) Check and form the leads of the new flat packaged IC to be installed.

From every lead on the new IC using a pair of tweezers, so that all of them are aligned neatly without being risen, twisted or inclined toward one side. Especially the rising portion of every lead must be formed with greatest care.

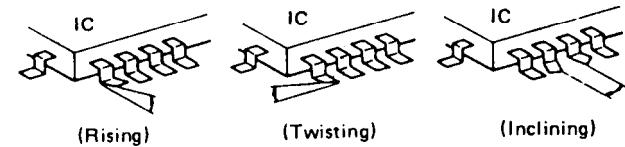


Fig. 3

(4) Apply flux to the PC board.

Apply flux to the pattern surface of the PC board which has been cleaned, as shown in the illustration. The area to be applied with flux is the portion of about 2.5mm in width where the IC's leads are to be soldered.

Be careful to apply minimum amount of flux required so as not to smear it on unwanted areas.

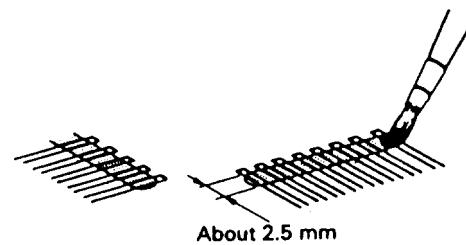


Fig. 4

(5) Temporarily tighten the IC

Carefully align the pattern and IC's leads, so that the IC will be temporarily tightened to the pattern on the four leads at the corners. At this time, soldering is required, but no need to apply soldering material.

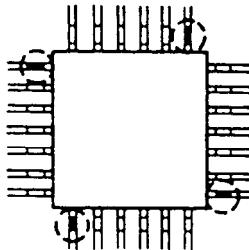


Fig. 5

(6) Apply flux to IC's leads

Apply flux to the areas of IC's leads where soldering is to be performed. Be careful not to smear flux on the root portion of any lead or the body of IC.

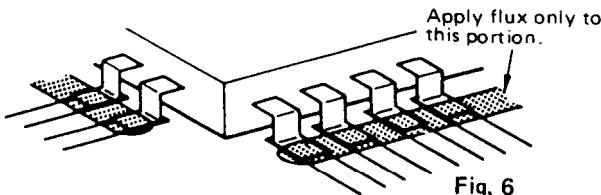


Fig. 6

(7) Soldering

While attaching the tip of the soldering iron to the soldering point as shown in the illustration, feed 2–5mm of soldering wire. Then, slowly move the iron in the direction indicated by the arrow in the illustration, so that the leads will be soldered to the pattern. Move the iron in the rate of approximately 1cm in 5sec. Proceed with your work while confirming a clean fillet of solder is formed on each lead, subsequent to the melting of flux.

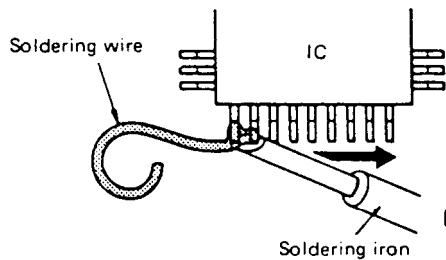


Fig. 7

CAUTION

- 1) If you move the iron too quickly, loose soldering is likely to result.
- 2) Be especially careful when soldering the first lead where loose soldering is most liable to be formed.

(8) Check the results

When soldering of all leads is finished, check the soldered portion on every lead with a magnifying glass. A tester must not be used or checking of any soldered position.

NOTE ON COMPACT DISC

• Holding Compact Discs

Hold Compact Discs by the edges so that you do not touch

the surface of disc. Remember that the side of the disc with the "rainbow" reflection is the side containing the audio information.

Do not attach tape or paper to the label side of the disc and always be careful not to leave fingerprints on the side that is played.

• Storing Compact Discs

Store Compact Discs in a location protected from direct sunlight, high heat and humidity and extremely high and low temperatures. Discs should never be left in the trunk or interior of an automobile in the sun since the temperature can become very high in such a closed environment.

Always store Compact Discs in the holders in which they were sold. Never leave a disc in the player's disc holder for a long period of time.

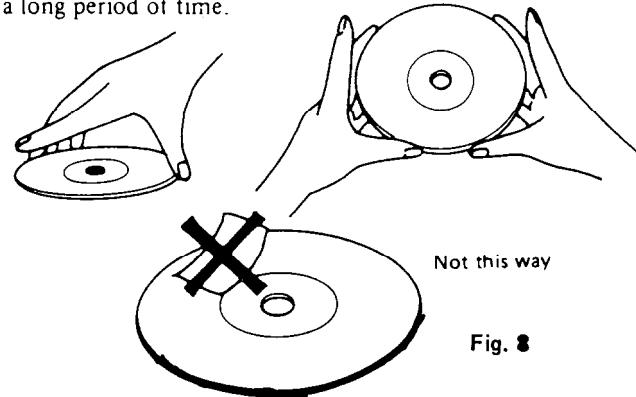


Fig. 8

• Cleaning Compact Discs

Before playing a disc wipe off the playing surface with a soft cloth to remove dust and other soil. Wipe the surface in straight lines from the center of the disc outward, not in a circular motion as you would with a phonograph record.

Do not use benzene, chemical cleansers or phonograph record cleaning solutions to clean Compact Discs. Also avoid static electricity prevention solutions since they can damage the surface of Compact Discs.



Fig. 9

Problems Caused by Dew

Dew can form inside a Compact player when it is brought from a cold environment into a warm room, when a room is rapidly heated and if a player is left in a humid environment.

This dew can prevent the laser pickup from reading the data contained in the pits in the disc surface. If the player does not operate properly because of dew, remove the disc and leave the player's power switch on for about one hour to remove all moisture.

PROTECTION OF EYES FROM LASER BEAM DURING SERVICING

This set employs a laser. Therefore, be sure to follow carefully the instructions below when servicing.

WARNING!!

WHEN SERVICING, DO NOT APPROACH THE LASER EXIT WITH THE EYE TOO CLOSELY. IN CASE IT IS NECESSARY TO CONFIRM LASER BEAM EMISSION, BE SURE TO OBSERVE FROM A DISTANCE OF MORE THAN 30cm FROM THE SURFACE OF THE OBJECTIVE LENS ON THE OPTICAL PICK-UP BLOCK.

Laser Diode Properties


- Material: GaAS/GaAlAs
- Wavelength: 780nm
- Emission Duration: continuous
- Laser output: max. 0.5mW*

*This output is the value measured at a distance about 1.8mm from the objective lens surface on the Optical Pick-up Block.

LASER WARNING LABEL

The label shown below are affixed.

1. Warning label

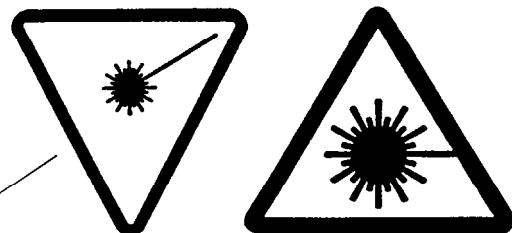

DANGER —INVISIBLE LASER RADIATION
WHEN OPEN AND INTERLOCK FAILED OR
DEFECTED. AVOID DIRECT EXPOSURE TO BEAM.

CAUTION —HAZARDOUS LASER AND
ELECTROMAGNETIC RADIATION WHEN OPEN
AND INTERLOCK DEFECTED.

ATTENTION —RAYONNEMENT LASER
ET ELECTROMAGNETIQUE DANGEREUX SI
OUVERT AVEC L'ECLENCHEMENT DE SECURITE
ANNULE.


SN29360911

ADVARSEL: USYNLIG LASERSTRÅLING
VED ÅBNING, NÅR SIKKERHEDSAF-
BRYDER ER UDE AF FUNKTION.
UNDGÅ UDSÆTTELSE FOR STRÅLING.

Photo 1


2. Certification label (UD: 120V model)

This label is located on the back panel.

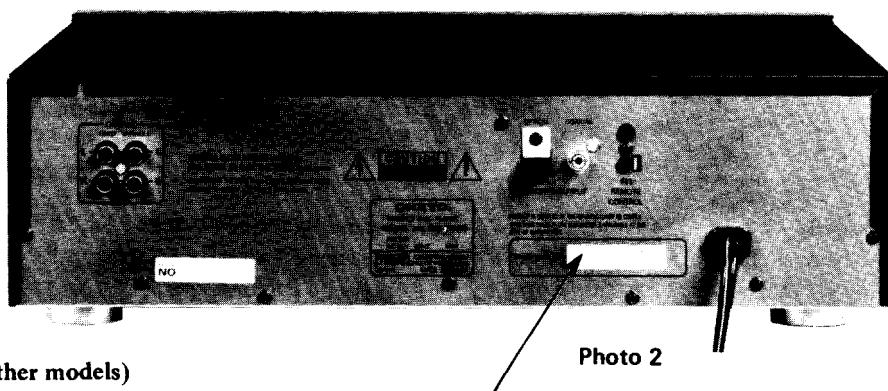

3. Class 1 label (Other models)

This label is located on the back panel.

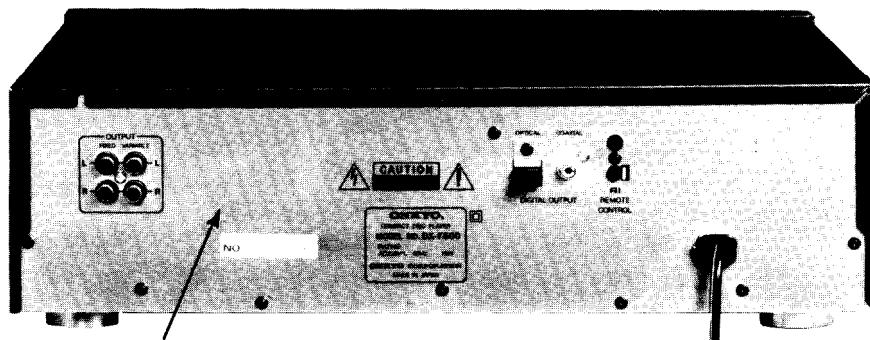

ADVARSEL

"CLASS 1 LASER
PRODUCT"

Denne mærkning er anbragt på apparatets højre side og indikerer, at apparatet arbejder med laserstråler af klasse 1, hvilket betyder, at der anvendes laserstråler af svageste klasse, og at man ikke på apparatets yderside kan blive utsat for utiladelig kraftig stråling.

**APPARATET BØR KUN ÅBNES AF FAGFOLK MED SÆRLIGT
KENDSKAB TIL APPARATER MED LASERSTRÅLER!**

Indvendigt i apparatet er anbragt den her gengivne advarselsmærkning, som advarer imod at foretage sådanne indgreb i apparatet, at man kan komme til at utsætte sig for laserstråling.

ADVARSEL! USYNLIG LASERSTRÅLING
VED ÅBNING. NÅR SIKKERHEDSAF
BRYDER ER UDE AF FUNKTION
UNDGÅ UDSÆTTELSE FOR STRÅLING

VAROITUS! Laite sisältää laserdiordin, joka lähetää (näkymätöntä) silmille vaarallista lasersäteilyä.

Fig. 10

CAUTION ON REPLACEMENT OF PICKUP

The laser diode in the optical pick-up block is so sensitive to static electricity, surge current and etc. that the components are liable to be broken down or its reliability remarkably deteriorated.

During repair, carefully take the following precautions.
(The following precautions are included in the service parts).

PRECAUTIONS

1. Ground for the work-desk.

Place a conductive sheet such as a sheet of copper (with impedance lower than $10^6 \Omega$) on the work-desk and place the set on the conductive sheet so that the chassis.

2. Grounding for the test equipment and tools.

Test equipments and toolings should be grounded in order that their ground level is the same the ground of the power source.

3. Grounding for the human body.

Be sure to put on a wrist-strap for grounding whose other end is grounded.

Be particularly careful when the workers wear synthetic fiber clothes, or air is dry.

4. Select a soldering iron that permits no leakage and have the tip of the iron well-grounded.

5. Do not check the laser diode terminals with the probe of a circuit tester or oscilloscope.

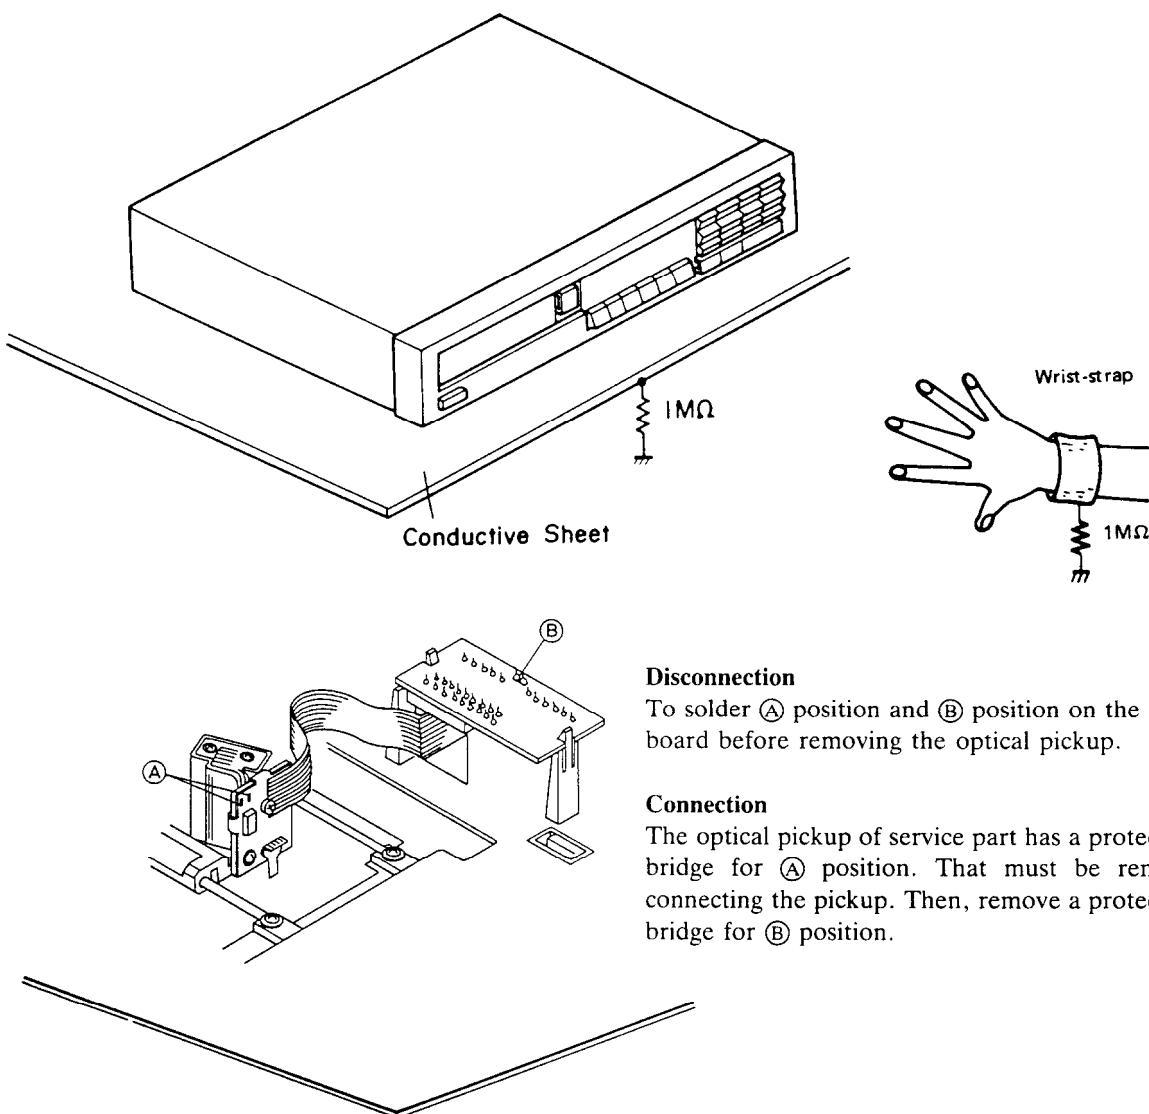


Fig. 11


Disconnection


To solder Ⓐ position and Ⓑ position on the terminal PC board before removing the optical pickup.

Connection

The optical pickup of service part has a protective solder bridge for Ⓑ position. That must be removed after connecting the pickup. Then, remove a protective solder bridge for Ⓐ position.

SCHEMATIC DIAGRAM

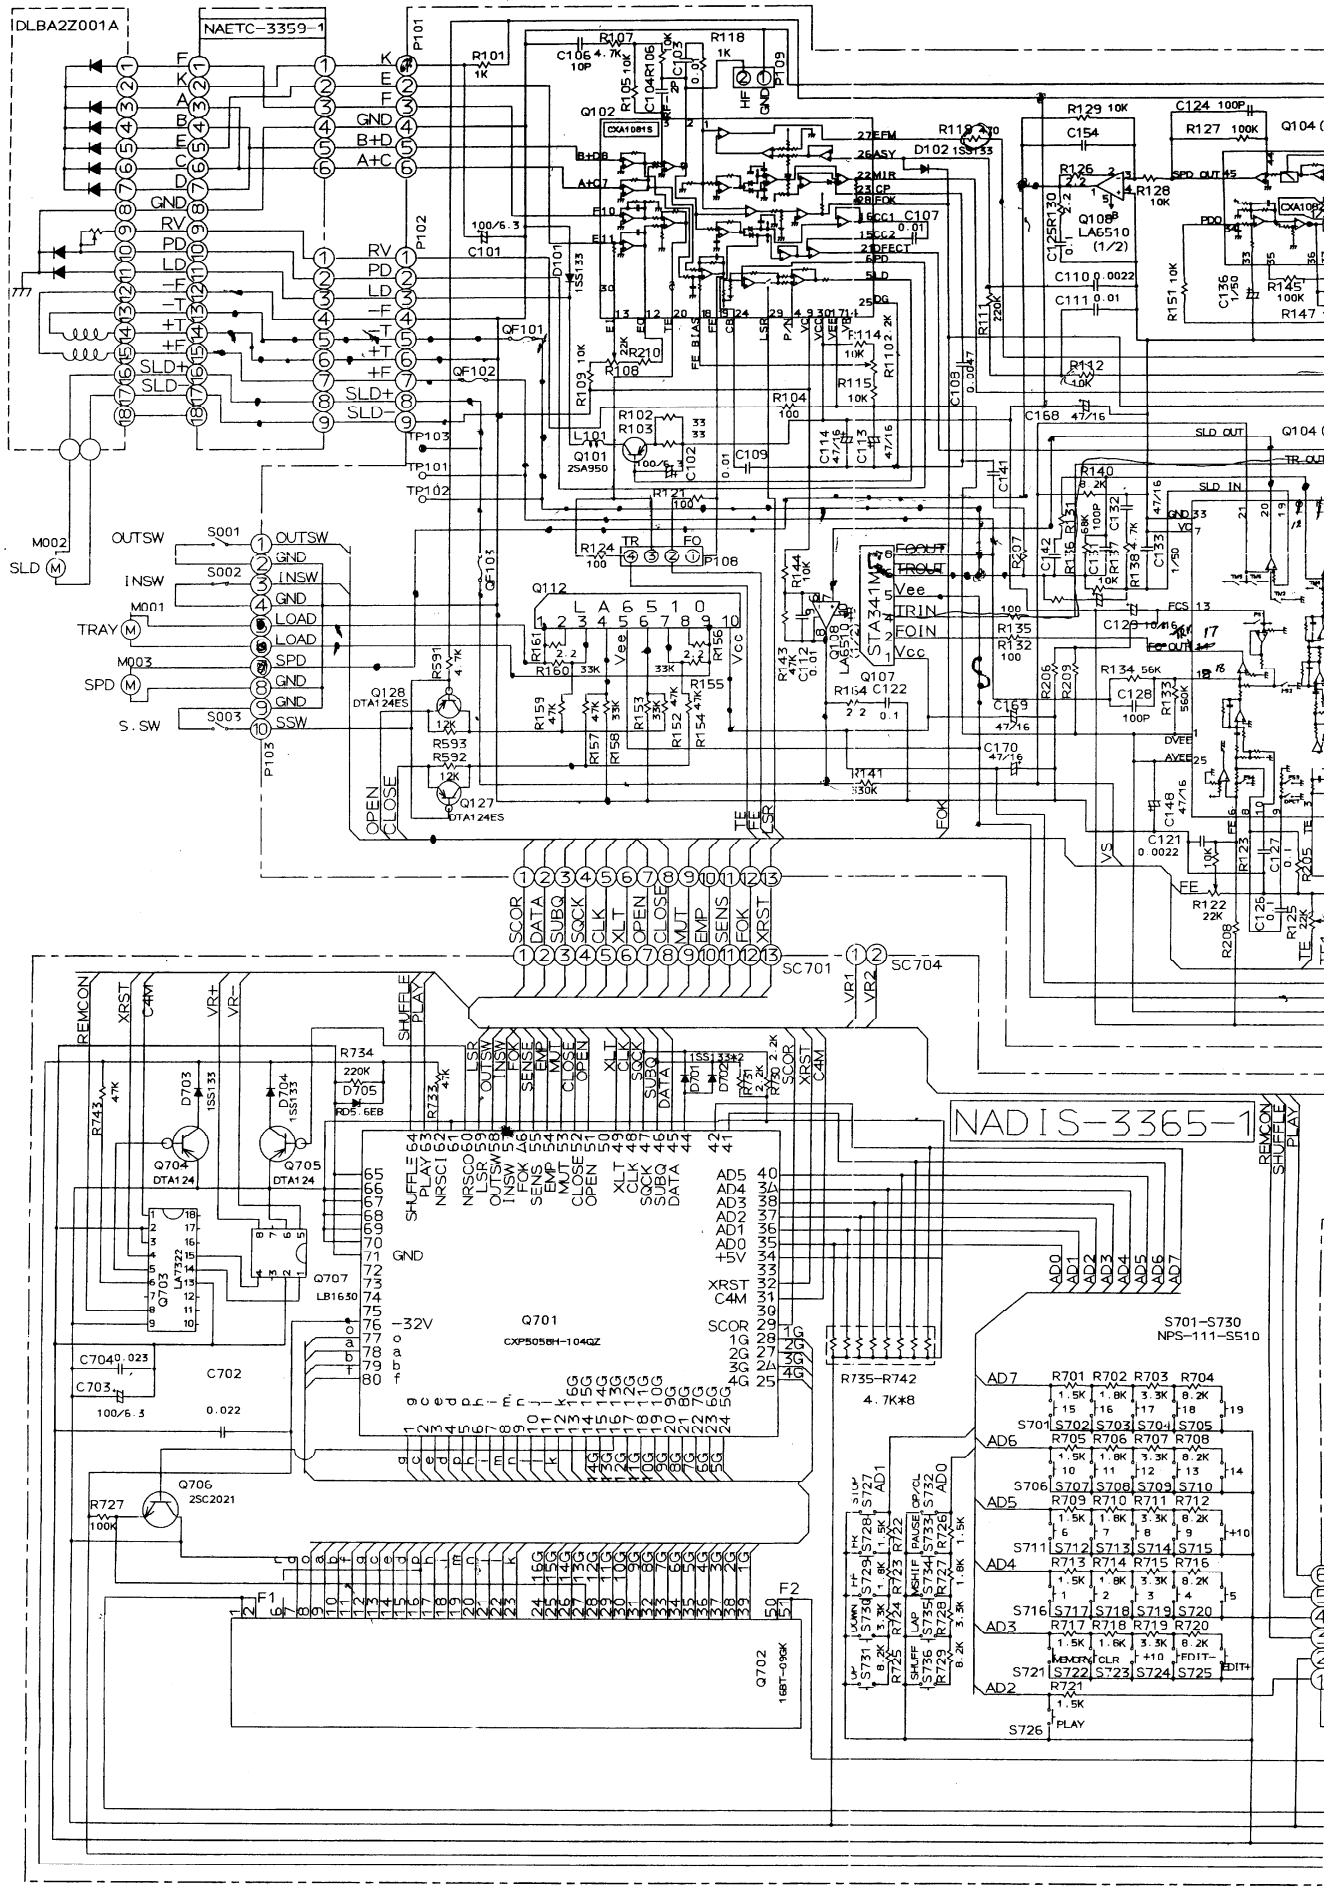

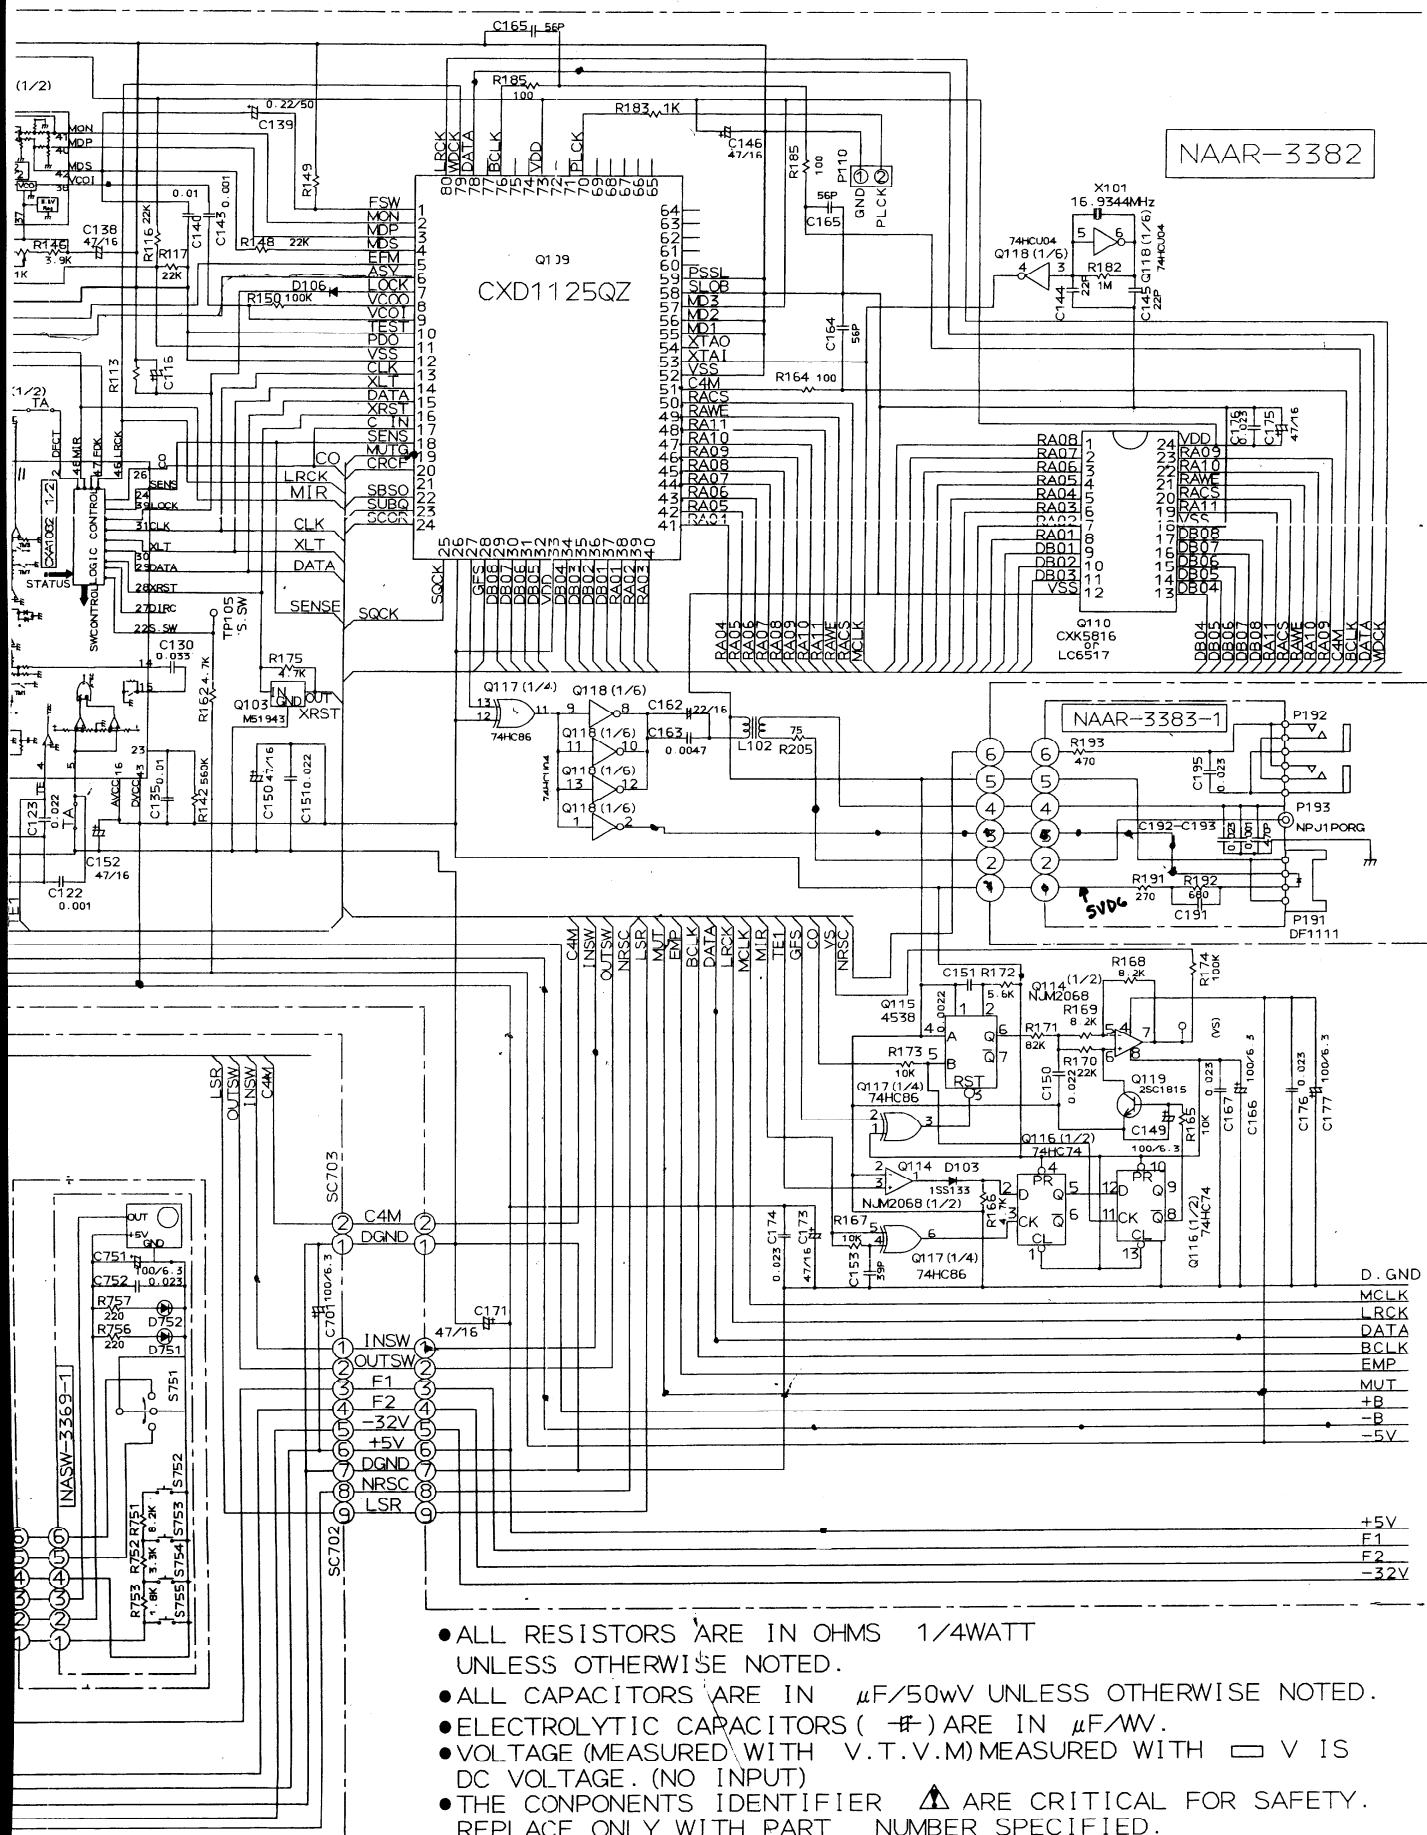

- ALL RESISTORS ARE IN OHMS 1/4WATT UNLESS OTHERWISE NOTED.
- ALL CAPACITORS ARE IN μ F/50mV UNLESS OTHERWISE NOTED.
- ELECTROLYTIC CAPACITORS (---) ARE IN μ F/mV.
- VOLTAGE (MEASURED WITH V.T.V.M) MEASURED WITH \square V IS DC VOLTAGE. (NO INPUT)
- THE COMPONENTS IDENTIFIER \triangle ARE CRITICAL FOR SAFETY. REPLACE ONLY WITH PART NUMBER SPECIFIED.
- CIRCUIT IS SUBJECT TO CHANGE FOR IMPROVEMENT.

SCHEMATIC DIAGRAM

A

B


C

D


F




TP RF (RF signal)
 Vertical : 1V/div.
 Horizontal : 1 ms/div.
 DC, Ground: Center

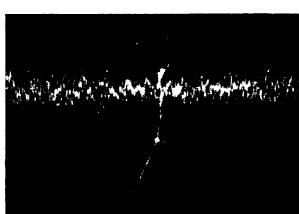

TP FO (Focus out)
Vertical : 0.5V/div.
Horizontal : 0.5 ms/div.
DC, Ground: Center

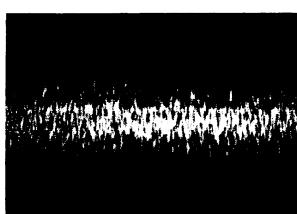




TP TO (Tracking out)
Vertical : 0.2V/div.
Horizontal : 0.5 ms/div.
DC, Ground: Center

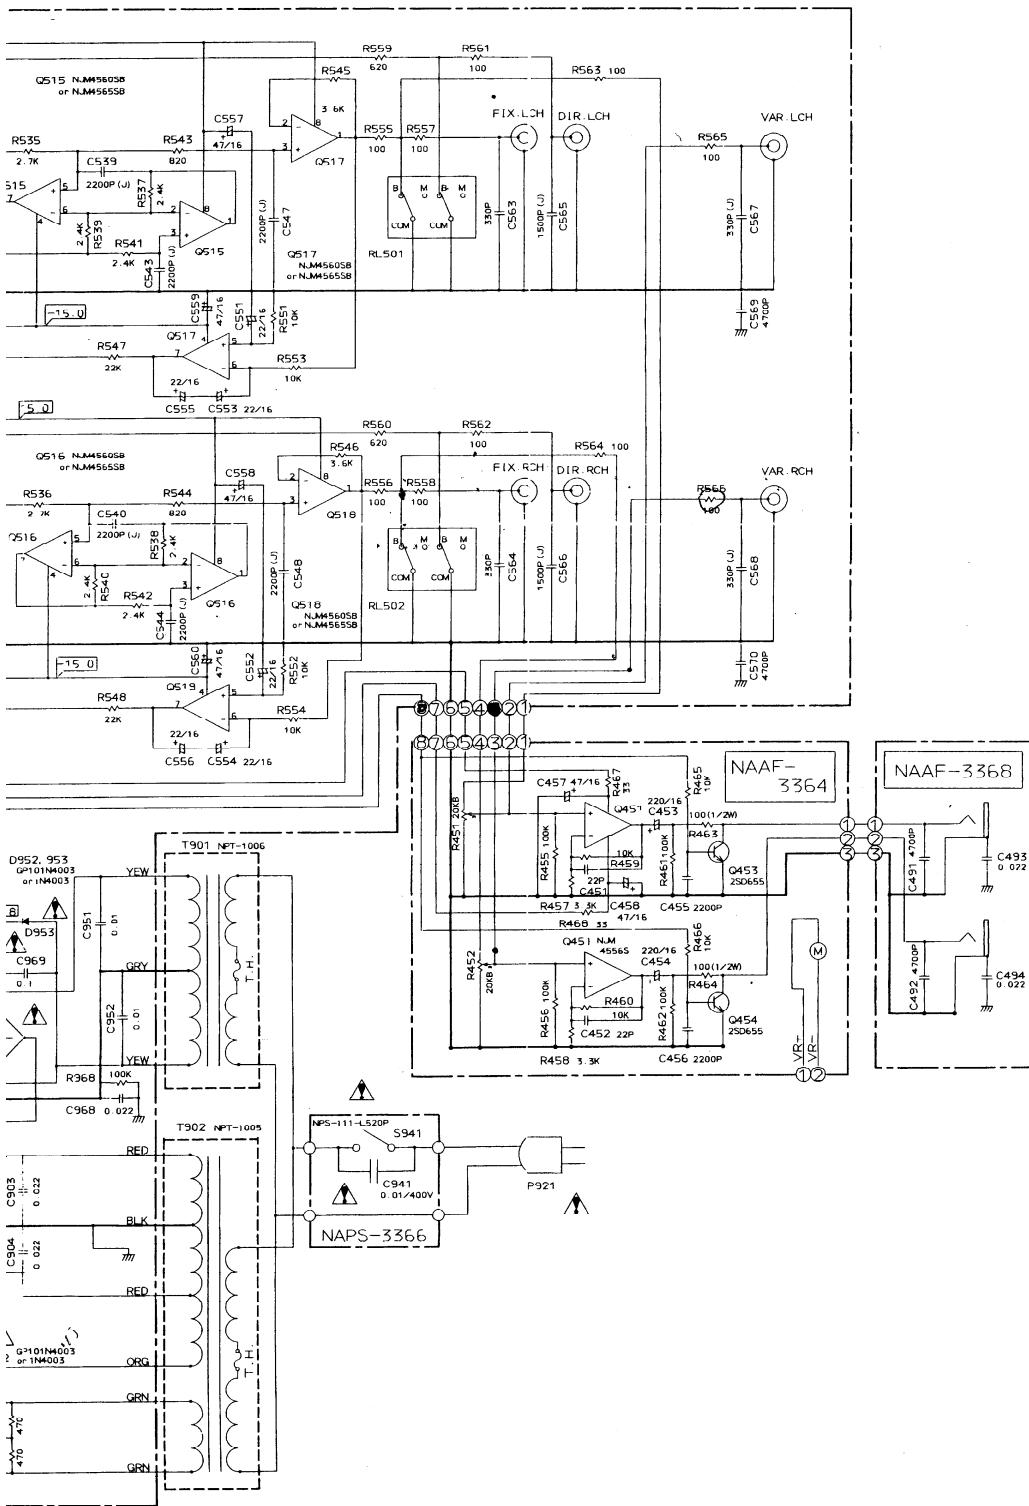

TP SLD (Slide out)
 Vertical :2V/div.
 Horizontal :20 ms/div.
 Top :Real
 Bottom :Storage


TP SPD (Spindle out)
Vertical : 1V/div.
Horizontal : 5 ms/div.
DC, Ground: Center

Grid
Vertical : 10V/div.
Holizontal : 1 ms/div.
DC, Ground: Center

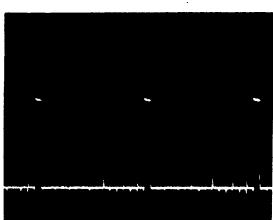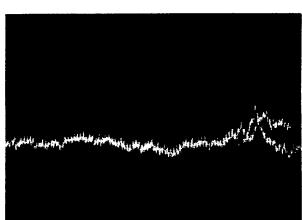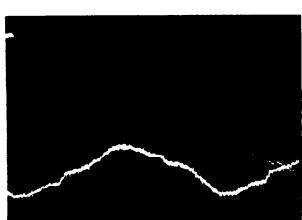

ONKYO CORPORATION

PACKING VIEW

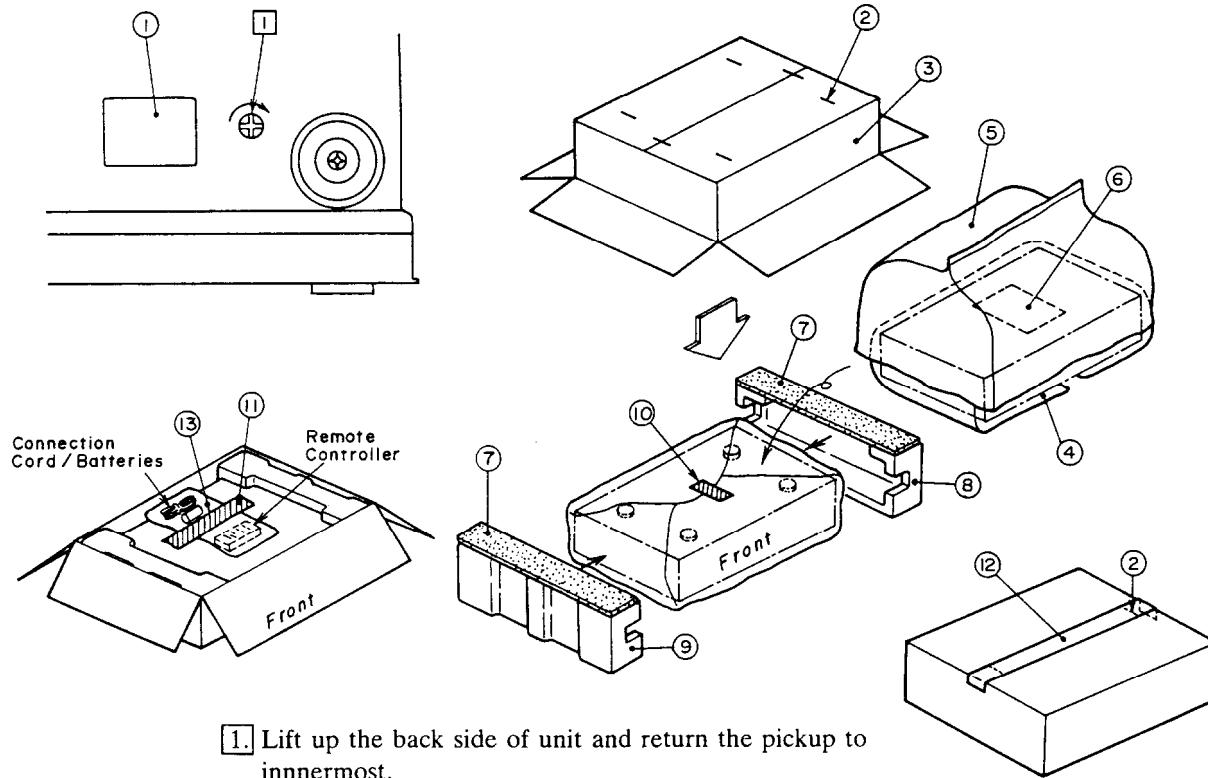

1. Lift up the back side of unit and return the pickup to innermost.

Use a screwdriver to turn the lock lever (about 90°) in the round hole in the direction of arrow. (Clockwise)

REF. NO.	PART NO.	DESCRIPTION
1	29361123	Label
2	282301	Sealing hook
3	29051759	Master carton box
	29051762A	Master carton box <PX>
4	29095012-1	500×800mm, Protection sheet
5	29100105	550×680mm, Poly-vinyl bag
6	29355153	Caution label
7	29095572	Sheet
8	29091264A	Pad L
9	29091265A	Pad R
10	261504	Adhesive tape
11	29110071	Damplon tape
12	260012	Damplon tape
13		Accessory bag ass'y
	29341301	Instruction manual <D/PX>
	29341348	Instruction manual <G/U>
	29341304	Instruction manual, Italian <G/U>
	2010166	Connection cord
	24140028	RC-122C, Remote controller
	3010054	UM-3, Two batteries
	2010169	Cord RI
	29365019	Warranty card <N>
	29365021	Warranty card <PX>
	29358002F	Service station list <N/PX>
	25055040	CV-K-2, Conversion plug <U>
	25055251	CV-CP, Conversion plug <PX>
	29100097	Poly-vinyl bag
	29091309	Pad, tray panel
	29095572	Sheet, tray panel

NOTE: <D>: Only 120V model


<G>: Only 220V/240V models

<U>: Only worldwide model

<PX>: Only PX model

<N>: Only U.S.A. model

CHASSIS-EXPLODED VIEW

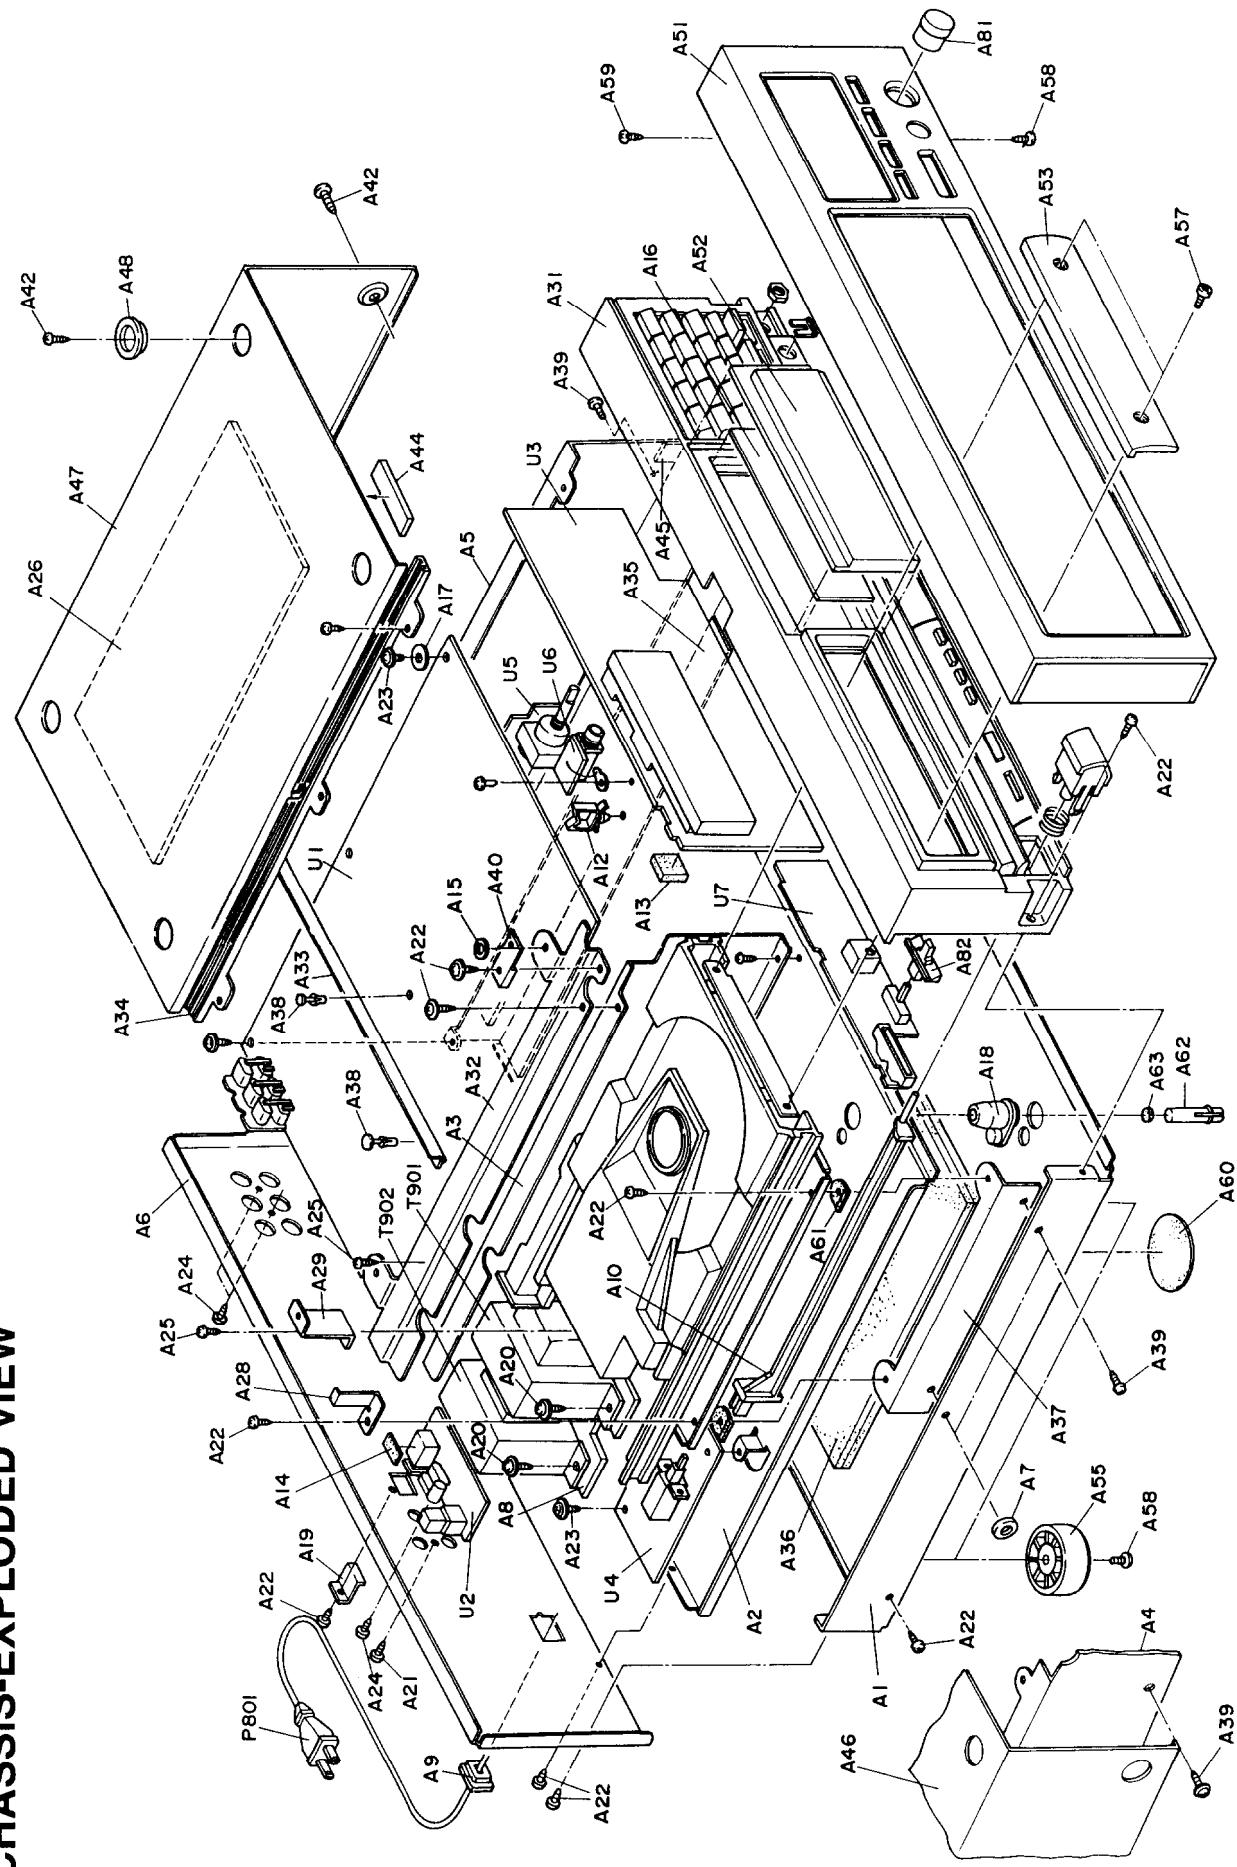

PARTS LIST


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
A1	27100170A	Chassis	A61	27301187	Cushion L
A2	27100169	Chassis U	A62	27301184	Lock pin
A3	27130542	Bracket C	A63	28140918	Cushion
A4	27130544A	Bracket L	A81	28323433	Knob
A5	27130545	Bracket R	A82	28323152	Knob MODE
A6	27121167	Back panel {D}	P801	2531112A	△ AS-UC-4#18, Power supply cord (D/PX)
A7	27121168	Back panel {G}			△ AS-CIE 250V 2.5A, Power supply cord {G/W}
A8	27121169	Back panel {W/PX}			△ AS-SAA, Power supply cord {QA}
A9	27121206	Back panel {QA/QB}			△ Power supply cord {QB}
A10	27273101	Leg (Cushion)	S902	25065195	△ NSS-1288P, Voltage selector switch {W}
A12	27300833	Spacer	T901	2300346	△ NPT-1005D, Power transformer {D}
A14	27270278	Spacer			△ NPT-1005G, Power transformer {G}
A15	27270212	Spacer			△ NPT-1005AG, Power transformer {W/PX}
A16	28133202	Back plate			NPT-1005Q, Power transformer {QA/QB}
A17	870060	W3×15, Flat washer	T902	2300350	△ NPT-1006D, Power transformer {D}
A18	2726758-1	Guide			△ NPT-1006G, Power transformer {G}
A19	27141281	Bracket			△ NPT-1006AG, Power transformer {W/PX}
A20	830440109	4 TTIC+10C(BC), Tapping screw			△ NPT-1006Q, Power transformer {QA/QB}
A21	834430108	3 TTIS+10B(BC), Tapping screw			NAA-R-3382-1, Main circuit pc board ass'y {D}
A22	834430088	3 TTIS+8B(BC), Tapping screw			NAA-R-3382-1A, Main circuit pc board ass'y {G/W/QA/QB/PX}
A23	831130088	3 TTW+8B, Tapping screw			NADG-3383-1, Cptio./digital output pc board ass'y
A24	834230108	3 TTTS+10B(Ni), Nickel screw			NADG-3383-1, Display circuit pc board ass'y
A25	834430068	3 TTTS+6B(BC), Tapping screw			NAPS-3366-1, Power switch pc board ass'y
A26	28140904-	Cushion			NAAF-3367-1, Headphone amplifier pc board ass'y
A28	27141310	Bracket, rail	U1	1H053582-1	NAAF-3367-1, Headphone terminal pc board ass'y
A29	27141316	Bracket			NASW-3369-1, Switch pc board ass'y
A31	27110433	Front bracket ass'y			Binder
A32	27130546A	Bracket CR			
A33	27130547A	Bracket PC	U2	1H053383-1	
A34	27273090A	Joint, cover			
A35	28140874B	Cushion	U3	1H048565-1	
A36	28140875A	Cushion			
A37	27130543B	Bracket L	U4	1H048566-1	
A38	880009	Rivert	U5	1H048567-1	
A39	838430088	3 TTB+8B(BC), Tapping screw			
A40	27141312	Bracket	U6	1H048568-1	
A42	838440089	4 TTB+8C(BC), Tapping screw			
A44	28140408	13×10×36, Cushion	U7	1H048569-1	
A45	28140653	Cushion			
A46	28184404A	Top cover L	W1	260208	
A47	28184405A	Top cover R			
A48	27265155A	Decoration ring			
A51	1H053121	Front panel ass'y			
A52	28191477	Clear plate			
A53	27210987	Panel, door (Tray panel)			
A55	27175153	Leg			
A57	84643008	3HSB×8FN(BC), Special bolt			
A58	834430088	3TTTS+8B(BC), Tapping screw			
A59	833430080	3TTTP+8P(BC), Tapping screw			
A60	27270255	Spacer			

NOTE: THE COMPONENTS IDENTIFIED BY MARK △ ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE ONLY WITH PART NUMBER SPECIFIED.

NOTE: {D}: Only 120V model
{G}: Only 220V model
{W}: Only Worldwide model
{PX}: Only PX model
{QA}: Only Australian model
{QB}: Only British model



MECHANISM-EXPLODED VIEW

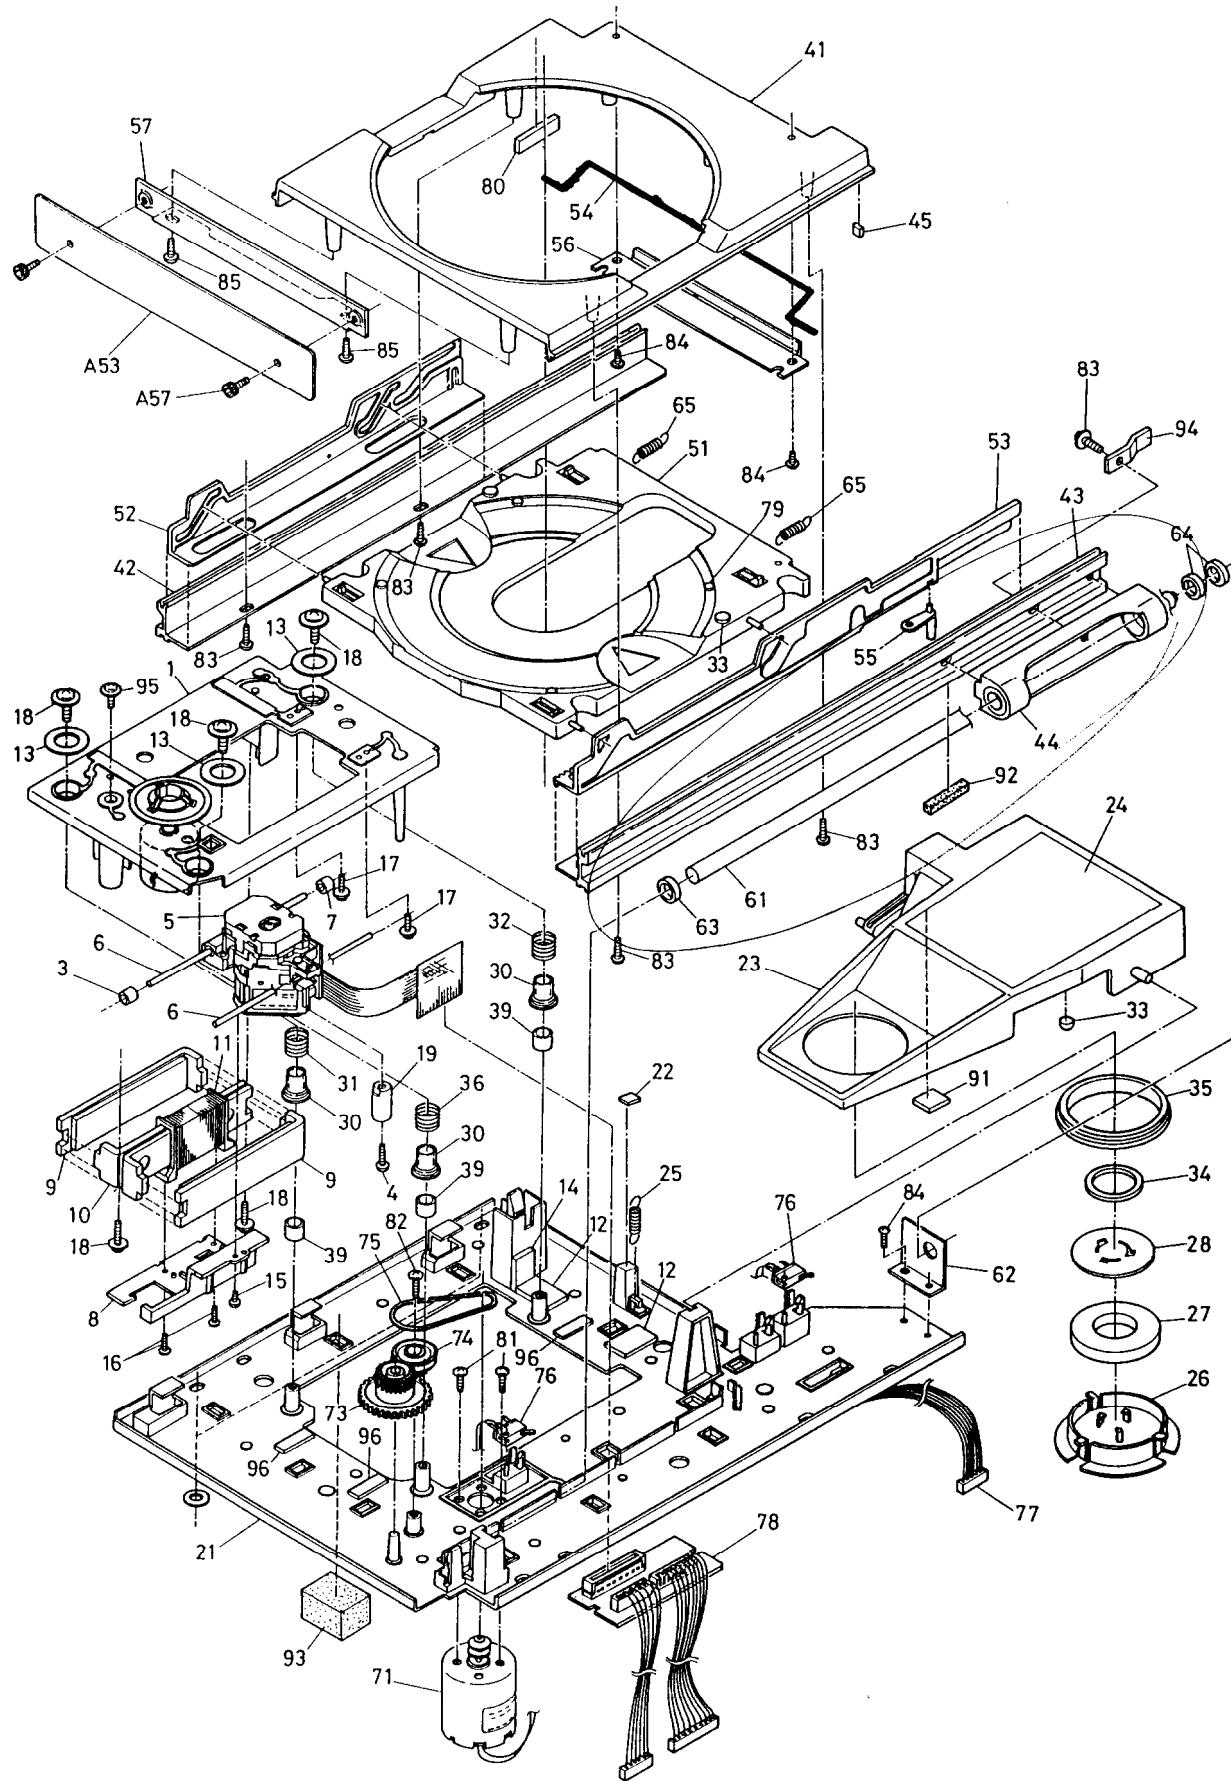

PARTS LIST

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	1H048901	Spindle motor ass'y	42	27301135	Rail L
3	27270264	Spacer	43	27301136	Rail R
4	82542010	2B+10F(BC), Binding screw	44	27301126	Guide bearing
5	24110003	DLBA2Z2001A, Optical pickup	45	28140892	Cushion T
6	27260286	Shaft	51	27301137B	Disc plate
7	27270264-1	Spacer	52	27301138	Cam plate L
(8)	27301129B	Plate	53	27301139A	Cam plate R
9	28181020	Magnet ass'y	54	27260280A	Shaft
10	27301152	York ass'y	55	27301140A	Stopper
11	24502236A	Coil	56	27301141A	Plate
12	28140912	Cushion A	57	27141275	Bracket
			61	27260281A	Shaft
14	28140914	Cushion C	62	27141274	Bracket
15	82542006	2B+6F(BC), Binding screw	63	27270265A	Spacer
16	833420068	2TTP+6B(BC), Tapping screw	64	27270276	Spacer
17	831430100	3TTW+10P(BC), Tapping screw	65	27180418	Spring
18	801414	Special screw	71	1H048902	Disc motor ass'y
19	27301179	Weight PU	73	27301142	Pulley gear
21	27100166C	Chassis L	74	27301143A	Flat wheel
22	28140891	Cushion A	75	27301162	Rubber belt
23	27301131B	Arm	76	25065322	NMS-1214, Microswitch
24	29360911	Label LASER 3	77	2000888	Socket ass'y
25	27180402	Spring	78	1H048559	NAETC-3359-1, Terminal pc board ass'y
27	28181019A	Magnet CH	79	27301180	Cushion
28	27301133	York CH	81	82143004	3P+4FN(BC), Pan head screw
30	27301134	Cushion rubber	82	831126060	2.6TTW+6P, Tapping screw
			83	838430088	3TTB+8B(BC), Tapping screw
			84	834430068	3TTS+6B(BC), Tapping screw
33	28140860	Cushion	85	834430088	3TTS+8B(BC), Tapping screw
34	27270277	Spacer	91	28140908	Cushion K
35	27301172	Cushion rubber	92	28140909	Cushion L
			93	28140910	Cushion F
37	27301182	Cushion L	94	27141317	Bracket, switch
39	28140917	Tube	95	834440168	4TTS+16B(BC), Tapping screw
41	27301124	Disc tray	96	28140911	Cushion P

DISASSEMBLING PROCEDURES

Top cover

Remove a screw holding the back panel and top cover.
Remove the four screws holding the top cover and chassis.

Main circuit PC board

Remove the top cover.
Remove the eight screws holding the back panel and chassis.
Remove a screw holding the bracket C and opto./digital output PC board.
Remove four screws holding the main PC board and chassis.

Tray panel






Use a hexagon wrench (2.5mm), remove the two hexagon bolt holding the tray panel and mechanical chassis.

Mechanism ass'y

Remove the tray panel.
Remove the four screws holding the mechanism and chassis.

Caution: When disconnect the sockets P101 and P102 on the main circuit PC board, solder the B point on the terminal PC board or the A point on the pickup. (Refer page 6) After remove the flexible PC board of pickup from terminal PC board, remove the terminal PC board.

LUBRICATION

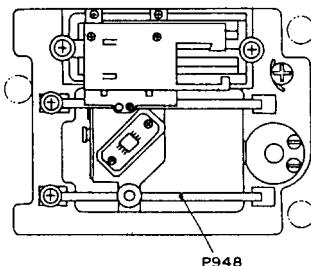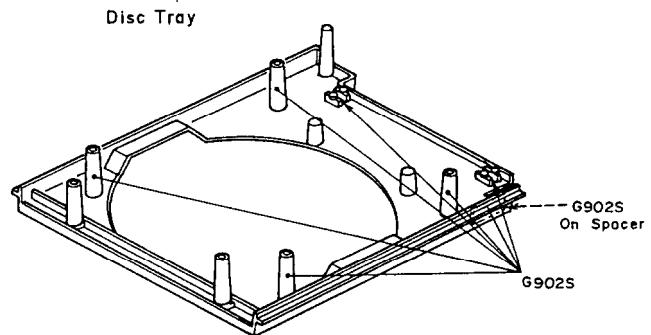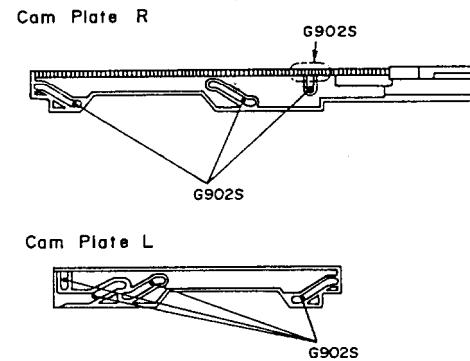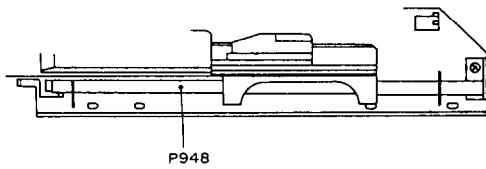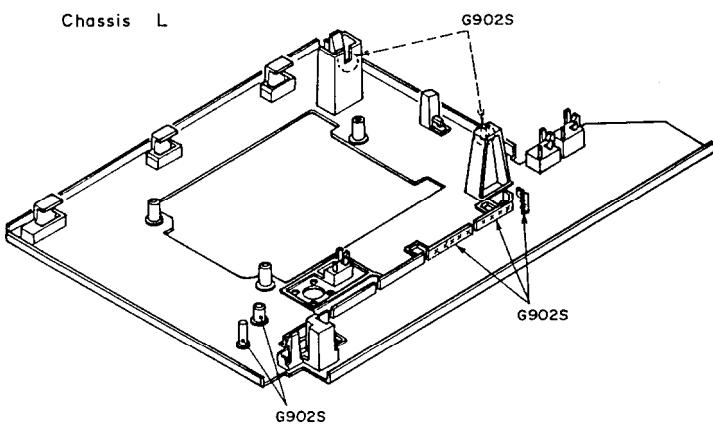TRAY CLAMPING PROBLEM

CHUCKING ARM ASSY DOESN'T ALWAYS CHUCK FULLY


CHECK TRAY MOTOR, WHEN TRAY MOTOR IS NOT
OPERATING MOTOR PINS SHOULD BE EQUAL.
SMALL DC OFFSET.

IF VOLTAGE AT MOTOR IS UNEQUAL TO 
CHECK Q127 AND Q128 IF DEFECTIVE OR MISSING
REPLACE WITH CORRECT TRANSISTOR.

1-11-95

8S-3380-1 (DAC unit)

1. VL: Digital section positive power supply
 2. DGND: Digital ground
 3. PHK: Photo coupler cathode terminal
 4. PHA: Photo coupler anode terminal
 5. BCLK: Bit clock input terminal
 6. WCLK: Word clock input
 7. DATA: Data input
 8. B4: Bit 4 adjustment terminal
 9. B3: Bit 3 adjustment terminal
 10. B2: Bit 2 adjustment terminal
 11. B1: MSB adjustment terminal
 12. VPOT: Voltage output for bit adjustment
 13. VCA: Analog section positive power supply
 14. -VCA: Analog section negative power supply
 15. SRFL: Servo filter
 16. BEFL: Reference voltage filter
 17. BPFL: Offset filter
 18. SRVI: Super servo input
 19. VOUT: DA converter voltage output
 20. IOUT: DA converter current output
 21. AGND: Analog section ground
 22. VCA: Analog section positive power supply
 23. V-12: Opto. drive servo amp. output
 24. VRO: Opto. drive negative voltage output
 25. VR-: Opto. drive servo amp. inversion input
 26. -VCA: Analog section negative voltage

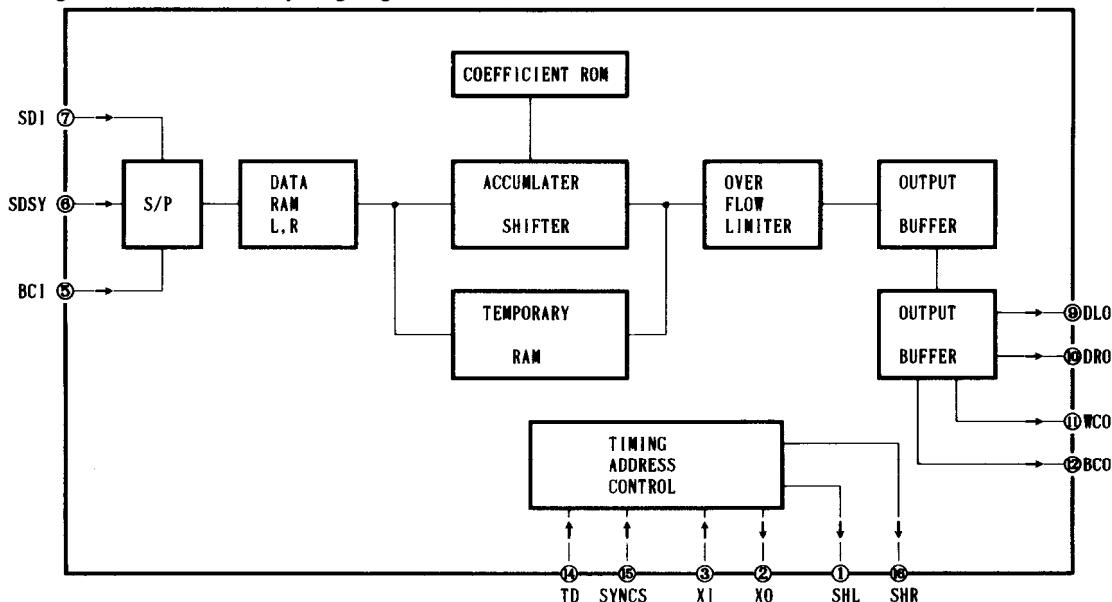YM3414 (Eight times over sampling digital filter)

PIN NO.	TERMINAL	I/O	DESCRIPTION
1	SHL	O	When one DAC(TD=L):Deglitching signal of left channel (when four times) When two DAC(TD=H):Deglitching signal of left and right channels(when eight times)
2	XO	O	Connect the x'tal oscillator between XI and XO.
3	XI	I	The clock frequency is 384×Fs.
4	VDD2		+5V:Power supply terminal for x'tal oscillator and deglitching signal.
5	BCI	I	Bit clock input terminal.
6	SDSY	I	Clock shown L/Rch division of input data and input timing.
7	SDI	I	16 bits serial data input terminal.
8	VDD1		+5V:Power supply terminal for digital signal.
9	DLO	O	When one DAC(TD=L):Output terminal for L/R channel data (When four times) When two DAC(TD=H):Output terminal for L channel data (when eight times)
10	DRO	O	R channel data output terminal.
11	WCO	O	Word clock of output data DLO/DRO.
12	BCO	O	Bit clock of output data.
13	VSS		Ground terminal
14	TD	I	1DAC/2DAC selector terminal: 1DAC at low. 2DAC at high.
15	SYNCs	I	Asynchronous input jitter absorption synchronous signal. Synchronous input at high level. SDSY inhibiting at low level.
16	SHR	O	R channel deglitching signal when one DAC.

ADJUSTMENT PROCEDURES

Instruments required

Dual trace oscilloscope, Frequency counter, AF oscillator, Test disc (SONY YEDS-18), AC voltmeter, Jitter meter, and Socket P4(Part no. 25050138)


1. VCO frequency adjustment

Connect the frequency counter to terminal P110.

Turn the power switch to ON.(No load the disc.)

Adjust R147 until the frequency counter reading becomes $4322 \pm 5\text{kHz}$.

After adjustment, disconnect the frequency counter.

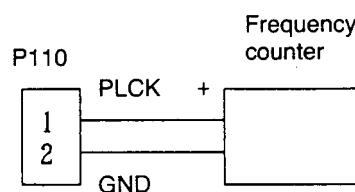

2. Focus offset adjustment

Load the test disc YEDS-18 on the tray and play the track 2.

Connect the oscilloscope or jitter meter to terminal P109.

(Oscilloscope)

Adjust R110 until a clear trace of waveform pattern as shown photo 1 appear on the oscilloscope.

When the amount of jitter is broad, set R110 to mechanical center.

(Jitter meter)

Adjust R110 until the jitter meter reading becomes minimum.(Less than 10ns.)

After adjustment, disconnect the oscilloscope or jitter meter.


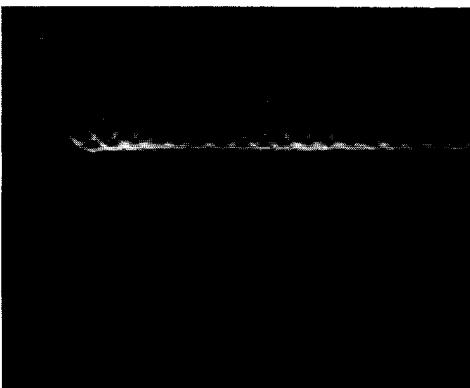


Photo 1

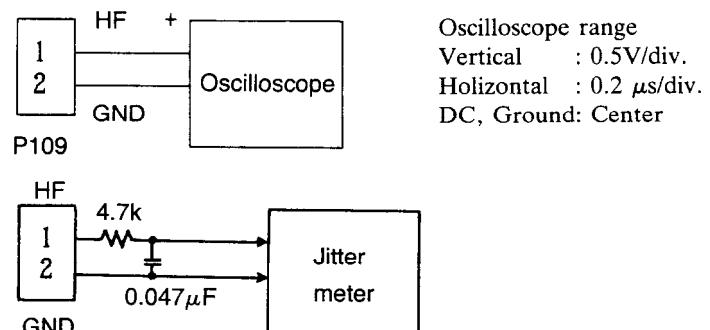

3. Tracking offset adjustment

Connect the short clip between TP105 and Ground of digital section.

Turn R125 to minimum position.(Counter clockwise)

Connect the oscilloscope between pin 3 (TR) of P108 and pin 2 (GND) of P109.


Adjust R108 until the center of tracking error signal on the oscilloscope becomes GND level.

Turn R125 to the mechanical center.

After adjustment, disconnect the oscilloscope and short clip.



Photo 2

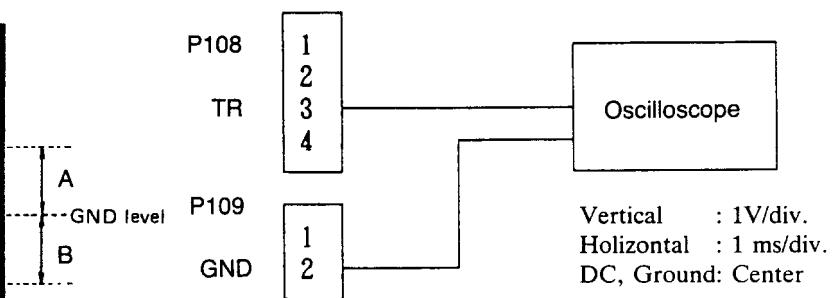

4. Focus gain adjustment

Set the output of AF oscillator to 800Hz, 1~1.5Vp-p.

Play the track 2 of test disc.

Connect the oscilloscope and the AF oscillator as shown below.


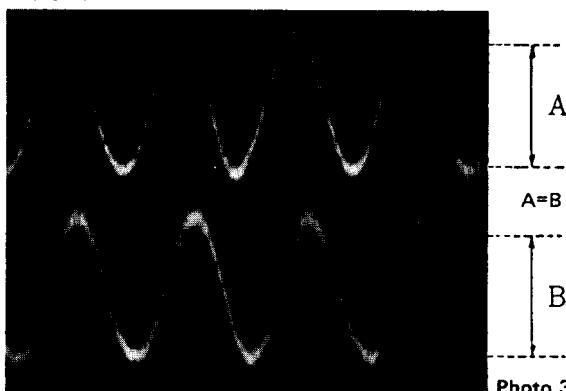


Photo 3

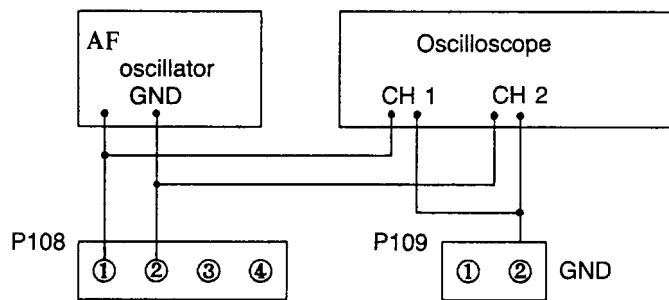

Vertical : 0.5V/div.
Horizontal: 0.5 ms/div.

Adjust R122 until 800Hz components of channels 1 and 2 on oscilloscope become same level.

After adjustment, disconnect the AF oscillator and the oscilloscope.

5. Tracking gain adjustment


Set the output of AF oscillator to 1.2kHz, 1~1.5Vp-p.

Play the track 2 of test disc.

Connect the oscilloscope and the AF oscillator as shown below.



Photo 4

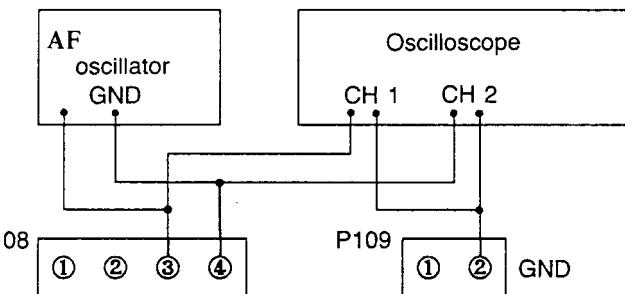

Vertical : 0.5V/div.
Horizontal: 0.2 ms/div.

Adjust R125 until 1.2kHz components of channels 1 and 2 on oscilloscope become same level.

After adjustment, disconnect the AF oscillator and the oscilloscope.

6. Opto. transmitter system adjustment

Connect the oscilloscope to test point TP502.

Play the track 2 of test disc.

Adjust R178 until the cross point of data waveform as shown photo 5 becomes on the top side.


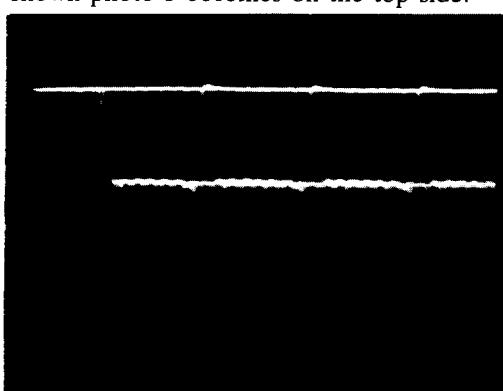


Photo 5

Vertical : 2V/div.
Horizontal : 0.2 μ s/div.
DC, Ground: Center

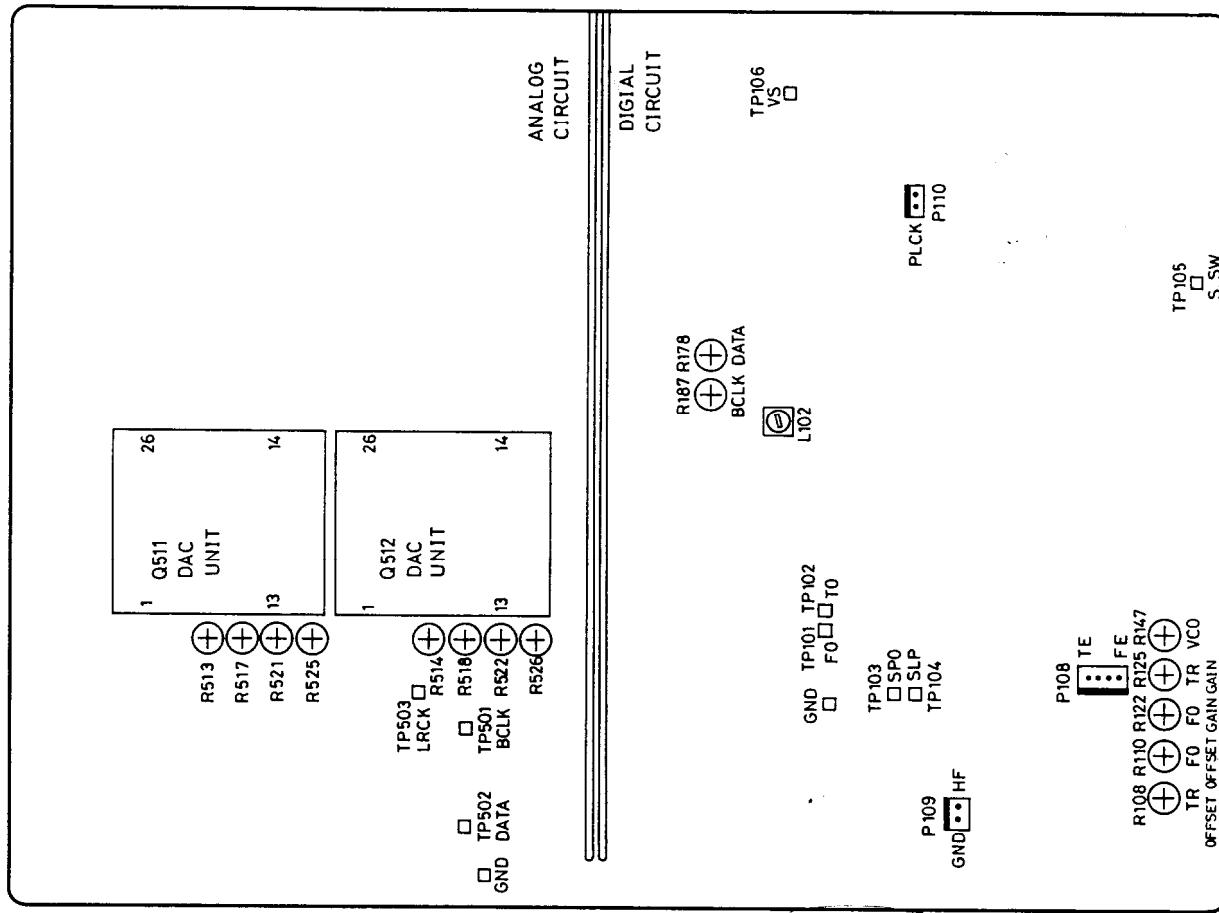

7. BCLK adjustment

Connect the oscilloscope to test point TP501.

Play the track 2 of test disc.

Adjust R187 so that the duty ratio of the waveform is 1:1.

8. DA converter adjustment

Connect the distortion analyzer to the audio output (FIXED) terminals.

Play the track 2 of test disc.


Step 1: Adjust R525/R526 so that the distortion analyzer reading is minimum.

Step 2: Adjust R521/R522 so that the distortion analyzer reading is minimum.

Step 3: Adjust R517/R518 so that the distortion analyzer reading is minimum.

Step 4: Adjust R513/R514 so that the distortion analyzer reading is minimum.

Repeat the steps 1, 2, 3 and 4 until no further adjustment is necessary.

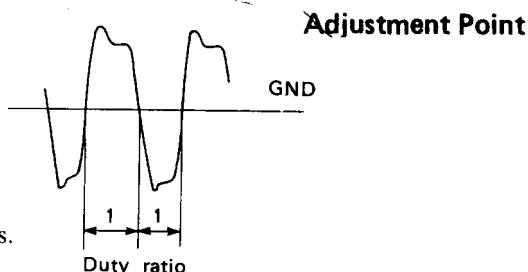

PRINTED CIRCUIT BOARD – PARTS LIST

MAIN CIRCUIT PC BOARD (NAAR-3382-1/1A)		CIRCUIT NO.	PART NO.	DESCRIPTION
CIRCUIT NO.	PART NO.			Photo couplers
	ICs		Q124	24120002 or 24120024
Q102	22240180	CXA1081S	D104, D106	24120021
Q103	22240018	M51943ASL	X101	3010112
Q104	22240181	CXA1082AS		KD6586FFB
Q107	22240168	STA341M-L		X'tal
Q108	22240034	LA6510	L101	231023
Q109	22240129	CXD1125QZ	L102	232136 or 232143
Q110	22240178 or 22240118	CXK5816SPS-15L or LC3517AS-15		Coils
Q112	22240034	LA6510	C101, C102	100 μ F, 6.3V, Elect.
Q114	222956	NJM2068DD	C103, C107	0.01 μ F \pm 5%, 50V, Mylar
Q115	222850381	HD14538BP	C108	4700pF \pm 5%, 50V, Mylar
Q116	222740745	74HC74P	C109	0.01 μ F \pm 5%, 50V, Mylar
Q117	222740865	74HC86P	C110	2200pF \pm 5%, 50V, Mylar
Q118	222755	74HCU04P	C111, C112	0.01 μ F \pm 5%, 50V, Mylar
Q122	226027	HCPL2601	C113, C114	100 μ F, 6.3V, Elect.
Q123	222071	HCPL2400	C121	2200pF \pm 5%, 50V, Mylar
Q501, Q502	22240035	NJM592D8	C122	0.1 μ F \pm 5%, 50V, Mylar
Q503	22240176	YM3414	C123	0.022 μ F \pm 5%, 50V, Mylar
Q504	222740745	74HC74P	C125-C127	0.1 μ F \pm 5%, 50V, Mylar
Q505	222740005	74HC00P	C129	10 μ F, 16V, Elect.
Q511, Q512	222077	8S-3380-1 (DAC unit)	C130	0.033 μ F \pm 5%, 50V, Mylar
Q515-Q518	22240207	NJM4560SB	C132	47 μ F, 16V, Elect.
Q901	222780052	78M05	C133	3.3 μ F, 50V, Elect.
Q902	222790053	79L05	C135	0.01 μ F \pm 5%, 50V, Mylar
Q951	222780155MIT or 222780154MIT	M5F78M15L or M5F7815L	C136	1 μ F, 50V, Elect.
Q952	222790155MIT or 222790154MIT	M5F79M15L or M5F7915L	C138	47 μ F, 16V, Elect.
Q953	222780052	78M05	C139	0.22 μ F, 50V, Elect.
Q954	222790083	79L08	C140	0.01 μ F \pm 5%, 50V, Mylar
Q955	222780053	78L05	C142	0.1 μ F \pm 5%, 50V, Mylar
	Transistors		C146	2.2 μ F, 50V, Elect.
Q101	2211503 or 2211504	2SA950-O or 2SA950-Y	C148	100 μ F, 6.3V, Elect.
Q119-Q121	2211254 or	2SC1815-Y or	C149	0.1 μ F, 50V, Elect.
Q125, Q126	2211255	2SC1815-GR	C150	0.022 μ F \pm 5%, 50V, Mylar
Q129	221281	DTC114YS	C151	2200pF \pm 5%, 50V, Mylar
Q513, Q514	2212524 or 2212525	2SK363-GR or 2SK363-BL	C152, C155	100 μ F, 6.3V, Elect.
Q903	2211503 or 2211504	2SA950-O or 2SA950-Y	C162	22 μ F, 16V, Non-polar elect.
Q956	2213090	DTA114YS	C166	47 μ F, 16V, Elect.
Q957	2212304 or 2211945	2SK381-D or 2SK246-GR	C168-C171	47 μ F, 16V, Elect.
Q958, Q959	2211254 or 2211255	2SC1815-Y or 2SC1815-GR	C173, C175	47 μ F, 16V, Elect.
Q960, Q961	2211454 or 2211455	2SA1015-Y or 2SA1015-GR	C177	47 μ F, 16V, Elect.
	Diodes		C180	0.01 μ F \pm 5%, 50V, Mylar
D101-D103	223163	1SS133	C501	47 μ F, 16V, Elect.
D901	22380018 or 223892	DB103 or DF02M	C508	22 μ F, 16V, Elect.
D902, D952	223880 or	GP101N4003 or	C511, C512	22 μ F, 16V, Elect.
D953	223896	1N4003F	C517, C518	22 μ F, 16V, Elect.
D903	224652702 or 224452702	HZ27EB2 or MTZ27B	C523, C524	220 μ F, 6.3V, Elect.
D904	224650511 or 224450511	HZ5.1EB1 or MTZ5.1A	C525, C526	0.01 μ F \pm 5%, 50V, Mylar
D951	22380013	RDF02M	C527, C528	100 μ F, 16V, Elect.
D954, D956	223163	1SS133	C529-C532	220 μ F, 16V, Elect.
D955	224650822 or 224450822	HZ8.2EB2 or MTZ8.2B	C535, C536	150pF \pm 5%, 50V, Styrol
D958, D959	223163	1SS133	C537, C538	0.01 μ F \pm 5%, 125V, PP
			C539, C540	2200pF \pm 5%, 125V, PP
			C543, C544	2200pF \pm 5%, 125V, PP
			C547, C548	2200pF \pm 5%, 125V, PP
			C551, C552	22 μ F, 16V, Elect.
			C553-C556	47 μ F, 16V, Elect.
			C557-C560	47 μ F, 16V, Elect.
			C563, C564	330pF \pm 5%, 125V, PP
			C565, C566	1500pF \pm 5%, 125V, PP
			C567, C568	330pF \pm 5%, 125V, PP
			C569, C570	4700pF \pm 5%, 50V, Mylar
			C901, C902	2200 μ F, 25V, Elect.
			C907, C908	1 μ F, 50V, Elect.

CIRCUIT NO. PART NO.

CIRCUIT NO.	PART NO.	DESCRIPTION
C909	354782209	22μF, 50V, Elect.
C910	354762209	22μF, 35V, Elect.
C951, C952	379121035	0.01μF±10%, 50V, Plastic
C953, C954	352753329	3300μF, 25V, Elect.
C955, C956	391242217	220μF, 16V, Elect.
C957	354742219	220μF, 16V, Elect.
C959, C960	354742209	22μF, 16V, Elect.
C961	354721019	100μF, 6.3V, Elect.
C963	354780109	1μF, 50V, Elect.
C964	371124734	0.047μF±5%, 50V, Mylar
C965	354722219	220μF, 6.3V, Elect.
C969	379121045	0.1μF±10%, 50V, Plastic
Resistors		
R108	5210066	N06HR22KBD, Semi-fixed
R110	5210060	N06HR2.2KBD, Semi-fixed
R122, R125	5210066	N06HR22KBD, Semi-fixed
R147	5210058	N06HR1KBD, Semi-fixed
R178, R187	5210060	N06HR2.2KBD, Semi-fixed
R513, R514	5210070	N06HR100KBD, Semi-fixed
R517, R518	5210070	N06HR100KBD, Semi-fixed
R521, R522	5210070	N06HR100KBD, Semi-fixed
R525, R526	5210070	N06HR100KBD, Semi-fixed
R951	441625604	56ohm, 1/2W, Metal oxide film
R958	431421065	10Mohm, 1/4W, Solid
R963	442521214	120ohm, 1/2W, Metal oxide film
Plugs		
P101	25055136	NPLG-6P120
P102	25055139	NPLG-9P123
P103	25055154	NPLG-10P138
P104	25055157	NPLG-13P141
P105	25055190	NPLG-9P174
P106	25055146	NPLG-2P130
P107	25055150	NPLG-6P134
P108	25055045	NPLG-4P33
P109, P110	25055038	NPLG-2P29
P402	25055152	NPLG-8P136
Terminal		
P401	25045240	NPJ-6PDBL114
Radiators		
27160176		RAD56
27160220		RAD51(B)
Socket		
SC501	2000939	NSAS-2P891
Relays		
RL101, RL102	25065174	NRL-2P1A-DC1209
Fuses		
QF101, QF102	252112	ICPN15, IC protector (G)

NOTE:(G): Except 120V model

OPTO./DIGITAL OUTPUT PC BOARD (NADG-3383-1)**CIRCUIT NO. PART NO.**

CIRCUIT NO.	PART NO.	DESCRIPTION
Q191	24120014	DF-1111/T, Photo coupler
P191	25045239	NPJ-1PORG-113, Terminal, Opto. output
P192	25045172	HSJ1003-01-020, Terminal RI
SC191	2000929	NSAS-12P882, Socket

TERMINAL PC BOARD(NAETC-3359-1)**CIRCUIT NO. PART NO.**

CIRCUIT NO.	PART NO.	DESCRIPTION
P001	25050361	NSCT-18P188, Socket
SC001	2000890	NSAS-12P846, Socket
SC002	2000873	NSAS-18P829, Socket

NOTE: THE COMPONENTS IDENTIFIED BY MARK ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE ONLY WITH PART NUMBER SPECIFIED.

DISPLAY CIRCUIT PC BOARD(NADIS-3365-1)**CIRCUIT NO. PART NO.**

CIRCUIT NO.	PART NO.	DESCRIPTION
	ICs	
Q701	22240179	CXP5058H-104QZ
Q703	22240173	LC6527H-3722

Q707	222963	LB1630
------	--------	--------

Fluorescent tube

Q702	212059	16BT-09GK
------	--------	-----------

Transistors

Q704, Q705	2212600	DTA124ES
------------	---------	----------

Q706	2212132 or	2SC2021-R or
------	------------	--------------

	2212133	2SC2021-S
--	---------	-----------

Diodes

D701-D704	223163	1SS133
-----------	--------	--------

D705	224650562 or	HZ5.6EB2 or
------	--------------	-------------

	224450562	MTZ5.6B
--	-----------	---------

Capacitors

C701, C703	354721019	100μF, 6.3V, Elect.
------------	-----------	---------------------

Resistors

R735-R742	49163472408	4.7kohm×8, 1/10W, Network
-----------	-------------	---------------------------

Switches

S701-S736	25035548	NPS-111-S510
-----------	----------	--------------

Sockets

SC701	2000891	NSAS-26P847
-------	---------	-------------

SC702	2000883	NSAS-18P839
-------	---------	-------------

SC703	2000732	NSAS-4P688
-------	---------	------------

SC704	2000755	NSAS-4P711
-------	---------	------------

SC705	2000892	NSAS-12P848
-------	---------	-------------

Holder

27190656A	Display
-----------	---------

POWER SWITCH PC BOARD(NAPS-3366-1)**CIRCUIT NO. PART NO.**

C941	3500065A	DE7150FZ103PCSA, Capacitor IS
------	----------	-------------------------------

P941	25035558	NPS-111-L520P, Power switch
------	----------	-----------------------------

HEADPHONE AMPLIFIER PC BOARD(NAAF-3367-1)**CIRCUIT NO. PART NO.**

Q451	222887	NJM4556S, IC
------	--------	--------------

Q453, Q454	2211705 or	2SD655-E or
------------	------------	-------------

	2211706	2SD655-F, Transistors
--	---------	-----------------------

C453, C454	354742219	220μF, 16V, Elect. capacitors
------------	-----------	-------------------------------

C455, C456	371122224	2200pF±5%, 50V, Mylar capacitors
------------	-----------	----------------------------------

C457, C458	354744709	47μF, 16V, Elect. capacitors
------------	-----------	------------------------------

R451	5104242	N16RGM20KB30F, Variable resistor
------	---------	----------------------------------

R463, R464	442521014	100ohm, 1/2W, Metal oxide film resistors
------------	-----------	--

P451	25055183	NPLG-2P167, Plug
------	----------	------------------

SC451	2000917	NSAS-16P870, Socket
-------	---------	---------------------

HEADPHONE TERMINAL PC BOARD(NAAF-3368-1)**CIRCUIT NO. PART NO.**

P491	25045139	HLJ0540-01-010, Headphone terminal
------	----------	------------------------------------

SWITCH PC BOARD(NASW-3369-1)**CIRCUIT NO. PART NO.**

U751	241068	BX-1407, IC
------	--------	-------------

D751, D752	225142	SEL2913K, LEDs
------------	--------	----------------

C751	354721019	100μF, 6.3V, Elect. capacitor
------	-----------	-------------------------------

S751	25065325	NSS-23128, Slide switch
------	----------	-------------------------

S752-S755	25035548	NPS-111-S510, Push switches
-----------	----------	-----------------------------

P701	25055187	NPLG-6P171, Plug Holder
------	----------	-------------------------

	27190499A	
--	-----------	--

BLOCK DIAGRAM

