


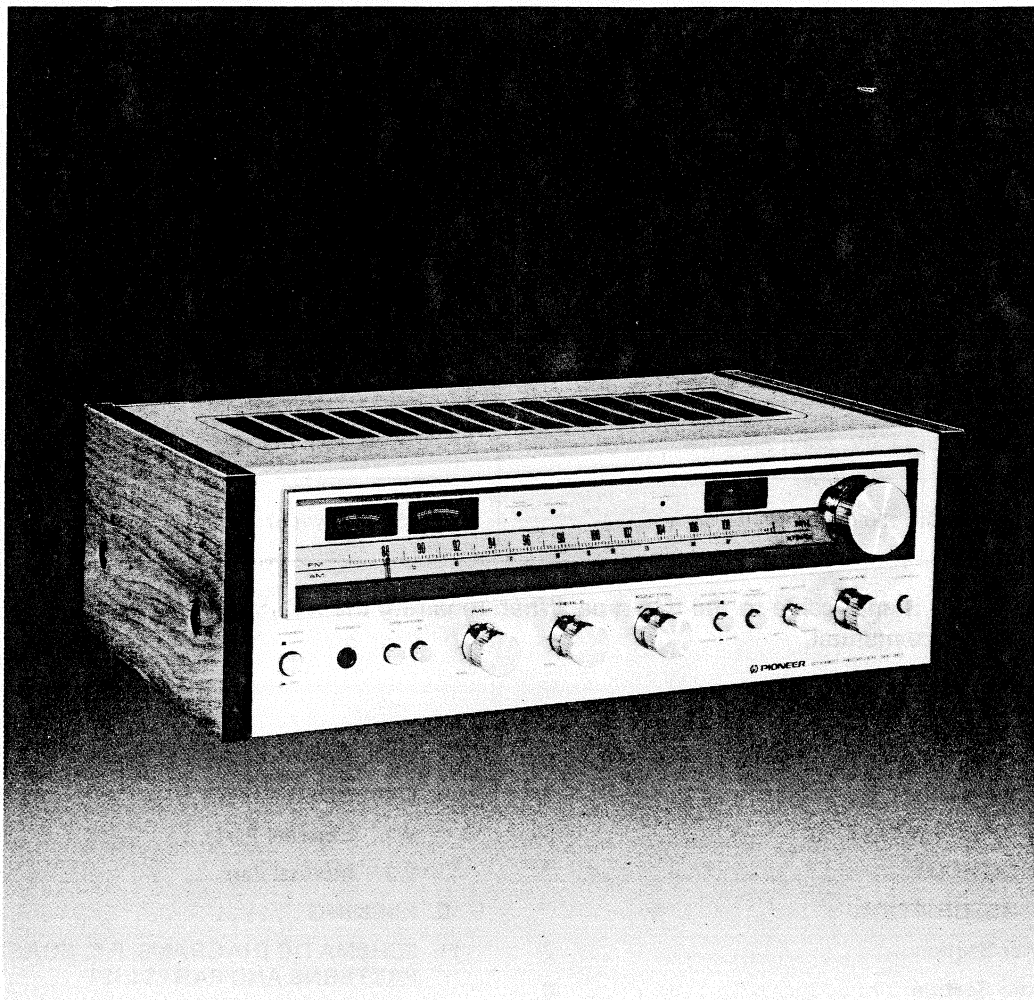

Service Manual

AM/FM STEREO RECEIVER

SX-580

 **PIONEER®**

3451

MODEL SX-580 COMES IN FOUR VERSIONS DISTINGUISHED AS FOLLOWS:

Type	Voltage	Remarks
KU	120V only	U.S.A. model
KC	120V only	Canada model
S	110V, 120V, 220V, 240V (Switchable)	General export model
S/G	110V, 120V, 220V, 240V (Switchable)	U.S. military model

This service manual is applicable to the KU type. When repairing the KC, S, S/G types, please see the additional service manual.

CONTENTS

1. SPECIFICATIONS	3	9. EXPLODED VIEWS	
2. FRONT PANEL FACILITIES	5	9.1 External Part	16
3. BLOCK DIAGRAM	7	9.2 Internal Part	17
4. CIRCUIT DESCRIPTION		10. PACKING	20
4.1 Tuner Section	7	11. SCHEMATIC DIAGRAMS, P.C. BOARD PATTERNS AND PARTS LIST	
4.2 Audio Section	8	11.1 Miscellanea	20
5. DISASSEMBLY	9	11.2 Schematic Diagram	22
6. PARTS LOCATIONS		11.3 P.C. Board Connection Diagram	24
6.1 Front Panel View	10	11.4 Front-end (GWB-101)	27
6.2 Front View With Panel Removed	10	11.5 Terminal Assembly (GWX-181)	28
6.3 Top View	11	11.6 De-emphasis Assembly (GWX-180)	28
6.4 Rear Panel View	11	11.7 LED Assembly (GWX-177)	28
7. DIAL CORD STRINGING	12	11.8 Headphone Assembly (GWX-179)	28
8. ADJUSTMENTS		11.9 Fuse Assembly (GWX-178)	28
8.1 AM Tuner	13	11.10 Tuner and AF Assembly (GWM-113)	29
8.2 FM Tuner	14		

1. SPECIFICATIONS

Semiconductors	
FETs	3
ICs	5
Transistors	17
Diodes	29
Amplifier Section	
Continuous Power Output of 20 watts* per channel, min., at 8 ohms or 25 watts per channel at 4 ohms from 20 Hertz to 20,000 Hertz with no more than 0.3% total harmonic distortion.	
Total Harmonic Distortion (20 Hertz to 20,000Hertz, from AUX)	
continuous rated power output	No more than 0.3%
10 watts per channel power output, 8 ohms	No more than 0.1%
1 watt per channel power output, 8 ohms	No more than 0.08%
Intermodulation Distortion (50 Hertz: 7,000 Hertz = 4:1, from AUX)	
continuous rated power output	No more than 0.3%
10 watts per channel power output, 8 ohms	No more than 0.1%
1 watt per channel power output, 8 ohms	No more than 0.08%
Damping Factor (20 Hertz to 20,000 Hertz, 8 ohms)	
25	
Input Sensitivity/Impedance	
PHONO	2.5mV/50 kilohms
AUX	150mV/50 kilohms
TAPE PLAY	150mV/50 kilohms
PHONO Overload Level (1kHz, T.H.D.: 0.1%)	
150mV	
Output (Level/Impedance)	
TAPE REC	150mV
SPEAKERS	A, B, A+B
HEADPHONES	Low impedance
Frequency Response	
PHONO(RIAA Equalization)	30Hz to 15,000Hz ±0.5dB
AUX, TAPE PLAY	5Hz to 100,000Hz ±3dB
Tone Control	
BASS	+8dB, -8dB (100Hz)
TREBLE	+10dB, -10dB (10kHz)
Loudness Contour (Volume control set at -40dB position)	
+6dB (100Hz), +3dB (10kHz)	
Hum and Noise (IHF, short-circuited, A network, rated power)	
PHONO	73dB
AUX, TAPE PLAY	90dB

FM Section	
Usable Sensitivity	
MONO	10.8dBf (1.9µV)
50dB Quieting Sensitivity	
MONO	16.7dBf (3.8µV)
STEREO	36.7dBf (38µV)
Signal-to-Noise Ratio at 65dBf	
MONO	80dB
STEREO	70dB
Distortion at 65dBf	
100Hz	MONO 0.07%
	STEREO 0.15%
1kHz	MONO 0.07%
	STEREO 0.15%
6kHz	MONO 0.2%
	STEREO 0.25%
Frequency Response	
30Hz to 15,000Hz +0.2dB -1.0dB	
Capture Ratio	
1.0dB	
Selectivity	
60dB	
Spurious Response Ratio	
65dB	
Image Response Ratio	
65dB	
IF Response Ratio	
90dB	
AM Suppression Ratio	
50dB	
Muting Threshold	
19.2dBf (10µV)	
Stereo Separation	
40dB (1kHz), 30dB (30Hz~15kHz)	
Subcarrier Production Ratio	
50dB	
SCA Rejection Ratio	
65dB	
Antenna Input	
300 ohms balanced	
75 ohms unbalanced	

AM Section	
Sensitivity (IHF, ferrite antenna)	
300µV/m	
(IHF, ext. antenna)	
15µV	
Selectivity	
26dB	
Signal-to-Noise Ratio	
50dB	
Image Response Ratio	
40dB	
IF Response Ratio	
40dB	
Antenna	
Built-in ferrite loopstic antenna	

Miscellaneous	
Power Requirements	
120V, 60Hz	
Power Consumption	
80W (UL), 160VA (CSA)	
Dimensions	
435(W) x 144.5(H) x 314(D) mm	
17-1/8(W) x 5-5/8(H) x 12-3/8(D) in	
Weight	
Without package: 8.3kg (18lb 5oz)	
With package: 9.7kg (21lb 6oz)	

Furnished Parts

FM T-type antenna	1
Operating instructions	1

**Measured pursuant to Federal Trade Commission's Trade Regulation Rule on Power Output Claims for Amplifiers.*

NOTE:
Specifications and design subject to possible modification without notice due to improvements.

2. FRONT PANEL FACILITIES

POWER METERS

These meters allow you to read out the rated power level when speakers with a nominal impedance of 8 ohms are connected to the receiver's speaker terminals.

NOTE:
These values are related to the impedance of the speakers and they vary according to the frequency. In order to find out the exact output level, connect an 8-ohm dummy load instead of the speakers.

POWER SWITCH

Depress this button (in the ON position) to supply power to the receiver. There will be a short delay when it is set to ON, because the muting circuit has been actuated to suppress the unpleasant noise that is sometimes generated when the power is switched on and off.

PHONES JACK

Plug the headphones into this jack when you want to listen through your stereo headphones. Release both SPEAKERS buttons if you want to listen to the sound through your headphones only (This means that both buttons will be released).

SPEAKERS SWITCHES

Depress the button corresponding to the speakers connected to the SPEAKERS terminals (A or B) on the rear panel. You can depress both of these buttons to listen to sound from two pairs of speaker systems at the same time.

BASS AND TREBLE CONTROLS

Use these controls to adjust the bass and the treble. If you turn the BASS control to the right from its center position, you will be able to emphasize the sound in the low-frequency range. Conversely, turning this control left from the center position will attenuate the sound. You can use the TREBLE control to adjust the sound in the high-frequency range.

TAPE MONITOR INDICATOR

With the TAPE MONITOR switch set to ON, the TAPE MONITOR indicator lights up. This lamp indicates the receiver is monitoring or playing back the tape on the tape deck connected to the TAPE jacks.

SOURCE INDICATOR

With the TAPE MONITOR switch set to OFF, the SOURCE indicator lights up. This lamp indicates the receiver is playing the program source; AM broadcasting, FM broadcasting, record on the turntable, or another component connected to the AUX jacks.

DIAL POINTER

This pointer indicates the broadcasting stations.

STEREO INDICATOR

This indicator lights up when the receiver is tuned in to receive a stereo broadcast.

AM/FM TUNING METER

When tuning in to FM stations, position the meter pointer in the center of FM area for optimum reception. In the case of AM stations, tune for maximum meter deflection toward the right of the scale.

TUNING KNOB

Use this to tune in to broadcasting stations. Select the station and tune for optimum reception by observing the dial scale and the AM/FM tuning meter.

VOLUME CONTROL

Use this control to adjust the output level to the speakers and headphones. Turn it clockwise to increase the output level. No sound will be heard if you set it to MIN.

LOUDNESS SWITCH

Depress this button (ON position) when listening at a low volume. The frequency response of the human ear varies according to the listening volume, and setting this switch to the ON position compensates for hearing response by emphasizing the bass and treble.

BALANCE CONTROL

Use this control to balance the volume of the left and right channels. First, however, set the mode select switch (MODE/FM MUTE) to MONO. If the sound appears to be louder on the right, it means that the volume of the right channel is higher. Turn the BALANCE control to the left and adjust. Conversely, if the sound appears to be louder on the left, it means that the volume of the left channel is higher. Therefore, turn the BALANCE control to the right and adjust. After adjusting, return the mode select switch (MODE/FM MUTE) to STEREO.

TAPE MONITOR SWITCH

Depress this button with a tape deck which is connected to the TAPE jacks (REC and PLAY) when you want to monitor the playback or recording of a tape. When you depress this button the TAPE MONITOR indicator will come on.

FUNCTION SWITCH

Use this switch to select the program source. For a second after the switch is selected, no sound will be heard. This is due to the operation of the muting circuit, which suppress the unpleasant switching noise generated when the FUNCTION switch is selected.


- AM: When listening to AM broadcasting.
- FM: When listening to FM broadcasting. The STEREO indicator lights up when the receiver is tuned in to an FM stereo broadcast.
- PHONO: When playing a record on the turntable connected to the PHONO jacks.
- AUX: When listening to an audio component connected to the AUX jacks.

MODE/FM MUTING SWITCH


This switch is a combination of the FM muting switch and the mode select switch. When the button is left undepressed (ON position) the reproduction is in STEREO mode, while the FM muting function acts to suppress unpleasant interstation noise while tuning between FM stations when listening to FM broadcasting. When the button is depressed (OFF position), however, reproduction is in MONO mode, while the FM muting function does not act, thus enabling suitable reception of weak radio stations when tuning in to the FM broadcasting station.

NOTE:
Recording stereophonically with the mode select switch (MODE/FM MUTE) in the MONO position may cause deterioration in channel separation.

NOTE:
Release this button (OFF position) when listening to a record or a broadcast. The SOURCE indicator lights up at this time.

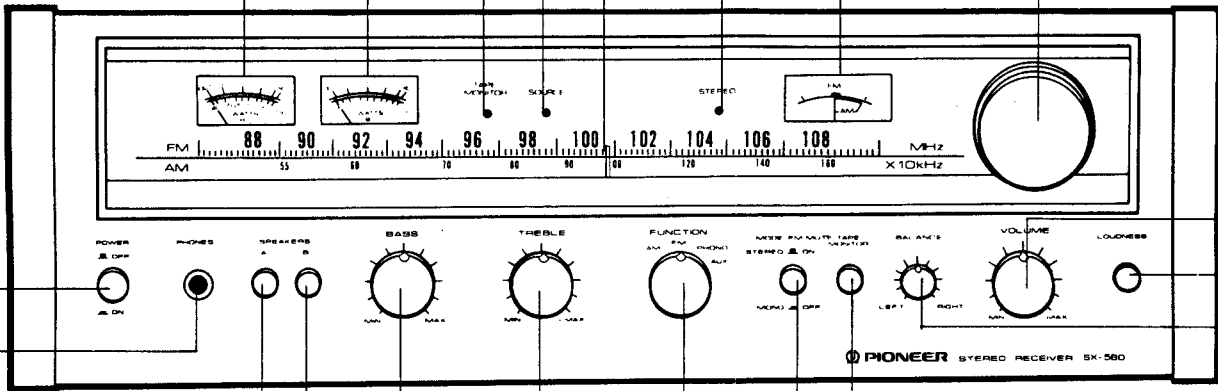

3. BLOCK DIAGRAM

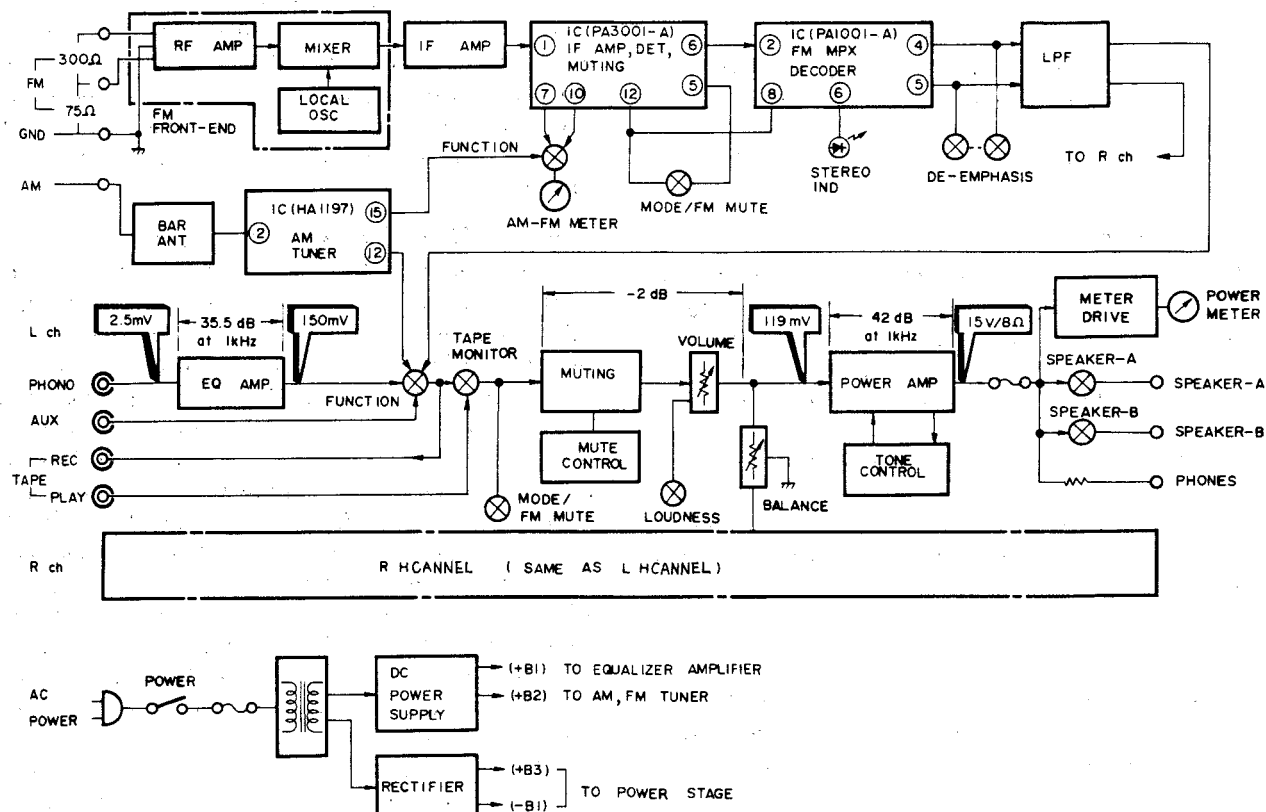

4. CIRCUIT DESCRIPTION

4.1 TUNER SECTION

AM Tuner

The AM tuner stage consists of a 2-ganged tuning capacitor, an IC (HA1197) and a ceramic filter. See page 21 for details of the internal structure of HA1197 which contains a 1-stage RF amplifier, converter, 2-stage IF amplifier, detector, and AGC circuit.

FM Front-end

The FM front-end consists of a 3-ganged tuning capacitor, a dual-gate MOS FET equipped 1-stage RF amplifier, a local oscillator and a mixer. The output of the local oscillator (a modified Clapp circuit employing a single transistor) is applied to the base of the mixer transistor.

IF Amplifier and Detector

This stage is made up of one IC, one transistor, are two dual-element ceramic filters. The NPN transistor inserted between the filters is employed for IF amplifier impedance matching purposes. The IC (PA3001-A) in the following stage incorporates

IF amplifiers, quadrature detector, meter drive and FM muting circuit, etc. See the block diagram on page 21 for the internal structure of this IC.

Multiplex Decoder

The sub-carrier generator (PLL system), NFB demodulator, automatic pilot canceller, and stereo/mono automatic switch are also built from an IC (PA1001-A). With the addition of a few CR elements, a multiplex decoder of high SN ratio and low distortion has been achieved (Again, refer to page 21 for further details of this IC). A major feature of the PA1001-A is the automatic pilot canceller. This circuit detects the level of the 19kHz pilot signal, and automatically adjusts to that level to cancel out the pilot signal completely. This has made the designing of the low-pass filter in the following stage very much easier, and has further extended the frequency response at the high end.

The output signal from the multiplex decoder is passed on via the de-emphasis circuit and AF amplifier (which serves as both low-pass filter and crosstalk canceller) to the FUNCTION switch.

4.2 AUDIO SECTION

Equalizer Amplifier

The phono equalizer amplifier is a collector-to-emitter feedback-type 2-stage direct-coupled amplifier, designed with a gain of 35.5dB (1kHz), a phono overload level of 150mV (1kHz, THD 0.1%), and equalizer deviation of ± 0.5 dB (30Hz–15kHz).

Power Amplifier

The power amplifier, which includes a hybrid IC (STK-0029) in the power stage, is a first-stage differential amplifier all-stage direct-coupled OCL circuit. This IC features an inverted Darlington connection quasi-complementary circuit power stage integrated with the bias circuit. The output power obtainable with an 8-ohm load is 20 watts (20–20,000Hz, THD 0.3%).

The tone controls (BASS, TREBLE) are operated by changing the frequency response of the power amplifier NFB circuit.

Output Meter Drive Circuit

Fundamentally, this circuit is the same as those employed in the SA-7700 and the SA-6700. A wide meter range is obtained by compressing the dynamic range of the output signal by taking advantage of the initial portion of the diode $V_F - I_F$ relation.

Audio Muting Circuit

The FET gate circuit connected to the input of the power amplifier stage serves as a muting circuit which eliminates unwanted switching noises when the power supply is turned on and off and when the FUNCTION selector is used. The circuitry involved and the voltage changes at different points are shown in Figs. 1 & 2.

• When the power supply is turned ON

Since $-B_2$ is applied to the base of Q_2 very quickly, this transistor will remain off when the power supply is first turned on. And, since the $-B_1$ level is established more rapidly than the $+B_2$ level, the potential at point A will initially be lowered to the $-B_1$ level, thereby keeping the FET switched off, and preventing the application of any signal to the input of the power amplifier stage (i.e. the signals are muted during this period).

As the $+B_2$ level is gradually established, the potential of point A will also increase in response, resulting in the FET being turned on some 6 seconds later to terminate the muted condition.

• When the power supply is turned OFF

The $-B_2$ voltage level diminishes relatively rapidly, and Q_2 is turned on by the forward biasing (because $-B_1$ diminishes rather slowly). Consequently, the potential at point A is reduced to $-B_1$, and the FET is turned off. This muting status is achieved within 0.1 second after the power supply is turned off.

• When FUNCTION selector is operated

When the FUNCTION selector switch is at any of the selector positions, Q_1 will remain off due to $+B_1$ being applied to its base via the FUNCTION switch. But since this is a non-shorting type selector switch, the $+B_1$ being applied to the base of Q_1 will be interrupted whenever the position of the selector switch is changed. Both Q_1 and Q_2 will thus be turned on temporarily. As a result, the potential at point A will be reduced to $-B_1$, followed by the FET being turned off and the power amplifier stage being muted. However, once the FUNCTION selector switch has been completely switched to the next position, $+B_1$ will again be applied to the base of Q_1 , resulting in Q_1 and Q_2 being turned back off. The potential at point A will consequently increase (at a speed determined by the R_1, C_1 time constant) until the FET is turned on, and the muting condition terminated.

Note that when the TAPE MONITOR switch is ON, Q_1 will be disconnected from Q_2 , so the power amplifier stage will no longer be muted when the FUNCTION selector is operated.

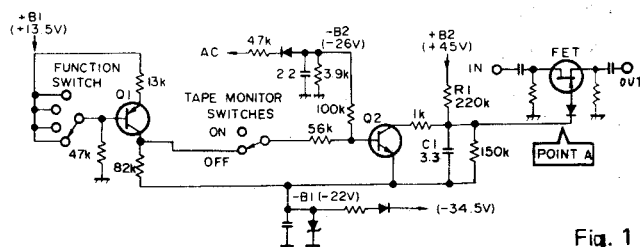


Fig. 1

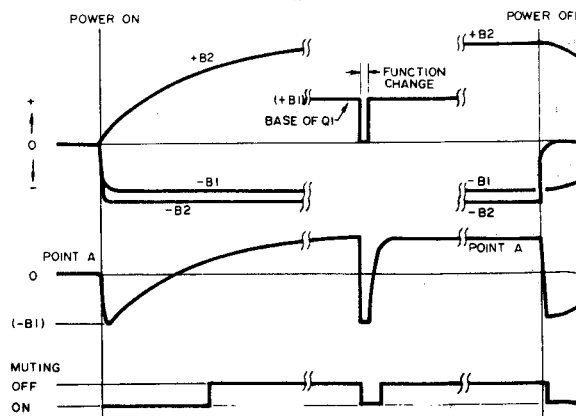


Fig. 2

5. DISASSEMBLY

Wooden Cover

Remove the 4 screws (1-4).

Bottom Plate

Remove the 10 screws (5-14).

Front Panel

Pull off all the knobs, and remove the 2 screws (15, 16) and 2 nuts (17, 18).


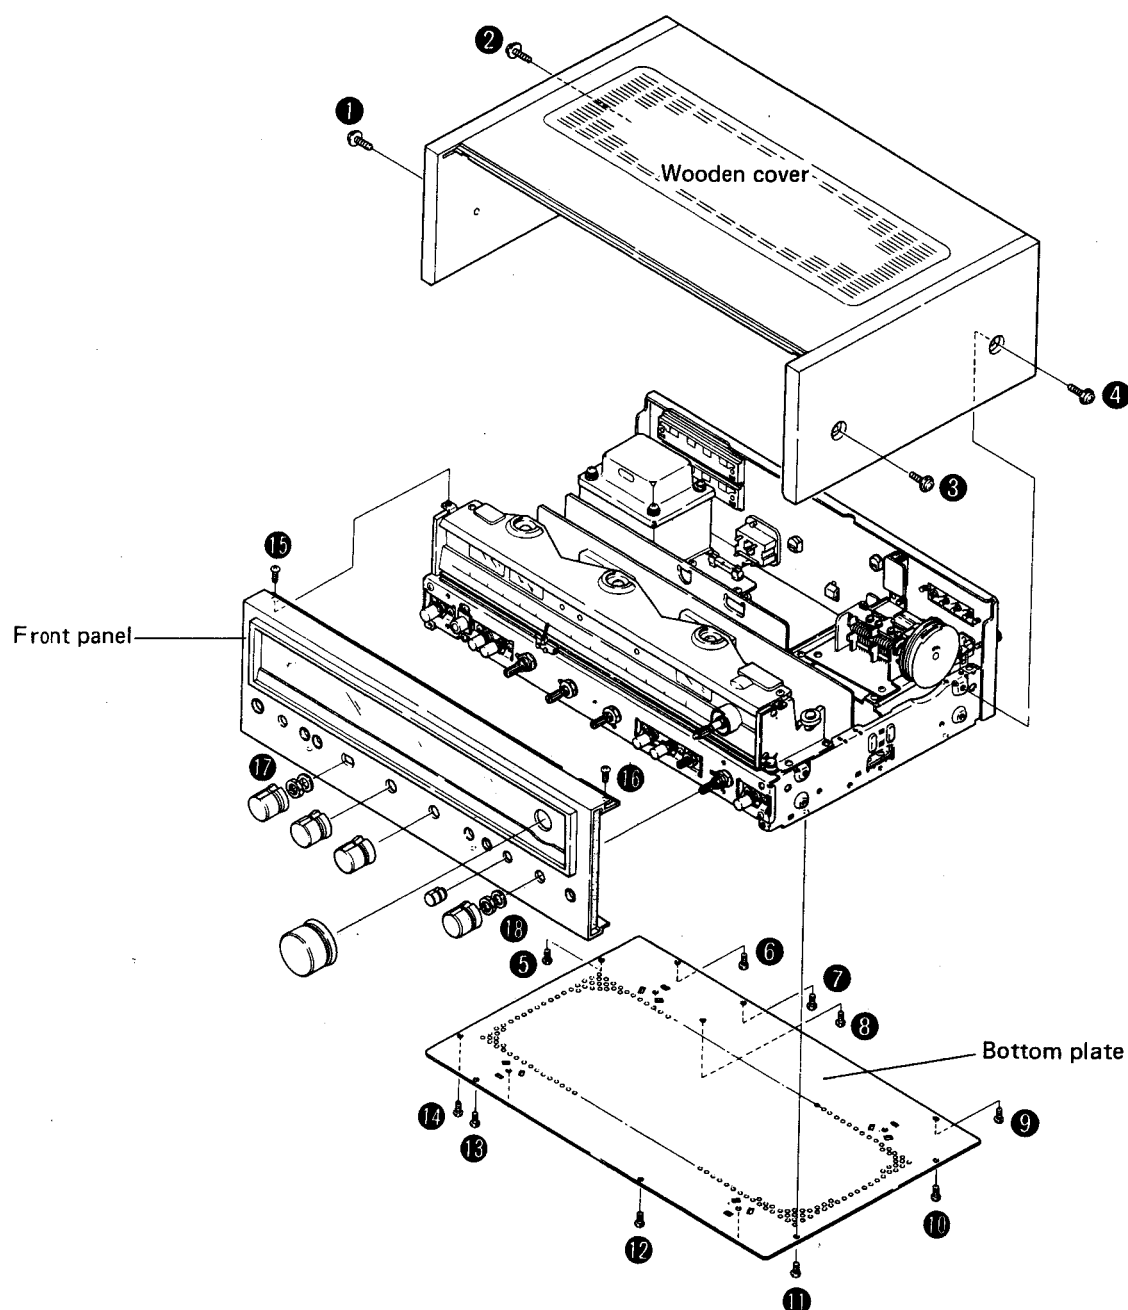



Fig. 3

6. PARTS LOCATIONS

6.1 FRONT PANEL VIEW

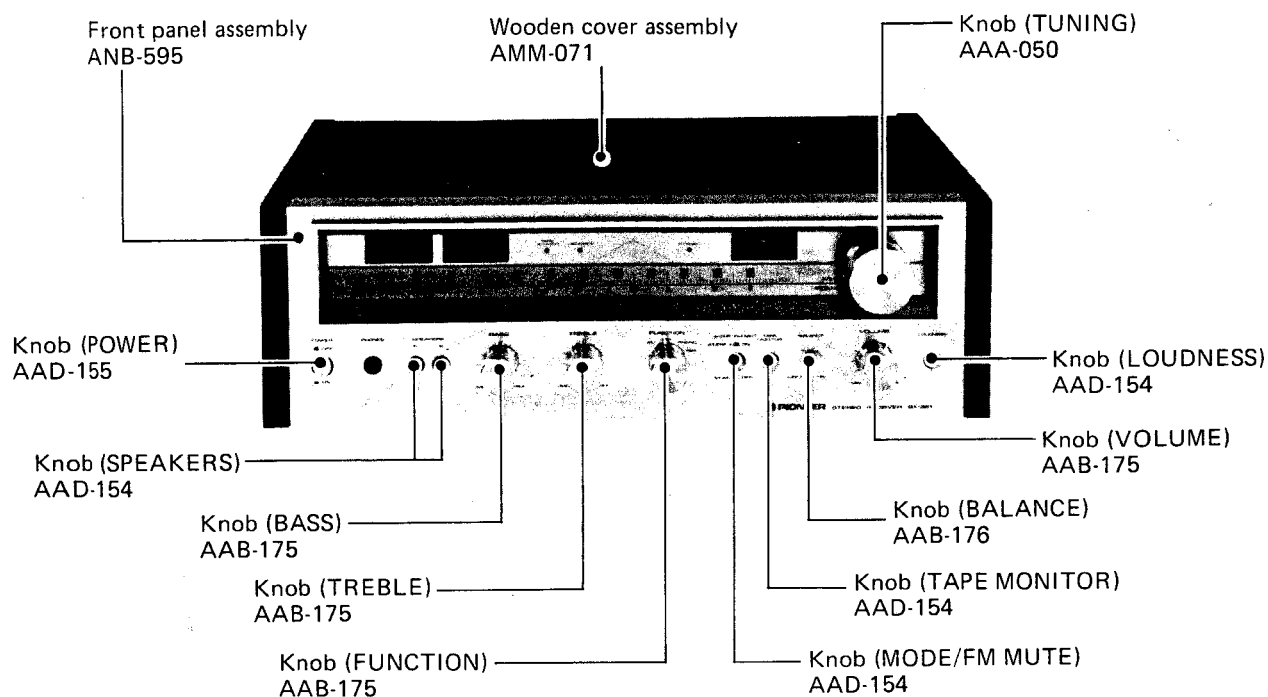

6.2 FRONT VIEW WITH PANEL REMOVED

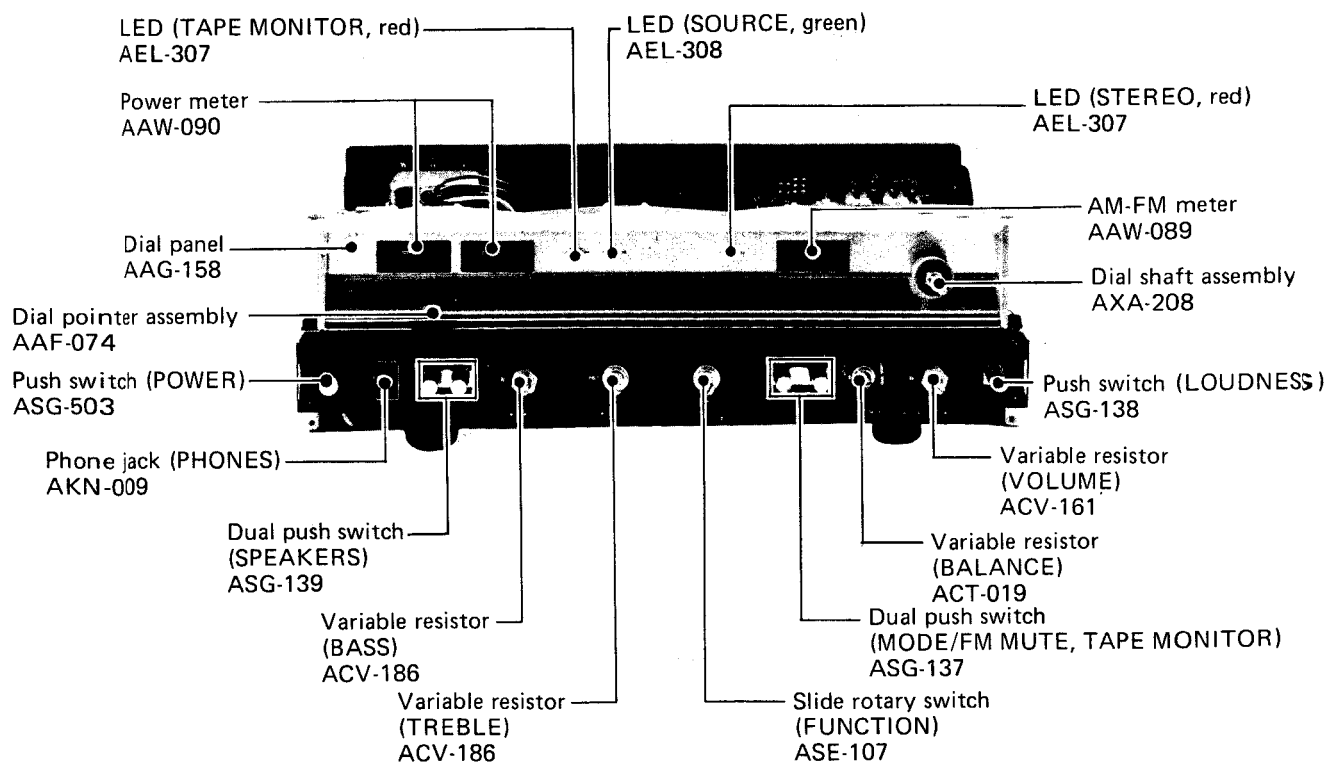

5. DISASSEMBLY

Wooden Cover

Remove the 4 screws (1-4).

Bottom Plate

Remove the 10 screws (5-14).

Front Panel

Pull off all the knobs, and remove the 2 screws (15, 16) and 2 nuts (17, 18).


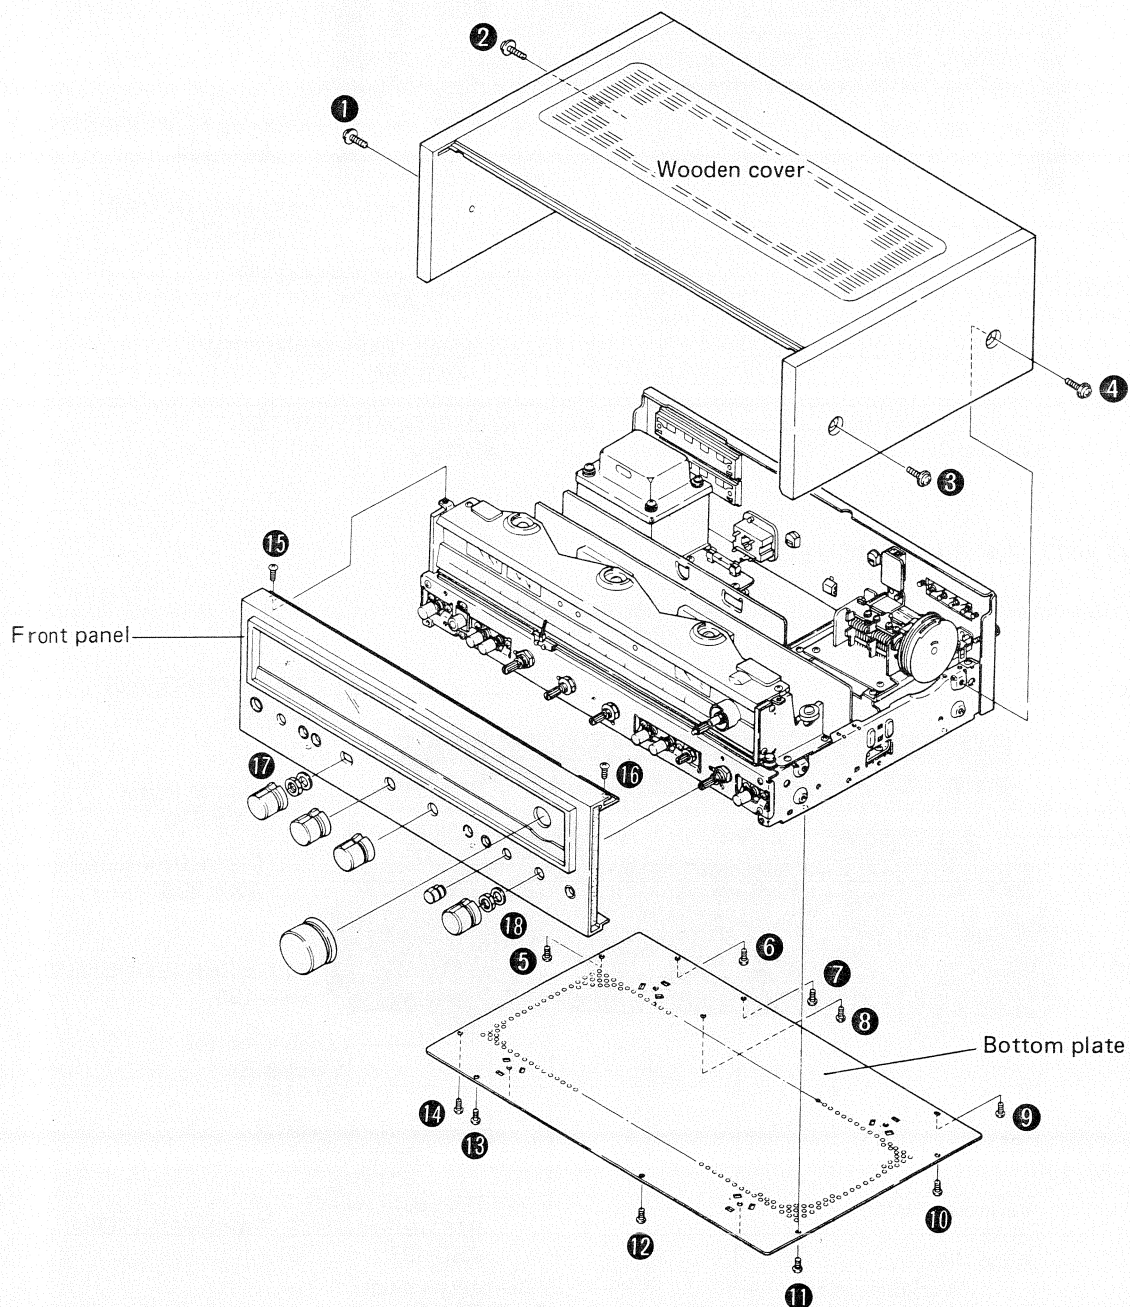



Fig. 3

6. PARTS LOCATIONS


6.1 FRONT PANEL VIEW

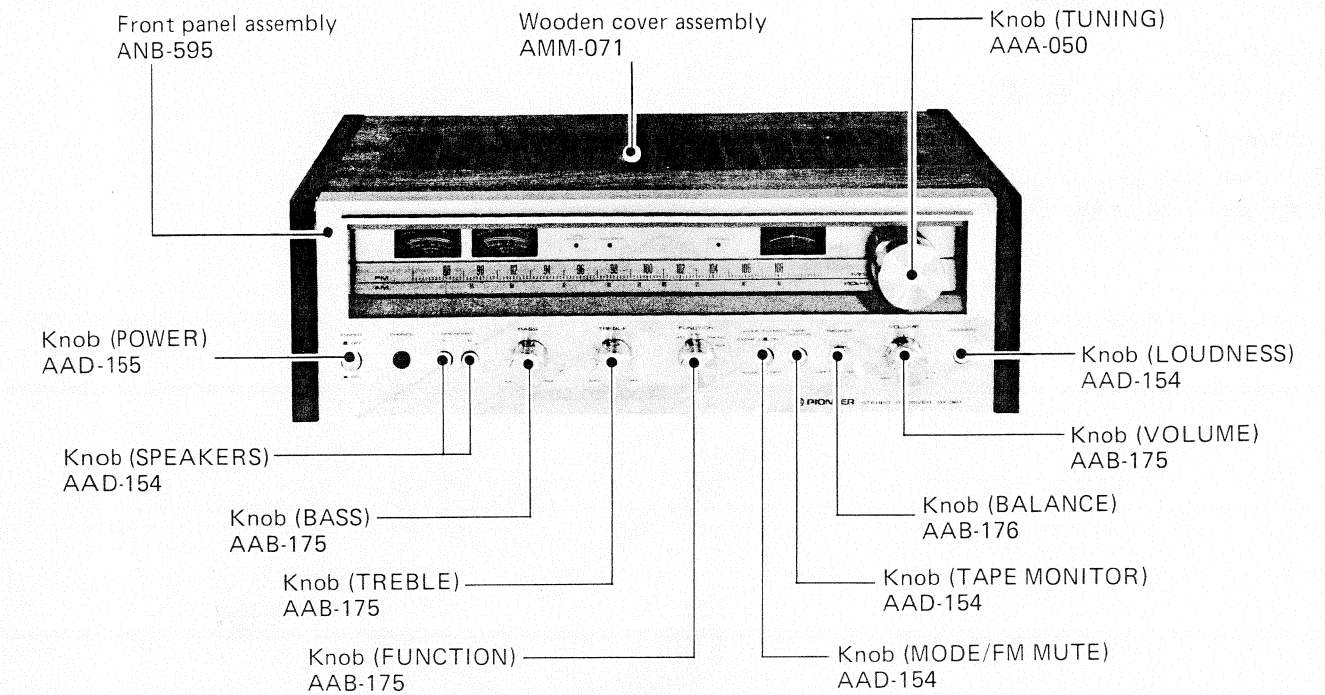


6.2 FRONT VIEW WITH PANEL REMOVED

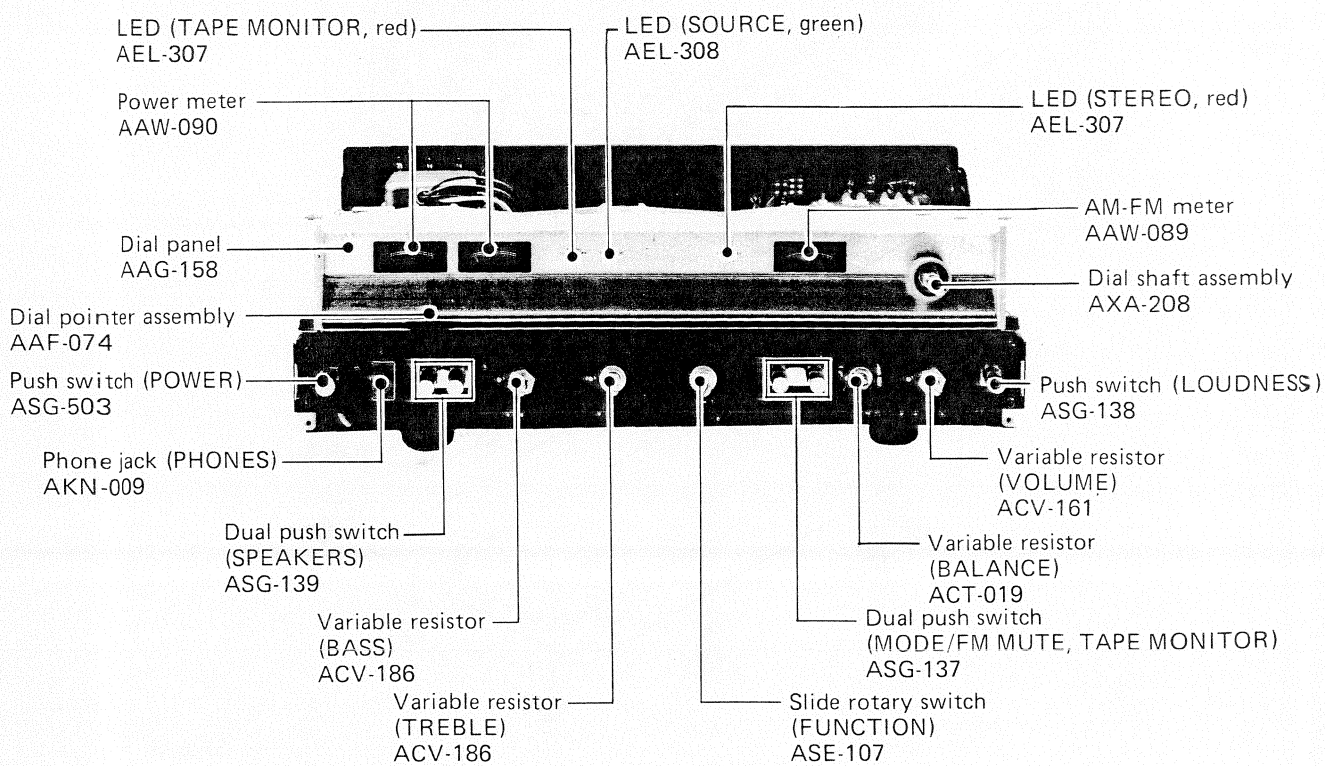

6.3 TOP VIEW

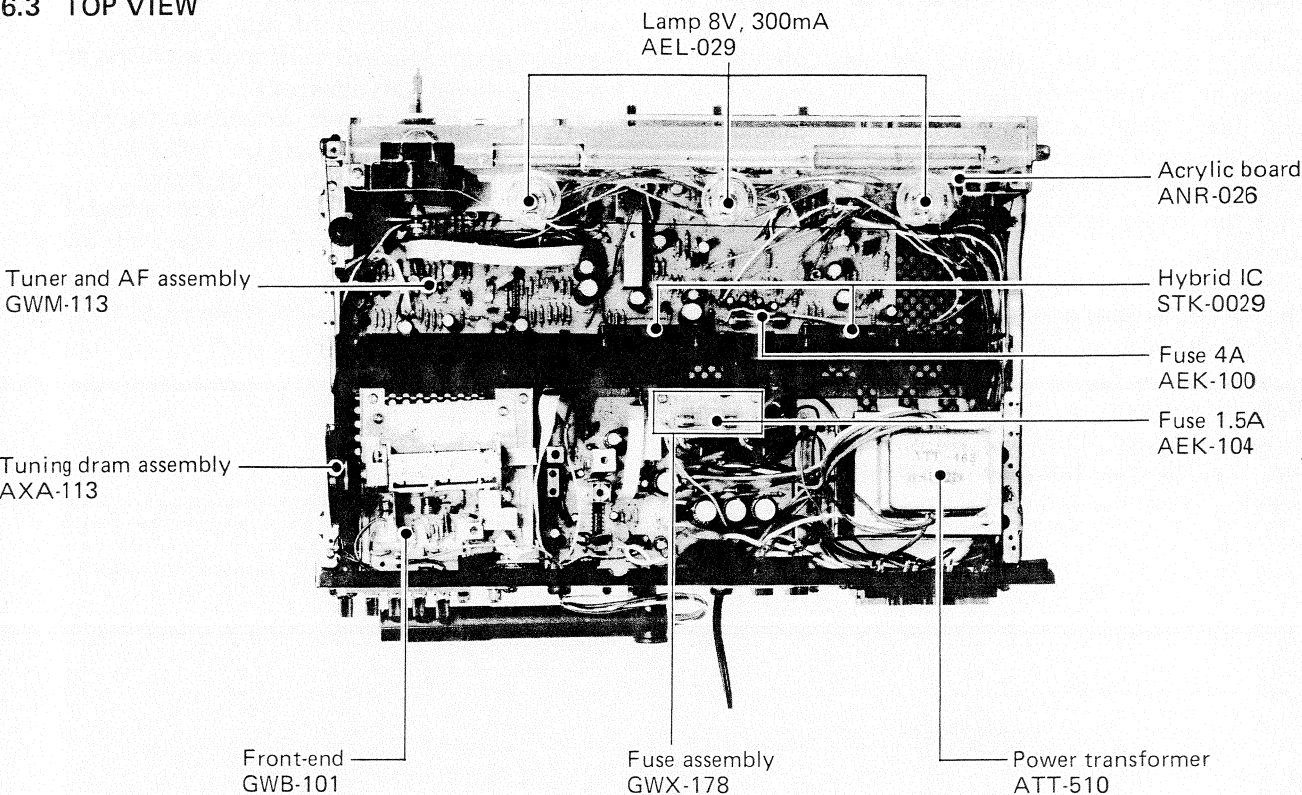

6.4 REAR PANEL VIEW

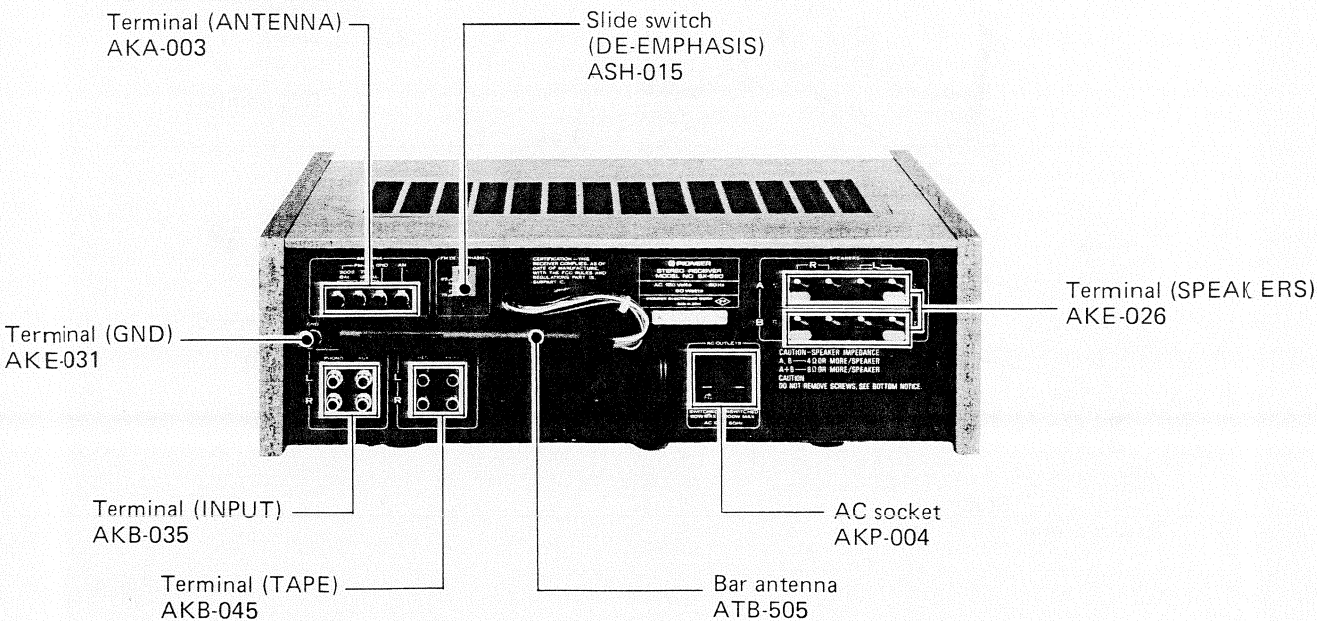

7. DIAL CORD STRINGING

1. Remove front panel (See page 9).
2. Remove the tuning drum from the tuning capacitor shaft.
3. Tie one end of the string to the stud on the inside of the tuning drum.
4. Set the tuning capacitor to its maximum capacity (with the vanes fully meshed).
5. Attach the tuning drum to the tuning shaft so that the fixing screw head is pointing exactly upwards.
6. Draw the string out through the gap cut in the tuning drum, and after passing it half-way round the drum, thread it successively over the pulleys A, B, C.
7. Pass the string over pulley D after having wound it three times around the tuning shaft (in a clockwise direction as viewed from the rear).
8. Tie the other end of the string to the hook on the spring, so that the string is tensioned, after passing it twice around the tuning drum. Set the tuning capacitor to its maximum capacity (with the vanes fully meshed).
9. Attach the dial pointer to the string at the start point (at the extreme left-hand dial scale), and secure it firmly to the string.
10. Check that when the tuning shaft is turned, the dial pointer, tuning capacitor, etc., all move smoothly.
11. Paint-lock the knots on the string, and cut off the excess after painting.

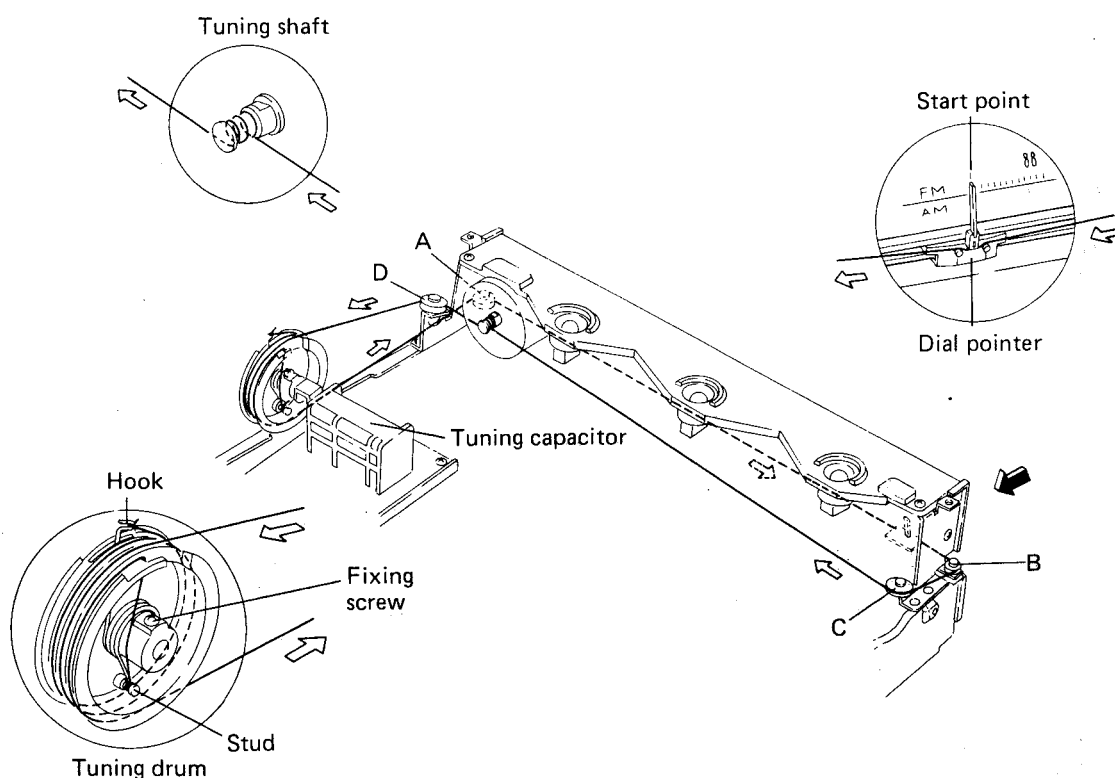


Fig. 4

8. ADJUSTMENTS

8.1 AM TUNER

1. Connect up the test instruments as shown in Fig. 5.
2. Set the FUNCTION switch to AM.
3. Set AM Signal Generator (AM SG) for 400Hz 30% modulation 100dB output.
4. Set the SX-580 dial indication and AM SG frequency for 600kHz.
5. Adjust T_3 core for maximum reading on AC voltmeter.
6. Set the SX-580 dial indication and AM SG frequency for 1400kHz.
7. Adjust TC_4 for maximum reading on AC voltmeter.
8. Set AM SG for 30dB output.
9. Set the SX-580 dial indication and AM SG frequency for 600kHz.
10. Adjust T_3 and bar antenna core for maximum reading on AC voltmeter.
11. Set the SX-580 dial indication and AM SG frequency for 1,400kHz.
12. Adjust TC_5 and TC_4 for maximum reading on AC voltmeter.
13. Repeat steps 9 to 12, alternately until adjustment at the one frequency requires no further re-adjustment at the other frequency.
14. Adjust F_4 core for give the maximum reading on the AC voltmeter.

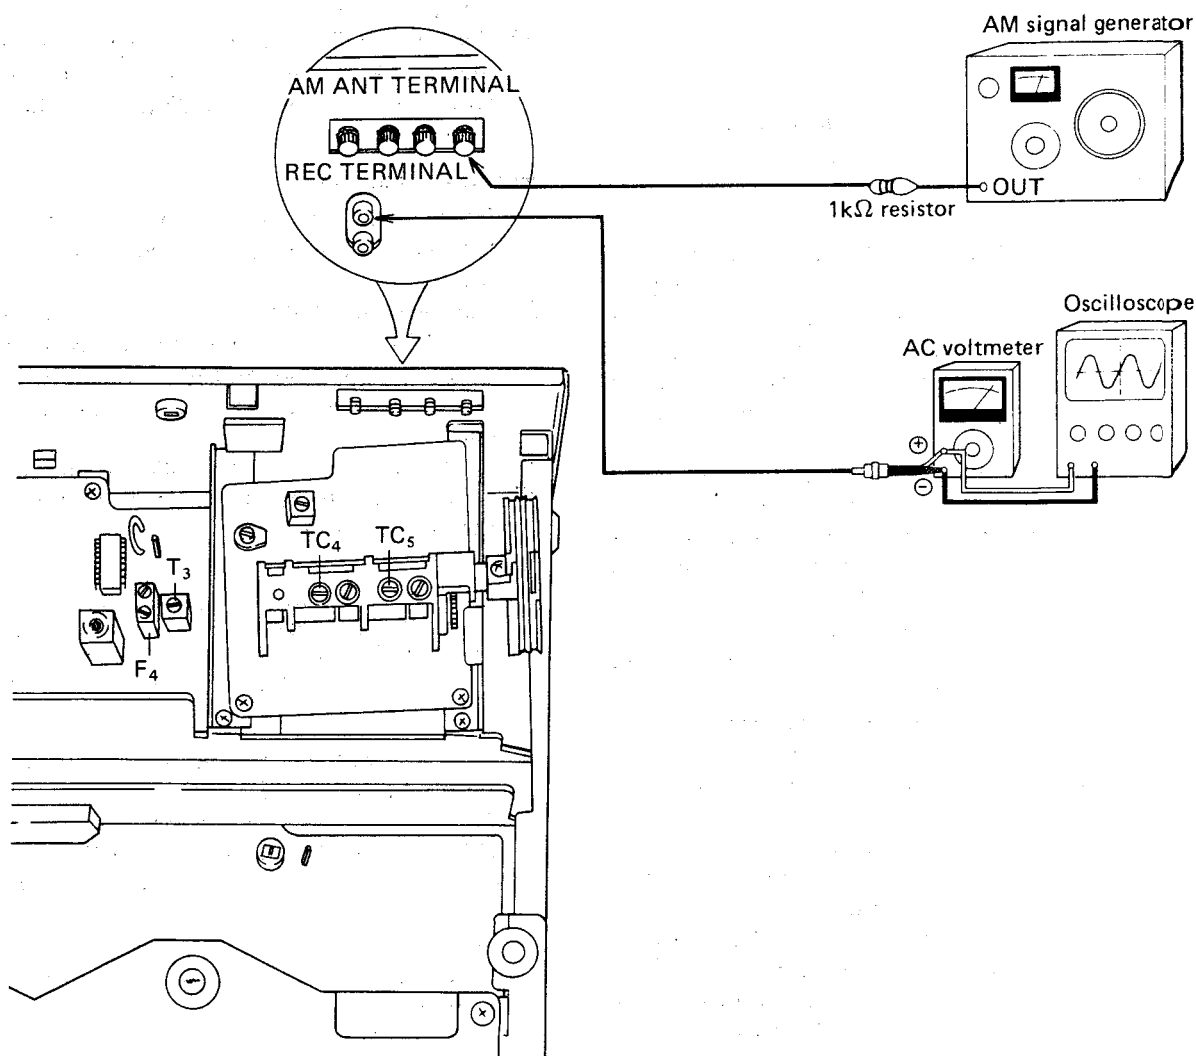


Fig. 5

8.2 FM TUNER

The tuning coil in the FM front end does not have an adjusting core. Consequently, tracking adjustments at 90MHz are performed by regulating the gap between rotor and stator of the tuning capacitors (VC_1 , VC_2 , VC_3). The expression adjust VC_1 , (VC_2 , VC_3) found in the text means that the two outer rotor blades of each of these tuning capacitors are to be extended outwards with spatula (Part No. G GK-066) as shown in Fig. 6.

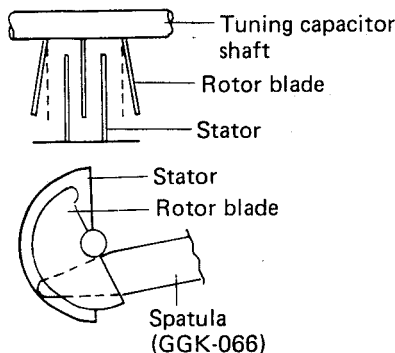


Fig. 6 Adjustment of Tuning Capacitor

1. Connect up the test instruments as shown in Fig. 7.
2. Set the FUNCTION switch to FM.
3. Turn the MODE/FM MUTE switch to OFF.
4. Set the dial pointer of the SX-580 to 106MHz.
5. Set the FM Signal Generator (FM SG) output to 106MHz at 106dB, with 100% modulation (75kHz deviation) for 400Hz. This modulation setting should be used for all the following adjustments.
6. Adjust TC_3 to give the maximum reading on the multitester (with DC 200 μ A range).
7. Adjust the primary (lower) core of T_2 so that the AM-FM meter (the FM tuning meter) indicator needle reads dead center.
8. Set the FM SG output to 15dB.
9. Adjust TC_1 and TC_2 to give the maximum reading on the multitester.
10. Set the SX-580 dial pointer to 90MHz.
11. Set the FM SG output to 90MHz at 106dB.
12. Adjust VC_3 for maximum reading on the multitester.
13. Set the FM SG output to 15dB.
14. Adjust VC_1 and VC_2 so that the multitester reading reaches a maximum.
15. Repeat the adjustments of VC_3 , VC_1 and VC_2 when the dial pointer is at 90MHz, and of TC_3 , TC_1 and TC_2 when the dial pointer is at 106MHz, alternately until adjustment at the one frequency requires no further re-adjustment at the other frequency.

16. Adjust the core of T_1 to give the maximum reading on the multitester.
17. De-tune the SX-580 (to a position at which only inter-station noise is heard), and adjust the primary (lower) core of T_2 so that the AM-FM meter indicator needle reads at dead center.
18. Set the FM SG output to 98MHz at 66dB.
19. Tune the SX-580 to a dial reading of 98MHz observe that the AM-FM meter is reading correctly at the center of the meter scale.
20. Adjust the secondary (upper) core of T_2 to give a minimum level of distortion.
21. Repeat the steps detailed in section 17 to 20 for the adjustment of the primary and secondary cores of T_2 until both requirements are fully met.
22. Set the SX-580 dial indication and FM SG frequency for 98MHz.
23. Set the MODE/FM MUTE switch to the ON, and check the muting threshold. If the muting threshold is more than 28dB, cut the jumper lead A.

Multiplex Decoder

24. Connect a MPX Signal Generator (MPX SG) to the external modulator terminals of the FM SG.
25. Connect the 19kHz pilot output signal from the MPX SG to the X-plates (horizontal input) of an oscilloscope, and use a probe to connect the Y-plates (vertical input) to the TP_2 terminal.
26. Set the FM SG output to 66dB, unmodulated.
27. Adjust VR_1 to freeze motion of the resulting Lissajous' figure.

NOTE:

Lissajous' figure adopts the general form shown in Figure 8 due to the fact that the MPX SG 19kHz pilot signal output is a sine wave, and the TP_2 terminal carries a 76kHz saw tooth wave as determined by the adjustment of VR_1 .

28. Turn the FM SG modulation mode setting to external modulation.
29. Adjust the MPX SG modulation settings to 1kHz, L + R, 90% modulation (67.5kHz deviation), with 10% pilot modulation (7.5kHz deviation).
30. Adjust the core of T_1 for minimum distortion in the 1kHz demodulated output from L or R channel.

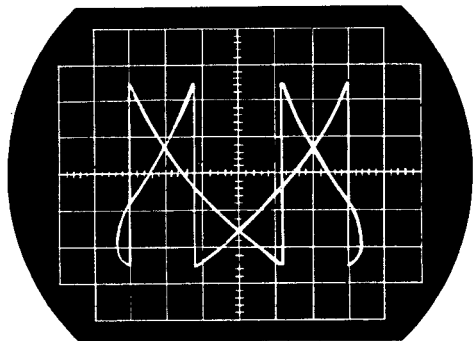
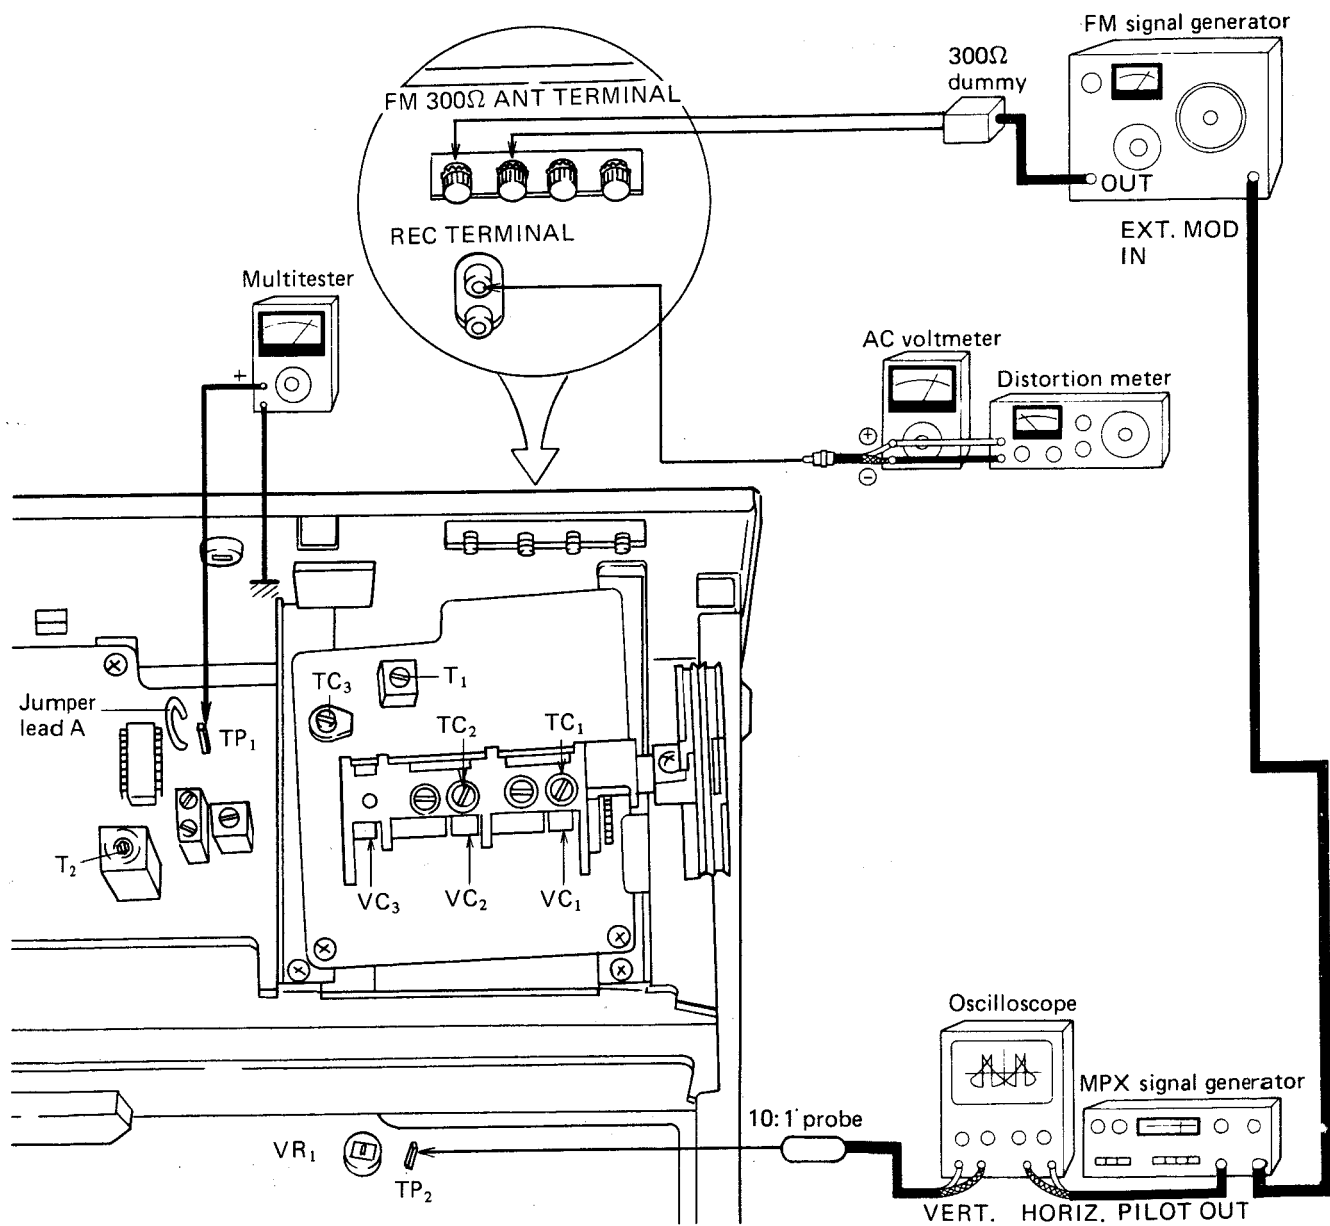


Fig. 8 Lissajous figure


Fig. 7

9. EXPLODED VIEWS

NOTE:

 marked parts cannot be supplied.


9.1 EXTERNAL PART

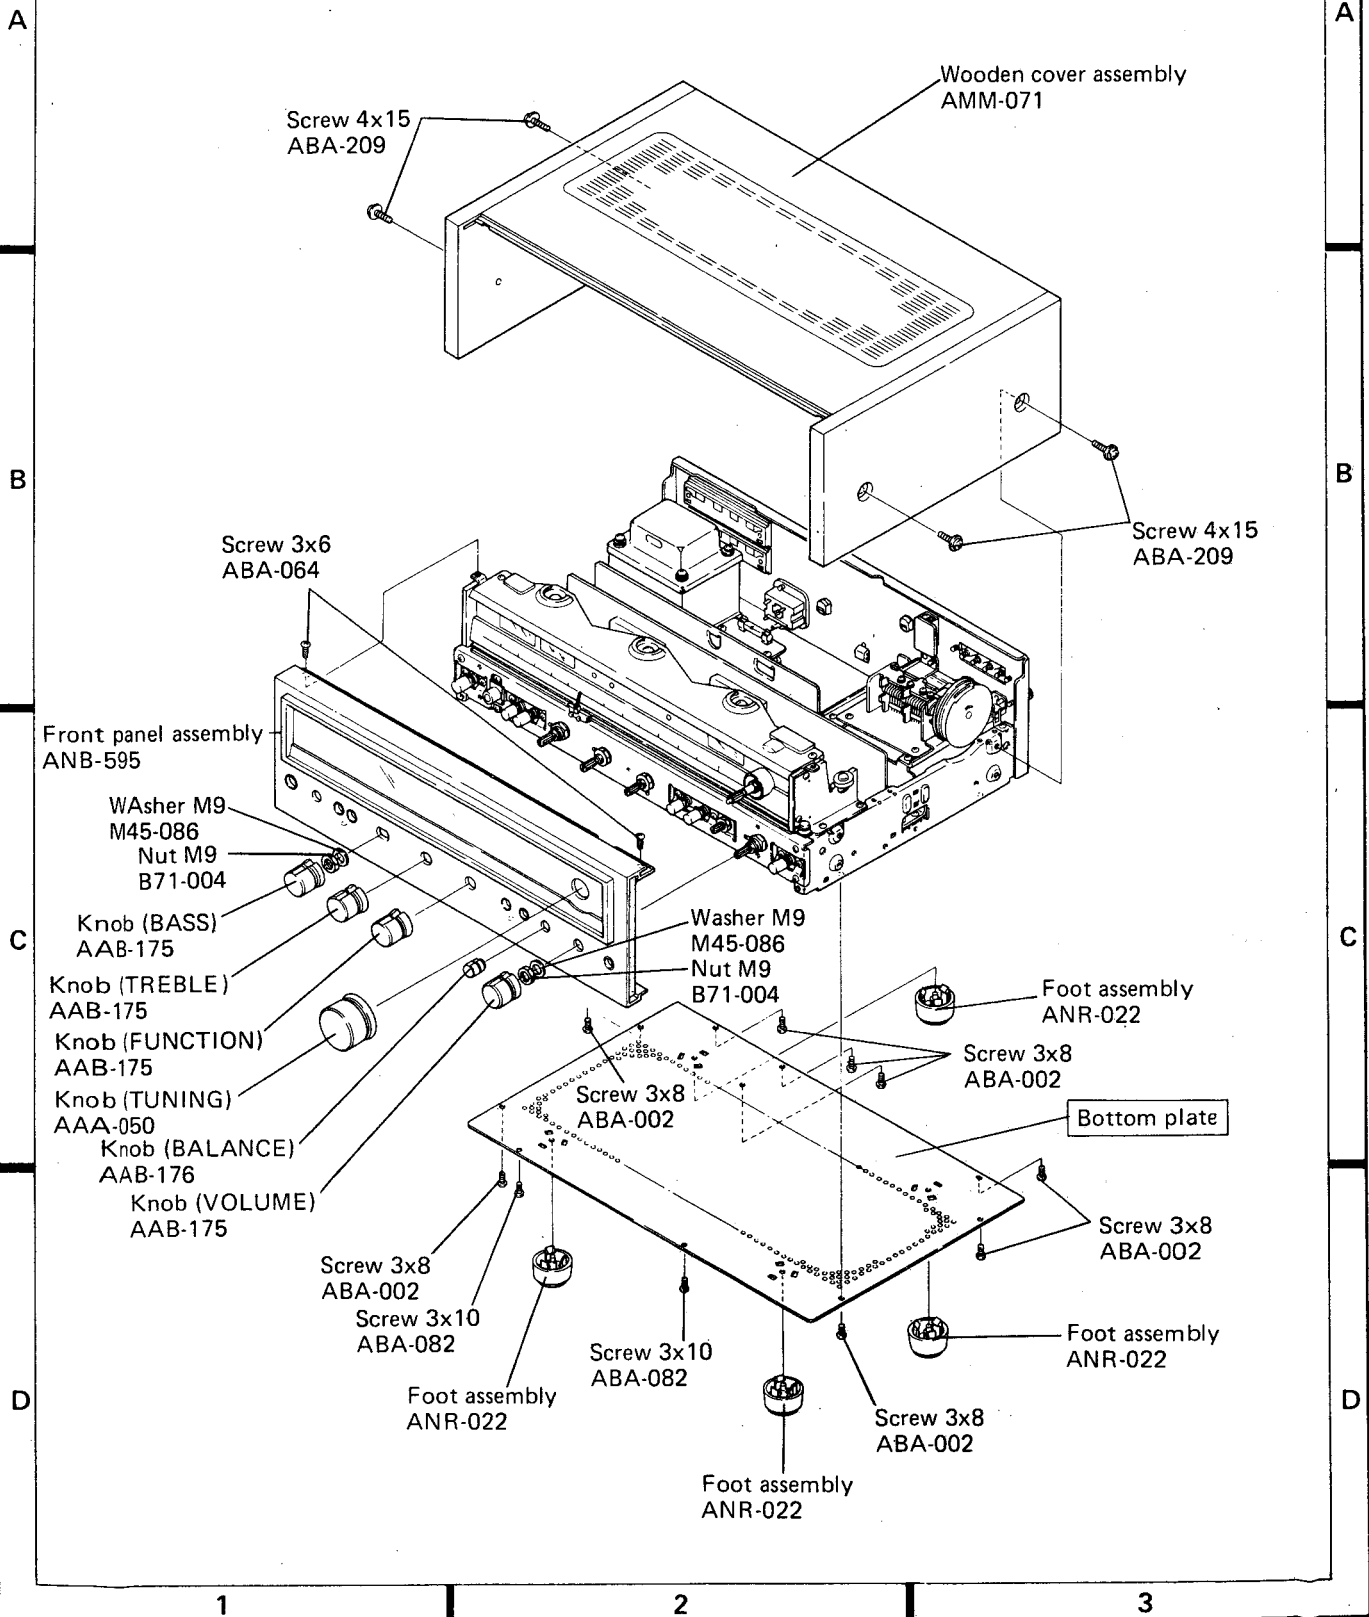

9.2 INTERNAL PART

NOTE:
 marked parts cannot be supplied.

See the next page.

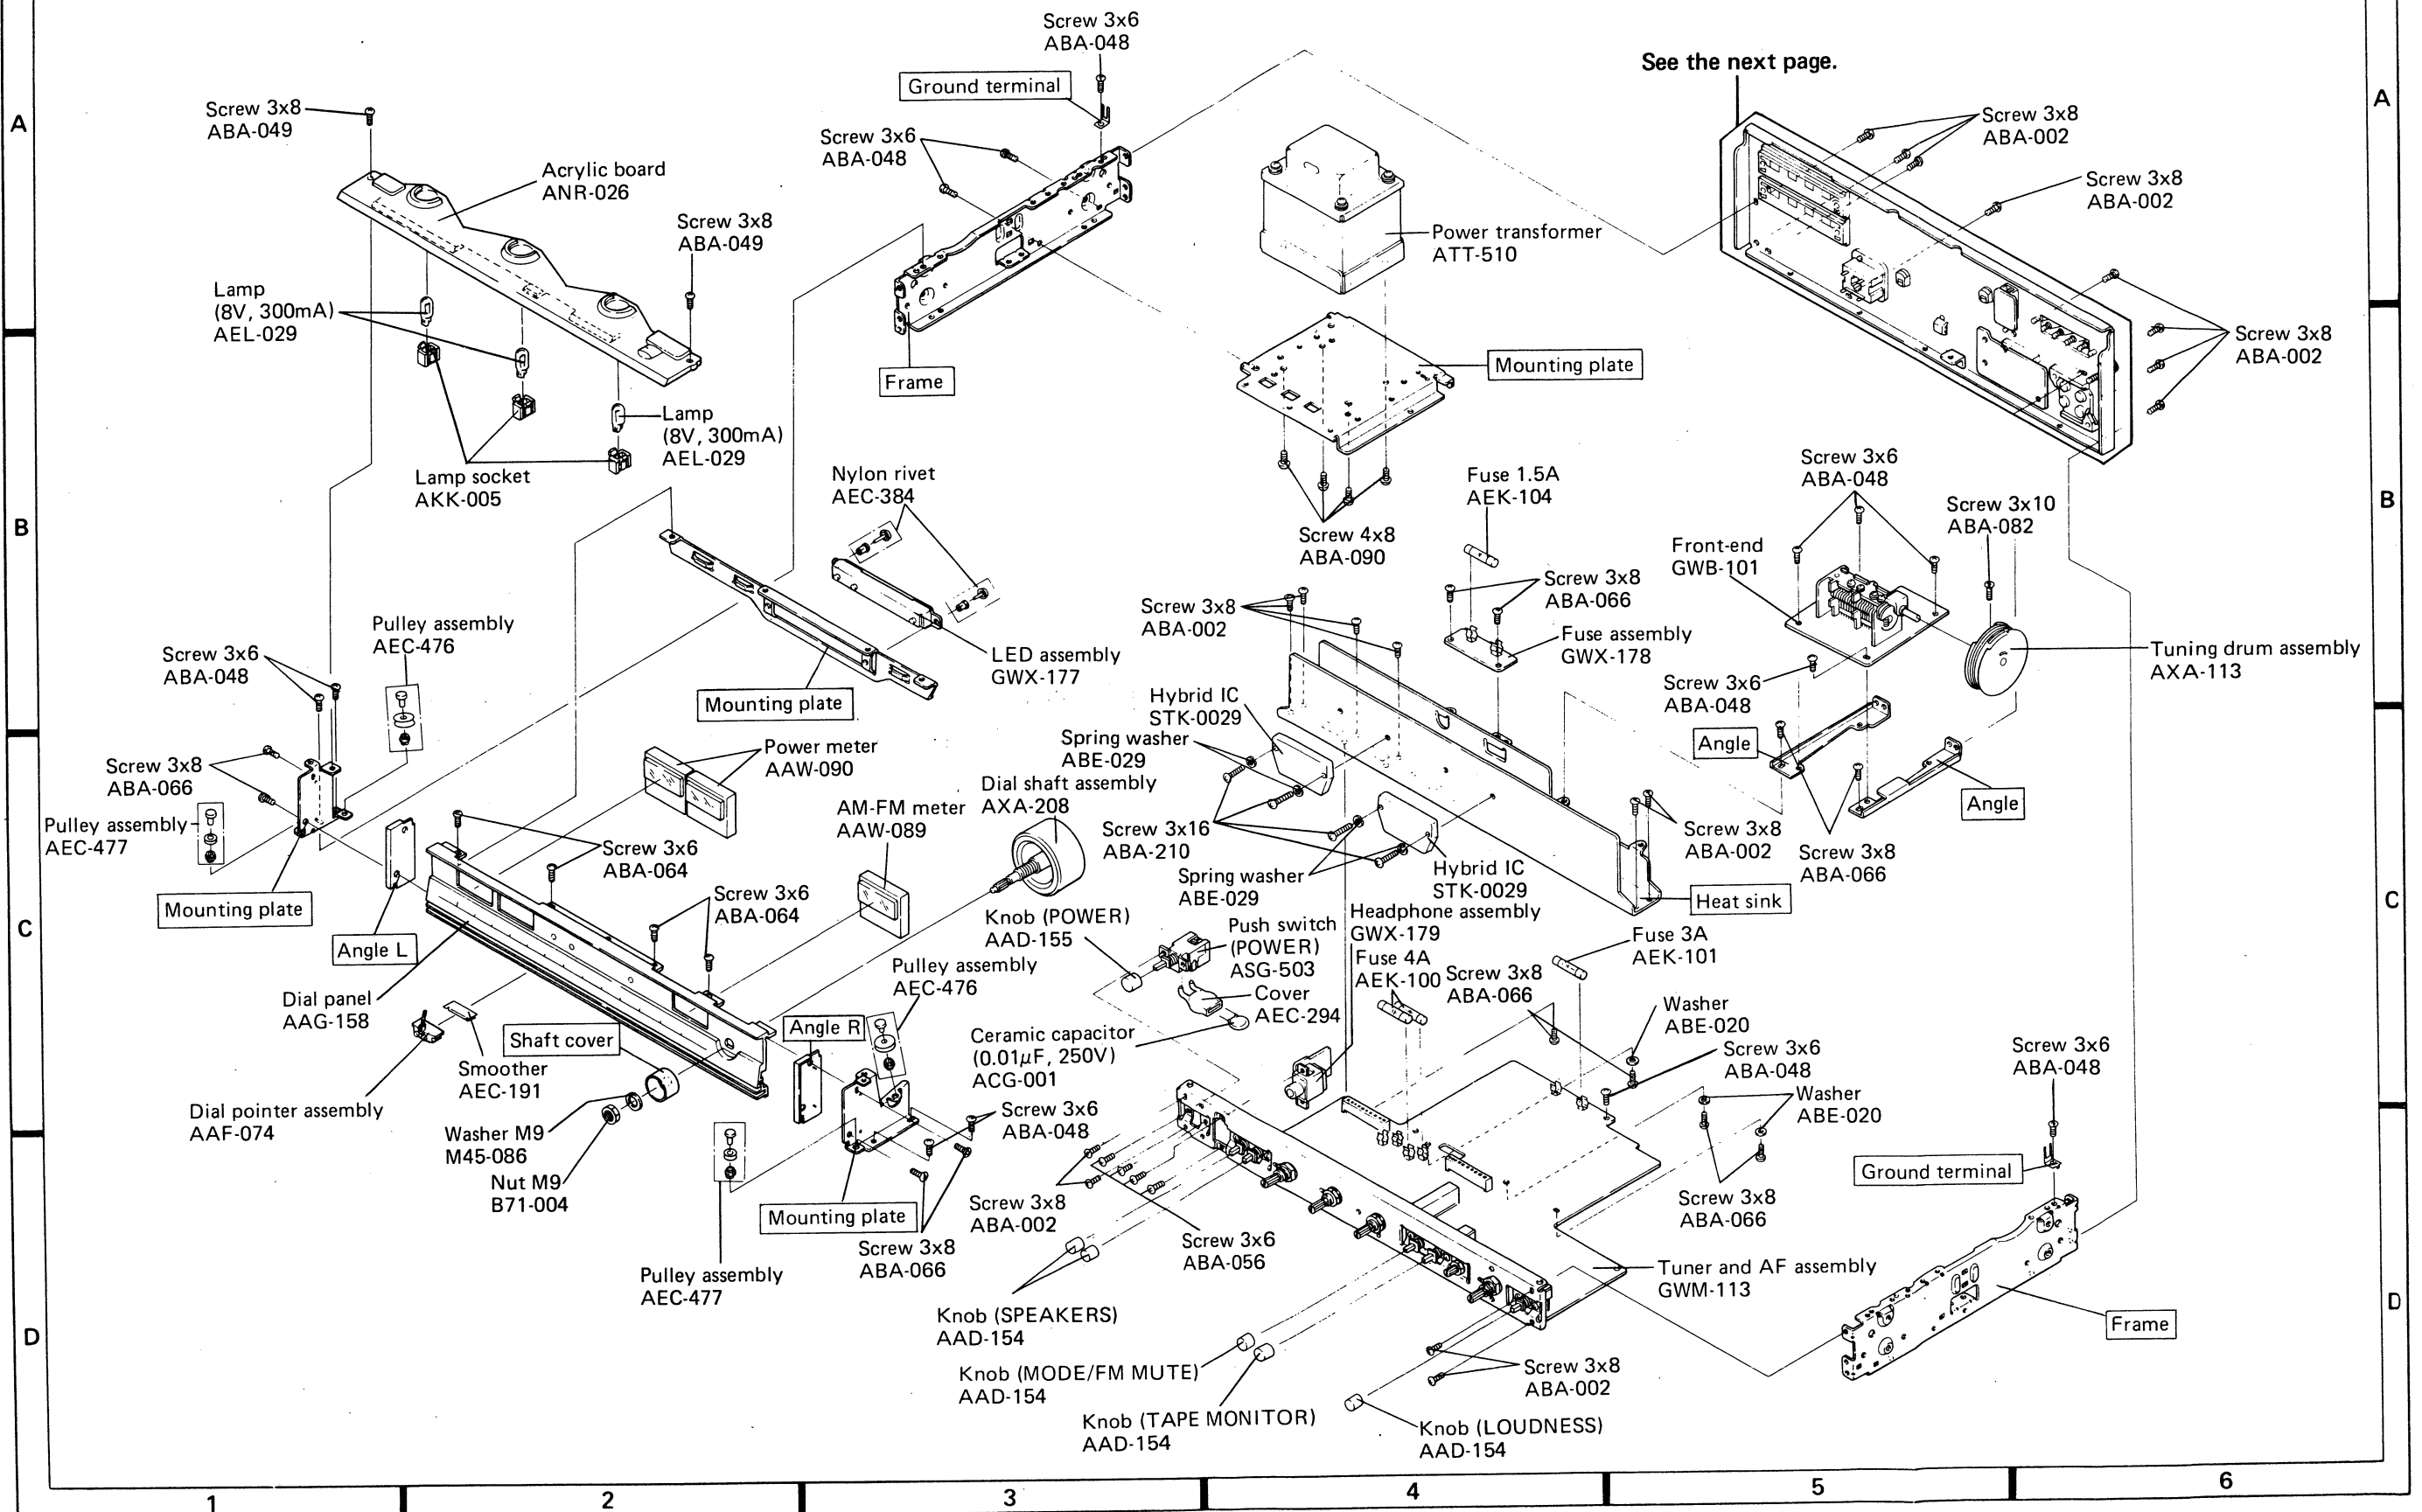

Part No.	Description
GWM-113	Tuner and AF assembly
GWX-179	Headphone assembly
GWX-180	De-emphasis assembly
GWB-101	Front-end
GWX-181	Terminal assembly

Part No.	Symbol & Description	
ATT-510	T1	Power transformer
ATB-505	T2	Bar antenna
ASG-503	S8	Push switch (POWER)

- List of changed parts information will be furnished whenever necessary and you are requested to amend parts number in this parts list.

Symbol	Part No.	Description

PA1001-A

COMP. SIG. AMP.

ST. AUTO

+Vcc 1 **IN** 2 **OUT** 3 **L out** 4 **R out** 5 **ST. IND.** 6 **GND** 7 **IN** 8

Voltage Regulator **Pre Amp** **Stereo Mono Switch** **Stereo Lamp Driver** **Schmitt 2** **AND Gate**

Composite NFB Amp **Double Balance De-modulator** **Pilot Canceller** **38kHz Switch** **Inverter**

Divider (1) **Divider (2)** **Divider (3)** **19kHz** **DC Amp 1** **Phase Comparator** **Phase Comparator** **DC Amp 2** **Schmitt 1** **DC Amp 3** **ACG Amp**


VCO Killer **VCO** **19kHz** **19kHz** **19kHz** **DC Amp 1** **Phase Comparator** **Phase Comparator** **DC Amp 2** **Schmitt 1** **DC Amp 3** **ACG Amp**

VCO KILL. IN 16 **VCO FREQ. ADJ. (76kHz)** 15 **PLL L.P.F.** 14 **PLL IN** 13 **PILOT OUT** 11 **PILOT CANCEL ADJ.** 9

The diagram illustrates the internal circuitry of a radio receiver, organized into two main horizontal sections. The top section contains the RF Amplifier, Converter, and IF Amplifier 1. The bottom section contains the AGC Amplifier, IF Amplifier 2, and the Detector. The signal flow is as follows: RF IN (pin 2) enters the RF Amplifier, which outputs RF OUT (pin 4) to the Converter. The Converter outputs OSC IN (pin 6) and MIXER IN (pin 7) to IF Amplifier 1. IF Amplifier 1 outputs to IF Amplifier 2 (pin 13), which then outputs to the Detector (pin 12). The Detector outputs DET OUT (pin 11) to the AGC Amplifier (pin 14), which outputs AGC IN (pin 15) to the IF Amplifier 2. The AGC Amplifier also outputs S.METER (pin 16). The IF Amplifier 2 outputs IF (pin 10) to the Detector. The Detector outputs IF AMP (pin 9) to the speaker. The speaker is also connected to GND (pin 10) and VCC (pin 1). The RF Amplifier is connected to VCC (pin 1) and RF AMP IN (pin 2). The Converter is connected to VCC (pin 1) and RF AMP OUT (pin 4). IF Amplifier 1 is connected to VCC (pin 1) and RF AMP OUT (pin 4). IF Amplifier 2 is connected to VCC (pin 1) and RF AMP OUT (pin 4). The Detector is connected to VCC (pin 1) and RF AMP OUT (pin 4).

11.2 SCHEMATIC DIAGRAM


NOTE:
The indicated semiconductors are representative ones only.
Other alternative semiconductors may be used and are
listed in the parts list.

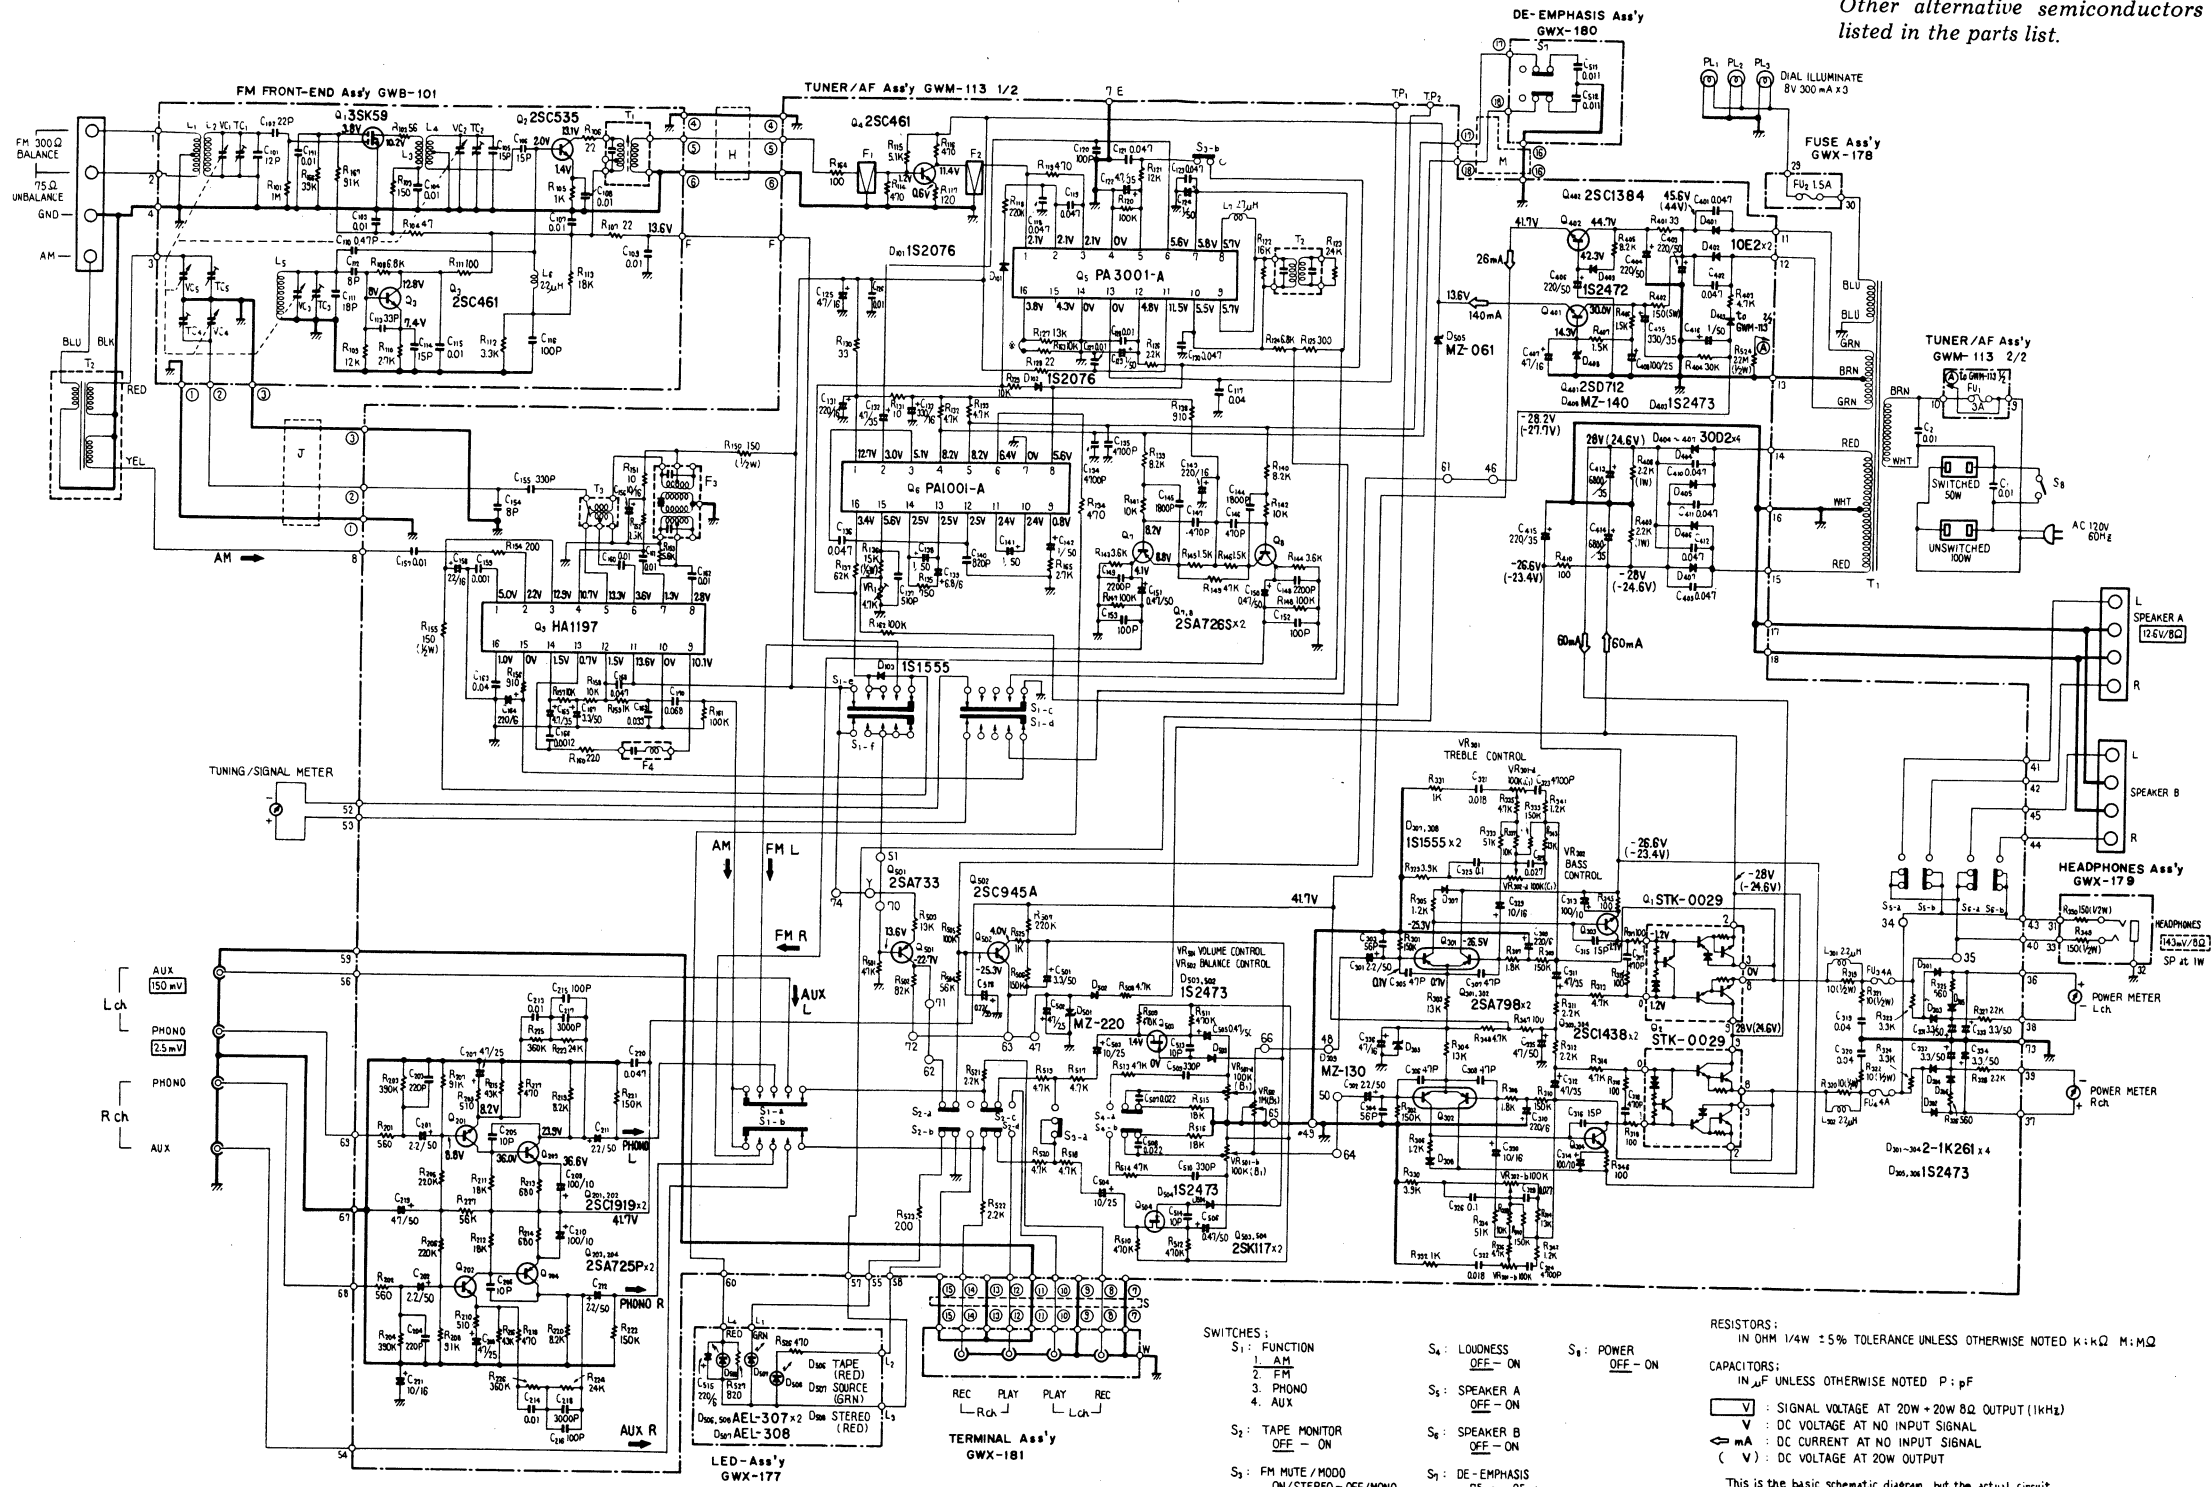


- SWITCHES:
- S₁: FUNCTION
 - 1. AM
 - 2. FM
 - 3. PHONO
 - 4. AUX
 - S₂: TAPE MONITOR
 - OFF - ON
 - S₃: FM MUTE/MOD
 - ON/STEREO - OFF/MONO
 - S₄: LOUDNESS
 - OFF - ON
 - S₅: SPEAKER A
 - OFF - ON
 - S₆: SPEAKER B
 - OFF - ON
 - S₇: DE-EMPHASIS
 - 75μs - 25μs
 - S₈: POWER
 - OFF - ON

- RESISTORS:
IN OHM 1/4W ±5% TOLERANCE UNLESS OTHERWISE NOTED K:KΩ M:MΩ
- CAPACITORS:
IN μF UNLESS OTHERWISE NOTED P:pF
- ⎓: SIGNAL VOLTAGE AT 20W +20W 8Ω OUTPUT (1KHz)
V: DC VOLTAGE AT NO INPUT SIGNAL
mA: DC CURRENT AT NO INPUT SIGNAL
(V): DC VOLTAGE AT 20W OUTPUT
- This is the basic schematic diagram, but the actual circuit may vary due to improvements in design.


11.3 P.C. BOARD CONNECTION DIAGRAM

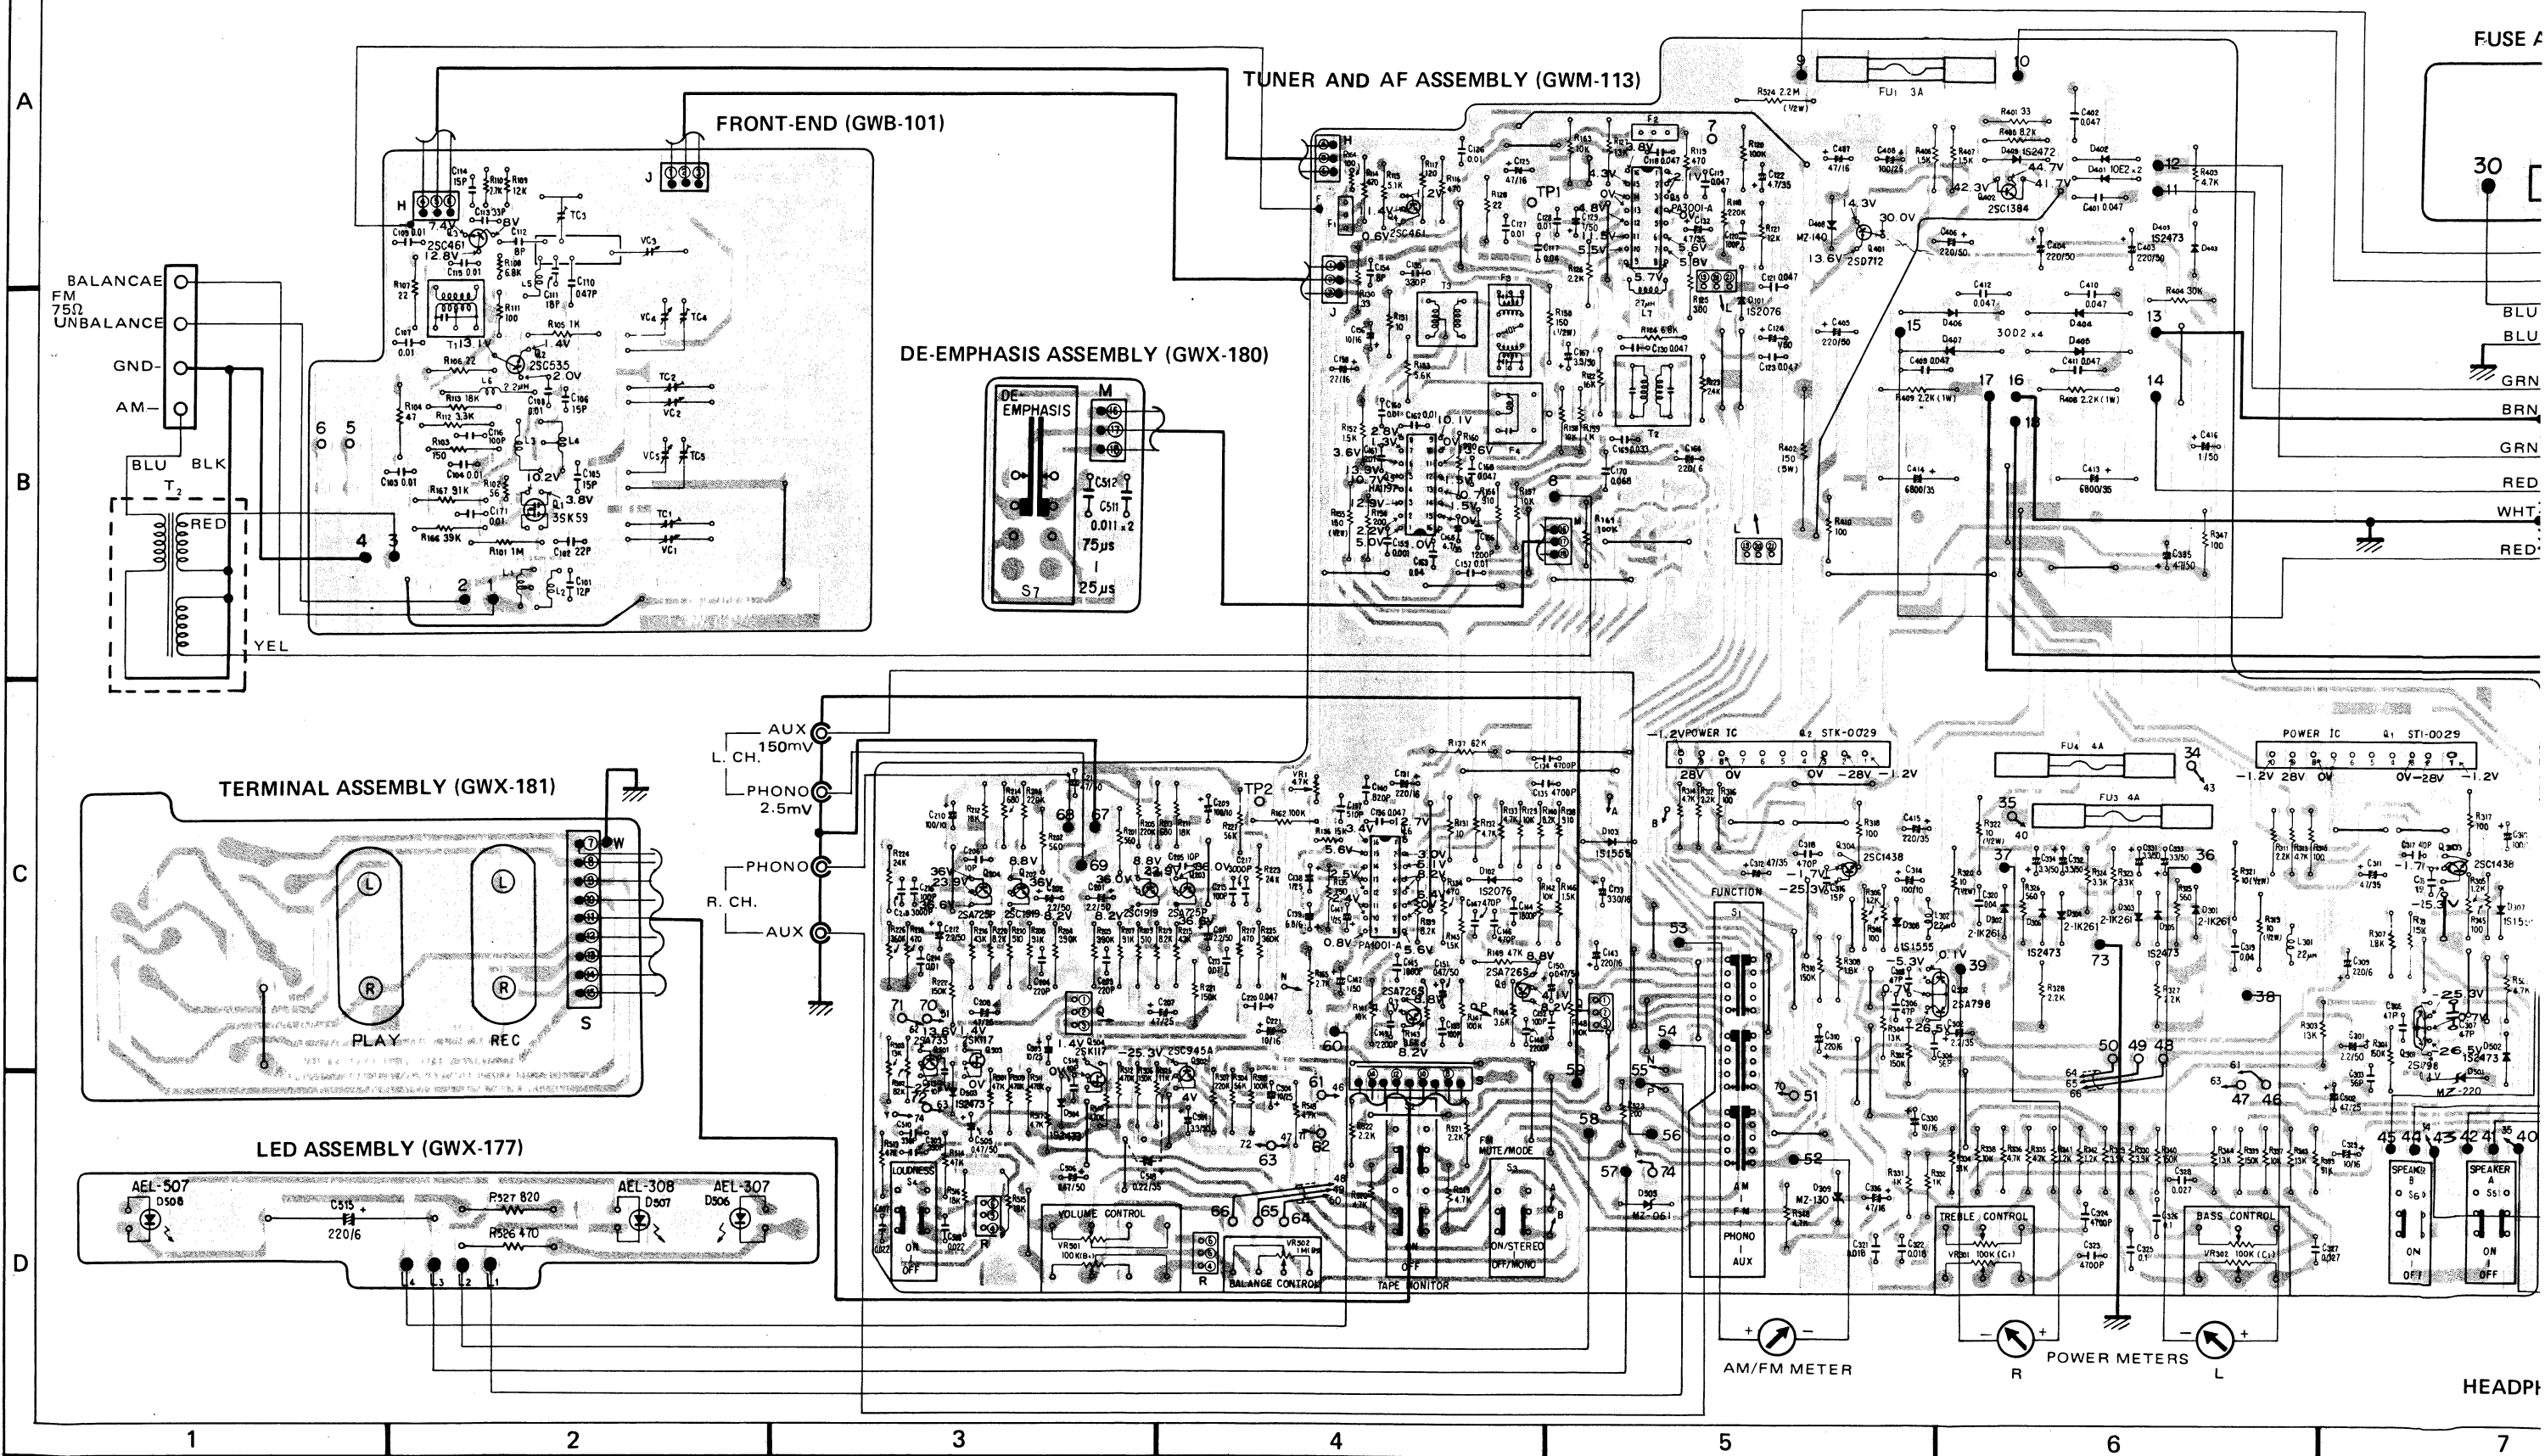

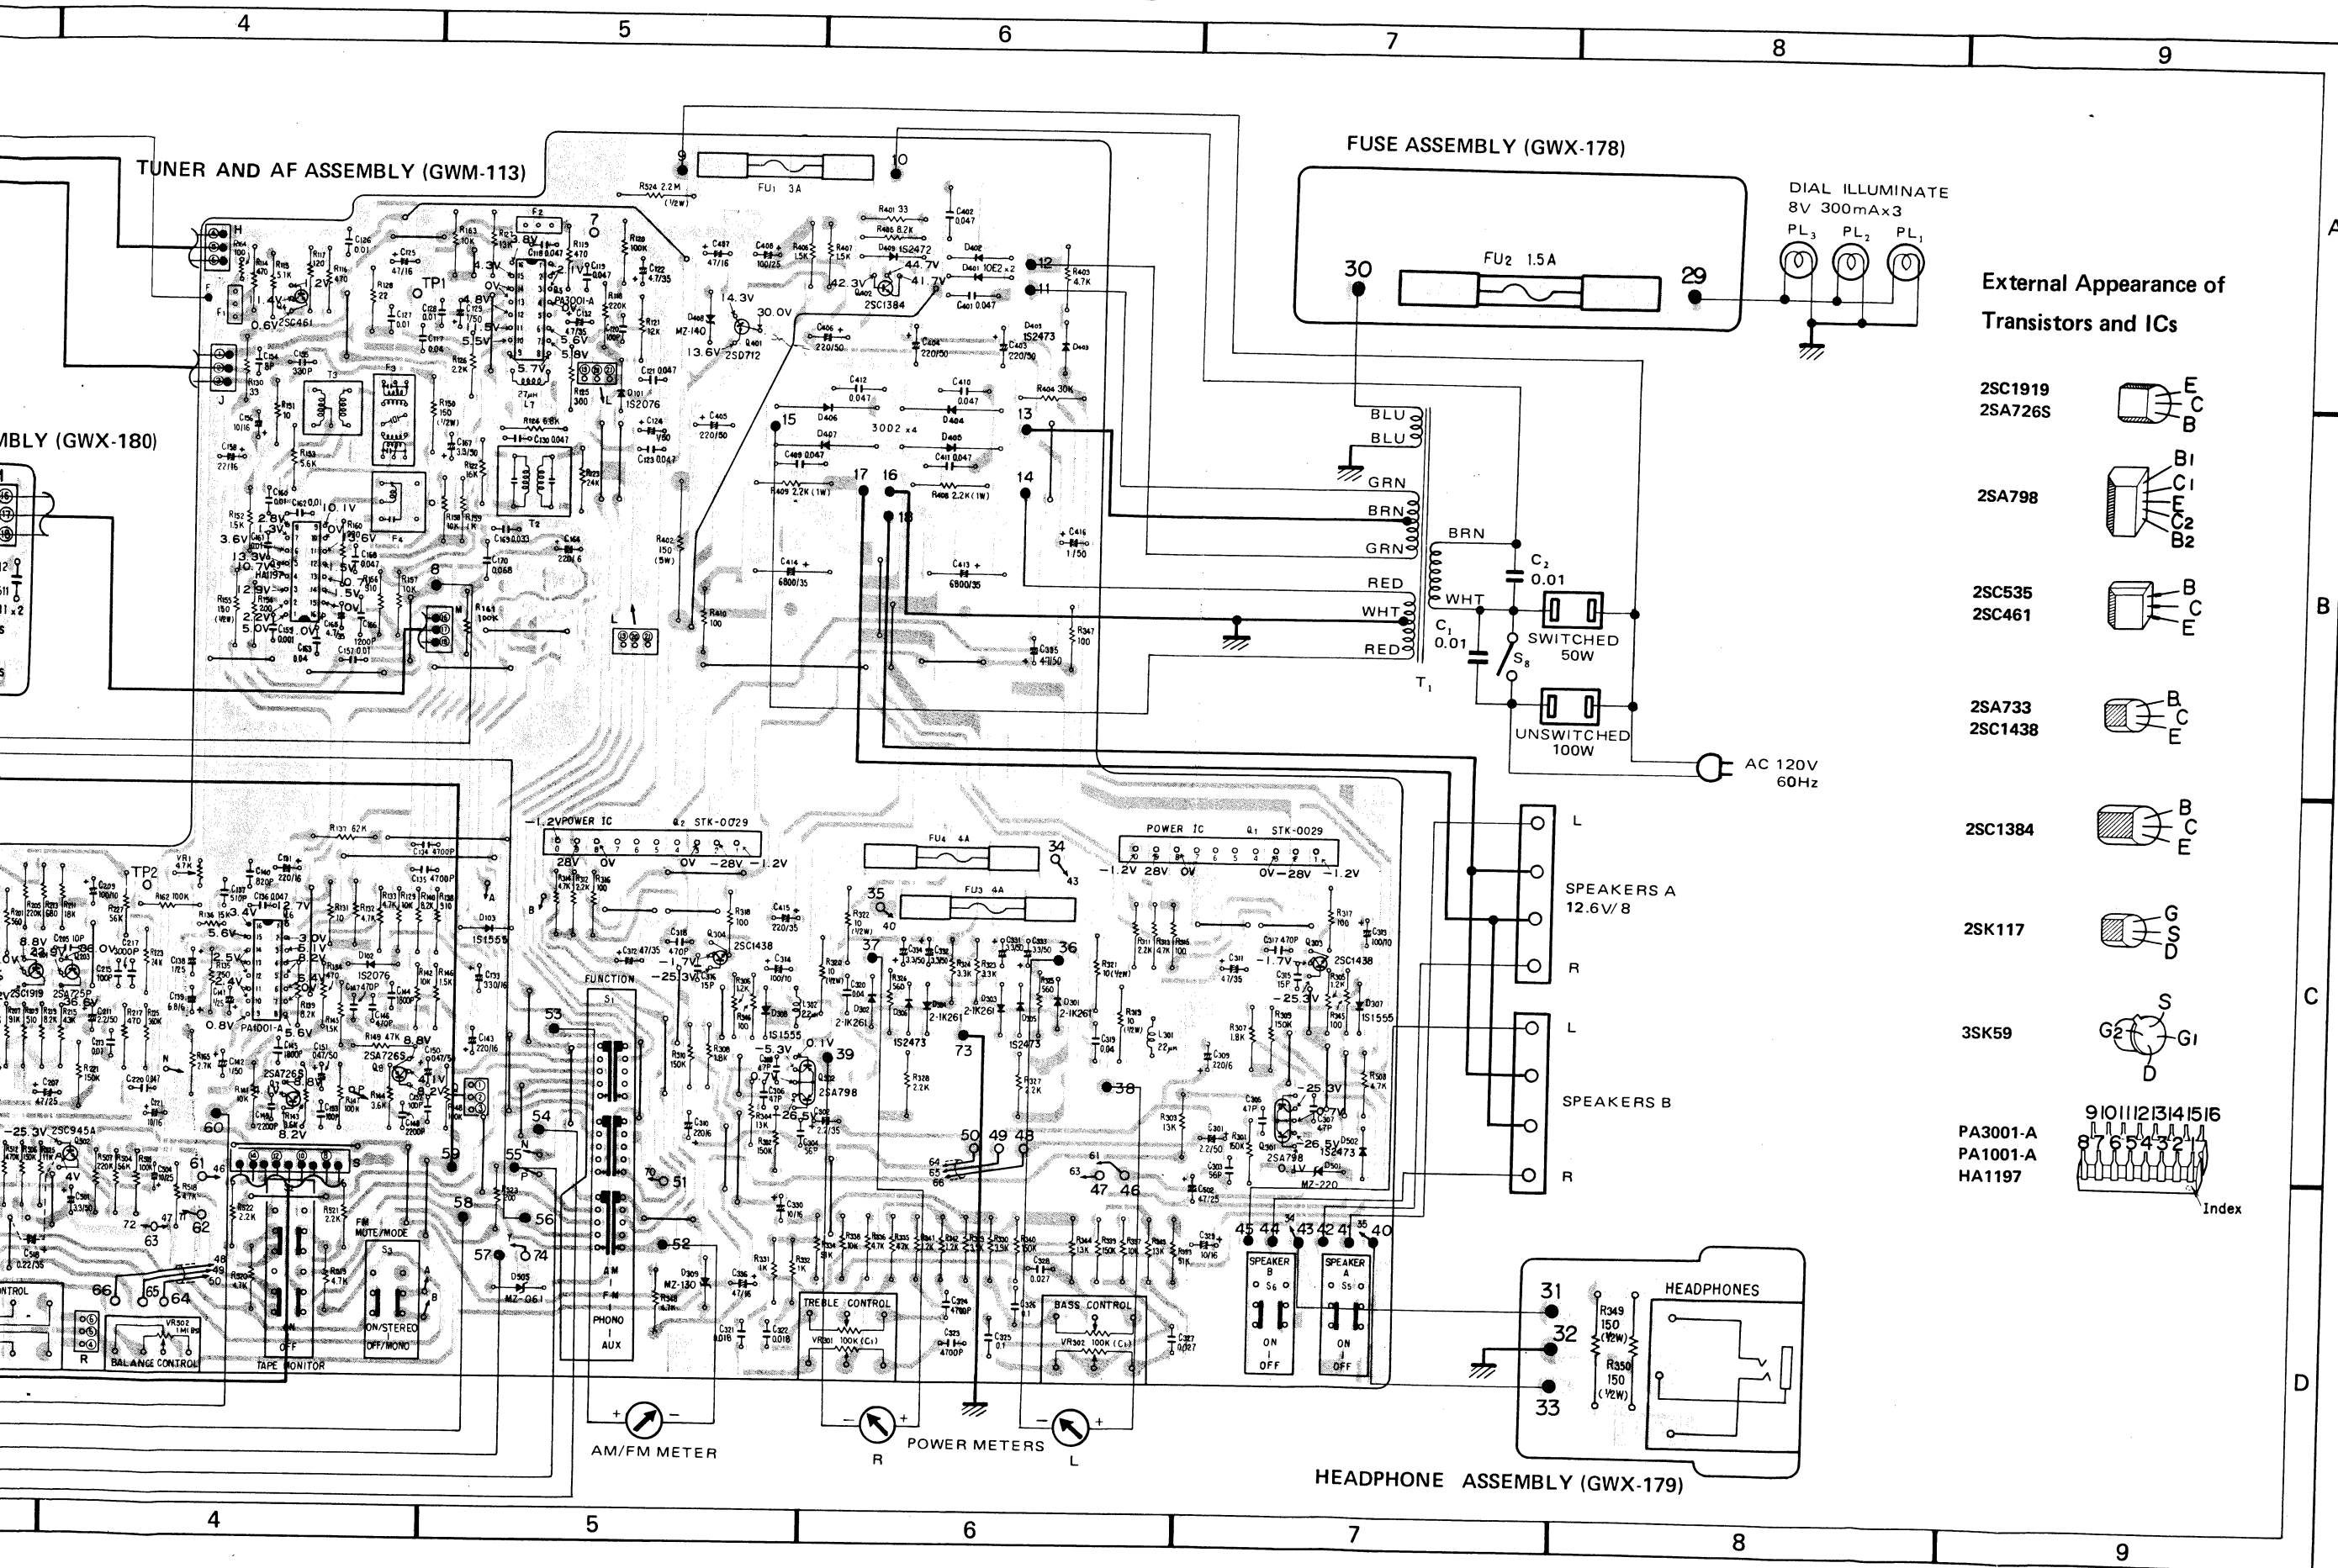


External Appearance of Transistors and ICs

- 2SC1919
2SA726S
- 2SA798
- 2SC535
2SC461
- 2SA733
2SC1438
- 2SC1384
- 2SK117
- 3SK59
- PA3001-A
PA1001-A
HA1197

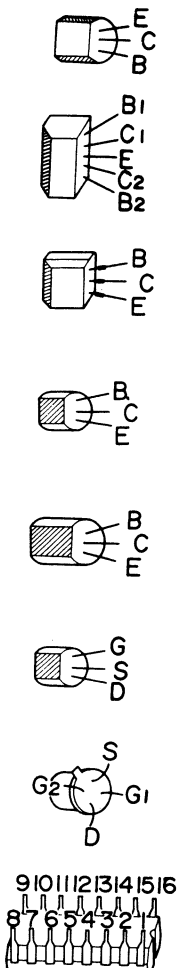

A
B
C
D

11.4 FRONT-END (GWB-101)

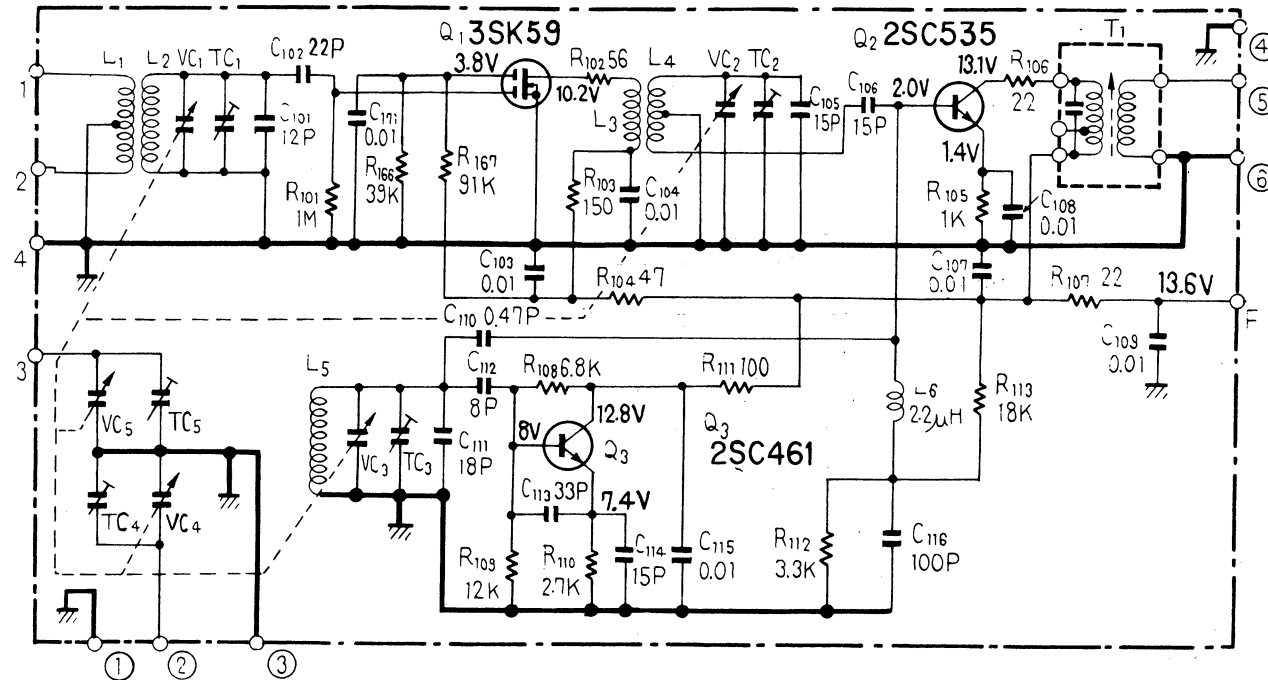

Parts List of Front-end (GWB-101)

SEMICONDUCTORS

Part No.	Symbol & Description
3SK59-Y or GR	Q1
2SC535-A or B	Q2
2SC461-B or C	Q3

TRANSFORMER AND COIL

Part No.	Symbol & Description
ATE-039	T1 FM IF transformer
T24-028	L6 RF choke coil 2.2μH

RESISTORS

Part No.	Symbol & Description
RD4PS 000 J	R101, R103-R107, R113, R166, R167
RD4VS 000 J	R111, R102, R108-R110


CAPACITORS

Part No.	Symbol & Description
CCDUJ 120K 50	C101
CCDSL 220K 50	C102
CKDYF 103Z 50	C103, C104, C107-C109, C115, C171
CCDUJ 150K 50	C105
CCDSL 150K 50	C106
CGB R47K 500	C110
CCDPH 180K 50	C111
CCDLH 080F 50	C112
CCDCH 330K 50	C113
CCDCH 150K 50	C114
CCDSL 101K 50	C116

ACK-012	VC	Tuning capacitor
ACM-006	TC3	Ceramic trimmer


Note: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

11.5 TERMINAL ASSEMBLY (GWX-181)

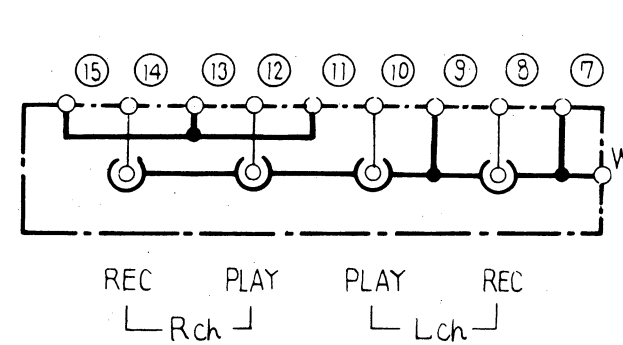


Part No.	Symbol & Description
AKB-045	Terminal (TAPE)

11.7 LED ASSEMBLY (GWX-177)

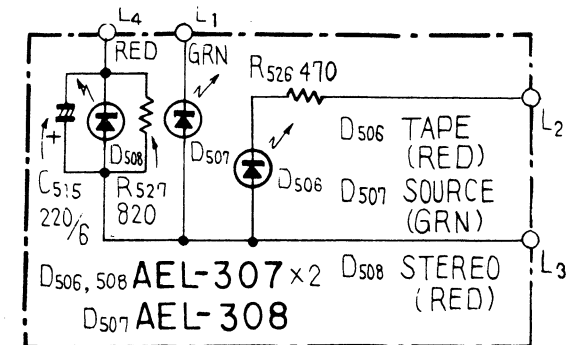


Part No.	Symbol & Description
AEL-308	D507 LED
AEL-307	D506, D508 LED
RD4PS 471J	R526
RD4PS 821J	R527
CEB 221P 6	C515

11.6 DE-EMPHASIS ASSEMBLY (GWX-180)

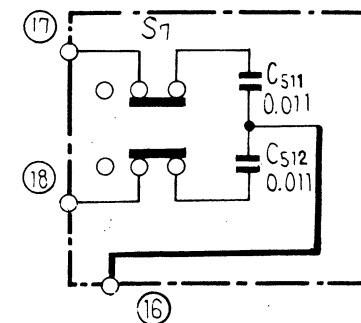


Part No.	Symbol & Description
CQMA 113J 50	C511, C512
ASH-015	S7 Slide switch (DE-EMPHASIS)

11.8 HEADPHONE ASSEMBLY (GWX-179)

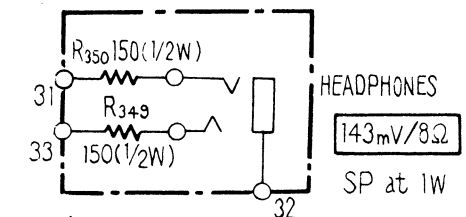

Part No.	Symbol & Description
RD4PS 151J	R349, R350
AKN-009	Phone jack

11.9 FUSE ASSEMBLY (GWX-178)



Part No.	Symbol & Description
AKR-013	Fuse clip

Parts List of Tuner and AF assembly (GWM-113)
SWITCHES

Part No.	Symbol & Description	
ASE-107	S1	Slide rotary (FUNCTION)
ASG-137	S2, S3	Dual push (TAPE MON., MODE/FM MUTE)
ASG-138	S4	Push (LOUDNESS)
ASG-139	S5, S6	Dual push (SPEAKERS)

TRANSFORMERS AND COILS

Part No.	Symbol & Description	
ATE-040	T2	FM transformer
ATB-013	T3	AM OSC coil
ATF-013	F1, F2	FM ceramic filter
ATF-034	F3	AM ceramic filter
ATF-038	F4	455kHz filter
ATH-022	L7	RF choke coil 27 μ H

CAPACITORS

Part No.	Symbol & Description	
CKDYF 403Z 50	C117, C163	
CKDYF 473Z 50	C118, C119, C123, C130, C168	
CCDSL 101K 50	C120, C152, C153	
CEA 4R7P 16	C122, C132, C165	
CEA 010P 50	C124, C129, C142	
CEA 470P 16	C125	
CKDYF 103Z 50	C126—C128, C157, C160—C162	
CEA 221P 16	C131, C143	
CEA 331P 16	C133	
CQMA 472J 50	C134, C135	
CQMA 473K 50	C136	
CQSH 511J 50	C137	
CEANL 010M 50	C138, C141	
CSZA 6R8M 6	C139	
CKDYB 821K 50	C140	
CKDYB 182K 50	C144, C145	
CKDYB 471K 50	C146, C147	
CKDYB 222K 50	C148, C149	
CEA R47P 50	C150, C151	
CCDXL 080F 50	C154	
CQSH 331J 50	C155	
CEA 100P 16	C156	
CEA 220P 16	C158	
CKDYB 102K 50	C159	
CKDYB 122K 50	C166	
CEA 3R3P 50	C167	
CQMA 333K 50	C169	
CQMA 683K 50	C170	
CEA 221P 6	C164	

Part No.	Symbol & Description	
CEANL 2R2P 50	C201, C202, C211, C212	
CCDSL 221K 50	C203, C204	
CCDSL 100F 50	C205, C206	
CEANL 470P 25	C207, C208	
CEA 101P 10	C209, C210	
CKDYA 103J 50	C213, C214	
(CQMA 103J 50)		
CCDSL 101K 50	C215, C216	
CKDYA 302J 50	C217, C218	
(CQMA 302J 50)		
CEA 470P 50	C219	
CKDYF 473Z 50	C220	
CEANL 2R2P 50	C301, C302	
CCDSL 560K 50	C303, C304	
CCDSL 470K 50	C305—C308	
CEA 220P 6	C309, C310	
CEA 470P 35	C311, C312	
CEA 101P 10	C313, C314	
CCDSL 150K 50	C315, C316	
CCDSL 471K 50	C317, C318	
CCDYF 403Z 50	C319, C320	
CQMA 183J 50	C321, C322	
CEANL 100P 16	C329, C330	
CEA 3R3P 50	C331—C334	
CEA 470P 50	C335	
CEA 470P 16	C336	
ACG-009	C401, C402, C409—412	Ceramic 0.047/150V
CEA 221P 50	C403, C404, C406	
CEA 470P 16	C407	
CEA 101P 25	C408	
ACH-201	C413, C414	Electrolytic 6800/35V
CEA 221P 35	C415	
CEA 331P 35	C405	
CEA 010P 50	C416	
CEA 3R3P 50	C501	
CEA 470P 25	C502	
CEANL 100P 25	C503, C504	
CEANL R47M 50	C505, C506	
CQMA 223J 50	C507, C508	
CCDSL 331K 50	C509, C510	
CCDSL 100K 50	C513, C514	
CSZA R22M 35	C518	

Note: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

RESISTORS

Part No.	Symbol & Description	
RD%PS $\square\square\square$ J	R114—R135, R137—R149, R151—R154, R156—R163	
RD%PS $\square\square\square$ J	R201—R204, R209—R227	
RD%PS $\square\square\square$ J	R301—R318, R323—R348	
RD%PS $\square\square\square$ J	R403—R407	
RF%PS $\square\square\square$ J	R401, R410	
RD%PS $\square\square\square$ J	R501—R523, R525	
RD%PS $\square\square\square$ JNL	R205—R208	

SEMICONDUCTORS

OTHERS

Part No.	Symbol & Description
AKH-014	IC socket
ANH-203	Heat sink
AKR-013	Fuse clip
ABN-047	Union nut
ABN-024	Washer faced nut

List of Changed Parts for Factory Modification


Symbol	Part No.	Description

MODEL: SX-580, SX-590, SX-680, SX-690, SX-780, SX-790, SX-880,
SX-890, LX-590, LX-690


SUBJECT: Change of FET in the FM Front End or Tuner Assembly.

REASON: Convenience on procurement.

OLD
3SK59 → NEW
3SK73

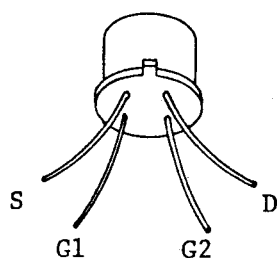


[Fig. 1]

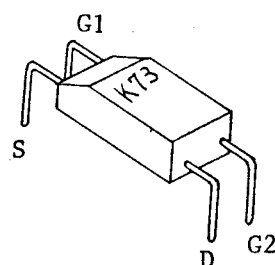

[Fig. 2]

NOTICE: 1. Old and new FETs are interchangeable.
But, please remove the lead wire when you use 3SK73 instead
of 3SK59, and add the lead wire when doing vice versa.

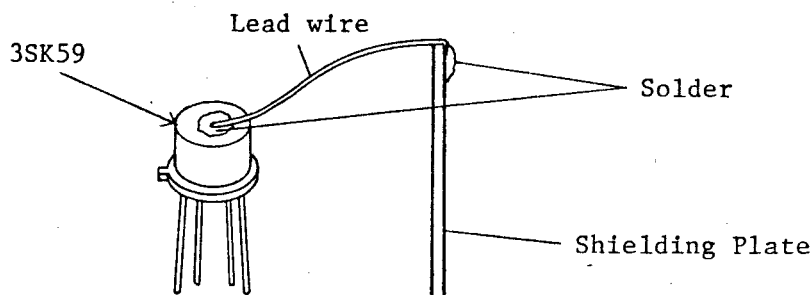

[Fig. 3]

2. Correction of Service Manual.

SX-580	[ART-288]	page 26	} Please correct the External appearance of 3SK59 to that of Fig. 1 above.
SX-680	[ART-294]	page 18	
SX-780	[ART-289]	page 24	
SX-880	[ART-296]	page 31	

MODIFICATION CODE: 3

APPLICABLE MONTH: August 1978


MODEL: SX-580, SX-680

SUBJECT: Change of FM ceramic filter in the Tuner and AF Assembly (SX-580 and SX-590) or Main Board Assembly (SX-680, and SX-690).

SX-580/KUØ	GWM-113	SX-680/KUØ	GWM-117
" /KCØ	GWM-114	" /KCØ	GWM-118
" /S, S/G	GWM-115	" /S, S/G	GWM-119
SX-590/HGØ, HGW4	GWM-116	SX-690/HGØ, HGW4	GWM-120
		LX-590/HGØW4	GWM-122

REASON: To minimize the drift of temperature.

F1, F2 : FM ceramic filter
 ATF-013 → ATF-053

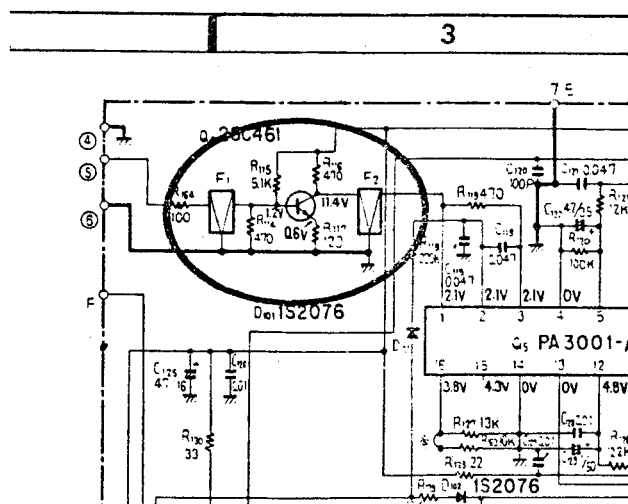

NOTICE: Old and new parts are interchangeable only those models.

SERVICE MANUAL PAGE:

SX-580/KU	[ART-288]	-----	29 (GWM-113)
" /KC	[ART-306]	-----	5 (GWM-115)
" /S, S/G	["]	-----	15 (GWM-114)
SX-680/KU	[ART-294]	-----	25 (GWM-117)
" /KC	[ART-307]	-----	7 (GWM-118)
" /S, S/G	["]	-----	15 (GWM-119)
SX-590/HG, HGW4	[ART-295]	-----	9 (GWM-116)
SX-690/HG, HGW4	[ART-303]	-----	9 (GWM-120)

APPLICABLE MONTH: July 1978

MODEL: SX-580/KU, SX-590/KU, HG, HGW4


SUBJECT: Circuit modification of Tuner and AF Assembly.

SX-580/KU GWM-113

SX-590/KU, HG, HGW4 GWM-116

REASON: To increase the PHONO OVER-LOAD LEVEL, set the gate voltage of FET in the muting circuit higher.

C501	:	3.3 μ F 50V CEA3R3P50	→	1 μ F 50V CEA010P50
R506	:	150K Ω RD1/4PS154J	→	1.5M Ω RD1/4PS155J
R507	:	220K Ω RD1/4PS224J	→	680K Ω RD1/4PS684J
C513, C514	:	10pF CCDSL100K50	→	100pF CCDSL101K50

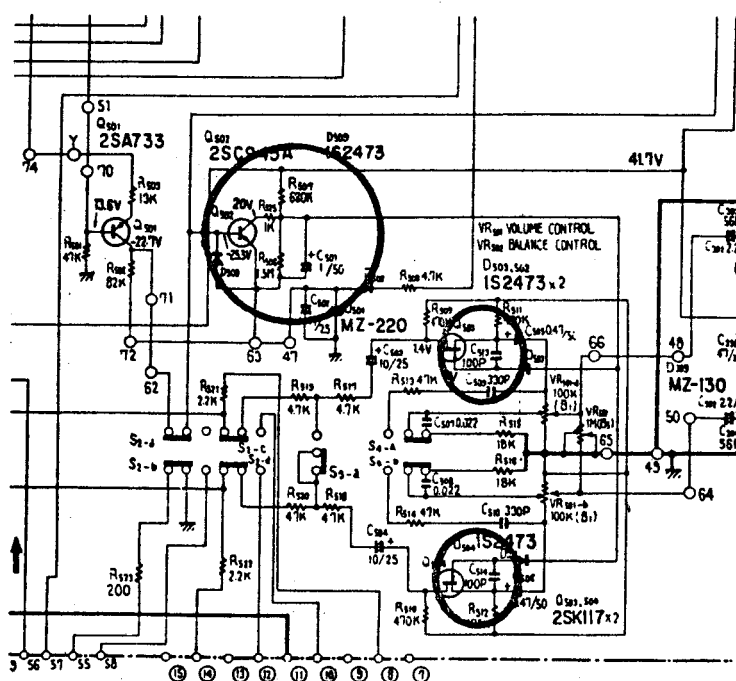

SERVICE MANUAL PAGE:

SX-580 [ART-288] ----- 29, 30 (GWM-113)

SX-590 [ART-295] ----- 9, 10 (GWM-116)

APPLICABLE SERIAL NO. :

SX-580/KU 3608601


SX-590/KU, HG, HGW4 First lot~

APPLICABLE MONTH: May 1978 (SX-580/KU, SX-590/HG, HGW4)

MODEL: SX-580, SX-590, SX-680, SX-690, LX-590/NG0W4, LX-690/HG0W4

SUBJECT: Information about Foot Assembly.

* AEC-178 is used only for the following Serial No.

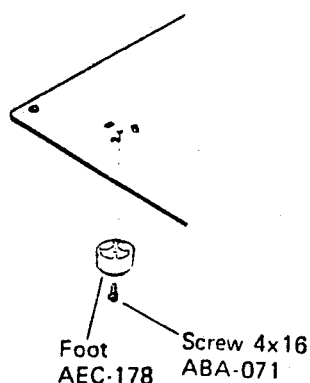

APPLICABLE SERIAL No. :

SX-580/KU0	3602101	~	3611101
" /KC0	First lot	~	3402501
" /S	First lot	~	2601401
" /S/G	First lot	~	2900501
SX-590/HG0	First lot	~	8400801
" /HG0W4	First lot	~	8807501
LX-590/NG0W4	First lot	~	4602601
SX-680/KU0	3602101	~	3612101
" /KC0	First lot	~	3402501
" /S	First lot	~	2601601
" /S/G	First lot	~	2902901
SX-690/HG0	First lot	~	8400501
" /HG0W4	First lot	~	8806001
LX-690/HG0W4	First lot	~	8800701


MODEL: SX-580, SX-590

SUBJECT: Circuit modification of Tuner and AF Assembly.


SX-580/KU	:	GWM-113
SX-580/KC	:	GWM-114
SX-580/S, S/G	:	GWM-115
SX-590/HGW4	:	GWM-116

REASON: To prevent misoperation of AF muting circuit with decreased AC Power supply voltage at full power output when playing a tape (MONITOR ON).

COUNTERMEASURE: Add a lead wire.

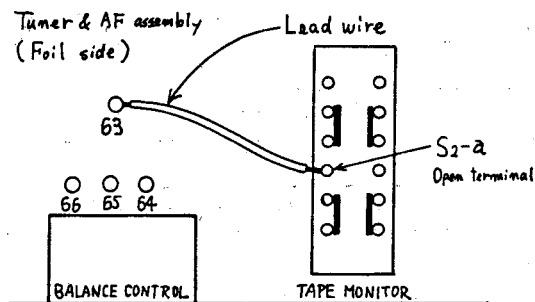

[Front side]

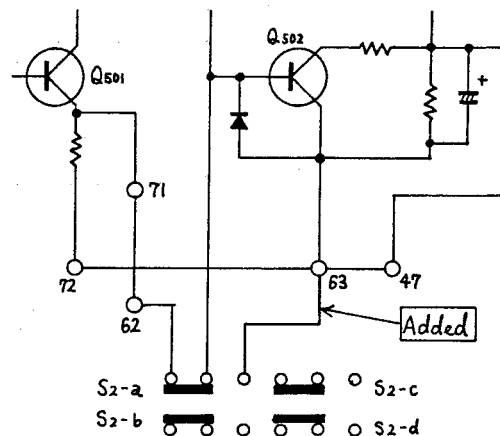

NOTICE: Please do countermeasure on the units of the following Serial No. when AF muting circuit misoperates.

SX-580/KU	3606101	~	3611100
" /KC	3400001	~	3401500
" /S	2600001	~	2600500
" /S/G	2900001	~	2900500
SX-590/HGW4	8800001	~	8803000

Those units after the numbers have been modified.


No. SI-A8068

MODEL: SX-580, SX-590, LX-590, SX-680, SX-690, LX-690, SX-780, SX-790
SX-880, SX-890, SX-980, SX-1080, SX-1280, SX-1980, A-27,
SPEC-1

SUBJECT: Change of resistors at headphones output.

REASON: Protecting headphones.

OLD (150Ω)		NEW (330Ω)		Applicable Model
Part No.	W	Part No.	W	
RD1/2PS151J	1/2	RD1/2PS331J	1/2	SX-580, SX-590, LX-590
RD1/2PS151J	1/2	RS1P331J	1	SX-680, SX-690, LX-690
RS2P151J	2	RS1P331J	1	SX-780, SX-790
RS3P151J	3	RS1P331J	1	SX-880, SX-890
RS3P151J	3	RS2P331J	2	SX-980, SX-1080
RS3P151J	3	RS3P331J	3	SX-1280, SX-1980
RT5B151J	5	RS2P331J	2	A-27
RT5B151J	5	RS3P331J	3	SPEC-1

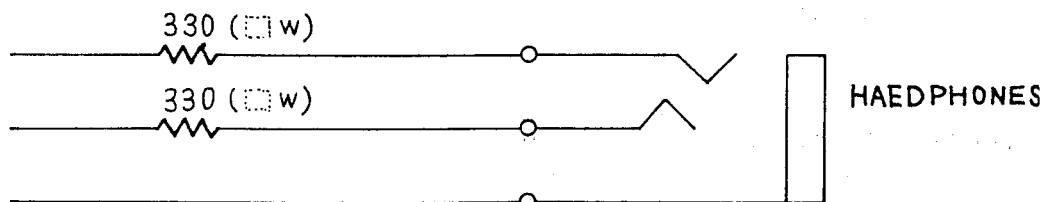

NOTICE: Please replace 2pcs. together when you use 330Ω instead of 150Ω.

APPLICABLE MONTH: January 1979


MODEL: SX-580, SX-590

SUBJECT: Circuit modification of Tuner and AF Assembly.

GWM-113	:	SX-580/KU, SX-590/KU
GWM-114	:	SX-580/KC
GWM-115	:	SX-580/S, S/G
GWM-116	:	SX-590/HG, HGW4
GWM-122	:	LX-590/NGW4

REASON: To prevent misoperation of AF muting circuit at low AC voltage.

C416 :	1 μ F 50V	→	2.2 μ F 50V
	CEA010P50		CEA2R2P50

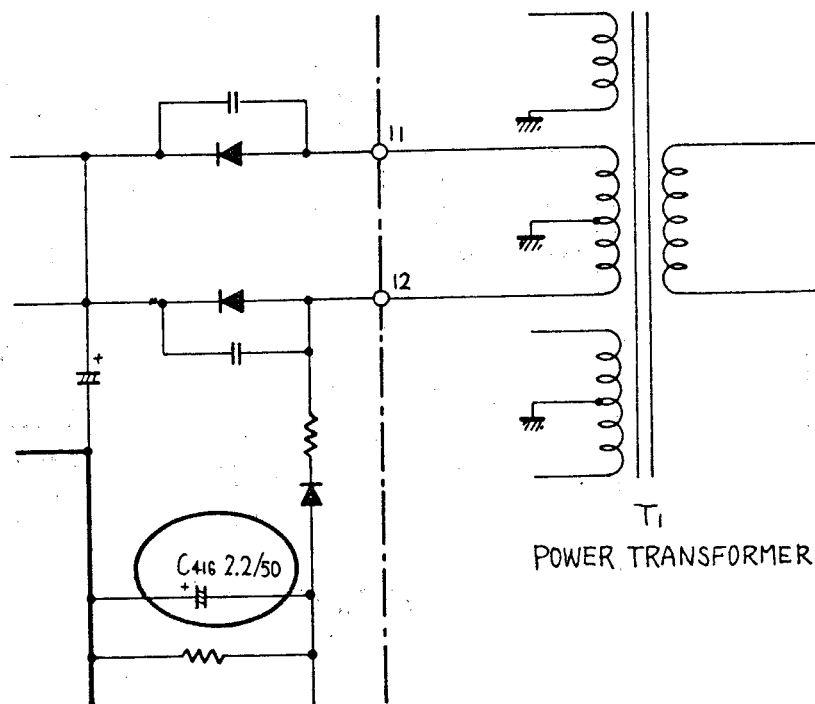

APPLICABLE MONTH:	September 1978	(GWM-113, 114)
	December 1978	(GWM-115, 116, 122)

MODEL: SX-580, SX-590, LX-590

SUBJECT: Circuit modification of Tuner and AF Assembly.

GWM-113 : SX-580/KU, SX-590/KU

" -114 : SX-580/KC


" -115 : SX-580/S, S/G

" -116 : SX-590/HG, HGW4

" -122 : LX-590/NGW4

REASON: To increase PHONO overload level.

R227	:	56K Ω	—————→	91K Ω
		RD1/4PS563J		RD1/4PS913J
C213, C214	:	0.01 μ F	—————→	0.01 μ F
		CKDYA103J50		CQMA103J50

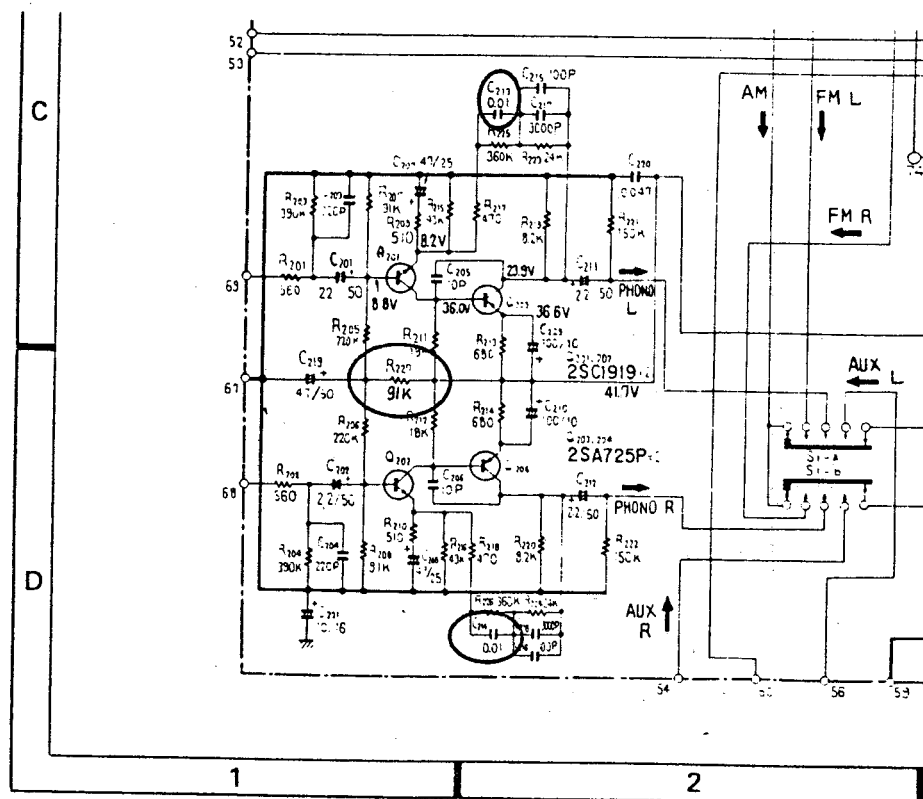

29

APPLICABLE MONTH:	SX-580/KU, SX-590/KU	:	December 1978
	SX-580/KC	:	December 1978
	SX-580/S, S/G	:	October 1978
	SX-580/HG, HGW4	:	October 1978
	LX-590/NGW4	:	November 1978

MODEL: SX-580, SX-590, SX-680, SX-690


SUBJECT: Circuit modification of AF OUTPUT block.

REASON: To reduce residual noise (hum).

Hum is induced on the speaker lines as the AC lines and speaker output lines are being wired in parallel.

Then, it jumps into the power amplifier input which is closely located.

R1, R2 : (Added) $\longrightarrow$ 10K Ω
RD1/4PS103J

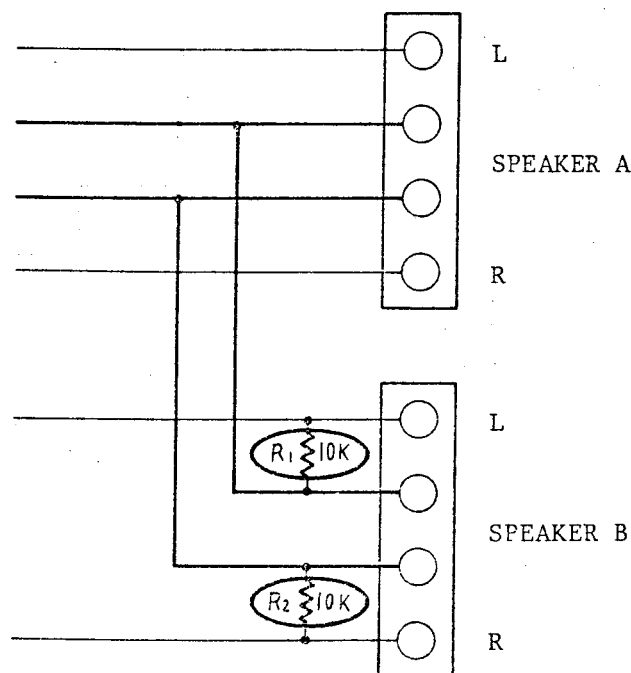

APPLICABLE SERIAL NO. :

SX-580/S	2600501~	SX-680/S	2600501~
" /S/G	2900501~	" /S/G	2900901~
SX-590/HG	First lot~	SX-690/HG	First lot~
" /HGW4	8804501~	" /HGW4	8804001~
LX-590/NGW4	4601001~		

NOTICE: The resistors were deleted when the assembly pattern was modified and the speaker output was equipped further from the power amplifier input.

APPLICABLE SERIAL NO. :

SX-580/S	2601051~	SX-680/S	2601201~
" /S/G	2900501~	" /S/G	2901951~
SX-590/HG	8400501~	SX-690/HG	8400351~
" /HGW4	8806051~	" /HGW4	8805301~
LX-590/NGW4	4602051~		

MODEL: SX-580/KU, S, S/G, SX-590/KU
SX-680/KU, S, S/G, SX-690/KU


SUBJECT: 1. Deleted capacitor of line cross.
2. Circuit modification of Main board assembly. (except SX-580, 590)

SX-680/KU, SX-690/KU : GWM-117
SX-680/S, S/G : GWM-119


REASON: Cost down.

[1] Line cross capacitor

KU Model


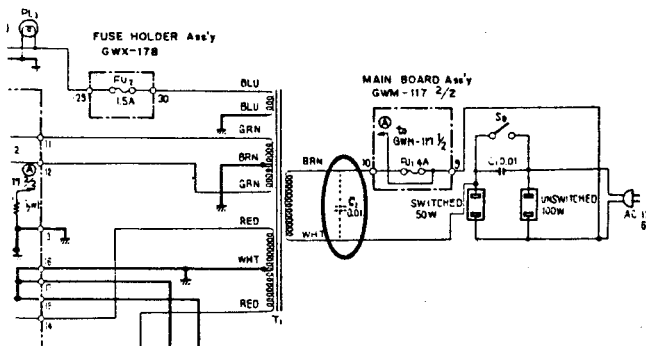


S, S/G Model

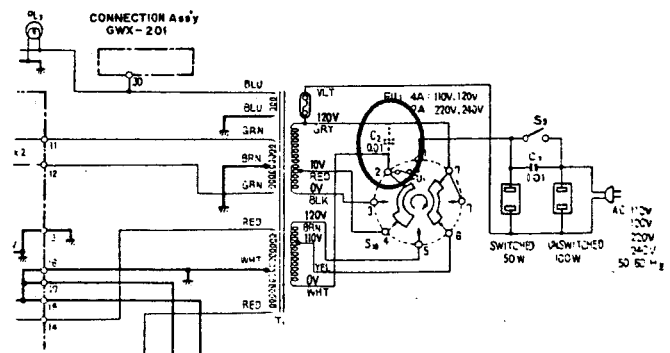

[2] Main board assembly (SX-680, SX-690)

C413, C414	:	8000 μ F 50V	→	8000 μ F 42V
		ACH-082		ACH-203
R351, R352, R353, R354	:	0.22 Ω	→	Jumper
		ACN-030		
C337, C338	:	0.047 μ F 150V	→	Delete
		ACG-009		
C401	:	0.047 μ F 150V	→	Delete (Only KU Model)
		ACG-009		

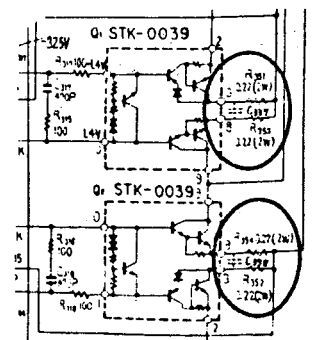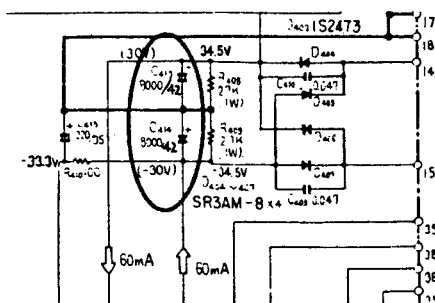

MODEL: SX-580, SX-590, LX-590, SX-680, SX-690, LX-690

SUBJECT: Circuit modification of Tuner and AF assembly or Main board assembly.

GWM-113 : SX-580/KU, SX-590/KU

GWM-114 : SX-580/KC

GWM-115 : SX-580/S, S/G

GWM-116 : SX-590/HG, HGW4

GWM-122 : LX-590/NGW4

GWM-117 : SX-680/KU, SX-690/KU

GWM-118 : SX-680/KC


GWM-119 : SX-680/S, S/G

GWM-120 : SX-690/HG, HGW4

GWM-123 : LX-690/NGW4

REASON: To reduce noise at PHONO position.

C201, 202, 211, 212 : 2.2 μ F $\xrightarrow{\text{CEANL2R2P50}}$ 2.2 μ F
ACH-309

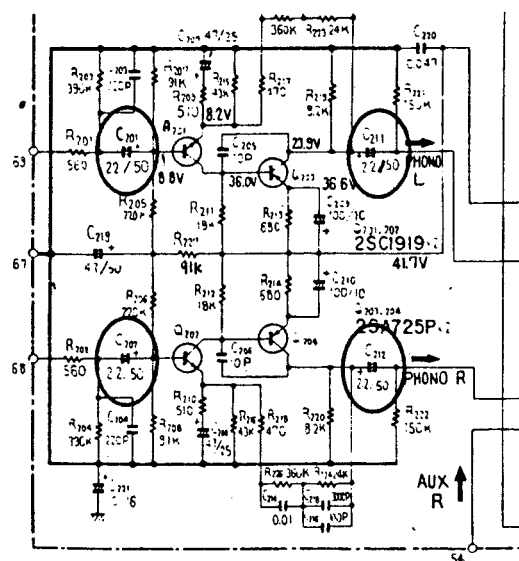

APPLICABLE MONTH: KU, KC Model ----- February 1979
S, S/G, HG, HGW4, NGW4 ----- January 1979

PIONEER ELECTRONIC CORPORATION 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153, Japan
U.S. PIONEER ELECTRONICS CORPORATION 85 Oxford Drive, Moonachie, New Jersey 07074, U.S.A.
PIONEER ELECTRONIC (EUROPE) N.V. Luiithagen-Haven 9, 2030 Antwerp, Belgium
PIONEER ELECTRONICS AUSTRALIA PTY. LTD. 178-184 Boundary Road, Brakeside, Victoria 3195, Australia