

Service Manual

AM/FM STEREO RECEIVER

SX-727 / KUW,FVZW,FW

NOTE


MODEL SX-727 COMES IN THREE VERSIONS DISTINGUISHED AS FOLLOWS:

Round label on rear panel	Voltage	Type
KUW FVZW FW	120V only 5-position selector 5-position selector	UL approved(U.S.A.) FTZ approved(West Germany) General export model

CONTENTS

1. SPECIFICATIONS	1
2. FRONT PANEL FACILITIES	3
3. CONNECTION DIAGRAM	5
4. BLOCK DIAGRAM	7
5. DISASSEMBLY	
5-1 Wooden case	9
5-2 Bottom plate	9
5-3 Front panel	9
6. PARTS AND PCB LOCATION	10
7. DIAL CORD STRINGING	11
8. ALIGNMENT PROCEDURE	
8-1 Required instruments	12
8-2 FM 10.7MHz alignment	12
8-3 FM front end alignment	12
8-4 FM MPX decoder alignment	12
8-5 Muting threshold level alignment	13
8-6 AM 455kHz alignment	13
8-7 AM tracking alignment	13
9. PACKING METHOD AND PART NUMBERS	14
10. SCHEMATIC DIAGRAMS , PCB PATTERNS AND PARTS LIST	
10-1 Unit connection diagram and miscellaneous parts	15
10-2 FM front end	23
10-3 FM/AM unit	24
10-4 CR unit	30
10-5 Head amp unit	32
10-6 AF unit	34
10-7 Power amp unit	38

10-8 Power supply unit	42
10-9 Protector unit	44

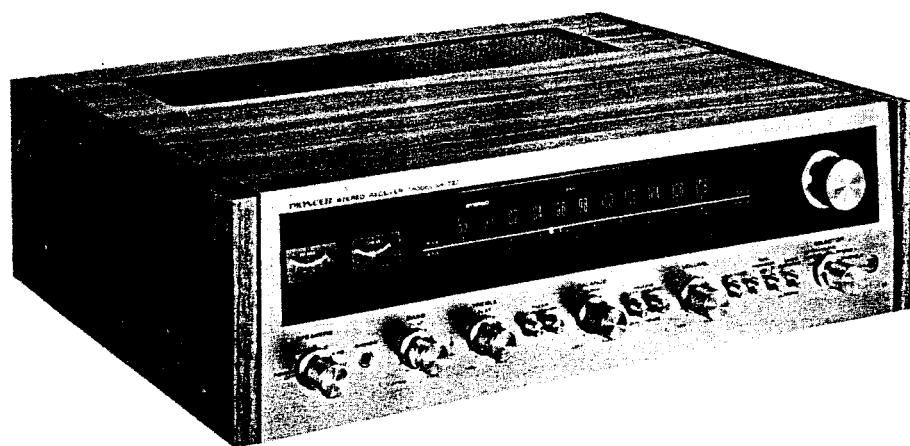

1. SPECIFICATIONS

SEMICONDUCTORS

FETs	4	Transistors	56
ICs	4	Diodes	37

POWER AMPLIFIER SECTION

Music Power Output (IHF)	195 Watts (4Ω)
Continuous Power Output (1kHz: each channel driven)	122 Watts (8Ω) 69W/69W (4Ω) 48W/48W (8Ω)
Continuous Power Output (1kHz: both channels driven)	50W + 50W (4Ω) 40W + 40W (8Ω)
Power Output in the Range of 20Hz to 20kHz (both channels driven)	37W + 37W (8Ω, Harmonic Distortion less than 0.5%)
Harmonic Distortion	Less than 0.5% (Continuous power output)
Intermodulation Distortion	Less than 0.03% (8Ω, 24W/24W power output)
Power Bandwidth (IHF)	Less than 0.5% (Continuous power output)
Frequency Response	Less than 0.03% (8Ω, 24W/24W power output)
Input Sensitivity/Impedance (1kHz, continuous power output)	10Hz to 60kHz (8Ω, Harmonic Distortion less than 0.5%)
Speakers	7Hz to 80kHz, ±1dB
Damping Factor	500mV/50kΩ
	4 to 16Ω
	40 (8Ω, 1kHz)

PREAMPLIFIER SECTION

Output Voltage	500mV (Rated output), 4V (Max.)
Harmonic Distortion	Less than 0.1%
Frequency Response	10Hz to 20kHz, ±1dB
Input Sensitivity/Impedance (1kHz, for rated output)	PHONO 1 MAG 3mV/50kΩ PHONO 2 MAG 3mV/50kΩ MIC 2.7mV/50kΩ AUX 200mV/100kΩ
	TAPE MONITOR 1, 2 200mV/100kΩ
Recording Output	TAPE REC 1, 2 (Pin jack) 200mV
	TAPE REC (DIN connector) 35mV
BASS Control	-10dB, + 10dB/100Hz
TREBLE Control	-10dB, + 10dB/10kHz
LOW Filter	-8dB/50Hz (6dB/oct.)
HIGH Filter	-9dB/10kHz (6dB/oct.)
Equalization Curve	PHONO: RIAA S.T.D.
Loudness Contour	+10dB/100Hz, + 6dB/10kHz with Volume Control set at -40dB position.
Muting	-20dB
Hum and Noise (IHF)	PHONO More than 85dB AUX More than 95dB

FM TUNER SECTION

Frequency Range	88MHz to 108MHz 87.5MHz to 108MHz (FTZ approved)
Usable Sensitivity (IHF)	1.8μV
Capture Ratio (IHF)	2.0dB
Selectivity (IHF)	More than 70dB
Image Rejection	More than 85dB (98MHz)
IF Rejection	More than 100dB (90MHz)
Spurious Rejection	More than 90dB (98MHz)
AM Suppression	50dB
Signal-to-Noise Ratio	70dB
Harmonic Distortion	Mono: Less than 0.3% (100% Mod.) Stereo: Less than 0.5% (100% Mod.)
Tuning Indicator	Signal strength type and Center tuning type
Muting	Switchable to ON-OFF
Stereo Separation	More than 40dB (1kHz)
Sub Carrier Suppression	More than 50dB
Antenna Input	Impedance 300Ω balanced and 75Ω unbalanced.

AM TUNER SECTION

Frequency Range	525kHz to 1,605kHz
Usable Sensitivity (IHF)	10μV
Selectivity (IHF)	More than 35dB
Image Rejection	More than 80dB (1,000kHz)
IF Rejection	More than 75dB
Signal-to-Noise Ratio	More than 50dB
Antenna	Built-in ferrite loopstick antenna

MISCELLANEOUS

Power Requirements	120V 60Hz, or 110V, 120V, 130V, 220V and 240V (switchable) 50-60Hz			
Power Consumption	270W (Max.)			
AC Outlets	Switched 1, Unswitched 2.			
Dimensions (overall)	19- $\frac{1}{16}$ in./485mm (width) 5- $\frac{7}{8}$ in./150mm (height) 15- $\frac{3}{8}$ in./390mm (depth)			
Weight	Without package With package	30lb, 14oz/14kg 37lb, 8oz/17kg		
Furnished Parts	FM T-type Antenna Pin Plug Speaker Plug	1 2 6	Fuse 1.5A (5 line voltage model only) 3A Polishing Cloth Operating Instructions	1 2 1 1

NOTE: Specifications and the design subject to possible modification without notice due to improvements.

2. FRONT PANEL FACILITIES

SPEAKERS SWITCH

A combination of the power ON/OFF switch and the speaker system selector switch.

POWER OFF . . . The equipment is off.

A The speaker systems plugged into the A speaker sockets is in operation.

SPKR OFF . . . All speaker systems off.
Useful for listening through headphones.

B The speaker systems plugged into the B speaker sockets is in operation.

C The speaker systems plugged into the C speaker sockets is in operation.

A + B Both speaker systems A and B are energized.

A + C Both speaker systems A and C are energized.

PHONES JACK

Use this to plug in stereo headphones.

A full selection of high-performance headphones is available from Pioneer.

BASS & TREBLE CONTROLS

Used for adjusting bass and treble.

Clockwise (counterclockwise) turning of these controls from the FLAT position will boost (diminish) tone. Also, only the left (right) channel can be adjusted by turning the front (rear) part while the other part is being held.

Adjustment of both channels or only the left channel is made by click-stops. For normal listening, set it to the FLAT position.

FILTER SWITCHES

LOW: Setting this switch to ON will eliminate low noises such as record rumble, hum, or other interference. The switch is normally set to OFF unless the filter is required.

HIGH: Setting this switch to ON will eliminate high noises, such as record scratch, static noise from fluorescent lamps, or other interference. The switch is normally set to OFF unless the filter is required.

Note that the switches are ON when pushed.

BALANCE CONTROL

This knob is used for adjusting the stereo balance. When the volume of the right channel speaker is smaller, turn the knob clockwise toward RIGHT; when left channel volume is smaller, turn the knob counterclockwise toward LEFT. For normal listening, set it to the NORM position.

FM MUTING SWITCH

This switch is used to suppress noise between FM stations. In a fringe area, however, this switch should be kept OFF because it may suppress the desired station signal at the same time. Note that this switch is OFF when it is pushed, and ON when released.

AUDIO MUTING SWITCH


In position ON (switch pushed), the volume will be attenuated by 20dB. Push once again to restore the volume to its former level.

SIGNAL METER

This meter indicates the optimum tuning point for AM and FM stations. When the needle deflects all the way to the right, the station has been properly tuned in.

FM TUNING METER

When tuning in an FM mono or FM stereo broadcast, this meter should be used to make the tuning perfect. After the desired station has been properly tuned in with the SIGNAL METER, adjust the TUNING KNOB so that the needle comes to the center.

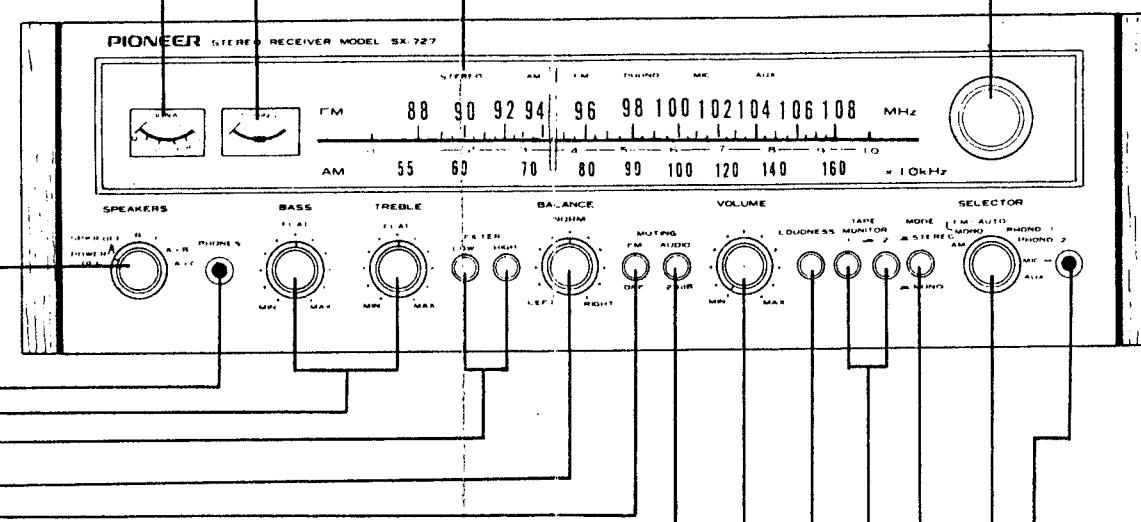

VOLUME CONTROL

The volume increases when this knob is turned clockwise.

LOUDNESS SWITCH

When listening at low volume level, set this switch ON position. This emphasizes the extreme ends of the sound spectrum, giving a more natural sound contour.

TAPE MONITOR SWITCHES (1 and 2)

These switches are set to ON for monitoring of a recording in progress or playback of recorded tapes with tape decks.

Note that the switches are ON when pushed.

1 This switch is set to ON for using a tape deck plugged into TAPE 1 MON jacks and TAPE 1 REC jacks or TAPE REC/P.B. connector.

2 This switch is set to ON for using a tape deck plugged into TAPE 2 MON jacks and TAPE 2 REC jacks.

NOTE: For phonograph records, or broadcasts, leave these switches in OFF position. If the switches are set to ON, no sound will be heard.

FM STEREO INDICATOR

This lamp will light when an FM stereo broadcast is tuned in.

TUNING KNOB

Used to tune in the desired station.

MIC JACK

Accepts the plug of the microphone. Use a suitable microphone with a 1/4 in. (6mm) standard plug.

SELECTOR SWITCH

Choose the program source.

AM AM reception.

FM MONO FM monophonic reception only.

FM AUTO FM reception with automatic switching for either stereo or monophonic programs.

PHONO 1 For playing records on a turntable plugged into the PHONO 1 jacks.

PHONO 2 Same as above, for PHONO 2 jacks.

MIC Microphone sound can be reproduced.


AUX For playing signals fed to the AUX jacks.

MODE SWITCH


STEREO Normal stereo when the switch is not pushed.

MONO Monophonic play with left and right channel input signals mixed and reproduced from both channel speakers.

3. CONNECTION DIAGRAM

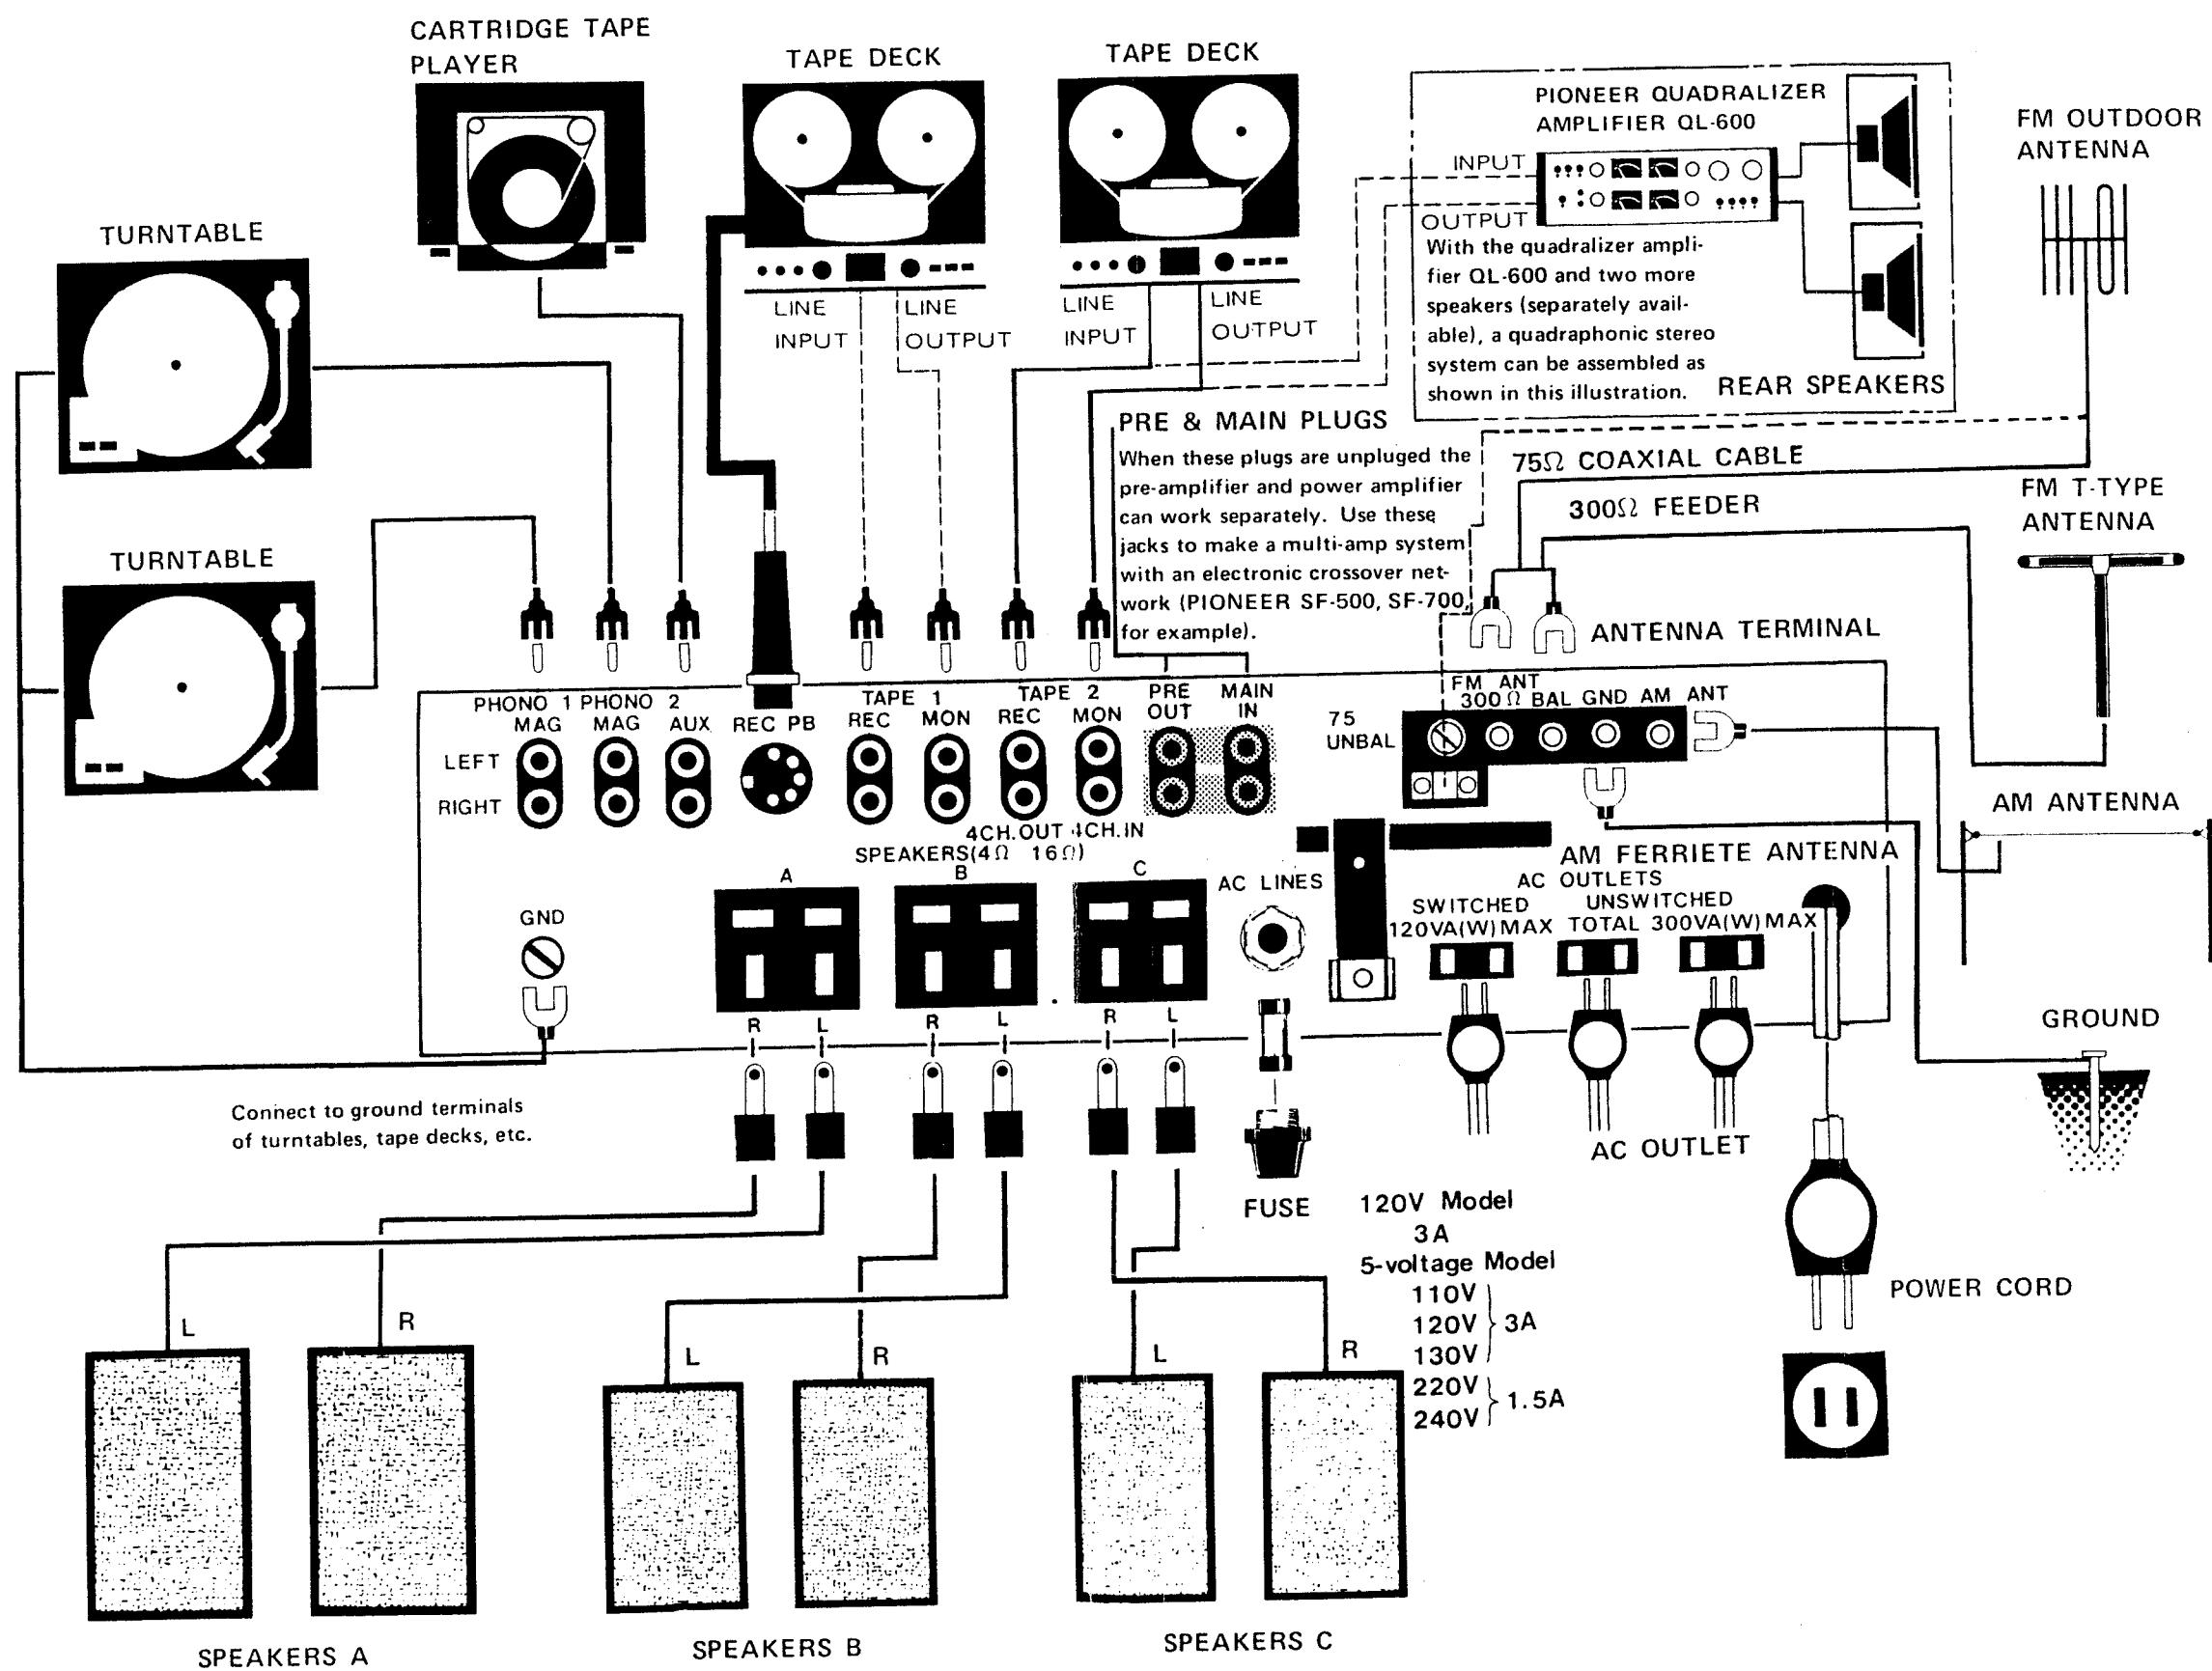

4. BLOCK DIAGRAM

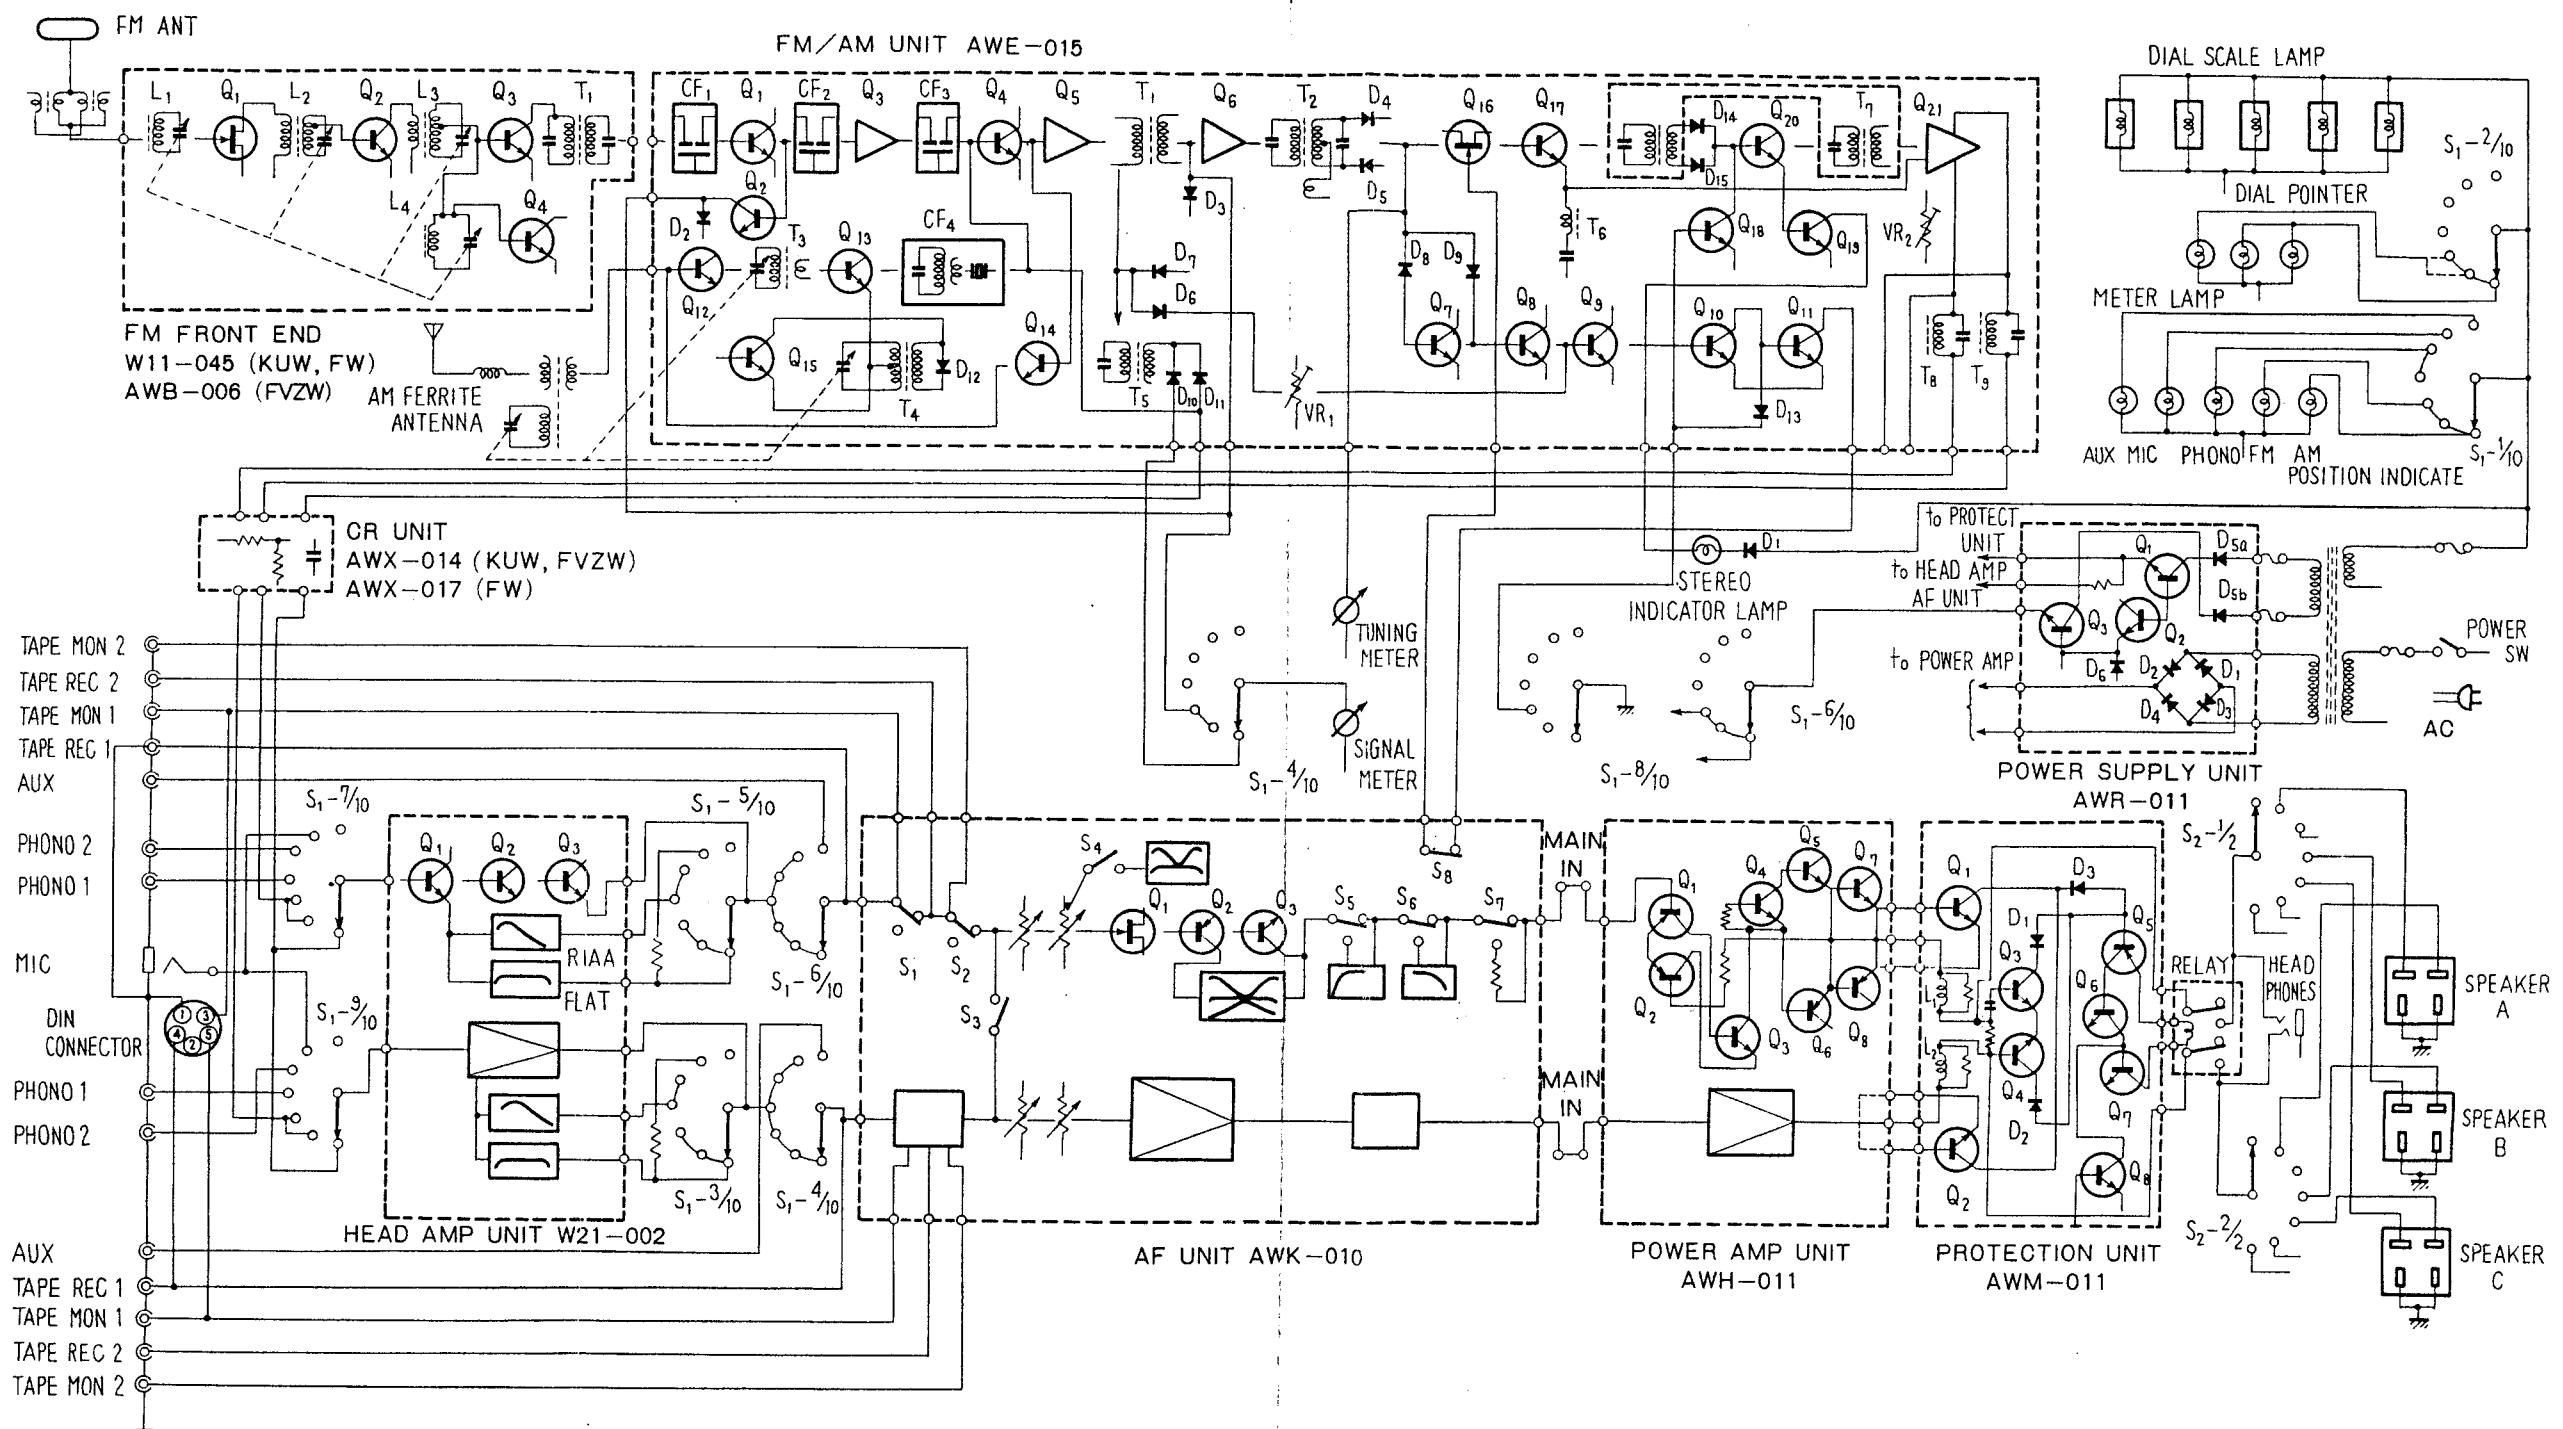

S₁ INPUT SELECTOR

1. AM
2. FM
3. FM AUTO
4. PHONO 1
5. PHONO 2
6. MIC
7. AUX

S₂ OUTPUT SELECTOR

1. POWER OFF
 2. SPEAKER A
 3. " OFF
 4. " B
 5. " C
 6. " A+B
 7. " A+C
- IN AF UNIT
- S₁ TAPE MONITOR 1
 - S₂ TAPE MONITOR 2
 - S₃ MODE
 - S₄ LOUDNESS
 - S₅ LOW FILTER
 - S₆ HIGH FILTER
 - S₇ AUDIO MUTING
 - S₈ FM MUTING

5. DISASSEMBLY

5-1 WOODEN CASE

Remove the 4 screws from the side of the wooden case. Pull the case backward off from the receiver housing. See Photo 1.

5-2 BOTTOM PLATE

The bottom plate can be removed after loosening the 8 screws. See Photo 2.

5-3 FRONT PANEL

Pull off all knobs, then remove nuts and washers from shafts and remove 2 screws from top of front panel as in Photo 4. The front panel can now be removed.

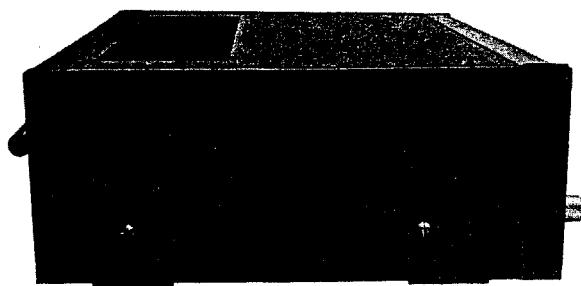


Photo 1

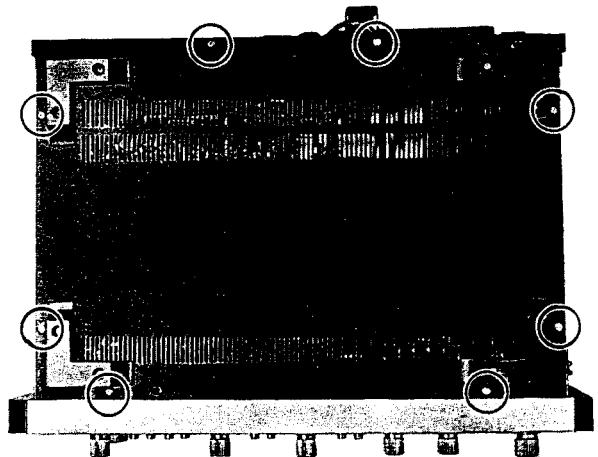


Photo 2

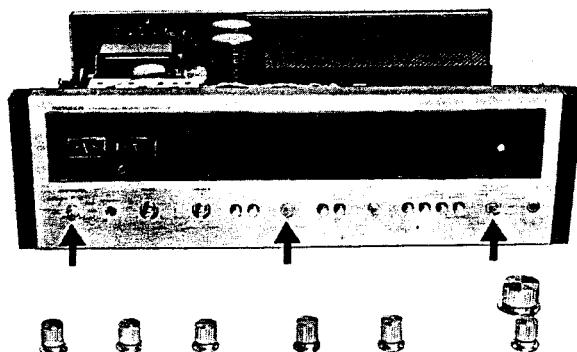


Photo 3



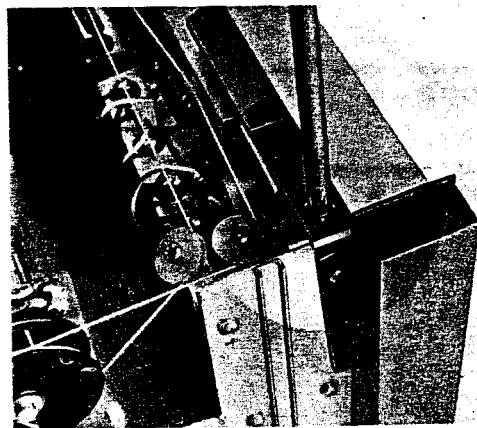



Photo 4

6. PARTS AND PCB LOCATION

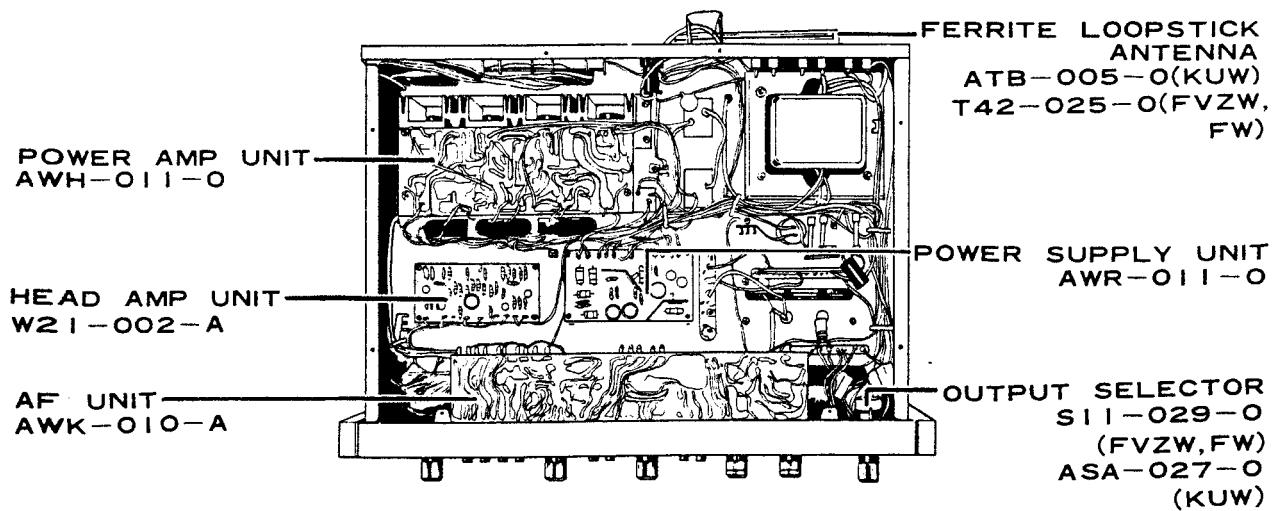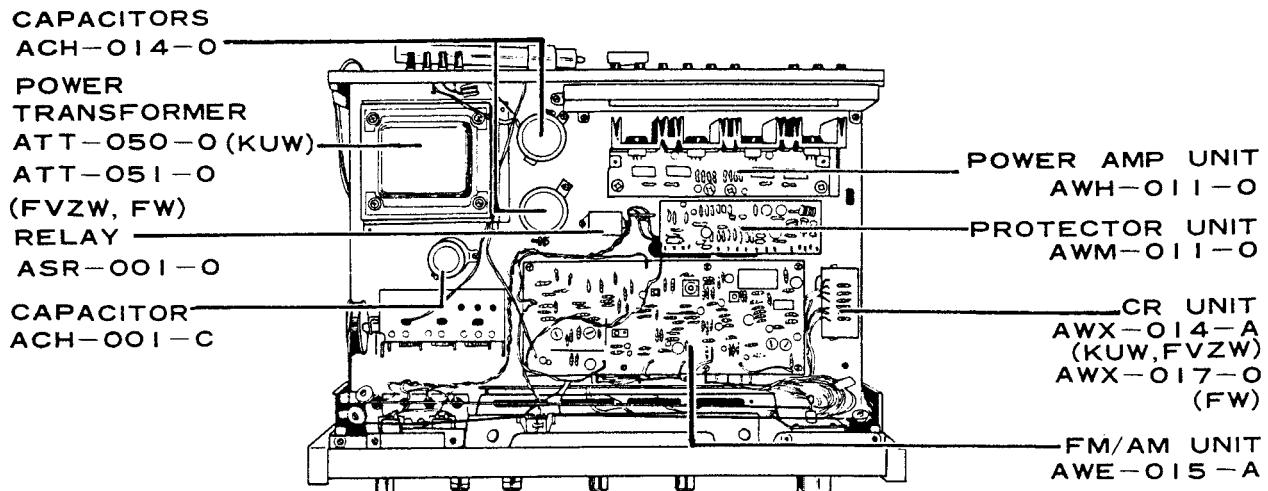

7. DIAL CORD STRINGING

1. Set the tuning capacitor to maximum capacitance.
2. Tie one end of the string to dial pulley.
3. Wind the string $\frac{1}{2}$ turns around the tuning pulley.
4. Pull the string around the small pulleys A and B, then wind it 2 turns around the tuning shaft.
5. Lead the string around the small pulleys C and D, then fasten string to the dial pointer.
6. Lead the string around the small pulley E.
7. Finally, tie the end of the string to remaining side of spring on the tuning pulley.
8. Tune receiver to low end. Fasten dial pointer to string so that it indicates low end on dial scale.

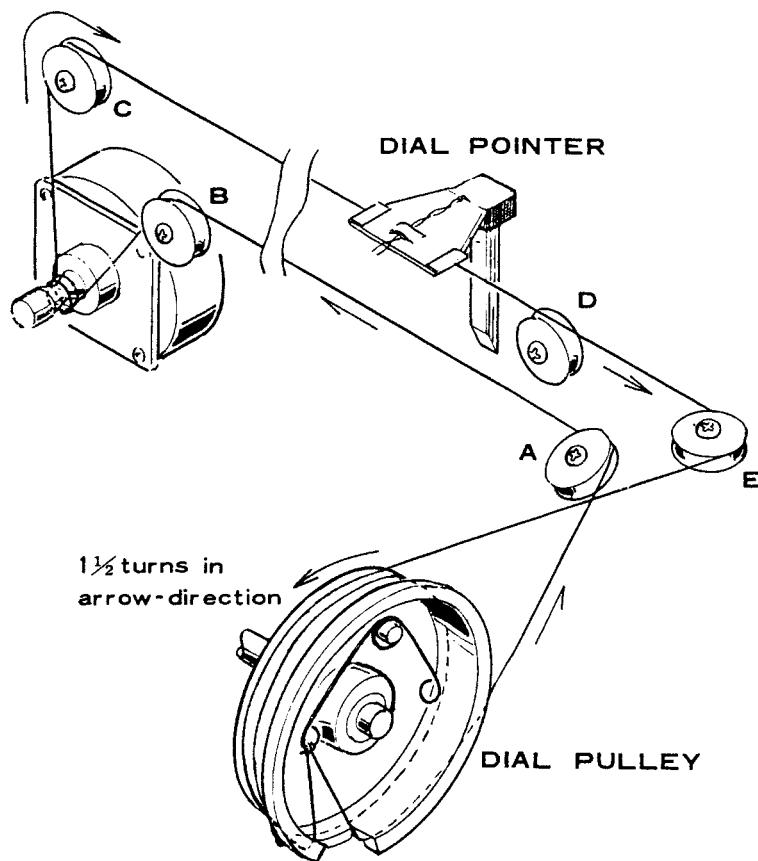

8. ALIGNMENT PROCEDURE

The following alignments are required only in very rare cases and should never be attempted without the proper test equipment. Also, only non-metallic tools must be used.

8-1 REQUIRED INSTRUMENTS

- Sweep generator: Center marker frequencies 10.7MHz, 455kHz
- Oscilloscope:
- AC VTVM
- AM/FM signal generator
- FM multiplex signal generator, preferably with RF output

8-2 FM 10.7 MHz ALIGNMENT

1. Confirm +B voltage and current for 12V ± 1 V which should be 46mA to 50mA at pin 4.
2. Disconnect leads from pins 22 (input) and 24, then connect resistor $2.2k\Omega$ as shunted to pin 24 of FM/AM unit.
3. Connect 10.7MHz sweep generator to pins 22 (hot) and 23 (ground) of FM/AM unit. Set controls as follows:
Center frequency: 10.7MHz
Output: 55dB (500 μ V)
4. Connect vertical scope input to pin 24.
5. Align core of T1 for maximum gain and symmetry to obtain scope pattern as in Fig. 1.
6. Raise generator output gradually to 80dB (10mV), repeat step 5 realignment for each output level, if necessary.
7. Disconnect one side of C23. Disconnect oscilloscope and resistor $2.2k\Omega$ from pin 24. Then reconnect lead to pin 24.
8. Connect scope input to pin 9.
9. Set generator output back to 55dB (500 μ V).
10. Adjust bottom core of T2 for maximum gain and linearity.
Adjust top core so that center frequency mark is located on zero axis, as shown in Fig. 2.
11. Reconnect C23.
12. Reconnect input lead to pin 22.

8-3 FM FRONT END ALIGNMENT

1. Confirm +B current (drain 11mA ± 4 mA).
2. Connect FM signal generator output to 300Ω antenna input.
3. Connect AC VTVM to TAPE REC jack on rear panel.
4. Adjust generator for 400Hz, 100% modulation.
5. Set SELECTOR switch on front panel to FM MONO.

6. Adjust generator frequency and tuning dial to 90MHz.
During the following adjustments, keep the generator output as low as possible.
7. Adjust L4 core first, the adjust cores of L1, L2, L3 for maximum reading on VTVM and so that tuning meter indicates center position (Fig. 3).
8. Set generator frequency and tuning dial to 106MHz.
9. Adjust trimmer capacitor CT4 first, then adjust CT1, CT2, CT3 for maximum reading on VTVM.
10. Repeat these alignments several times until satisfactory reading is obtained.
11. Finally, adjust T1 core for maximum reading on VTVM.

8-4 FM MPX DECODER ALIGNMENT

1. Set SELECTOR switch on front panel to FM AUTO.
2. Connect RF output of FM multiplex signal generator to 300Ω antenna input.
3. Adjust MPX generator as follows:

Signal Mode	Deviation
L+R	40.5kHz
19kHz (pilot)	7.5kHz
4. Connect AC VTVM to TAPE REC jack on rear panel.
5. Set generator signal mode to L-R (sub), adjust core of T6 (located on FM/AM unit) to obtain maximum reading on VTVM.
6. Set generator signal mode to L. Adjust VR2 (located on FM/AM unit) for minimum crosstalk on R channel TAPE REC output.
7. Set generator signal mode to R. Repeat above adjustment for minimum crosstalk on L channel.

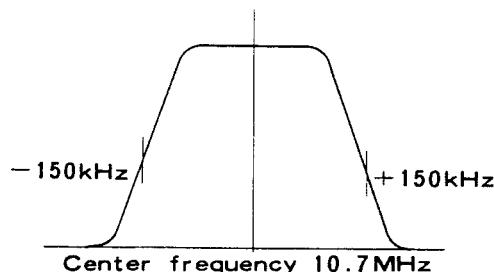


Fig. 1

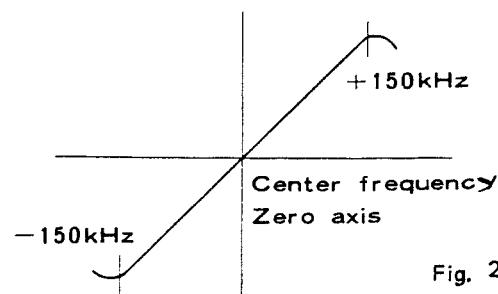


Fig. 2

8-5 MUTING THRESHOLD LEVEL ALIGNMENT


1. Set SELECTOR switch to FM MONO.
2. Turn FM MUTING switch to ON.
3. Connect FM signal generator to 300Ω antenna input.
4. Connect AC VTVM to TAPE REC jack.
5. Set output level of generator to 25dB (20 μ V), with ± 22.5 kHz deviation, and 400Hz or 1kHz modulation.
6. Tune receiver accurately to generator frequency.
7. Adjust VR1 on FM/AM unit exactly on the borderline between muting and non-muting.

8-6 AM 455kHz ALIGNMENT

1. Set SELECTOR switch on front panel to AM.
2. Connect 455kHz sweep generator to pin 15. Adjust generator output level to 60dB (1mV).
3. Connect vertical oscilloscope input to either L or R of TAPE REC jack.
4. Set tuning dial to high end position.
5. Adjust cores of CF4 and T5 for maximum gain and symmetrical pattern on oscilloscope.

8-7 AM TRACKING ALIGNMENT

1. Set SELECTOR switch to AM position.
2. For this alignment, bottom plate must be installed.
3. Set signal generator to AM function, 30% modulation with 400Hz. Connect loop antenna to generator RF output and place near receiver's ferrite antenna. See Fig. 4.
4. Connect VTVM to TAPE REC jack.
5. Keep generator as low as possible for minimum VTVM reading.
6. Tune generator and receiver to 600kHz. Adjust core of T4 on FM/AM unit for maximum VTVM reading, then adjust core of T3 and ferrite antenna.
7. Re-tune generator and receiver to 1,400kHz.
8. Adjust trimmers of tuning capacitor indicated in Fig. 3 to obtain maximum VTVM reading.

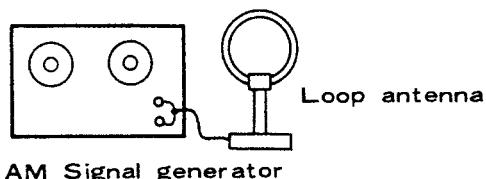

AM Signal generator



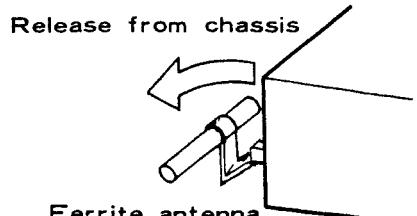


Fig. 4

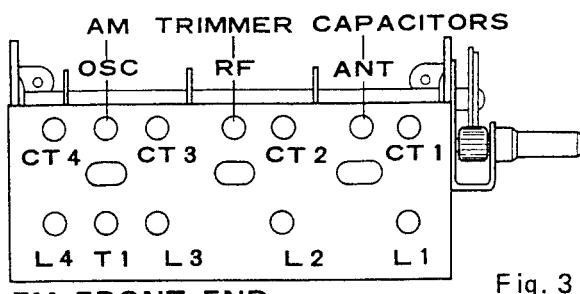


FM FRONT END

Fig. 3

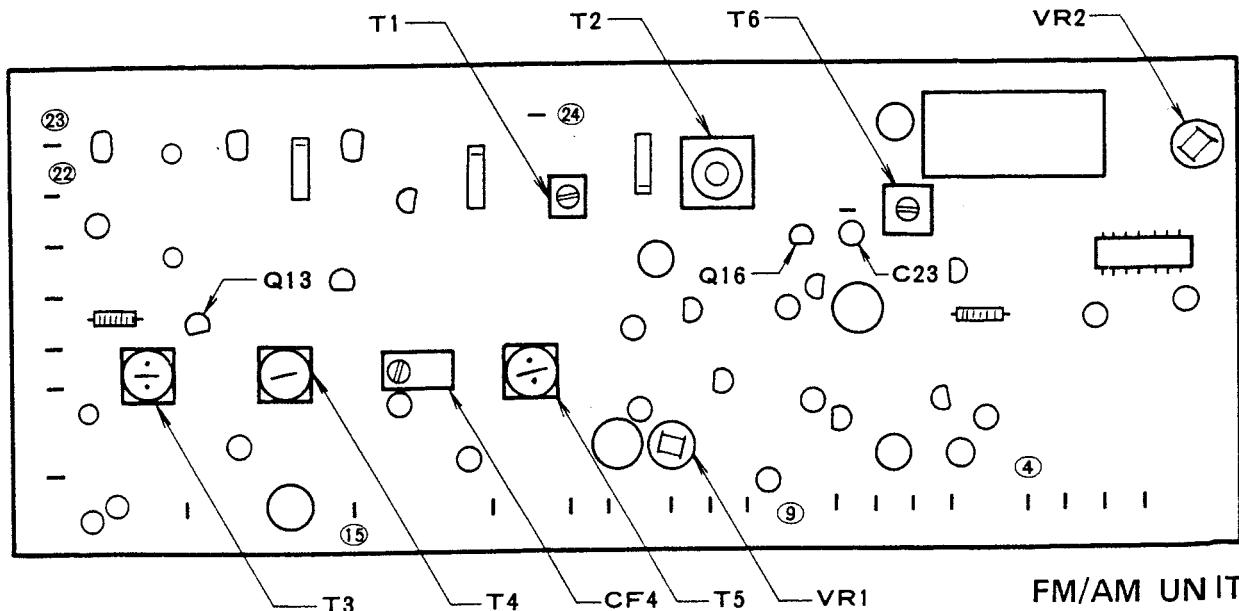


FM/AM UNIT

9. PACKING METHOD AND PART NUMBERS

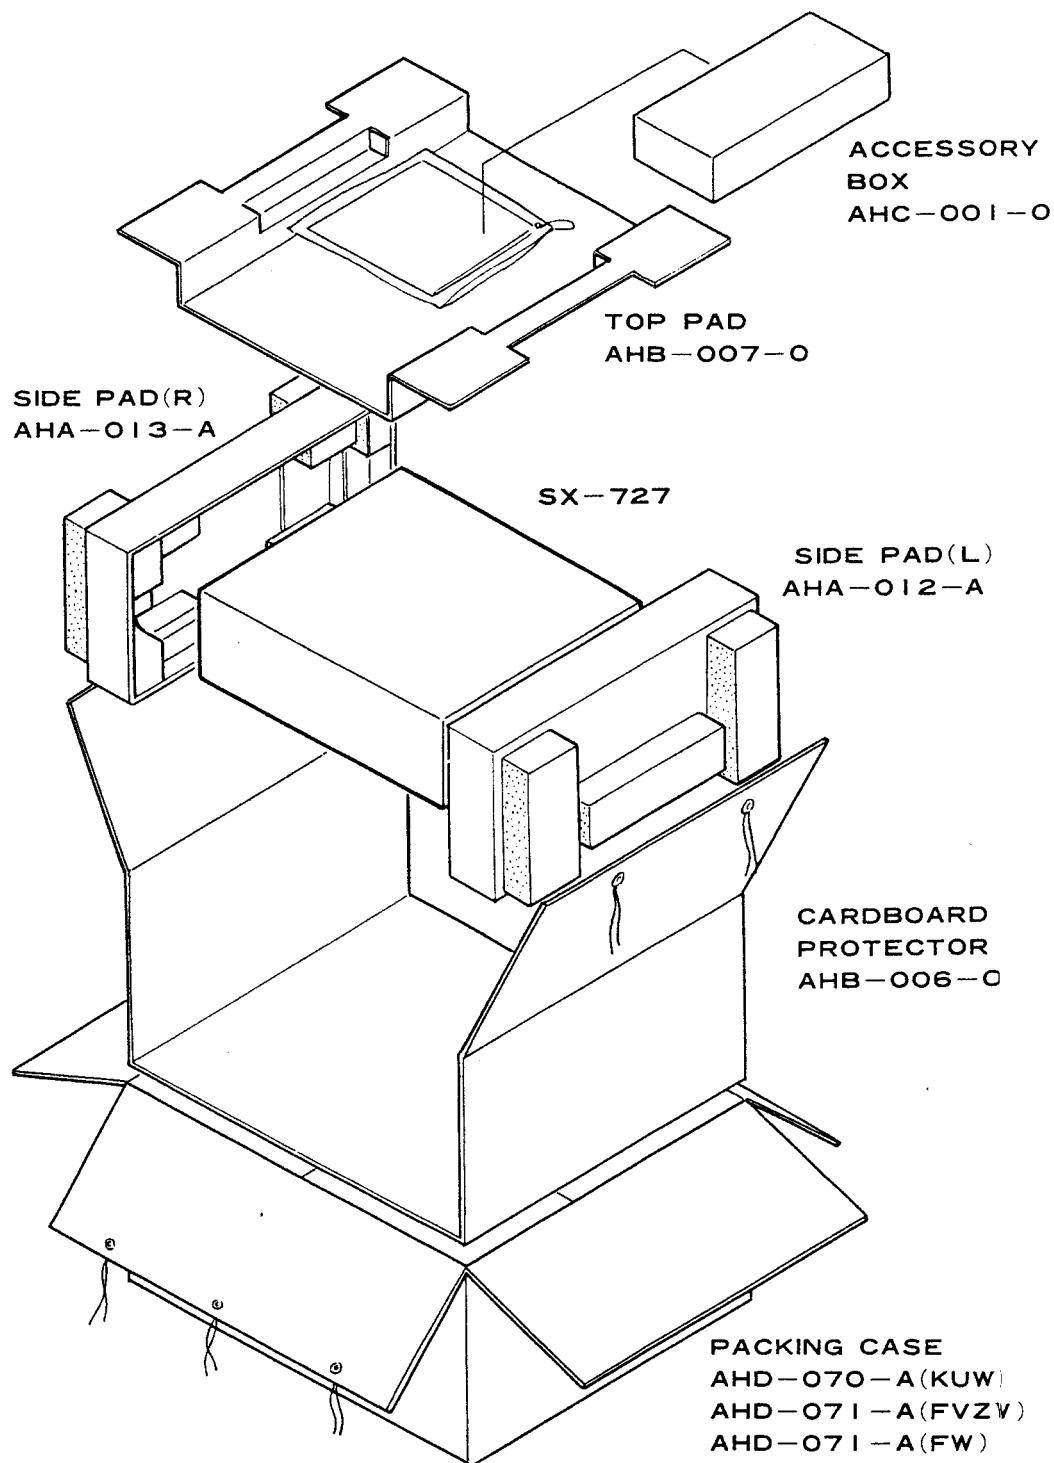

10. SCHEMATIC DIAGRAMS, PCB PATTERNS AND PARTS LIST

10.1 UNIT CONNECTION DIAGRAM AND MISCELLANEOUS PARTS

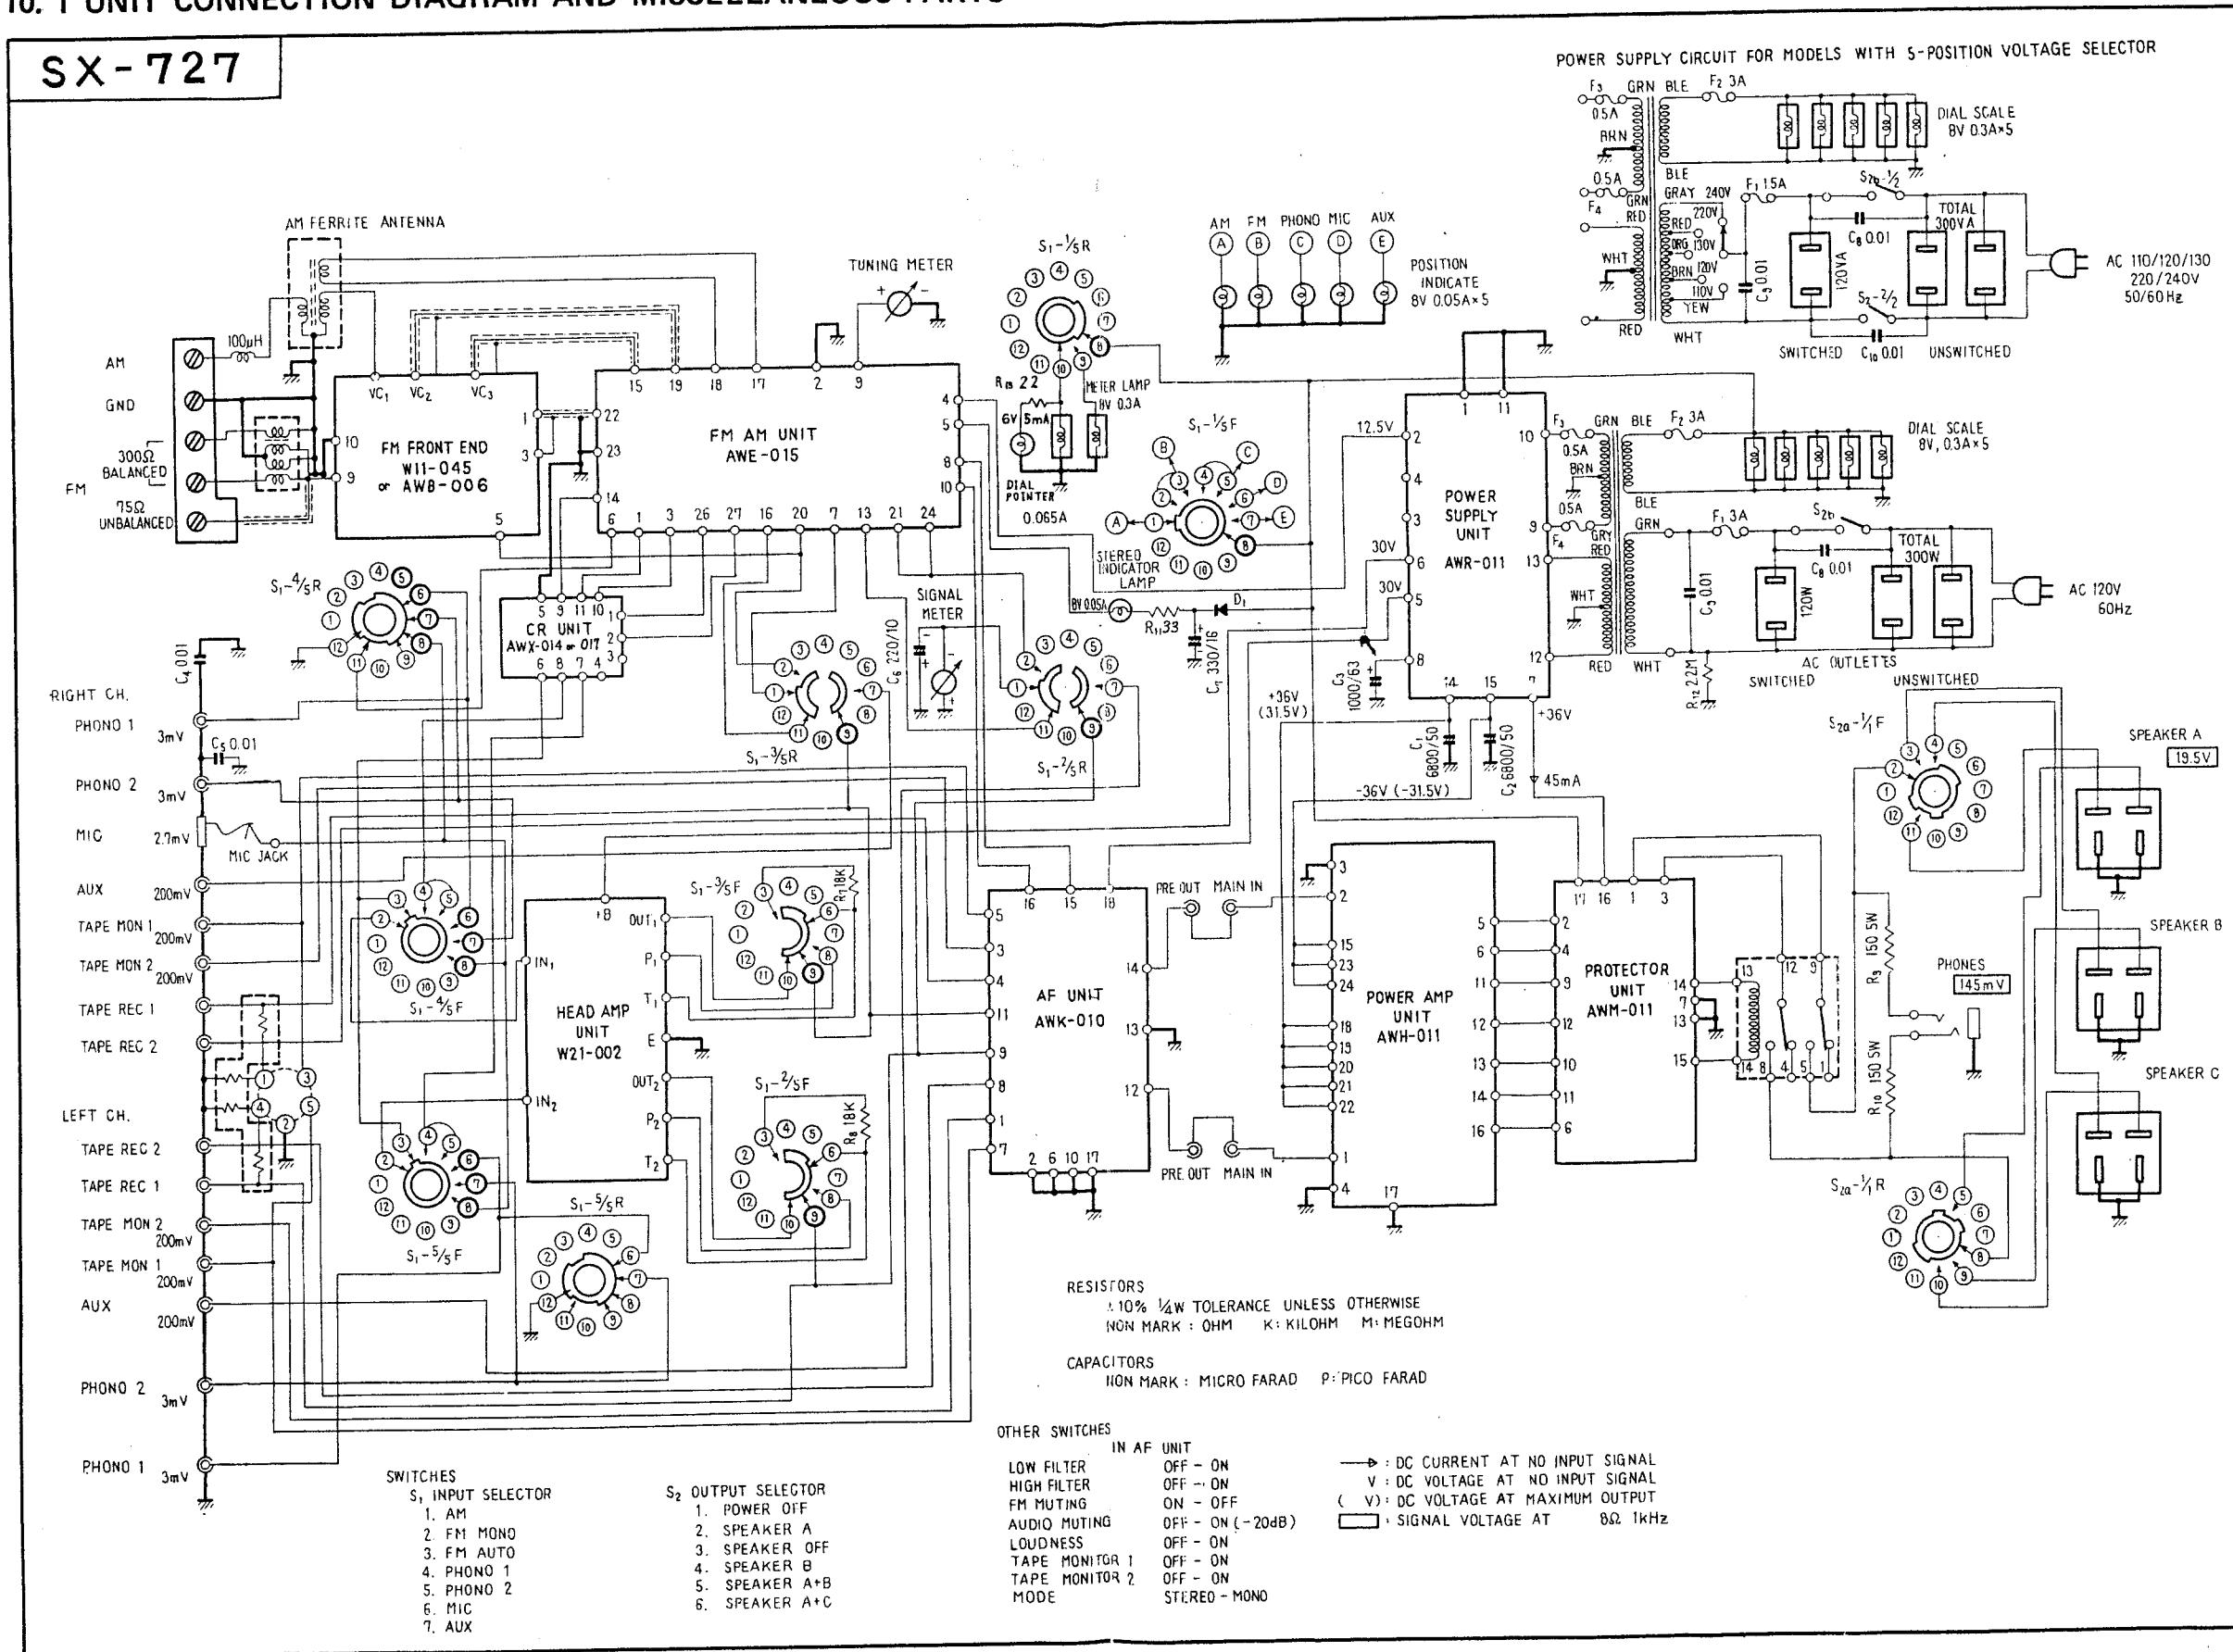

MISCELLANEOUS PARTS

NOTE

This parts list is for the KUW model, the FVZW or FW model uses some different parts as following pages:

for FVZW model page 19
for FW model page 21

CAPACITORS

IN μF UNLESS OTHERWISE NOTED, p: $\mu\mu\text{F}$.

Symbol	Description	Part No.
C1	Electrolytic 6800 50V	ACH-014-0
C2	Electrolytic 6800 50V	ACH-014-0
C3	Electrolytic 1000 63V	ACH-001-C
C4	Ceramic 0.01 50V	CKDYF 103Z 50
C5	Ceramic 0.01 50V	CKDYF 103Z 50
C6	Electrolytic 220 10V	CEA 221M 10
C7	Electrolytic 330 16V	CEA 331M 16
C8	Ceramic 0.01 DC 1.4kV	C43-003-0
C9	Oil paper 0.01 800V	ACE-001-A

RESISTORS

IN Ω , $\frac{1}{2}\text{W}$ UNLESS OTHERWISE NOTED, k: $\text{k}\Omega$, M: $\text{M}\Omega$

Symbol	Description	Part No.
	Compound part for REC terminal	W52-004-0
R7	Carbon film 18k	RD%PS 183J
R8	Carbon film 18k	RD%PS 183J
R9	Wire wound 150 5W	RT5B 151K
R10	Wire wound 150 5W	RT5B 151K
R11	Carbon film 33	RD%PS 330J
R12	Carbon film 2.2M $\frac{1}{2}\text{W}$	RD%PW 225J
R13	Carbon film 22	RD%PS 220J

OTHERS

Symbol	Description	Part No.
	FM front end	W11-045-0
	FM/AM unit	AWE-015-A
	Head amp unit	W21-002-A
	AF unit	AWK-010-A
	Power amp unit	AWH-011-0
	Protector unit	AWM-011-0
	Power supply unit	AWR-011-0
	CR unit	AWX-014-A
	Lamp box unit	AWX-016-0
	Front panel ass'y	ANB-121-0
	Wooden case	AMM-012-0
	Dial shaft ass'y	AXA-013-0
	Dial pulley ass'y	M42-080-A
	Ferrite loopstick antenna holder ass'y	AXB-001-0
	Foot	AEC-027-B
	Pilot lamp for dial scale	E22-017-0
	Pilot lamp for meter	E22-032-0
	Pilot lamp for program indicator	AEL-007-0
	Fuse 3A	E21-021-0
	Fuse 3A for protection	E21-022-0
	Fuse 0.5A for protection	E21-019-A
	Spare AC outlet	AKP-002-0
	Speaker socket	K72-028-0
	Headphones jack	K72-026-0
	Microphone jack	K72-024-0
	5P connector (DIN)	K93-003-B
	Pilot lamp (for dial scale) socket	K91-005-A
	Fuse Holder	AKR-007-0
	Jumper plug	K71-026-0
	Screw for grounding	B11-012-A

DIODE

Symbol	Description	Part No.
D1	SIB01-01	

SWITCHES AND RELAY

Symbol	Description	Part No.
	Selector switch Output selector Relay	ASB-011-A S11-029-0 ASR-001-0

COILS AND TRANSFORMERS

Symbol	Description	Part No.
	Power transformer	ATT-050-0
	Ferrite loopstick antenna	ATB-005-0
	Balun transformer	T22-025-A
	Choke coil	T24-030-0

Symbol	Description	Part No.
	Screw to fix wooden case	B11-016-B
	AC power cord	D11-003-E
	Speaker plug	K72-007-B
	Pin plug	K72-015-A
	Operating instructions	ARB-045-0
	FM T-type antenna	D52-013-0
	Packing case	AHD-070-A
	Side pad (L)	AHA-012-A
	Side pad (R)	AHA-013-A
	Cardboard protector	AHB-006-0
	Top pad	AHB-007-0
	Accessory box	AHC-001-0
	Dial scale	AAG-029-0
	Dial pointer ass'y	AAF-011-A
	Signal meter	AAW-006-0
	Tuning meter	AAW-007-0
	Knob for tuning	AAA-006-0
	Knob for volume, balance, selector speakers and mode	AAB-007-B
	Knob for bass and treble (L)	AAB-013-0
	Knob for bass and treble (R)	AAB-014-0
	Knob for push switch	AAD-026-0
	6P input terminal board (PHONO terminal)	AKB-007-0
	6P input terminal board (TAPE terminal)	AKB-006-0
	Antenna terminal board	K11-043-C
	4p ground terminal	K13-047-0

For FVZW model

CAPACITORS

IN μF UNLESS OTHERWISE NOTED, p: $\mu\mu\text{F}$.

Symbol	Description	Part No.	
C1	Electrolytic 6800 50V	ACH-014-0	
C2	Electrolytic 6800 50V	ACH-014-0	
C3	Electrolytic 1000 63V	ACH-001-C	
C4	Ceramic 0.01 50V	CKDYF 103Z 50	
C5	Ceramic 0.01 50V	CKDYF 103Z 50	
C6	Electrolytic 220 10V	CEA 221M 10	
C7	Electrolytic 330 16V	CEA 331M 16	
C8	Ceramic 0.01 DC 1.4kV	C43-003-0	
C9	Ceramic 0.01 DC 1.4kV	C43-003-0	
C10	Ceramic 0.01 DC 1.4kV	C43-003-0	

RESISTORS

IN Ω , $\frac{1}{2}\text{W}$ UNLESS OTHERWISE NOTED, k: $\text{k}\Omega$, M: $\text{M}\Omega$.

Symbol	Description	Part No.	
	Compound part for REC terminal	W52-004-0	
R7	Carbon film 18k	RD1/4PS 183J	
R8	Carbon film 18k	RD1/4PS 183J	
R9	Wire wound 150 5W	RT5B 151K	
R10	Wire wound 150 5W	RT5B 151K	
R11	Carbon film 33	RD1/4PS 330J	
R13	Carbon film 22 $\frac{1}{2}\text{W}$	RD1/4PS 220J	

DIODE

Symbol	Description	Part No.	
D1	SIB01-01		

SWITCHES

Symbol	Description	Part No.	
	Selector switch Output selector Relay	ASB-011-A S11-029-0 ASR-001-0	

COILS AND TRANSFORMERS

Symbol	Description	Part No.	
	Power transformer Ferrite loopstick antenna Balun transformer Choke coil	ATT-051-0 T42-025-0 T22-025-A T24-030-0	

OTHERS

Symbol	Description	Part No.
	FM front end	AWB-006-0
	FM/AM unit	AWE-015-A
	Head amp unit	W21-002-A
	AF unit	AWK-010-A
	Power amp unit	AWH-011-0
	Protector unit	AWM-011-0
	Power supply unit	AWR-011-0
	CR unit	AWX-014-A
	Lamp box unit	'AWX-016-0
	Front panel ass'y	ANB-121-0
	Wooden case	AMM-012-0
	Dial shaft ass'y	AXA-013-0
	Dial pulley ass'y	M42-080-A
	Ferrite loopstick antenna holder ass'y	AXB-001-0
	Foot	AEC-027-B
	Pilot lamp for dial scale	E22-017-0
	Pilot lamp for meter	E22-032-0
	Pilot lamp for program indicator	AEL-007-0
	Fuse 1.5A	E21-012-0
	Fuse 3A for protection	E21-022-0
	Fuse 0.5A for protection	E21-019-A
	Spare AC outlet	AKP-002-0
	Speaker socket	K72-028-0
	Headphones jack	K72-026-0
	Microphone jack	K72-024-0
	5P connector (DIN)	K93-003-B
	Pilot lamp (for dial scale) socket	K91-005-A
	Line voltage selector	AKR-001-0
	Jumper plug	K71-026-0
	Screw for grounding	B11-012-A

Symbol	Description	Part No.
	Screw to fix wooden case	B11-016-B
	AC power cord	D11-002-B
	Speaker plug	K72-007-B
	Pin plug	K72-015-A
	Fuse 3A	E21-006-0
	Operating instructions	ARB-045-0
	FM T-type antenna	D52-013-0
	Packing case	AHD-071-A
	Side pad (L)	AHA-012-A
	Side pad (R)	AHA-013-A
	Cardboard protector	AHB-006-0
	Top pad	AHB-007-0
	Accessory box	AHC-001-0
	Dial scale	AAG-029-0
	Dial pointer ass'y	AAF-011-A
	Signal meter	AAW-006-0
	Tuning meter	AAW-007-0
	Knob for tuning	AAA-006-0
	Knob for volume, balance, selector, speakers and mode	AAB-007-B
	Knob for bass and treble (L)	AAB-013-0
	Knob for bass and treble (R)	AAB-014-0
	Knob for push switch	AAD-026-0
	6P input terminal board (PHONO terminal)	AKB-007-0
	6P input terminal board (TAPE terminal)	AKB-006-0
	Antenna terminal board	K11-043-C
	4P ground terminal	K13-047-0

21 For FW model

CAPACITORS

IN μF UNLESS OTHERWISE NOTED, p: $\mu\mu\text{F}$.

Symbol	Description			Part No.	
C1	Electrolytic	6800	50V	ACH-014-0	
C2	Electrolytic	6800	50V	ACH-014-0	
C3	Electrolytic	1000	63V	ACH-001-C	
C4	Ceramic	0.01	50V	CKDYF 103Z 50	
C5	Ceramic	0.01	50V	CKDYF 103Z 50	
C6	Electrolytic	220	10V	CEA 221P 10	
C7	Electrolytic	330	16V	CEA 331P 16	
C8	Ceramic	0.01	DC 1.4kV	C43-003-0	
C9	Ceramic	0.01	DC 1.4kV	C43-003-0	
C10	Ceramic	0.01	DC 1.4kV	C43-003-0	

RESISTORS

IN Ω , $\frac{1}{2}\text{W}$ UNLESS OTHERWISE NOTED. k: $\text{k}\Omega$, M: $\text{M}\Omega$.

Symbol	Description			Part No.	
	Compound part for REC terminal			W52-004-0	
R7	Carbon film	18k		RD%PS 183J	
R8	Carbon film	18k		RD%PS 183J	
R9	Wire wound	150	5W	RT5B 151K	
R10	Wire wound	150	5W	RT5B 151K	
R11	Carbon film	33		RD%PS 330J	
R13	Carbon film	22	$\frac{1}{2}\text{W}$	RD%PS 220J	

DIODE

Symbol	Description	Part No.	
D1	SIB01-01		

SWITCHES

Symbol	Description	Part No.	
	Selector switch	ASB-011-A	
	Output selector	S11-029-0	
	Relay	ASR-001-0	

COILS AND TRANSFORMERS


Symbol	Description	Part No.	
	Power transformer	ATT-051-0	
	Ferrite loopstick antenna	T42-025-0	
	Balun transformer	T22-025-A	
	Choke coil	T24-030-0	

OTHERS

Symbol	Description	Part No.	
	FM front end	W11-045-0	
	FM/AM unit	AWE-015-A	
	Head amp unit	W21-002-A	
	AF unit	AWK-010-A	
	Power amp unit	AWH-011-0	
	Protector unit	AWM-011-0	
	Power supply unit	AWR-011-0	
	CR unit	AWX-017-0	
	Lamp box unit	AWX-016-0	
	Front panel ass'y	ANB-121-0	
	Wooden case	AMM-012-0	
	Dial shaft ass'y	AXA-013-0	
	Dial pulley ass'y	M42-080-A	
	Ferrite loopstick antenna holder ass'y	AXB-001-0	
	Foot	AEC-027-B	
	Pilot lamp for dial scale	E22-017-0	
	Pilot lamp for meter	E22-032-0	
	Pilot lamp for program indicator	AEL-007-0	
	Fuse 1.5A	E21-012-0	
	Fuse 3A for protection	E21-022-0	
	Fuse 0.5A for protection	E21-019-A	
	Spare AC outlet	AKP-002-0	
	Speaker socket	K72-028-0	
	Headphones jack	K72-026-0	
	Microphone jack	K72-024-0	
	5P connector (DIN)	K93-003-B	
	Pilot lamp (for dial scale) socket	K91-005-A	
	Line voltage selector	AKR-001-0	
	Jumper plug	K71-026-0	
	Screw for grounding	B11-012-A	


Symbol	Description	Part No.	
	Screw to fix wooden case	B11-016-B	
	AC power cord	D11-002-B	
	Speaker plug	K72-007-B	
	Pin plug	K72-015-A	
	Fuse 3A	E21-006-0	
	Operating instructions	ARB-045-0	
	FM T-type antenna	D52-013-0	
	Packing case	AHD-071-A	
	Side pad (L)	AHA-012-A	
	Side pad (R)	AHA-013-A	
	Cardboard protector	AHB-006-0	
	Top pad	AHB-007-0	
	Accessory box	AHC-001-0	
	Dial scale	AAG-029-0	
	Dial pointer ass'y	AAF-011-A	
	Signal meter	AAW-006-0	
	Tuning meter	AAW-007-0	
	Knob for tuning	AAA-006-0	
	Knob for volume, balance, selector, speakers and mode	AAB-007-B	
	Knob for bass and treble (L)	AAB-013-0	
	Knob for bass and treble (R)	AAB-014-0	
	Knob for push switch	AAD-026-0	
	6P input terminal board (PHONO terminal)	AKB-007-0	
	6P input terminal board (TAPE terminal)	AKB-006-0	
	Antenna terminal board	K11-043-C	
	4P ground terminal	K13-047-0	


10.3 FM FRONT END (W11-045)(AWB-006)

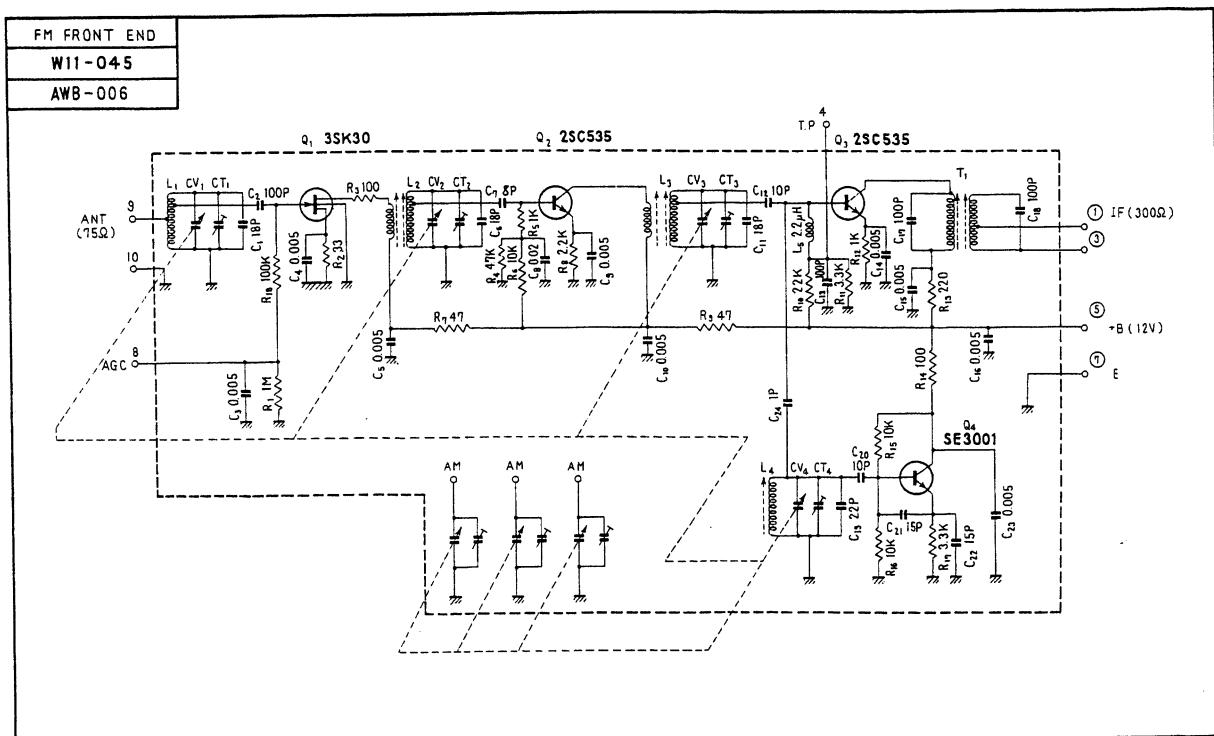

NOTE: AWB-006 is FTZ-approved and W11-045 is applied to any place except FTZ-approved one.

10.4 FM/AM UNIT(AWE-015)

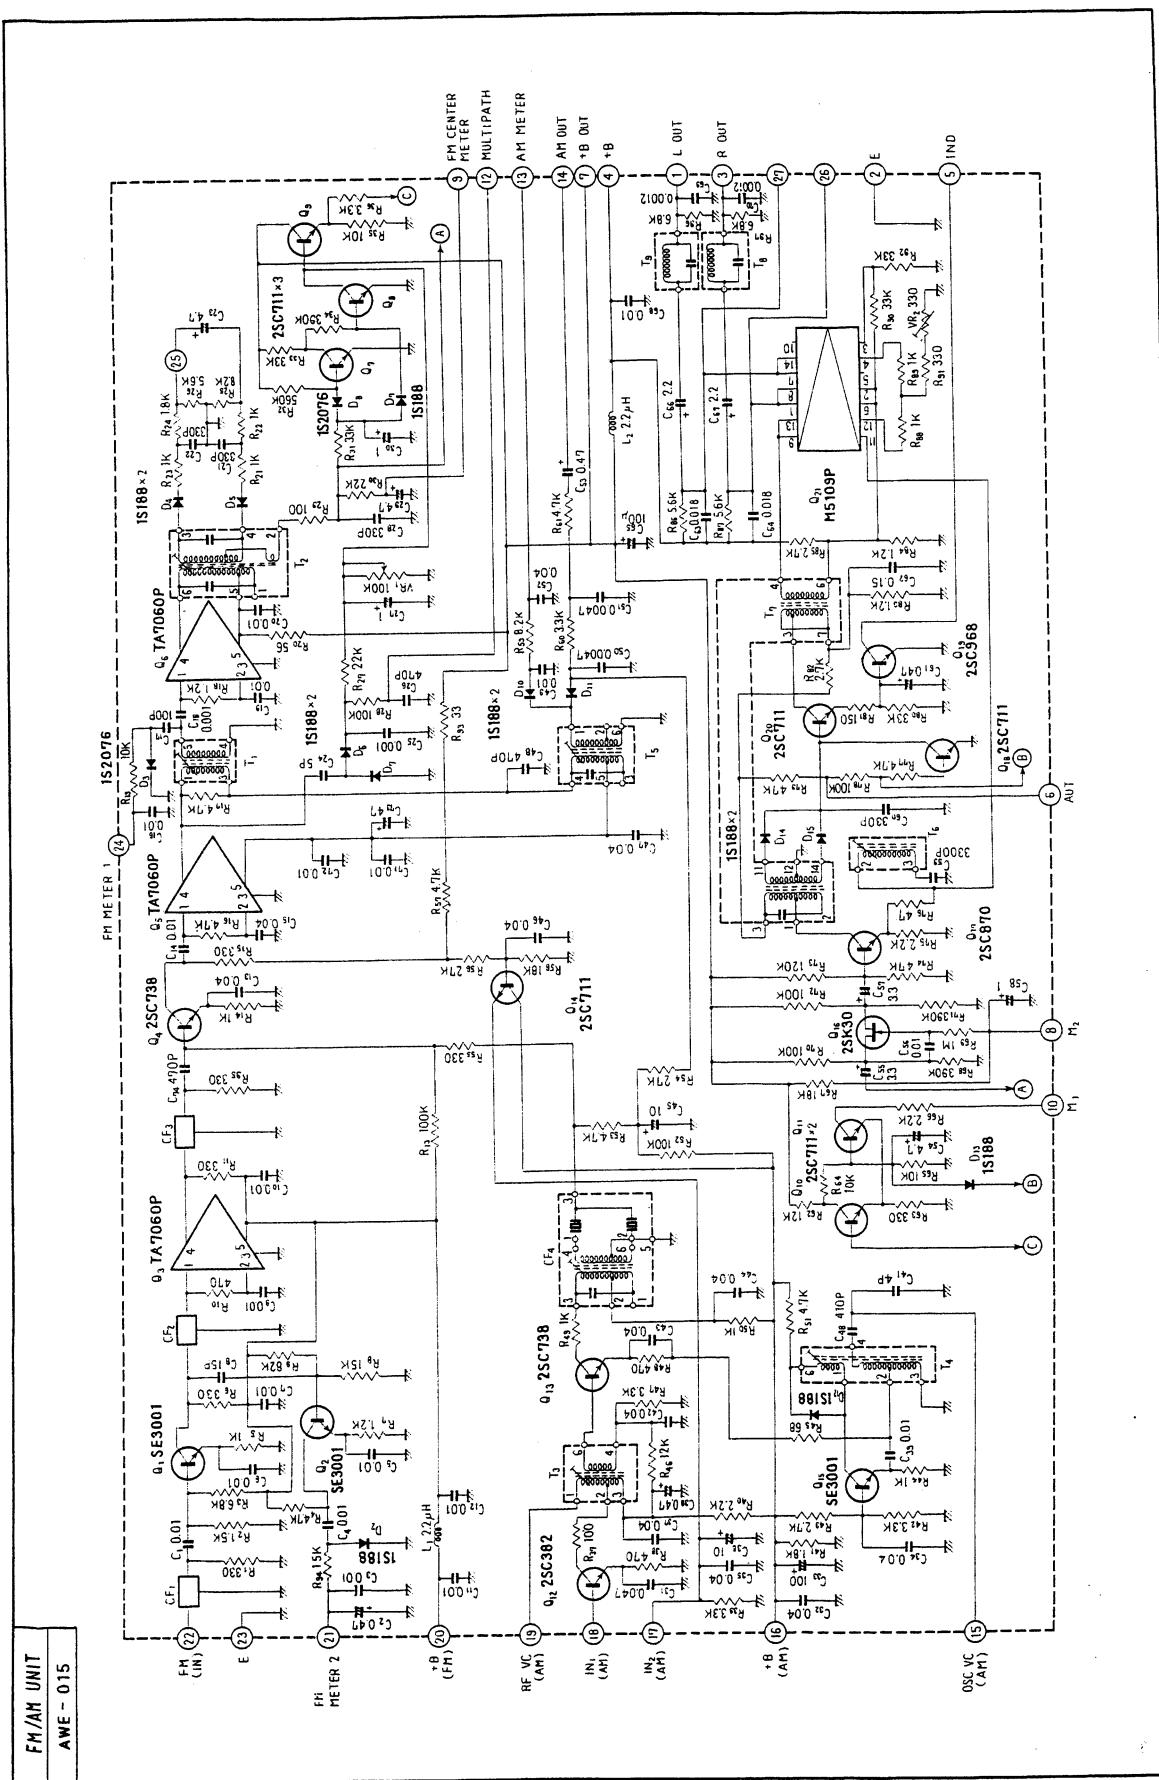

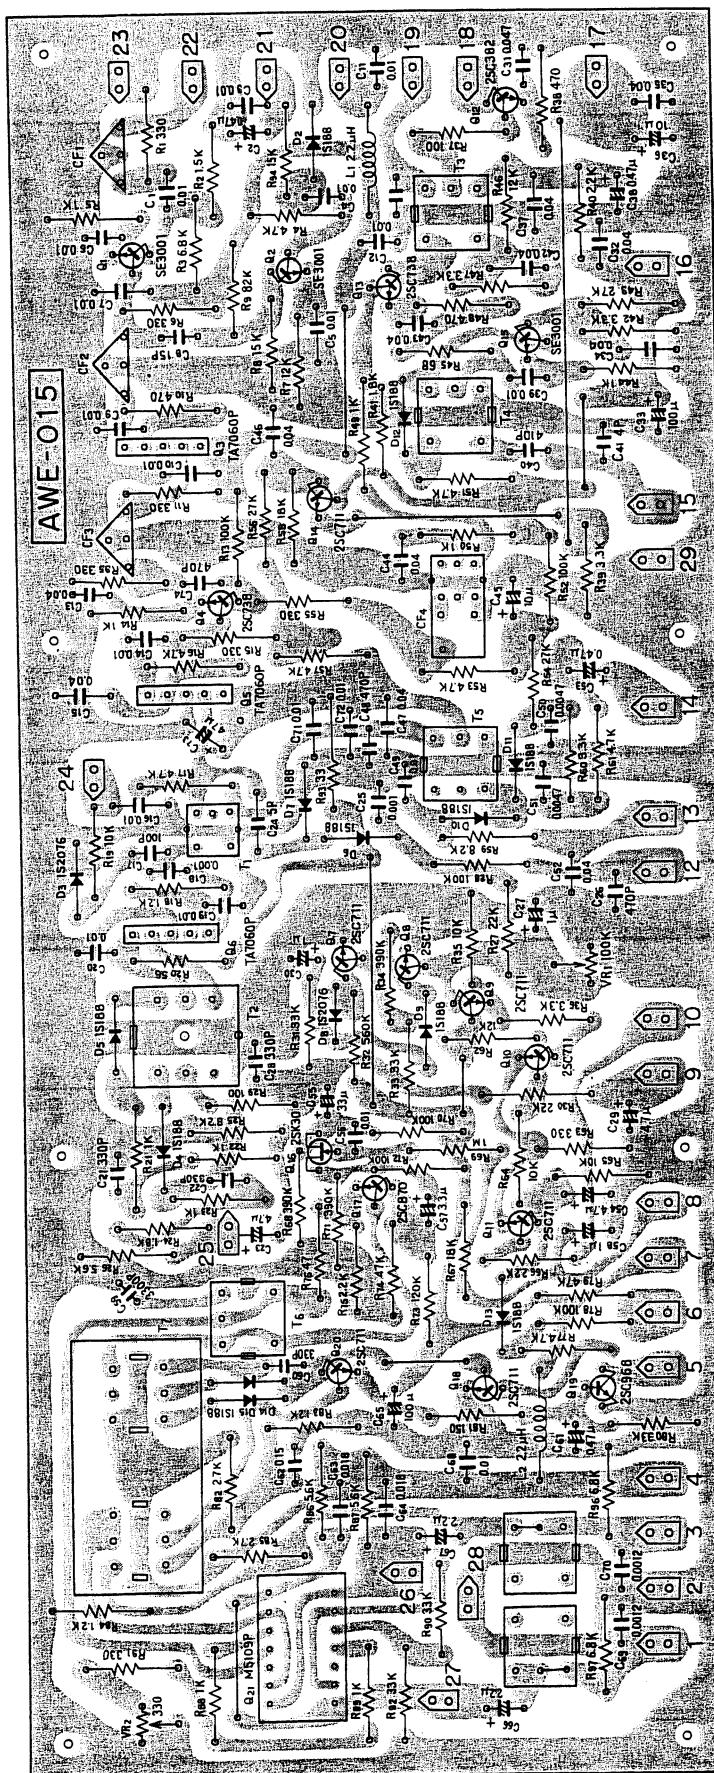

26 PARTS LIST OF FM/AM UNIT

CAPACITORS

Symbol	Description			Part No.		
C1	Ceramic	0.01	50V	CKDYF	103Z 50	
C2	Electrolytic	0.47	50V	CEA	R47P 50	
C3	Ceramic	0.01	50V	CKDYF	103Z 50	
C4	Ceramic	0.01	50V	CKDYF	103Z 50	
C5	Ceramic	0.01	50V	CKDYF	103Z 50	
C6	Ceramic	0.01	50V	CKDYF	103Z 50	
C7	Ceramic	0.01	50V	CKDYB	103K 50	
C8	Ceramic	15p	50V	CCDSL	150K 50	
C9	Ceramic	0.01	50V	CKDYF	103Z 50	
C10	Ceramic	0.01	50V	CKDYB	103K 50	
C11	Ceramic	0.01	50V	CKDYF	103Z 50	
C12	Ceramic	0.01	50V	CKDYB	103K 50	
C13	Ceramic	0.04	50V	CKDYF	403Z 50	
C14	Ceramic	0.01	50V	CKDYF	103Z 50	
C15	Ceramic	0.04	50V	CKDYF	403Z 50	
C16	Ceramic	0.01	50V	CKDYF	103Z 50	
C17	Ceramic	100p	50V	CCDSL	101K 50	
C18	Ceramic	0.001	50V	CKDYB	102K 50	
C19	Ceramic	0.01	50V	CKDYF	103Z 50	
C20	Ceramic	0.01	50V	CKDYF	103Z 50	
C21	Ceramic	330p	50V	CKDYB	331K 50	
C22	Ceramic	330p	50V	CKDYB	331K 50	
C23	Electrolytic	4.7	25V	CEA	4R7P 25	
C24	Ceramic	5p	50V	CCDSL	050D 50	
C25	Ceramic	0.001	50V	CKDYB	102K 50	

Symbol	Description			Part No.		
C26	Ceramic	470p	50V	CKDYB	471K 50	
C27	Electrolytic	1	50V	CEA	010P 50	
C28	Ceramic	330p	50V	CKDYB	331K 50	
C29	Electrolytic	4.7	25V	CEA	4R7P 25	
C30	Electrolytic	1	50V	CEA	010P 50	
C31	Ceramic	0.047	25V	CKDBC	473Z 25	
C32	Ceramic	0.04	50V	CKDYF	403Z 50	
C33	Electrolytic	100	16V	CEA	101P 16	
C34	Ceramic	0.04	50V	CKDYF	403Z 50	
C35	Ceramic	0.04	50V	CKDYF	403Z 50	
C36	Electrolytic	10	16V	CEA	100P 16	
C37	Ceramic	0.04	50V	CKDYF	403Z 50	
C38	Electrolytic	0.47	50V	CEA	R47P 50	
C39	Mylar	0.01	50V	CQMA	103K 50	
C40	Styrol	410p	50V	CQSA	411K 50	
C41	Ceramic	4p	50V	CCDSL	040D 50	
C42	Ceramic	0.04	50V	CKDYF	403Z 50	
C43	Ceramic	0.04	50V	CKDYF	403Z 50	
C44	Ceramic	0.04	50V	CKDYF	403Z 50	
C45	Electrolytic	10	16V	CEA	100P 16	
C46	Ceramic	0.04	50V	CKDYF	403Z 50	
C47	Ceramic	0.04	50V	CKDYF	403Z 50	
C48	Ceramic	470p	50V	CKDYB	471K 50	
C49	Ceramic	0.01	50V	CKDYF	103Z 50	
C50	Mylar	0.0047	50V	CQMA	472K 50	
C51	Mylar	0.0047	50V	CQMA	472K 50	
C52	Ceramic	0.04	50V	CKDYF	403Z 50	
C53	Electrolytic	0.47	25V	CSSA	R47X 25	
C54	Electrolytic	4.7	25V	CEA	4R7P 25	
C55	Electrolytic	3.3	16V	CSSA	3R3M 16	

Symbol	Description			Part No.		
C56	Mylar	0.01	50V	CQMA	103K 50	
C57	Electrolytic	3.3	16V	CSSA	3R3M 16	
C58	Electrolytic	1	50V	CEA	010P 50	
C59	Styrol	0.0033	50V	C15-011-A		
C60	Ceramic	330p	50V	CKDYB	331K 50	
C61	Electrolytic	0.47	50V	CEA	R47P 50	
C62	Mylar	0.15	50V	CQMA	154K 50	
C63	Mylar	0.018	50V	CQMA	183K 50	
C64	Mylar	0.018	50V	CQMA	183K 50	
C65	Electrolytic	100	16V	CEA	101P 16	
C66	Electrolytic	2.2	16V	CSSA	2R2M 16	
C67	Electrolytic	2.2	16V	CSSA	2R2M 16	
C68	Ceramic	0.01	50V	CKDYF	103Z 50	
C69	Mylar	0.0012	50V	CQMA	122K 50	
C70	Mylar	0.0012	50V	CQMA	122K 50	
C71	Ceramic	0.01	50V	CKDYB	103K 50	
C72	Ceramic	0.01	50V	CKDYB	103K 50	
C73	Electrolytic	47	16V	CEA	470P 16	
C74	Ceramic	470p	50V	CKDYB	471K 50	

RESISTORS

Symbol	Description			Part No.		
VR1	Semi-fixed	100k-B		C92-047-0		
VR2	Semi-fixed	330-B		C92-065-A		
R1	Carbon film	330		RD%PS	331J	
R2	Carbon film	1.5k		RD%PS	152J	
R3	Carbon film	6.8k		RD%PS	682J	
R4	Carbon film	4.7k		RD%PS	472J	
R5	Carbon film	1k		RD%PS	102J	

Symbol	Description			Part No.		
R6	Carbon film	330		RD%PS	331J	
R7	Carbon film	1.2k		RD%PS	122J	
R8	Carbon film	15k		RD%PS	153J	
R9	Carbon film	82k		RD%PS	823J	
R10	Carbon film	470		RD%PS	471J	
R11	Carbon film	330		RD%PS	331J	
R13	Carbon film	100k		RD%PS	104J	
R14	Carbon film	1k		RD%PS	102J	
R15	Carbon film	330		RD%PS	331J	
R16	Carbon film	4.7k		RD%PS	472J	
R17	Carbon film	4.7k		RD%PS	472J	
R18	Carbon film	1.2k		RD%PS	122J	
R19	Carbon film	10k		RD%PS	103J	
R20	Carbon film	56		RD%PS	560J	
R21	Carbon film	1k		RD%PS	102J	
R22	Carbon film	1k		RD%PS	102J	
R23	Carbon film	1k		RD%PS	102J	
R24	Carbon film	1.8k		RD%PS	182J	
R25	Carbon film	8.2k		RD%PS	822J	
R26	Carbon film	5.6k		RD%PS	562J	
R27	Carbon film	22k		RD%PS	223J	
R28	Carbon film	100k		RD%PS	104J	
R29	Carbon film	100		RD%PS	101J	
R30	Carbon film	22k		RD%PS	223J	
R31	Carbon film	33k		RD%PS	333J	
R32	Carbon film	560k		RD%PS	564J	
R33	Carbon film	33k		RD%PS	333J	
R34	Carbon film	390k		RD%PS	394J	
R35	Carbon film	10k		RD%PS	103J	
R36	Carbon film	3.3k		RD%PS	332J	

Symbol	Description		Part No.	
R37	Carbon film	100	RD1%PS	101J
R38	Carbon film	470	RD1%PS	471J
R39	Carbon film	3.3k	RD1%PS	332J
R40	Carbon film	2.2k	RD1%PS	222J
R41	Carbon film	1.8k	RD1%PS	182J
R42	Carbon film	3.3k	RD1%PS	332J
R43	Carbon film	27k	RD1%PS	273J
R44	Carbon film	1k	RD1%PS	102J
R45	Carbon film	68	RD1%PS	680J
R46	Carbon film	12k	RD1%PS	123J
R47	Carbon film	3.3k	RD1%PS	332J
R48	Carbon film	470	RD1%PS	471J
R49	Carbon film	1k	RD1%PS	102J
R50	Carbon film	1k	RD1%PS	102J
R51	Carbon film	4.7k	RD1%PS	472J
R52	Carbon film	100k	RD1%PS	104J
R53	Carbon film	4.7k	RD1%PS	472J
R54	Carbon film	27k	RD1%PS	273J
R55	Carbon film	330	RD1%PS	331J
R56	Carbon film	27k	RD1%PS	273J
R57	Carbon film	4.7k	RD1%PS	472J
R58	Carbon film	18k	RD1%PS	183J
R59	Carbon film	8.2k	RD1%PS	822J
R60	Carbon film	3.3k	RD1%PS	332J
R61	Carbon film	4.7k	RD1%PS	472J
R62	Carbon film	12k	RD1%PS	123J
R63	Carbon film	330	RD1%PS	331J
R64	Carbon film	10k	RD1%PS	103J
R65	Carbon film	10k	RD1%PS	103J
R66	Carbon film	2.2k	RD1%PS	222J

Symbol	Description		Part No.	
R67	Carbon film	18k	RD1%PS	183J
R68	Carbon film	390k	RD1%PS	394J
R69	Carbon film	1M	RD1%PS	105J
R70	Carbon film	100k	RD1%PS	104J
R71	Carbon film	390k	RD1%PS	394J
R72	Carbon film	100k	RD1%PS	104J
R73	Carbon film	120k	RD1%PS	124J
R74	Carbon film	47k	RD1%PS	473J
R75	Carbon film	2.2k	RD1%PS	222J
R76	Carbon film	47	RD1%PS	470J
R77	Carbon film	4.7k	RD1%PS	472J
R78	Carbon film	100k	RD1%PS	104J
R79	Carbon film	47k	RD1%PS	473J
R80	Carbon film	33k	RD1%PS	333J
R81	Carbon film	150	RD1%PS	151J
R82	Carbon film	2.7k	RD1%PS	272J
R83	Carbon film	1.2k	RD1%PS	122J
R84	Carbon film	1.2k	RD1%PS	122J
R85	Carbon film	2.7k	RD1%PS	272J
R86	Carbon film	5.6k	RD1%PS	562J
R87	Carbon film	5.6k	RD1%PS	562J
R88	Carbon film	1k	RD1%PS	102J
R89	Carbon film	1k	RD1%PS	102J
R90	Carbon film	33k	RD1%PS	333J
R91	Carbon film	330	RD1%PS	331J
R92	Carbon film	33k	RD1%PS	333J
R93	Carbon film	33	RD1%PS	330J
R94	Carbon film	15k	RD1%PS	153J
R95	Carbon film	330	RD1%PS	331J
R96	Carbon film	6.8k	RD1%PS	682J
R97	Carbon film	6.8k	RD1%PS	682J

SEMICONDUCTORS

Symbol	Description	Part No.	
Q1	SE3001 Transistor		
Q2	SE3001 Transistor		
Q3	TA7060P-R or W IC		
Q4	2SC738-P Transistor		
Q5	TA7060P-W IC		
Q6	TA7060P-W IC		
Q7	2SC711-F or E Transistor		
Q8	2SC711-F or E Transistor		
Q9	2SC711-F or E Transistor		
Q10	2SC711-F or E Transistor		
Q11	2SC711-F or E Transistor		
Q12	2SC382 Transistor		
Q13	2SC738-P Transistor		
Q14	2SC711-F Transistor		
Q15	SE3001 Transistor		
Q16	2SK30-Y or GR FET		
Q17	2SC870-F or E Transistor		
Q18	2SC711-F or E Transistor		
Q19	2SC968-Y Transistor		
Q20	2SC711-F or E Transistor		
Q21	M5109P IC		
D2	1S188 FM-1 Diode		
D3	1S2076 Diode		
D4	1S188 FM-1 Diode		
D5	1S188 FM-1 Diode		
D6	1S188 FM-1 Diode		
D7	1S188 FM-1 Diode		
D8	1S2076 Diode		
D9	1S2076 Diode		
D10	1S2076 Diode		
D11	1S188 FM-1 Diode		

Symbol	Description	Part No.	
D12	1S188 FM-1 Diode		
D13	1S188 FM-1 Diode		
D14	1S188 FM-1 Diode		
D15	1S188 FM-1 Diode		



FILTERS

Symbol	Description	Part No.	
CF1	FM Ceramic filter	ATF-003-0	
CF2	FM Ceramic filter	ATF-001-0	
CF3	FM Ceramic filter	ATF-001-0	
CF4	AM Ceramic filter	ATF-002-A	



COILS AND TRANSFORMERS

Symbol	Description	Part No.	
T1	Matching transformer	ATE-002-0	
T2	FM Det. transformer	T74-003-A	
T3	AM RF transformer	ATB-003-A	
T4	AM OSC transformer	ATB-004-B	
T5	AM Det. transformer	ATE-003-B	
T6	19kHz coil	T75-023-B	
T7	MPX transformer	T75-026-0	
T8	38kHz leak filter	ATM-004-0	
T9	38kHz leak filter	ATM-004-0	
L1	RF choke coil	T24-028-A	
L2	RF choke coil	T24-028-A	

10.5 CR UNIT(AWX-014)(AWX-017)

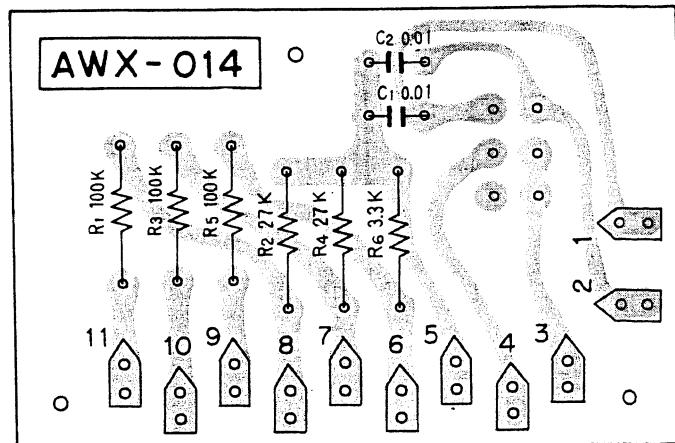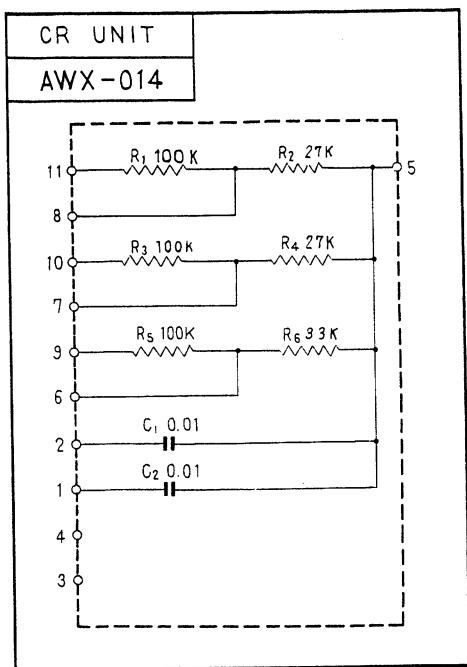

For FW model

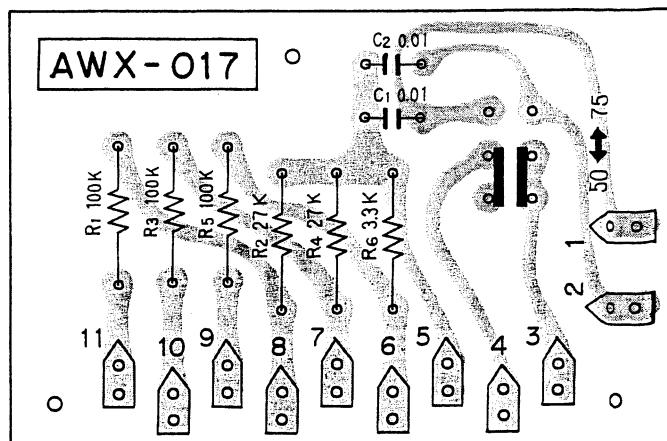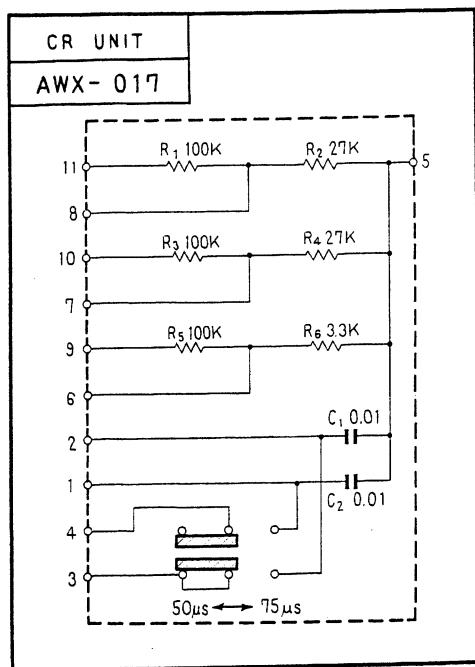

PARTS LIST OF CR UNIT

CAPACITORS

Symbol	Description		Part No.	
C1	Mylar	0.01 50V	CQMA	103K 50
C2	Mylar	0.01 50V	CQMA	103K 50

RESISTORS

Symbol	Description		Part No.	
R1	Carbon film	100k	RD1/4PS	104J
R2	Carbon film	27k	RD1/4PS	273J
R3	Carbon film	100k	RD1/4PS	104J
R4	Carbon film	27k	RD1/4PS	273J
R5	Carbon film	100k	RD1/4PS	104J
R6	Carbon film	3.3k	RD1/4PS	332J

SWITCH

Symbol	Description		Part No.	
	Slide switch		ASM-002-0	

PARTS LIST OF CR UNIT



CAPACITORS

Symbol	Description		Part No.	
C1	Mylar	0.01 50V	CQMA	103K 50
C2	Mylar	0.01 50V	CQMA	103K 50

RESISTORS

Symbol	Description		Part No.	
R1	Carbon film	100k	RD1/4PS	104J
R2	Carbon film	27k	RD1/4PS	273J
R3	Carbon film	100k	RD1/4PS	104J
R4	Carbon film	27k	RD1/4PS	273J
R5	Carbon film	100k	RD1/4PS	104J
R6	Carbon film	3.3k	RD1/4PS	332J

10.6 HEAD AMP UNIT (W21-002)

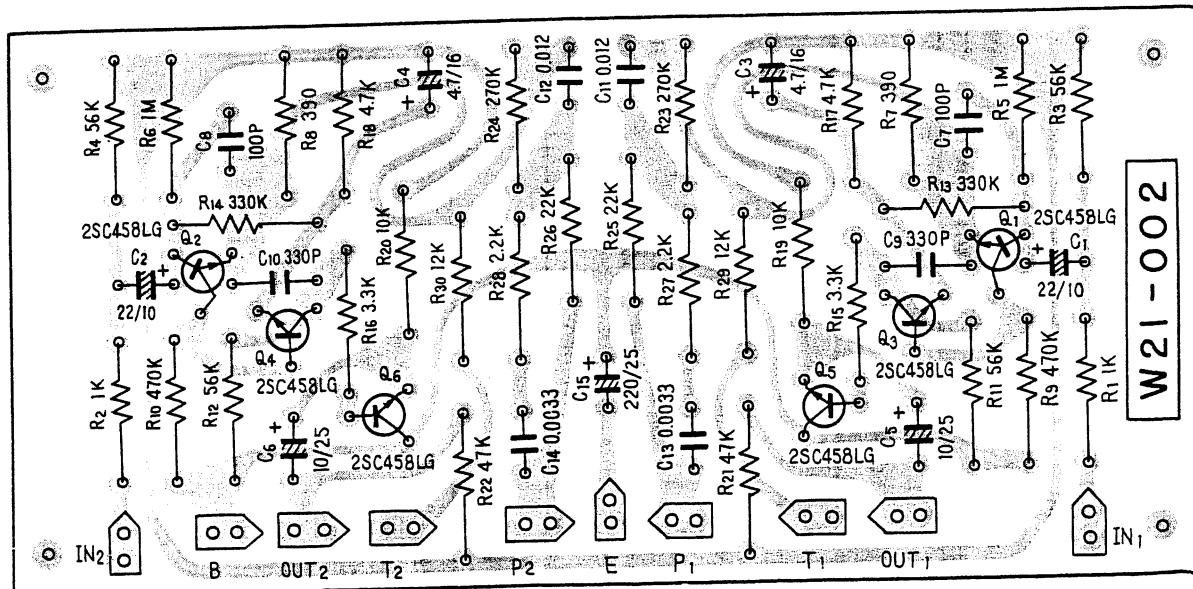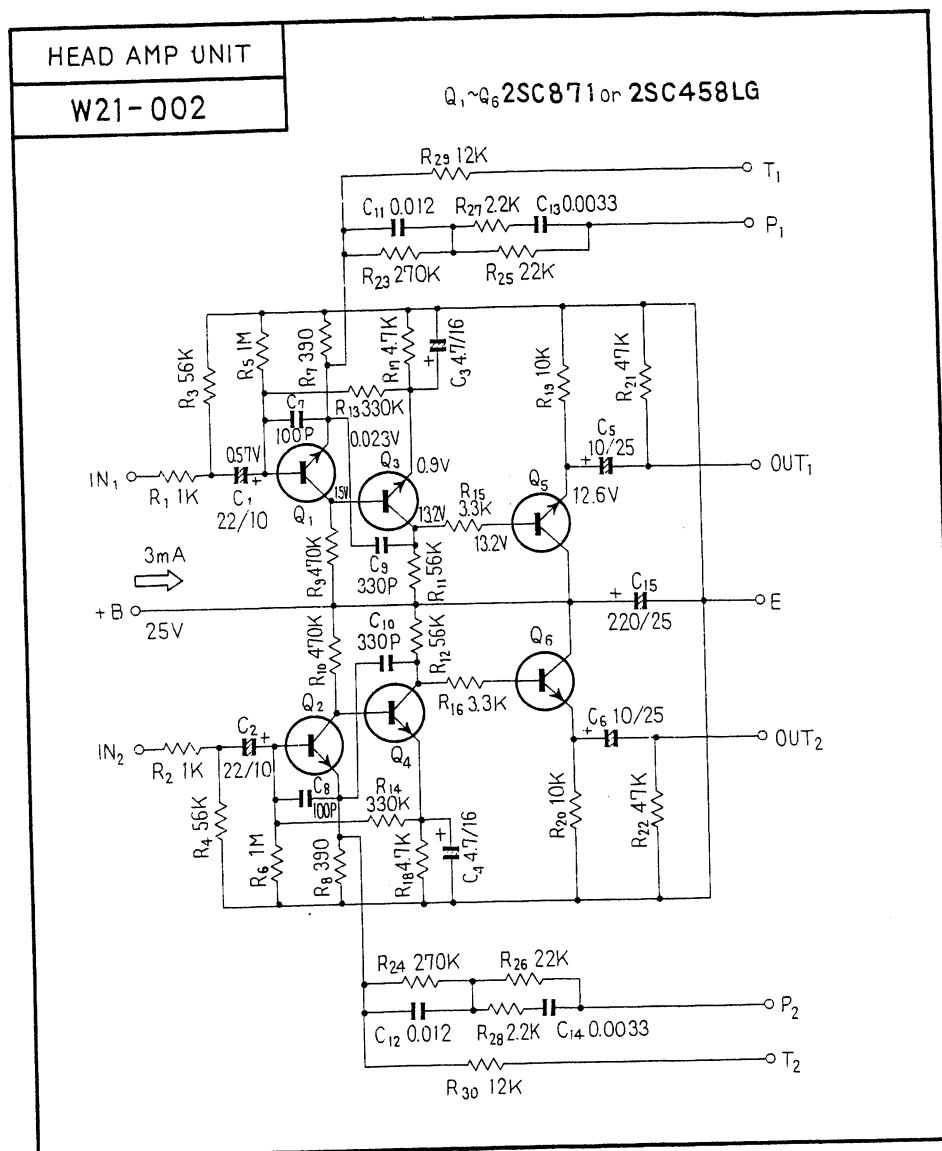

PARTS LIST OF HEAD AMP UNIT

CAPACITORS

Symbol	Description			Part No.		
C1	Electrolytic	22	10V	CEA	220P 10	
C2	Electrolytic	22	10V	CEA	220P 10	
C3	Electrolytic	4.7	16V	CEA	4R7P 16	
C4	Electrolytic	4.7	16V	CEA	4R7P 16	
C5	Electrolytic	10	25V	CEA	100P 25	
C6	Electrolytic	10	25V	CEA	100P 25	
C7	Ceramic	100p	50V	CCDSL	101K 50	
C8	Ceramic	100p	50V	CCDSL	101K 50	
C9	Ceramic	330p	50V	CCDSL	331K 50	
C10	Ceramic	330p	50V	CCDSL	331K 50	
C11	Mylar	0.012	50V	CQMA	123K 50	
C12	Mylar	0.01	50V	CQMA	103K 50	
C13	Mylar	0.0033	50V	CQMA	332K 50	
C14	Mylar	0.0033	50V	CQMA	332K 50	
C15	Electrolytic	220	25V	CEA	221P 25	

RESISTORS


Symbol	Description			Part No.		
R1	Carbon film	1k		RD%PS	102JNL	
R2	Carbon film	1k		RD%PS	102JNL	
R3	Carbon film	56k		RD%PS	563JNL	
R4	Carbon film	56k		RD%PS	563JNL	
R5	Carbon film	1M		RD%PS	105JNL	
R6	Carbon film	1M		RD%PS	105JNL	
R7	Carbon film	390		RD%PS	391JNL	
R8	Carbon film	390		RD%PS	391JNL	
R9	Carbon film	470k		RD%PS	474JNL	
R10	Carbon film	470k		RD%PS	474JNL	


Symbol	Description			Part No.	
R11	Carbon film	56k		RD%PS	563JNL
R12	Carbon film	56k		RD%PS	563JNL
R13	Carbon film	330k		RD%PS	334JNL
R14	Carbon film	330k		RD%PS	334JNL
R15	Carbon film	3.3k		RD%PS	332JNL
R16	Carbon film	3.3k		RD%PS	332JNL
R17	Carbon film	4.7k		RD%PS	472JNL
R18	Carbon film	4.7k		RD%PS	472JNL
R19	Carbon film	10k		RD%PS	103JNL
R20	Carbon film	10k		RD%PS	103JNL
R21	Carbon film	47k		RD%PS	473JNL
R22	Carbon film	47k		RD%PS	473JNL
R23	Carbon film	270k		RD%PS	274JNL
R24	Carbon film	270k		RD%PS	274JNL
R25	Carbon film	22k		RD%PS	223JNL
R26	Carbon film	22k		RD%PS	223JNL
R27	Carbon film	2.2k		RD%PS	222JNL
R28	Carbon film	2.2k		RD%PS	222JNL
R29	Carbon film	12k		RD%PS	123JNL
R30	Carbon film	12k		RD%PS	123JNL

SEMICONDUCTORS

Symbol	Description			Part No.	
Q1	2SC458LG-B or C	Transistor			
Q2	2SC458LG-B or C	Transistor			
Q3	2SC458LG-B or C	Transistor			
Q4	2SC458LG-B or C	Transistor			
Q5	2SC458LG-B or C	Transistor			
Q6	2SC458LG-B or C	Transistor			

10.7 AF UNIT(AWK-010)

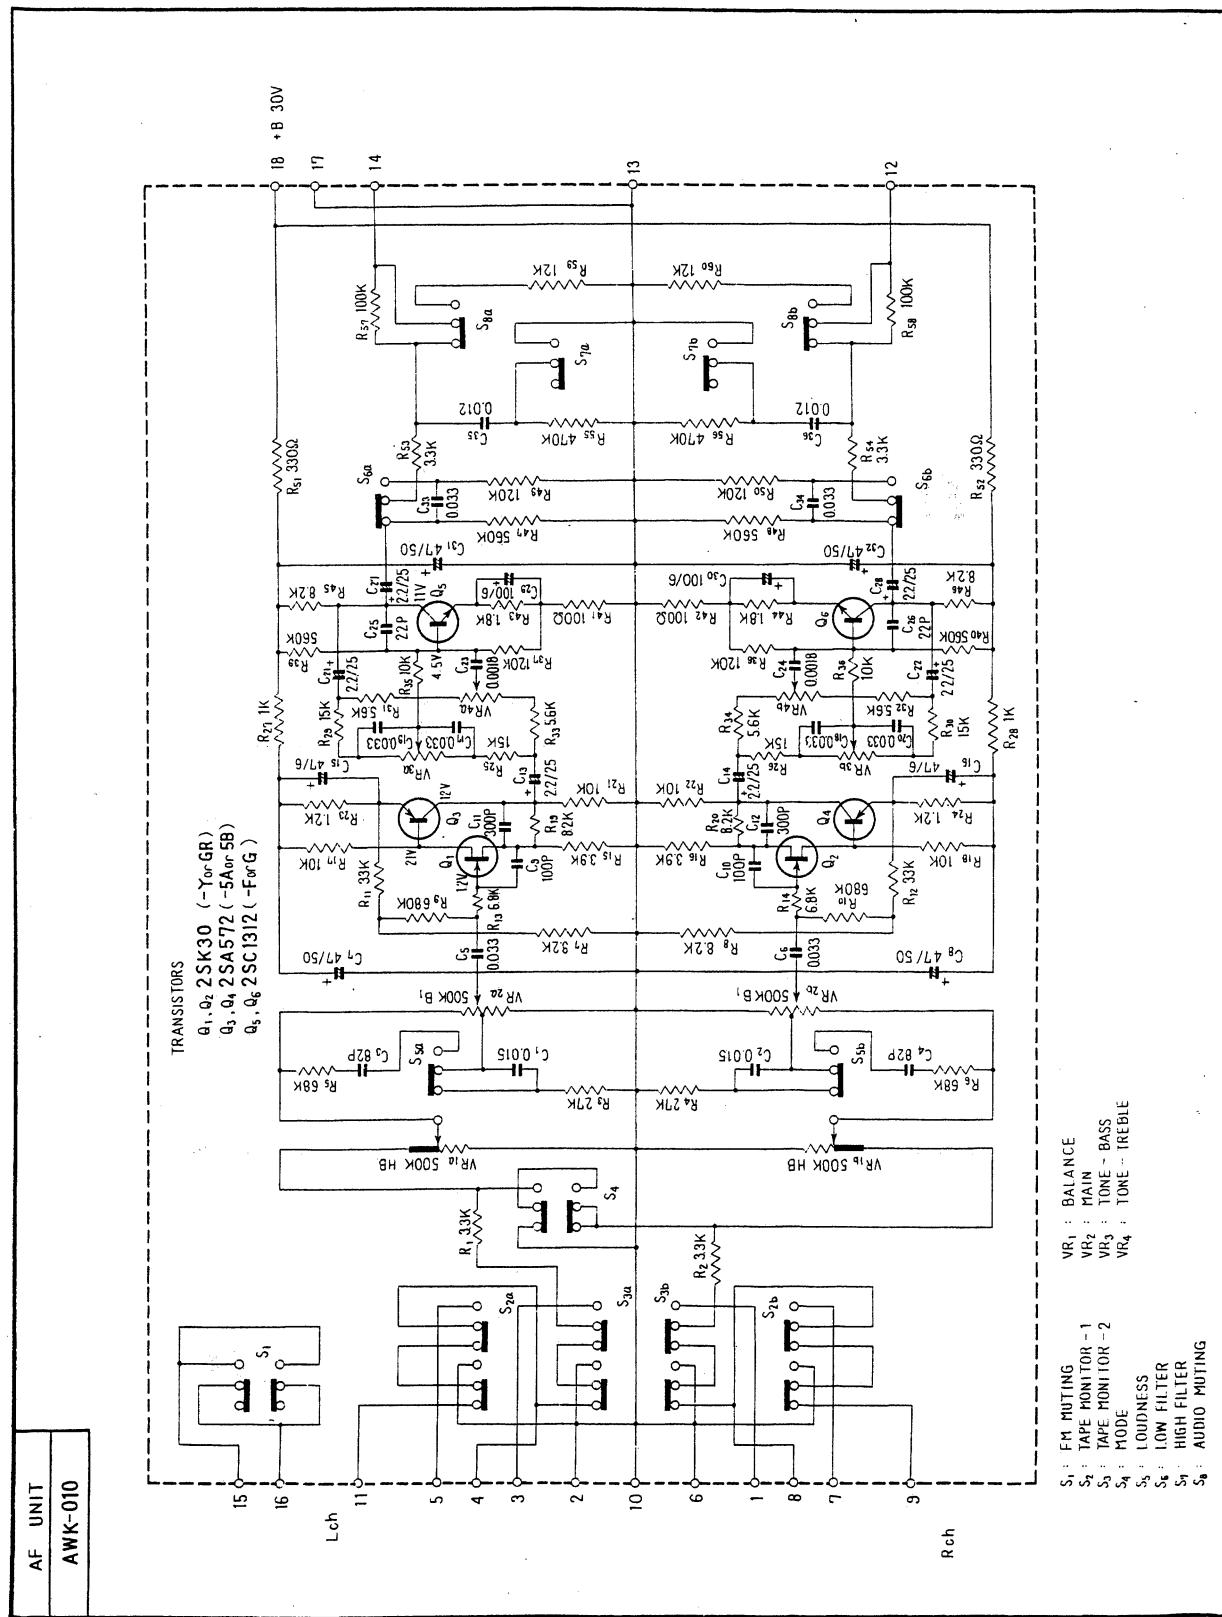

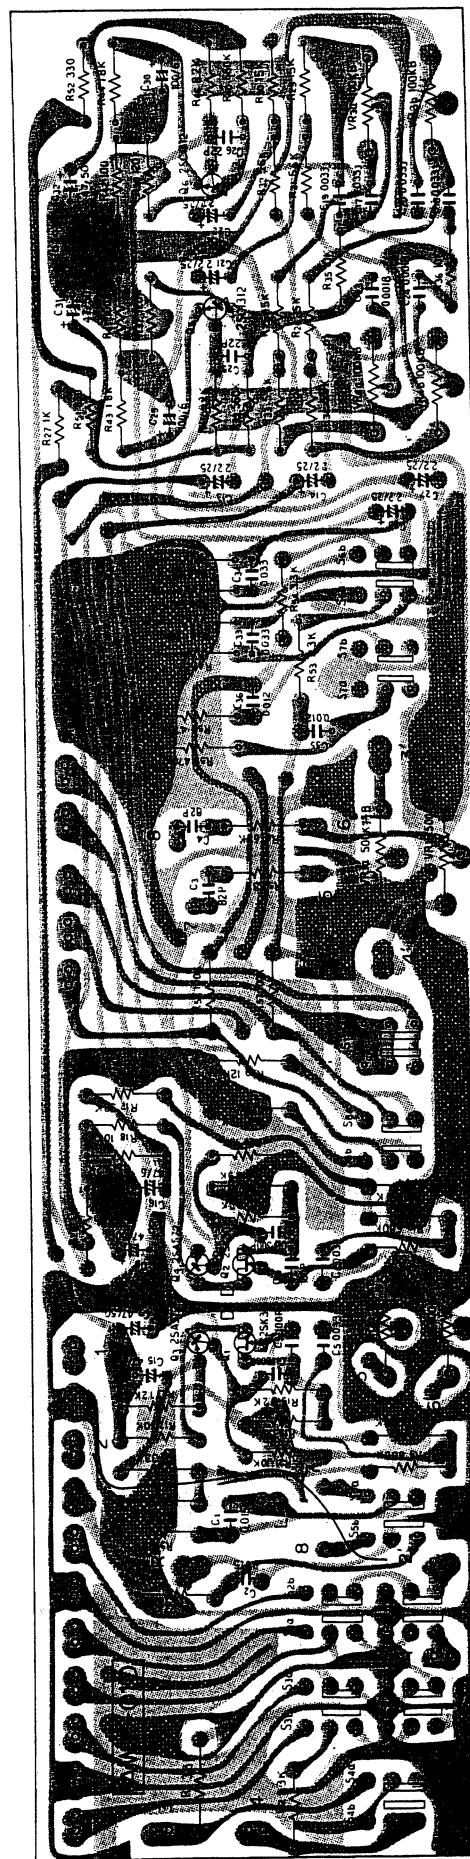

3 PARTS LIST AF UNIT

CAPACITORS

Symbol		Description			Part No.	
C1	Mylar	0.015	50V	CQMA	153K 50	
C2	Mylar	0.015	50V	CQMA	153K 50	
C3	Ceramic	82p	50V	CCDSL	820K 50	
C4	Ceramic	82p	50V	CCDSL	820K 50	
C5	Mylar	0.033	50V	CQMA	333K 50	
C6	Mylar	0.033	50V	CQMA	333K 50	
C7	Electrolytic	47	50V	CEA	470P 50	
C8	Electrolytic	47	50V	CEA	470P 50	
C9	Ceramic	100p	50V	CCDSL	101K 50	
C10	Ceramic	100p	50V	CCDSL	101K 50	
C11	Ceramic	300p	50V	CCDSL	301K 50	
C12	Ceramic	300p	50V	CCDSL	301K 50	
C13	Electrolytic	2.2	25V	CSSA	2R2X 25	
C14	Electrolytic	2.2	25V	CSSA	2R2X 25	
C15	Electrolytic	47	6V	CEA	470P 6	
C16	Electrolytic	47	6V	CEA	470P 6	
C17	Mylar	0.033	50V	CQMA	333J 50	
C18	Mylar	0.033	50V	CQMA	333J 50	
C19	Mylar	0.033	50V	CQMA	333J 50	
C20	Mylar	0.033	50V	CQMA	333J 50	
C21	Electrolytic	2.2	25V	CSSA	2R2X 25	
C22	Electrolytic	2.2	25V	CSSA	2R2X 25	
C23	Mylar	0.0018	50V	CQMA	182K 50	
C24	Mylar	0.0018	50V	CQMA	182K 50	
C25	Ceramic	22p	50V	CCDSL	220K 50	
C26	Ceramic	22p	50V	CCDSL	220K 50	
C27	Electrolytic	2.2	25V	CSSA	2R2X 25	
C28	Electrolytic	2.2	25V	CSSA	2R2X 25	

Symbol		Description			Part No.	
C29		Electrolytic	100	6V	CEA	101P 6
C30		Electrolytic	100	6V	CEA	101P 6
C31		Electrolytic	47	50V	CEA	470P 50
C32		Electrolytic	47	50V	CEA	470P 50
C33		Mylar	0.033	50V	CQMA	333K 50
C34		Mylar	0.033	50V	CQMA	333K 50
C35		Mylar	0.012	50V	CQMA	123K 50
C36		Mylar	0.012	50V	CQMA	123K 50

RESISTORS

Symbol		Description		Part No.	
VR1		Dual	100k-B	C82-049-0	
VR2		Dual	500k-B	ACV-105-0	
VR3		Dual	100k-B	ACV-202-A	
VR4		Dual	100k-B	ACV-202-A	
R1		Carbon film	3.3k	RD1/4PS 332J	
R2		Carbon film	3.3k	RD1/4PS 332J	
R3		Carbon film	27k	RD1/4PS 273J	
R4		Carbon film	27k	RD1/4PS 273J	
R5		Carbon film	68k	RD1/4PS 683J	
R6		Carbon film	68k	RD1/4PS 683J	
R7		Carbon film	8.2k	RD1/4PS 822J	
R8		Carbon film	8.2k	RD1/4PS 822J	
R9		Carbon film	680k	RD1/4PS 684JNL	
R10		Carbon film	680k	RD1/4PS 684JNL	
R11		Carbon film	33k	RD1/4PS 333J	
R12		Carbon film	33k	RD1/4PS 333J	
R13		Carbon film	6.8k	RD1/4PS 682J	
R14		Carbon film	6.8k	RD1/4PS 682J	
R15		Carbon film	3.9k	RD1/4PS 392J	
R16		Carbon film	3.9k	RD1/4PS 392J	
R17		Carbon film	10k	RD1/4PS 103J	

Symbol	Description		Part No.		
R18	Carbon film	10k	RD1/PS	103J	
R19	Carbon film	8.2k	RD1/PS	822J	
R20	Carbon film	8.2k	RD1/PS	822J	
R21	Carbon film	10k	RD1/PS	103J	
R22	Carbon film	10k	RD1/PS	103J	
R23	Carbon film	1.2k	RD1/PS	122J	
R24	Carbon film	1.2k	RD1/PS	122J	
R25	Carbon film	15k	RD1/PS	153J	
R26	Carbon film	15k	RD1/PS	153J	
R27	Carbon film	1k	RD1/PS	102J	
R28	Carbon film	1k	RD1/PS	102J	
R29	Carbon film	15k	RD1/PS	153J	
R30	Carbon film	15k	RD1/PS	153J	
R31	Carbon film	5.6k	RD1/PS	562J	
R32	Carbon film	5.6k	RD1/PS	562J	
R33	Carbon film	5.6k	RD1/PS	562J	
R34	Carbon film	5.6k	RD1/PS	562J	
R35	Carbon film	10k	RD1/PS	103J	
R36	Carbon film	10k	RD1/PS	103J	
R37	Carbon film	120k	RD1/PS	124JNL	
R38	Carbon film	120k	RD1/PS	124JNL	
R39	Carbon film	560k	RD1/PS	564JNL	
R40	Carbon film	560k	RD1/PS	564JNL	
R41	Carbon film	100	RD1/PS	101J	
R42	Carbon film	100	RD1/PS	101J	
R43	Carbon film	1.8k	RD1/PS	182J	
R44	Carbon film	1.8k	RD1/PS	182J	
R45	Carbon film	8.2k	RD1/PS	822J	
R46	Carbon film	8.2k	RD1/PS	822J	
R47	Carbon film	560k	RD1/PS	564JNL	
R48	Carbon film	560k	RD1/PS	564JNL	
R49	Carbon film	120k	RD1/PS	124JNL	
R50	Carbon film	120k	RD1/PS	124JNL	

Symbol	Description		Part No.	
R51	Carbon film	330	RD1/PS	331J
R52	Carbon film	330	RD1/PS	331J
R53	Carbon film	3.3k	RD1/PS	332J
R54	Carbon film	3.3k	RD1/PS	332J
R55	Carbon film	470k	RD1/PS	474JNL
R56	Carbon film	470k	RD1/PS	474JNL
R57	Carbon film	100k	RD1/PS	104JNL
R58	Carbon film	100k	RD1/PS	104JNL
R59	Carbon film	12k	RD1/PS	123J
R60	Carbon film	12k	RD1/PS	123J


SEMICONDUCTORS


Symbol	Description		Part No.	
Q1	2SK30-Y or GR	FET		
Q2	2SK30-Y or GR	FET		
Q3	2SA572-5A or 5B	Transistor		
Q4	2SA572-5A or 5B	Transistor		
Q5	2SC1312F-F or G	Transistor		
Q6	2SC1312F-F or G	Transistor		

SWITCHES

Symbol	Description		Part No.	
S1	Push switch		ASG-017-0	
S2	Push switch		ASG-019-0	
S3	Push switch		ASG-019-0	
S4	Push switch		ASG-017-0	
S5	Push switch		ASG-017-0	
S6	Push switch		ASG-018-0	
S7	Push switch		ASG-017-0	
S8	Push switch		ASG-017-0	

10.8 POWER AMP UNIT(AWH-011)

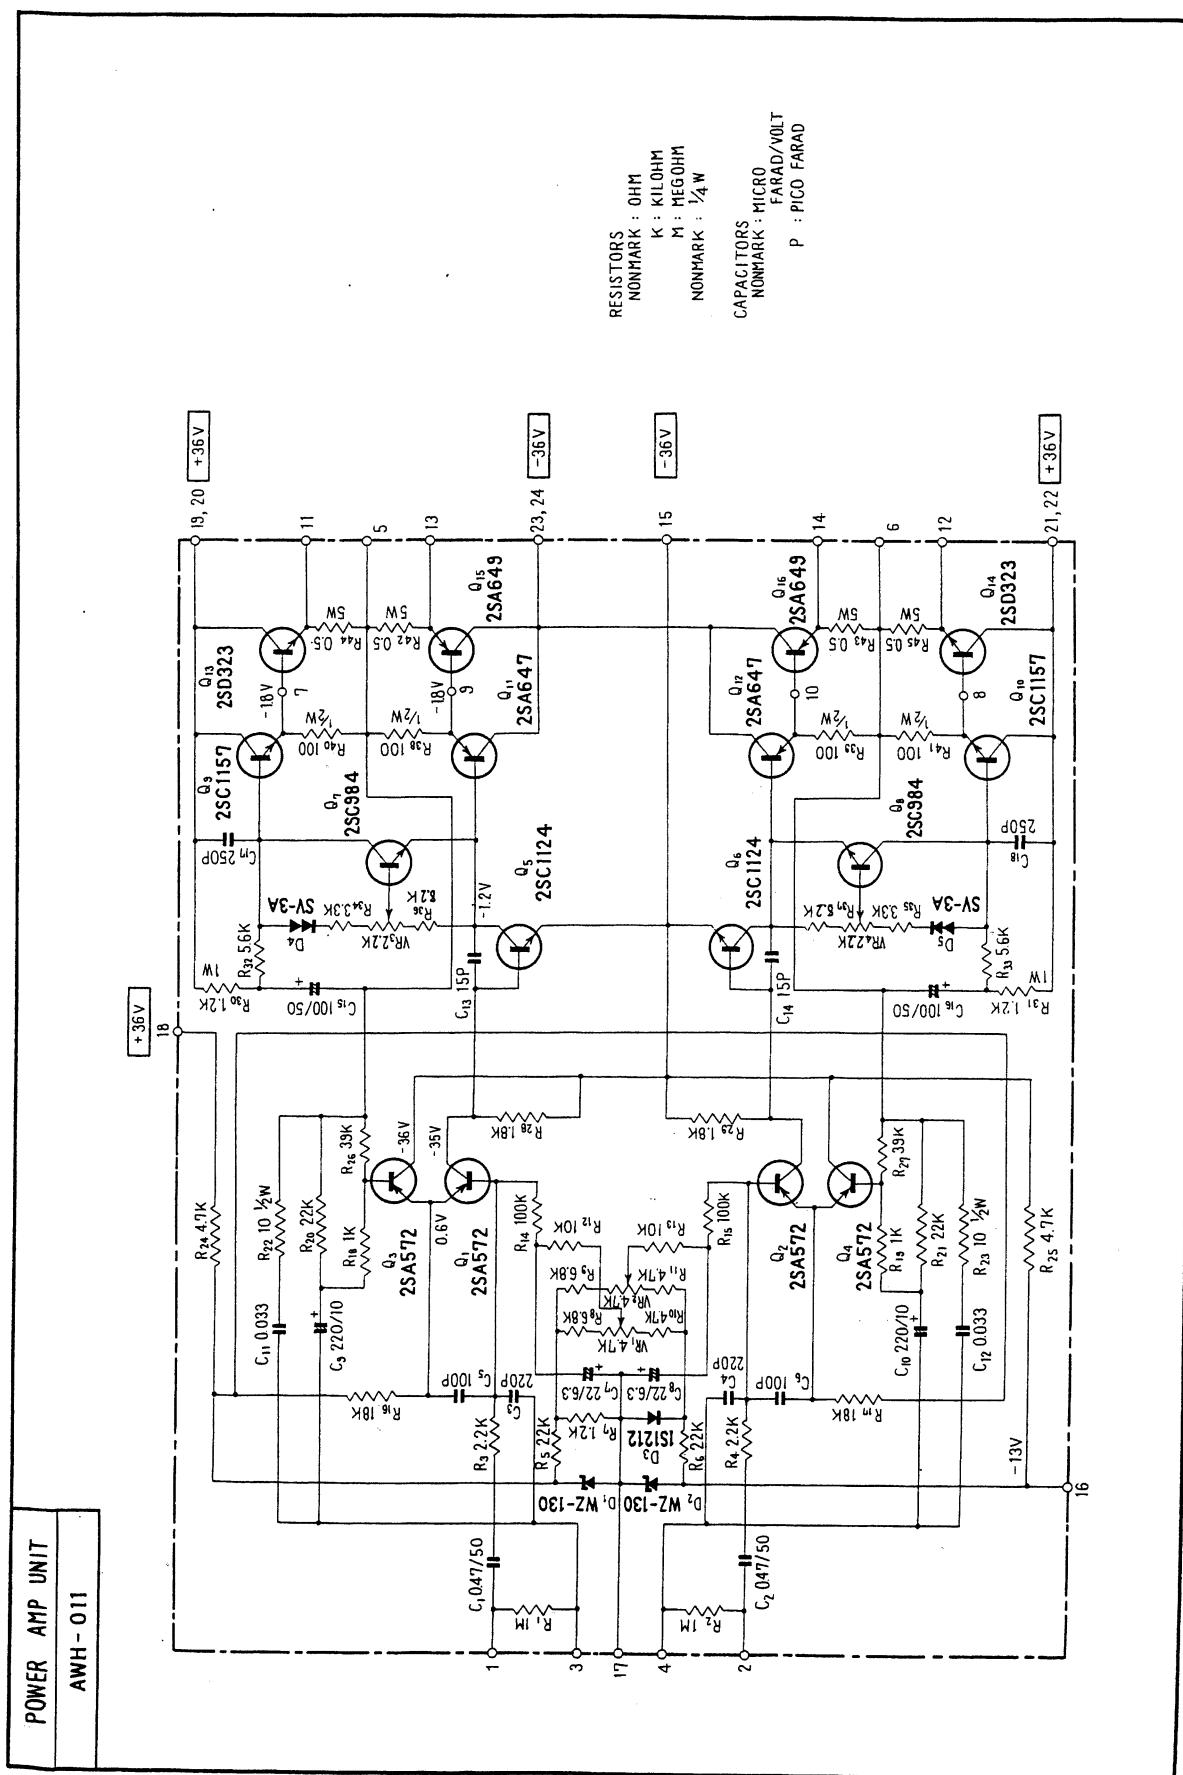

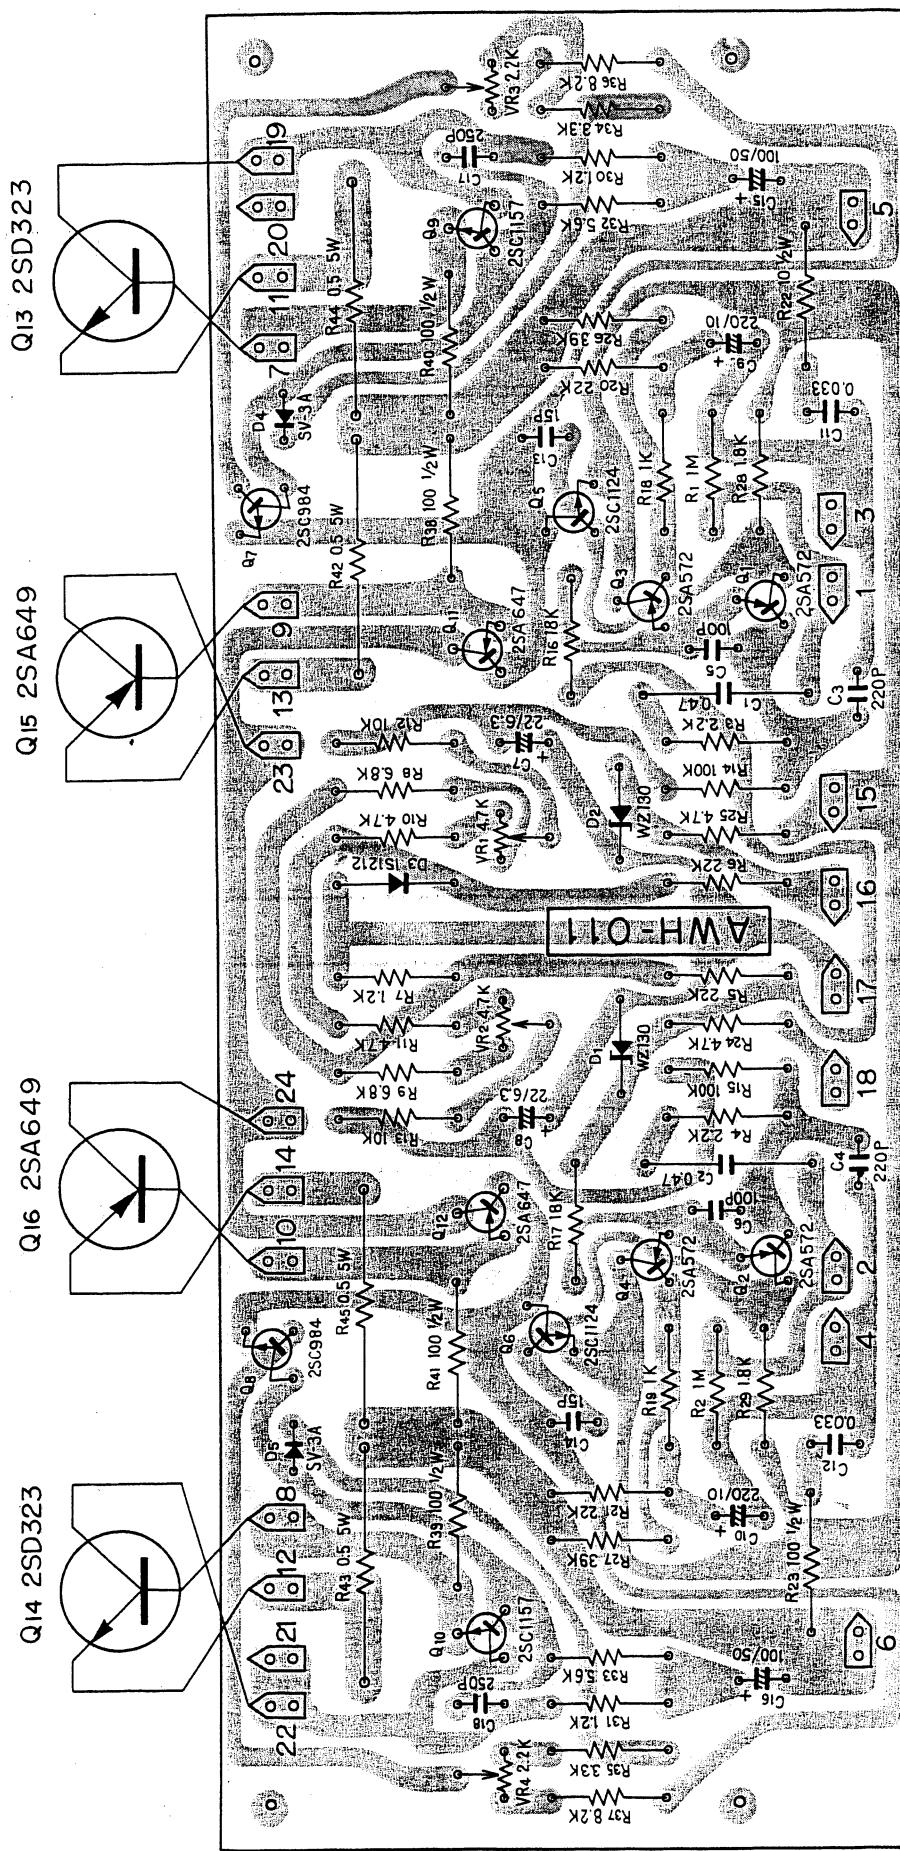

† PARTS LIST OF POWER AMP UNIT

CAPACITORS

Symbol	Description			Part No.		
C1	Mylar	0.47	50V	CQMA	474K 50	
C2	Mylar	0.47	50V	CQMA	474K 50	
C3	Ceramic	220p	50V	CCDSL	221K 50	
C4	Ceramic	220p	50V	CCDSL	221K 50	
C5	Ceramic	100p	50V	CCDSL	101K 50	
C6	Ceramic	100p	50V	CCDSL	101K 50	
C7	Electrolytic	22	6V	CEA	220P 6	
C8	Electrolytic	22	6V	CEA	220P 6	
C9	Electrolytic	220	10V	CEA	221P 10	
C10	Electrolytic	220	10V	CEA	221P 10	
C11	Mylar	0.033	50V	CQMA	333M 50	
C12	Mylar	0.033	50V	CQMA	333M 50	
C13	Ceramic	15p	50V	CCDSL	150K 50	
C14	Ceramic	15p	50V	CCDSL	150K 50	
C15	Electrolytic	100	50V	CEA	101P 50	
C16	Electrolytic	100	50V	CEA	101P 50	
C17	Ceramic	250p	50V	CCDSL	251K 50	
C18	Ceramic	250p	50V	CCDSL	251K 50	

RESISTORS

Symbol	Description			Part No.		
VR1	Semi-fixed	4.7k-B		C92-051-0		
VR2	Semi-fixed	4.7k-B		C92-051-0		
VR3	Semi-fixed	2.2k-B		ACP-001-0		
VR4	Semi-fixed	2.2k-B		ACP-001-0		

Symbol	Description			Part No.		
R1	Carbon film	1M		RD1/PS	105J	
R2	Carbon film	1M		RD1/PS	105J	
R3	Carbon film	2.2k		RD1/PS	222J	
R4	Carbon film	2.2k		RD1/PS	222J	
R5	Carbon film	22k		RD1/PS	223J	
R6	Carbon film	22k		RD1/PS	223J	
R7	Carbon film	1.2k		RD1/PS	122J	
R8	Carbon film	6.8k		RD1/PS	682J	
R9	Carbon film	6.8k		RD1/PS	682J	
R10	Carbon film	4.7k		RD1/PS	472J	
R11	Carbon film	4.7k		RD1/PS	472J	
R12	Carbon film	10k		RD1/PS	103J	
R13	Carbon film	10k		RD1/PS	103J	
R14	Carbon film	100k		RD1/PS	104J	
R15	Carbon film	100k		RD1/PS	104J	
R16	Carbon film	18k		RD1/PS	183J	
R17	Carbon film	18k		RD1/PS	183J	
R18	Carbon film	1k		RD1/PS	102J	
R19	Carbon film	1k		RD1/PS	102J	
R20	Carbon film	22k		RD1/PS	223J	
R21	Carbon film	22k		RD1/PS	223J	
R22	Carbon film	10	1/2W	RD1/PS	100J	
R23	Carbon film	10	1/2W	RD1/PS	100J	
R24	Carbon film	4.7k		RD1/PS	472J	
R25	Carbon film	4.7k		RD1/PS	472J	
R26	Carbon film	39k		RD1/PS	393J	
R27	Carbon film	39k		RD1/PS	393J	
R28	Carbon film	1.8k		RD1/PS	182J	
R29	Carbon film	1.8k		RD1/PS	182J	
R30	Metal oxide	1.2k	1W	RS1P	122K	

Symbol	Description			Part No.		
R31	Metal oxide	1.2k	1W	RS1P	122K	
R32	Carbon film	5.6k		RD1/PS	562J	
R33	Carbon film	5.6k		RD1/PS	562J	
R34	Carbon film	3.3k		RD1/PS	332J	
R35	Carbon film	3.3k		RD1/PS	332J	
R36	Carbon film	8.2k		RD1/PS	822J	
R37	Carbon film	8.2k		RD1/PS	822J	
R38	Carbon film	100	1/2W	RD1/PS	101J	
R39	Carbon film	100	1/2W	RD1/PS	101J	
R40	Carbon film	100	1/2W	RD1/PS	101J	
R41	Carbon film	100	1/2W	RD1/PS	101J	
R42	Wire wound	0.5	5W	RT5B	0R5K	
R43	Wire wound	0.5	5W	RT5B	0R5K	
R44	Wire wound	0.5	5W	RT5B	0R5K	
R45	Wire wound	.5	5W	RT5B	0R5K	

SEMICONDUCTORS



Symbol	Description			Part No.		
Q1	2SA572-5A, 5B, or 4B	Transistor				
Q2	2SA572-5A, 5B, or 4B	Transistor				
Q3	2SA572-5A, 5B, or 4B	Transistor				
Q4	2SA572-5A, 5B, or 4B	Transistor				
Q5	2SC1124-3 or 2	Transistor				
Q6	2SC1124-3 or 2	Transistor				
Q7	2SC984-B	Transistor				
Q8	2SC984-B	Transistor				
Q9	2SC1157-D or C	Transistor				
Q10	2SC1157-D or C	Transistor				

Symbol	Description			Part No.	
Q11	2SA647-D	Transistor			
Q12	2SA647-D	Transistor			
Q13	2SD323-F	Transistor			
Q14	2SD323-F	Transistor			
Q15	2SA649-L	Transistor			
Q16	2SA649-L	Transistor			
D1	WZ-130	Zener diode			
D2	WZ-130	Zener diode			
D3	1S1212	Diode			
D4	SV-3A	Varistor			
D5	SV-3A	Varistor			

OTHERS

Symbol	Description			Part No.	
	Heat sink			ANH-063-0	
	Heat sink (small)			ANH-064-0	
	Power transistor socket			K31-020-0	

10.9 POWER SUPPLY UNIT(AWR-011)

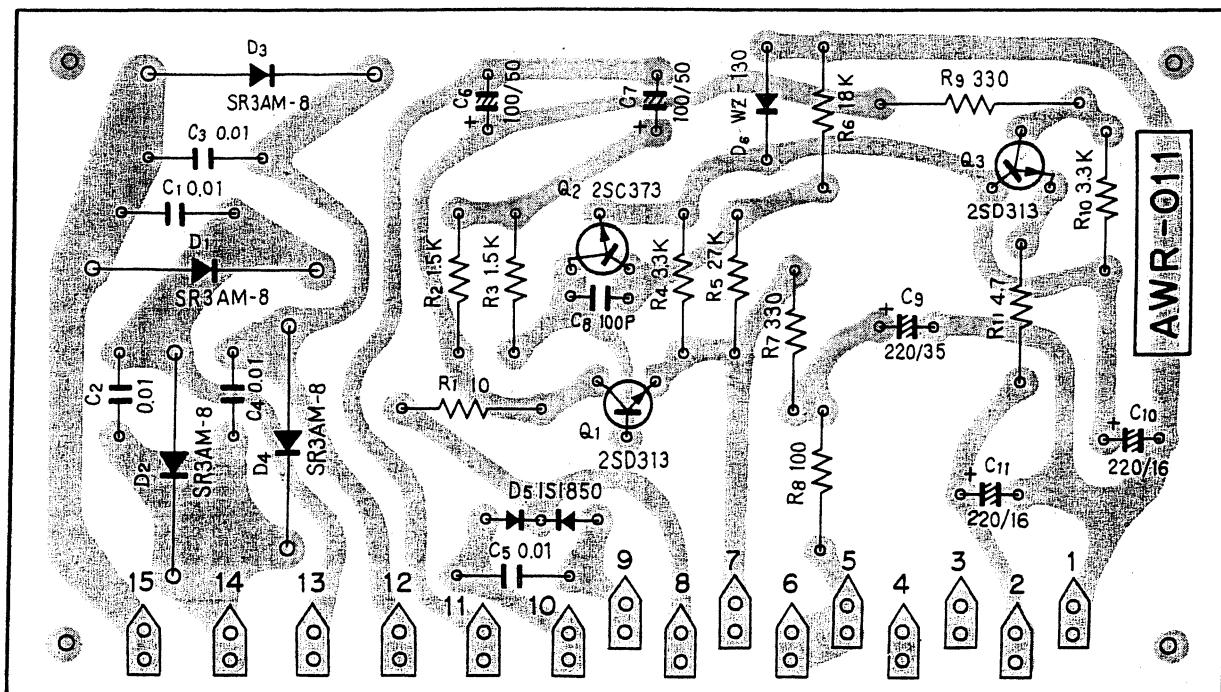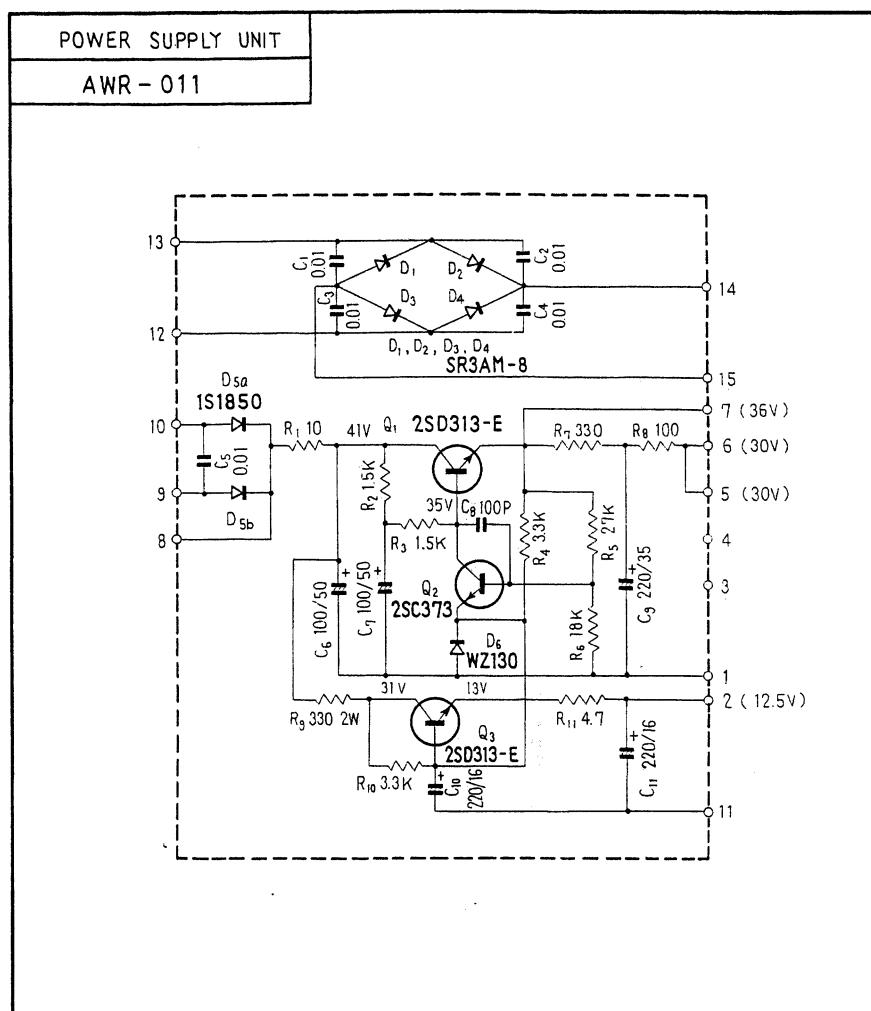

PARTS LIST OF POWER SUPPLY UNIT

CAPACITORS

Symbol	Description			Part No.		
C1	Ceramic	0.01	DC 1.4kV	C43-003-0		
C2	Ceramic	0.01	DC 1.4kV	C43-003-0		
C3	Ceramic	0.01	DC 1.4kV	C43-003-0		
C4	Ceramic	0.01	DC 1.4kV	C43-003-0		
C5	Ceramic	0.01	DC 1.4kV	C43-003-0		
C6	Electrolytic	100	50V	CEA 101P 50		
C7	Electrolytic	100	50V	CEA 101P 50		
C8	Ceramic	100p	50V	CCDSL 101K 50		
C9	Electrolytic	220	35V	CEA 221P 35		
C10	Electrolytic	220	16V	CEA 221P 16		
C11	Electrolytic	220	16V	CEA 221P 16		

RESISTORS

Symbol	Description			Part No.		
R1	Carbon film	10		RD1%PS	100J	
R2	Carbon film	1.5k		RD1%PS	152J	
R3	Carbon film	1.5k		RD1%PS	152J	
R4	Carbon film	3.3k		RD1%PS	332J	
R5	Carbon film	27k		RD1%PS	273J	
R6	Carbon film	18k		RD1%PS	183J	
R7	Carbon film	330		RD1%PS	331J	
R8	Carbon film	100		RD1%PS	101J	
R9	Metal oxide	330 2W		RS2P	331K	
R10	Carbon film	3.3k		RD1%PS	332J	
R11	Carbon film	4.7		RD1%PS	4R7J	



SEMICONDUCTORS

Symbol	Description		Part No.	
Q1	2SD313-E or D	Transistor		
Q2	2SC373	Transistor		
Q3	2SD313-E or D	Transistor		
D1	SR3AM-8	Diode		
D2	SR3AM-8	Diode		
D3	SR3AM-8	Diode		
D4	SR3AM-8	Diode		
D5	1S1850	Diode		
D6	WZ-130	Zener Diode		

OTHER

Symbol	Description		Part No.	
	Heat sink		ANH-004-A	

10.10 PROTECTOR UNIT(AWM-011)

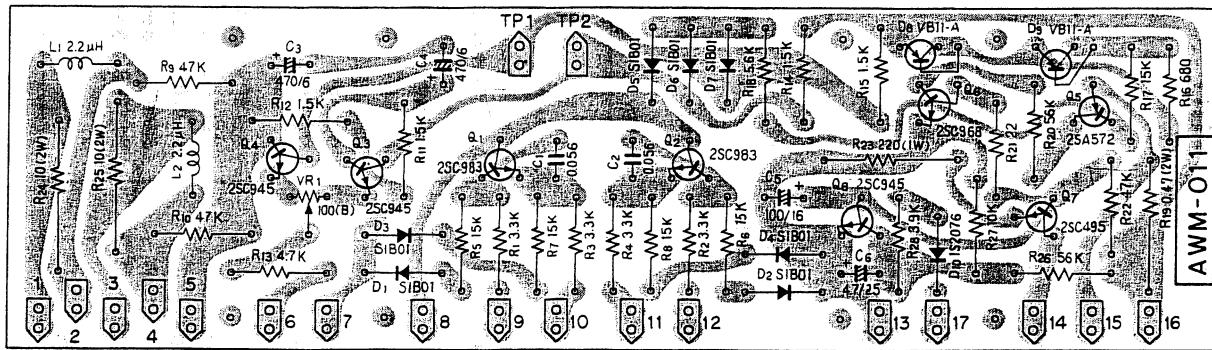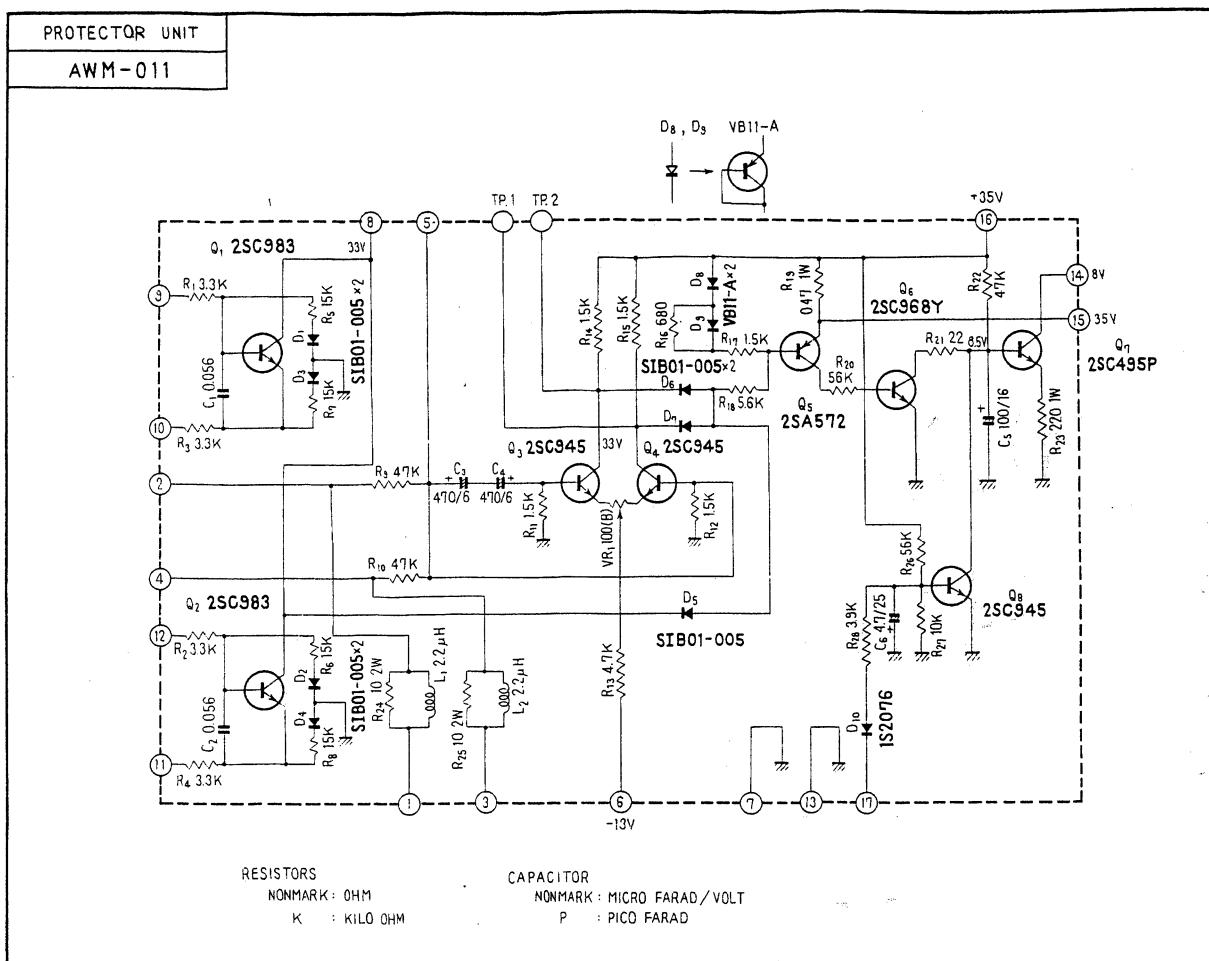

PARTS LIST OF PROTECTOR UNIT

CAPACITORS

Symbol	Description			Part No.	
C1	Mylar	0.056	50V	CQMA 563K 50	
C2	Mylar	0.056	50V	CQMA 563K 50	
C3	Electrolytic	470	6V	CEA 471P 6	
C4	Electrolytic	470	6V	CEA 471P 6	
C5	Electrolytic	100	16V	CEA 101P 16	
C6	Electrolytic	4.7	25V	CEA 4R7P 25	

RESISTORS

Symbol	Description			Part No.	
VR1	Semi-fixed,	100-B		C92-063-0	
R1	Carbon film	3.3k		RD%PS 332J	
R2	Carbon film	3.3k		RD%PS 332J	
R3	Carbon film	3.3k		RD%PS 332J	
R4	Carbon film	3.3k		RD%PS 332J	
R5	Carbon film	15k		RD%PS 153J	
R6	Carbon film	15k		RD%PS 153J	
R7	Carbon film	15k		RD%PS 153J	
R8	Carbon film	15k		RD%PS 153J	
R9	Carbon film	47k		RD%PS 473J	
R10	Carbon film	47k		RD%PS 473J	
R11	Carbon film	1.5k		RD%PS 152J	
R12	Carbon film	1.5k		RD%PS 152J	
R13	Carbon film	4.7k		RD%PS 472J	
R14	Carbon film	1.5k		RD%PS 152J	
R15	Carbon film	1.5k		RD%PS 152J	

Symbol	Description			Part No.	
R16	Carbon film	680		RD%PS 681J	
R17	Carbon film	1.5k		RD%PS 152J	
R18	Carbon film	5.6k		RD%PS 562J	
R19	Metal oxide	0.47	1W	RN1P R47K	
R20	Carbon film	56k		RD%PS 563J	
R21	Carbon film	22		RD%PS 220J	
R22	Carbon film	47k		RD%PS 473J	
R23	Metal oxide	220	1W	RS1P 221K	
R24	Metal oxide	10	2W	RS2P 100K	
R25	Metal oxide	10	2W	RS2P 100K	
R26	Carbon film	56k		RD%PS 563J	
R27	Carbon film	10k		RD%PS 103J	
R28	Carbon film	3.9k		RD%PS 392J	

SEMICONDUCTORS

Symbol	Description			Part No.	
Q1	2SC983-0 or Y	Transistor			
Q2	2SC983-0 or Y	Transistor			
Q3	2SC945-R	Transistor			
Q4	2SC945-R	Transistor			
Q5	2SA572-4	Transistor			
Q6	2SC968-2 or 3	Transistor			
Q7	2SC495P-Y	Transistor			
Q8	2SC945-R	Transistor			
D1	SIB01-005	Diode			
D2	SIB01-005	Diode			
D3	SIB01-005	Diode			
D4	SIB01-005	Diode			
D5	SIB01-005	Diode			
D6	SIB01-005	Diode			
D7	SIB01-005	Diode			

Symbol	Description		Part No.
D8	VB11-A	Varistor	
D9	VB11-A	Varistor	
D10	1S2076	Diode	

COILS

Symbol	Description		Part No.
L1	AF choke coil		T63-009-0
L2	AF choke coil		T63-009-0